

matki

INSTALLATION


PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

EAUZONE

DOUBLE PANEL BATH SCREEN OUTWARD OPENING

MODELS: EPD900OTW / EPD907OTW / EPD1000OTW

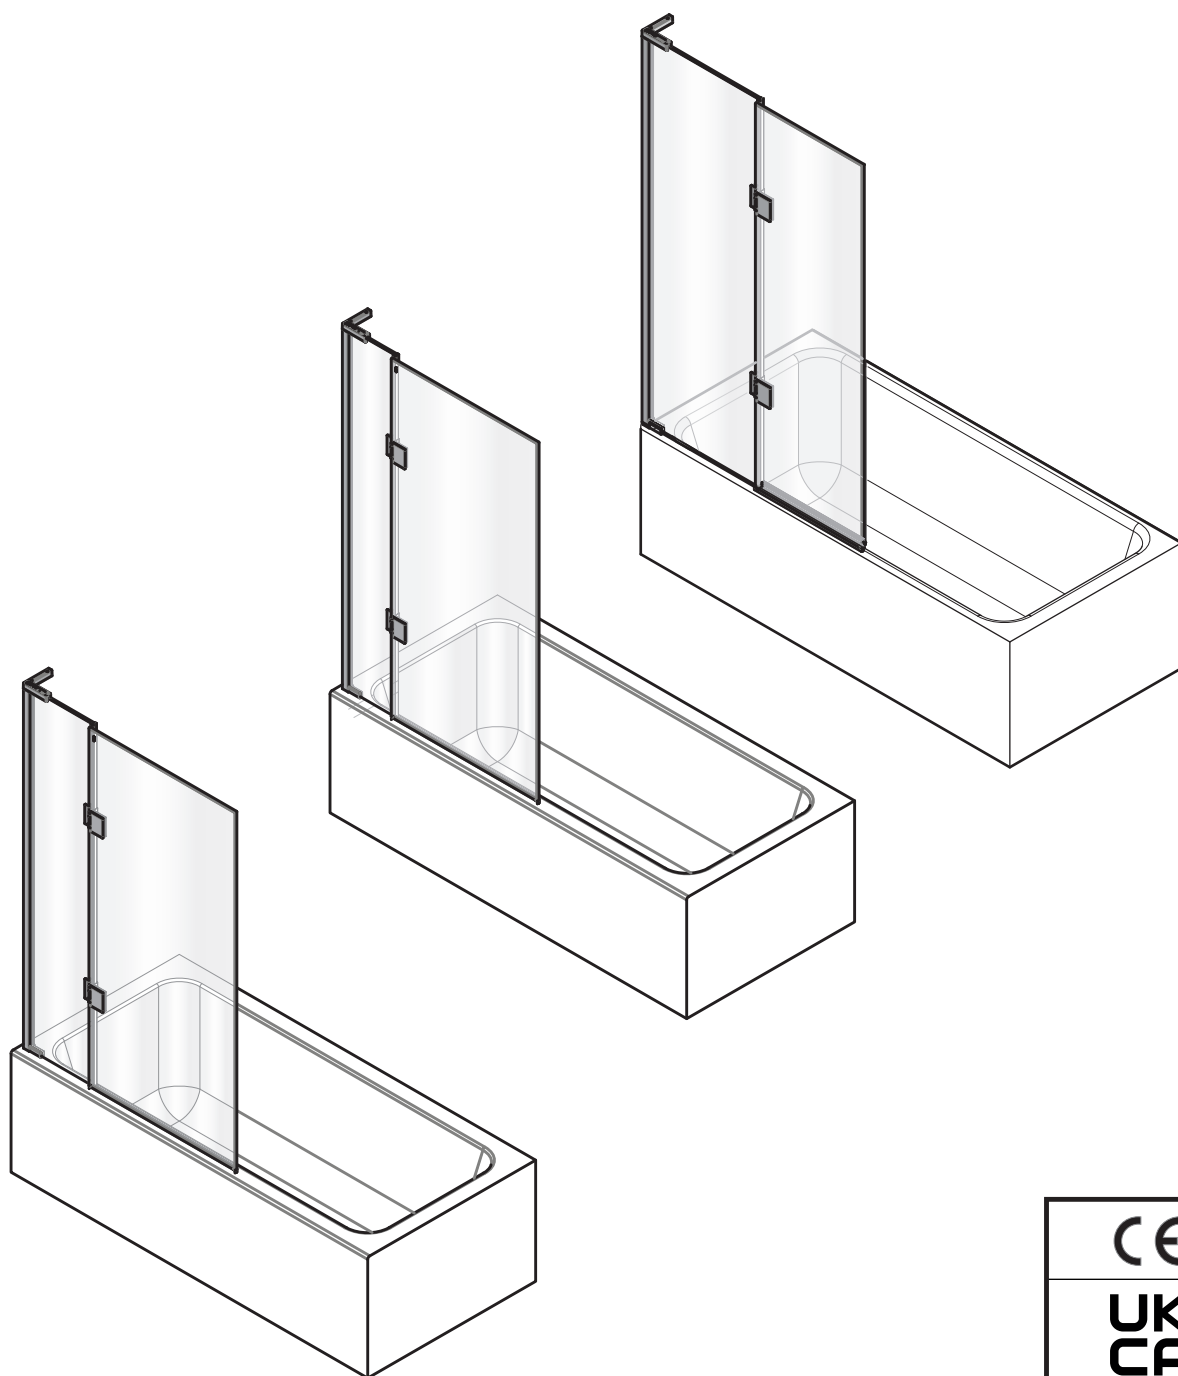

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018


10740 AF 09/25

Matki recommend that this product is fitted by professional installers


HANDING

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

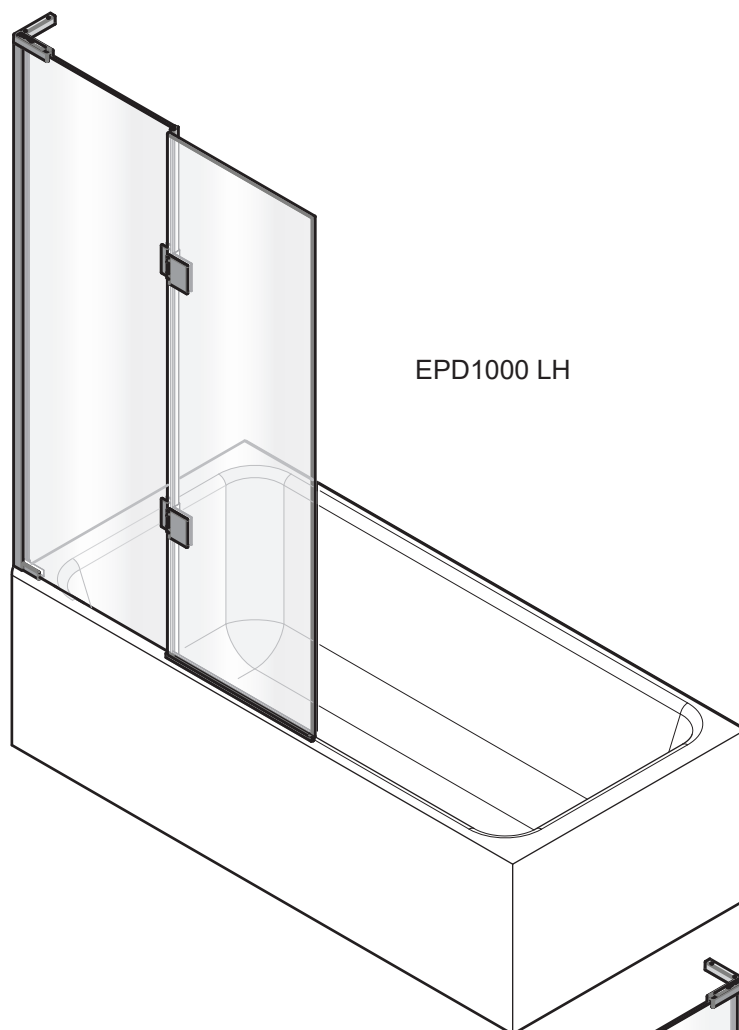

EPD1000 LH

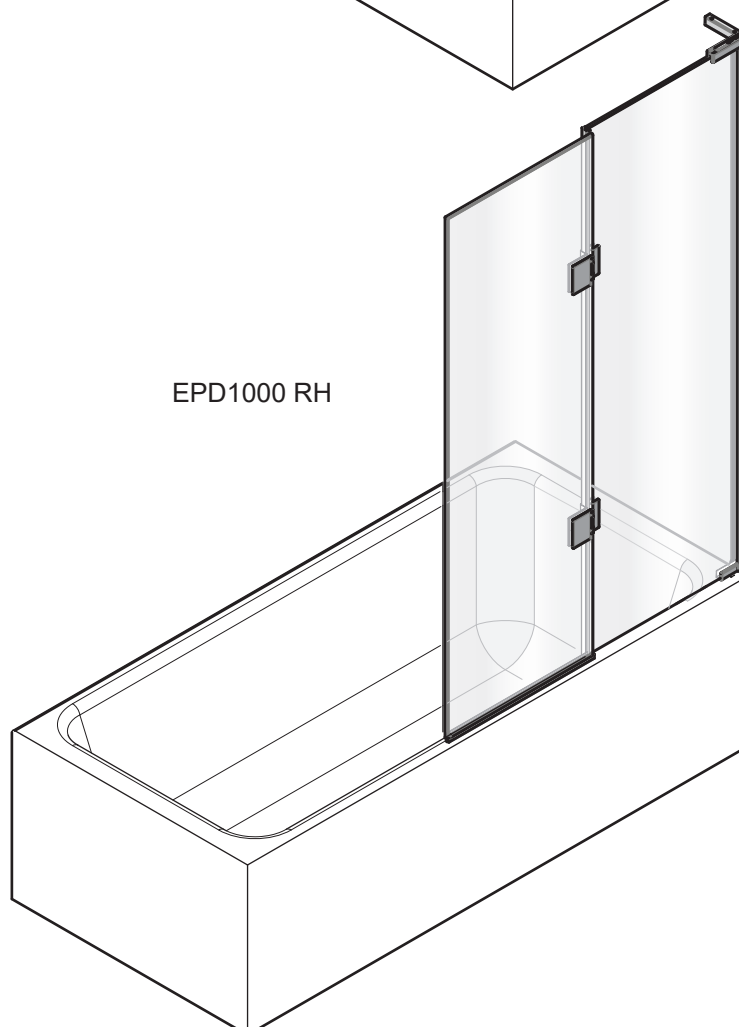

EPD1000 RH

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED BATH SCREEN INSTALLATION, REVERSE FOR RH.

IMPORTANT

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS


- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Bathscreen.
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Seal between Bath and tiles. Remove any excess sealant from the area/joint between the Bath and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and Bath.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


TYPICAL INSTALLATION OF BATH SCREEN ON BATH

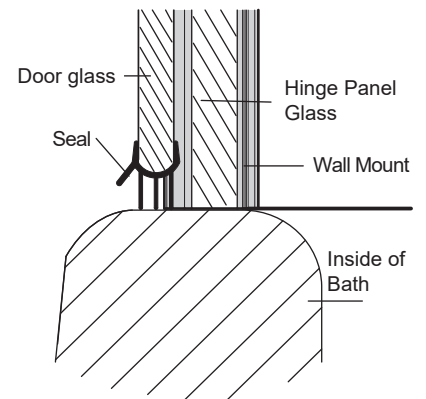

It is recommended to install the Bath screen wall mount close to the inside edge of the bath to reduce any unwanted water build up.






DIMENSIONS

Dimensions are approximate due to nature of materials used




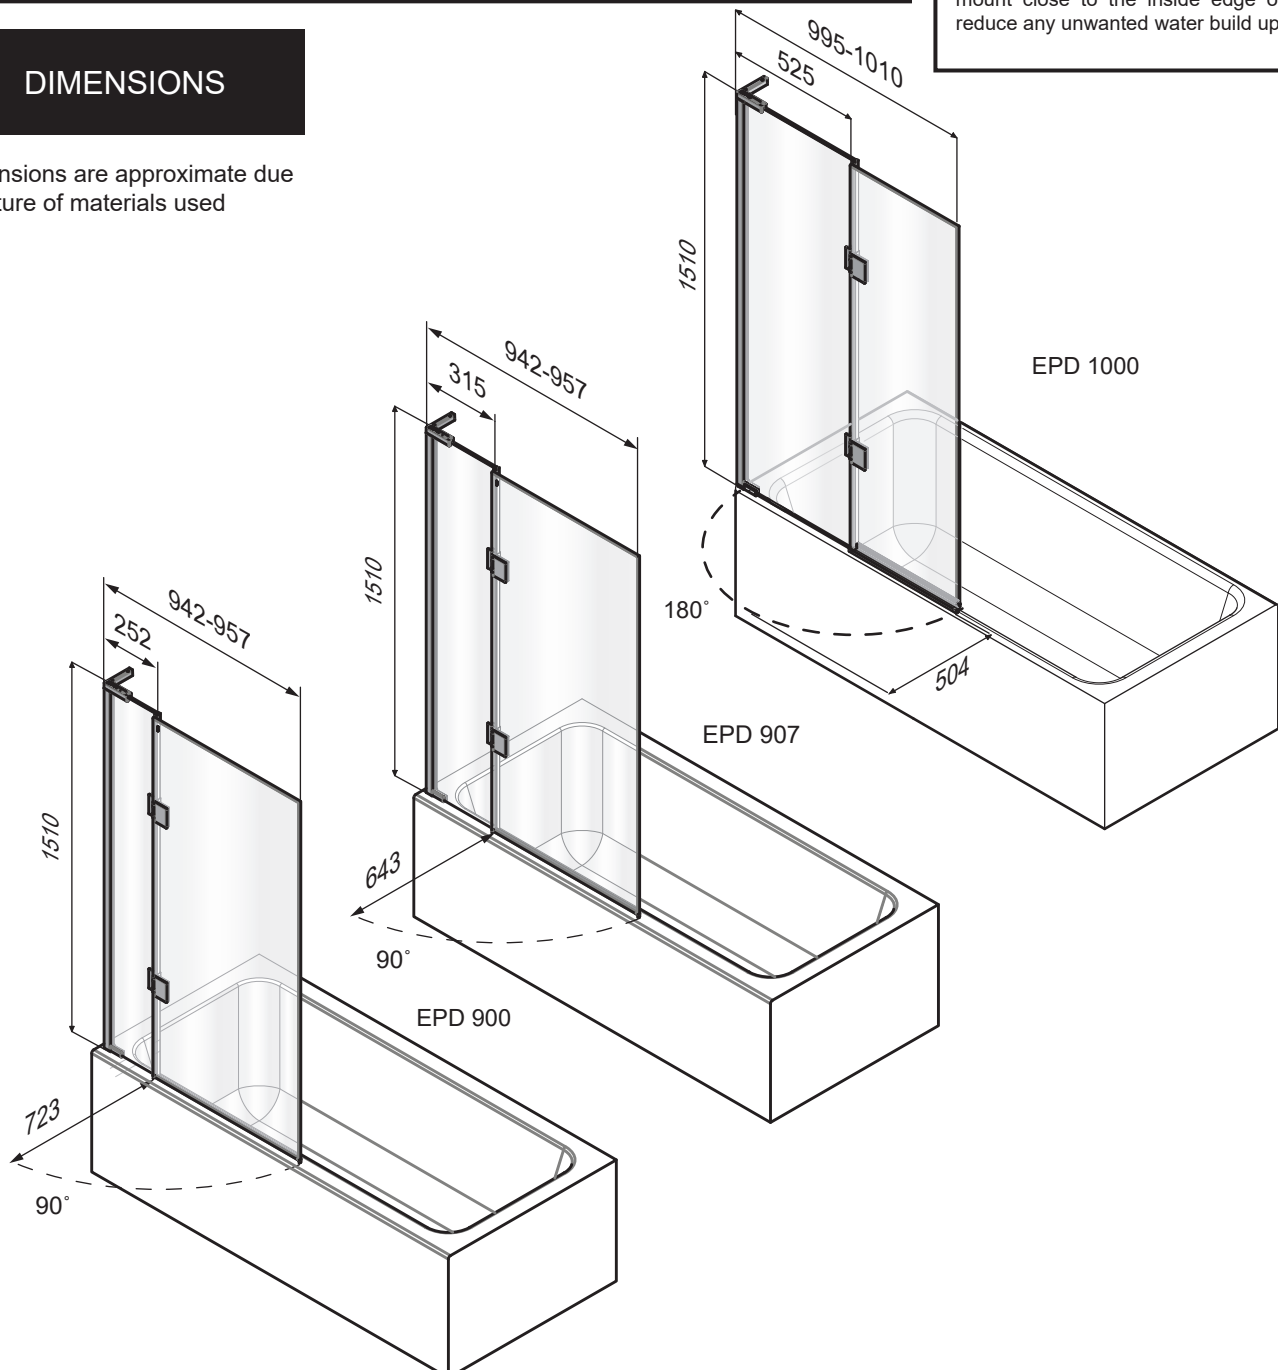


STAGE 1








IMAGES SHOW LH HINGED BATHTHSCREEN INSTALLATION.
(SCREENS ARE SUPPLIED HANDED AS ORDERED)

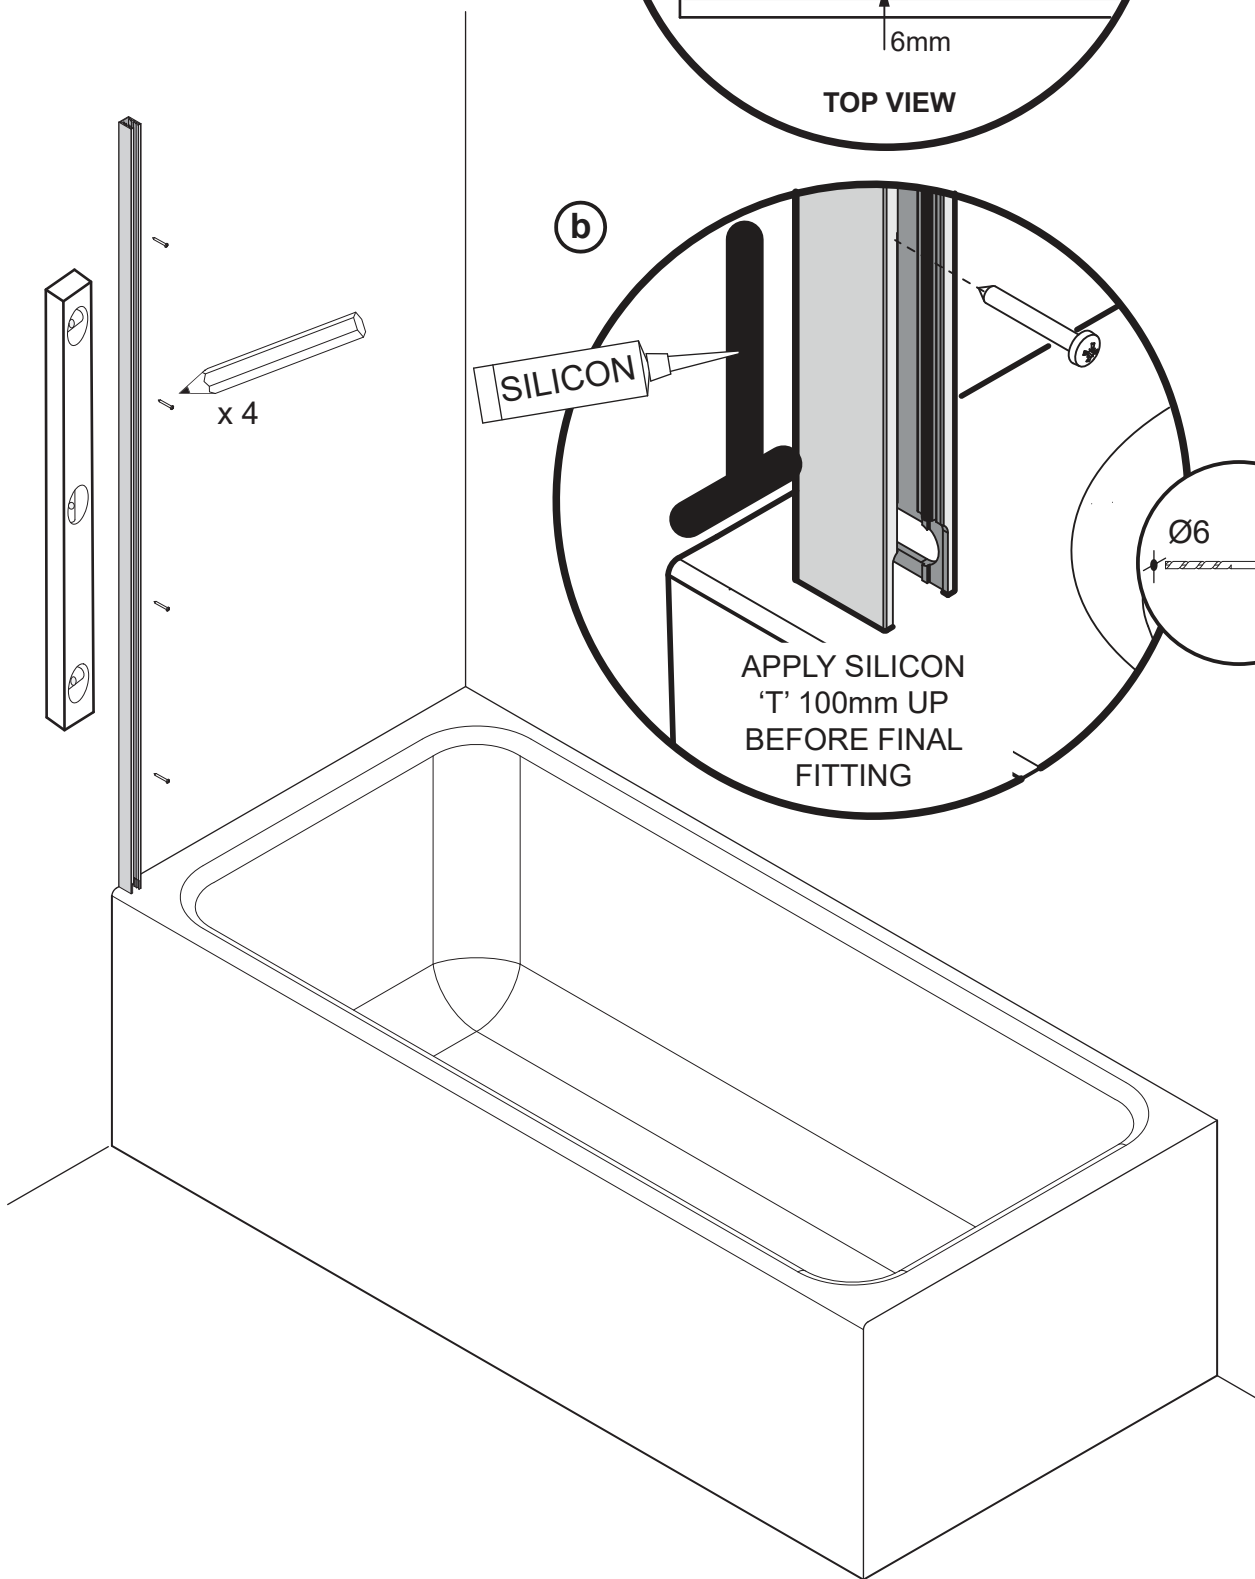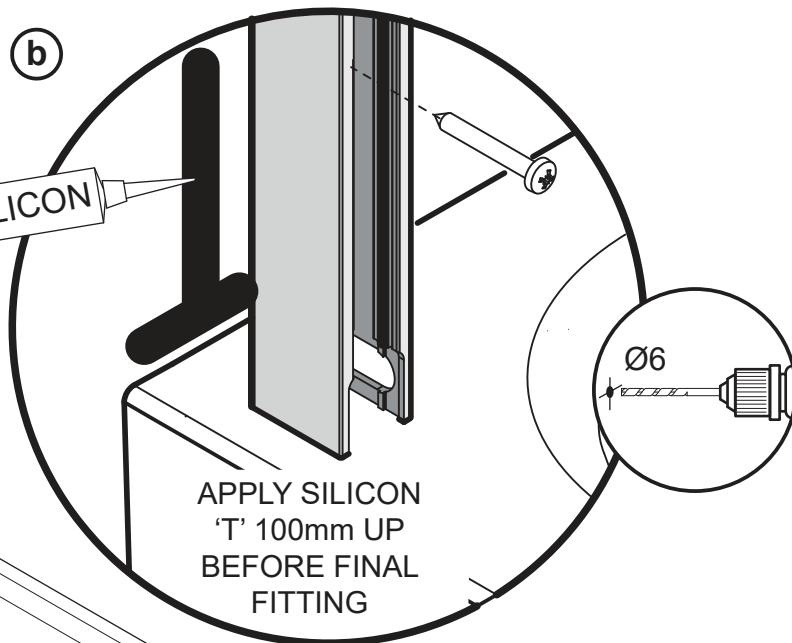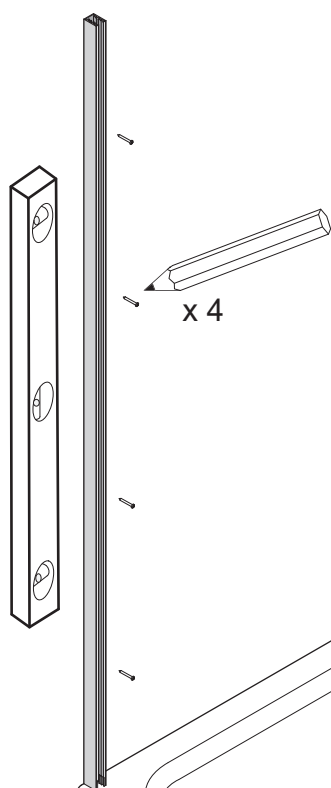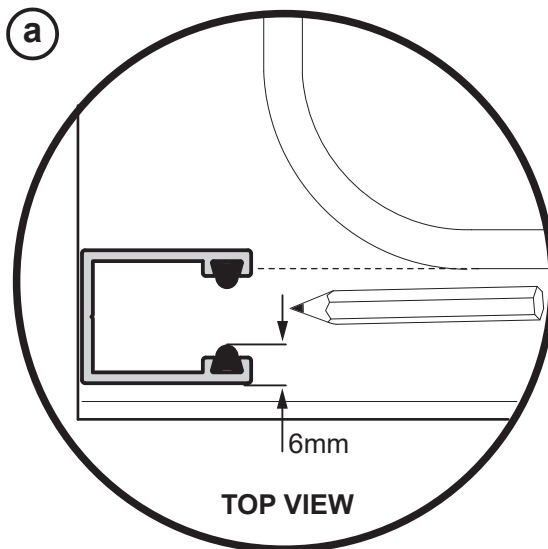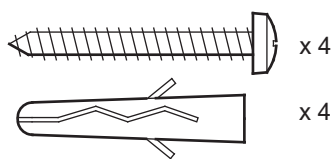


STAGE 2

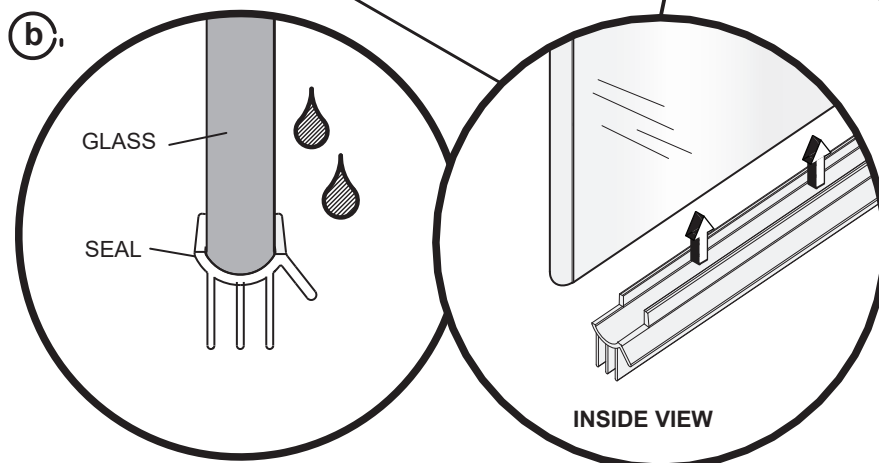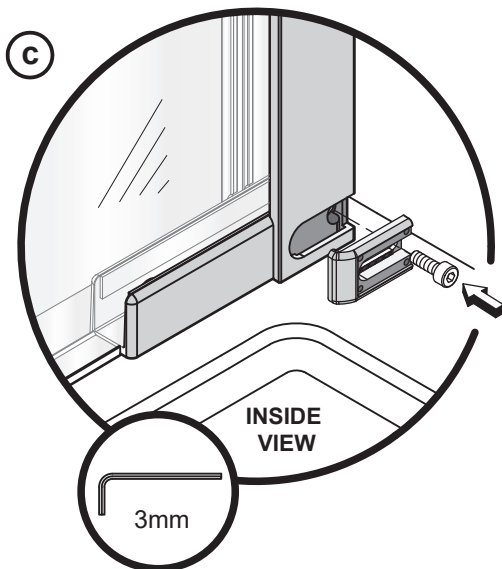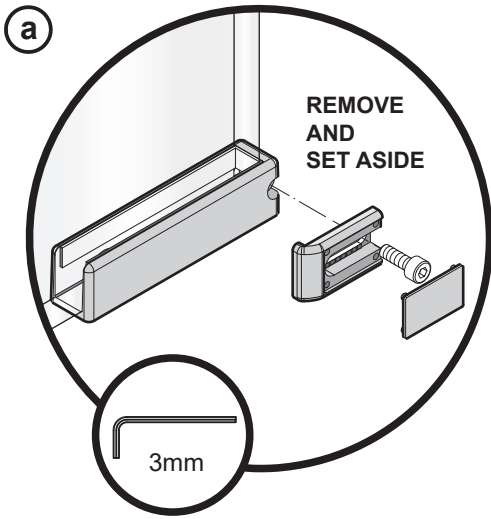

STAGE 3

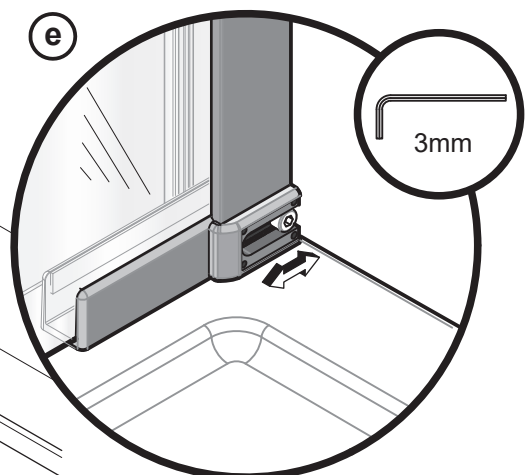
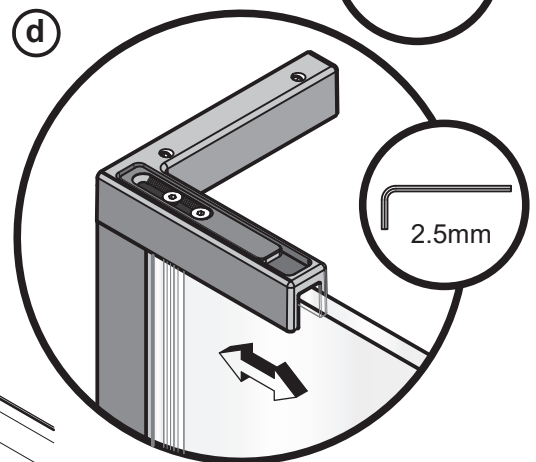
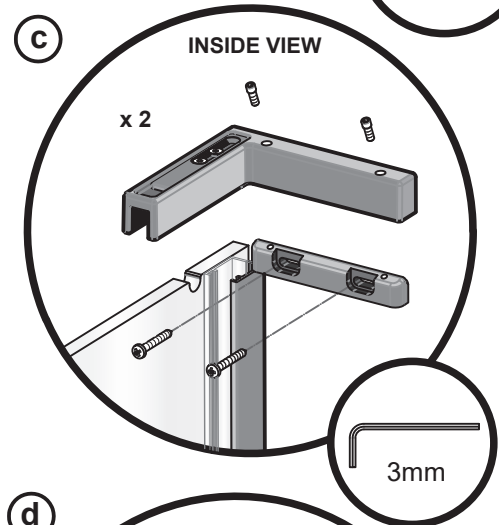
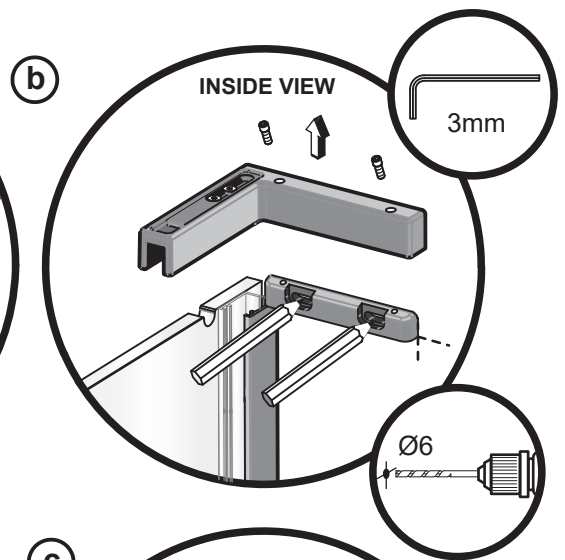
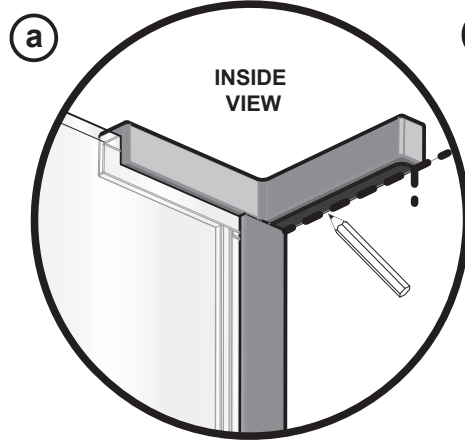
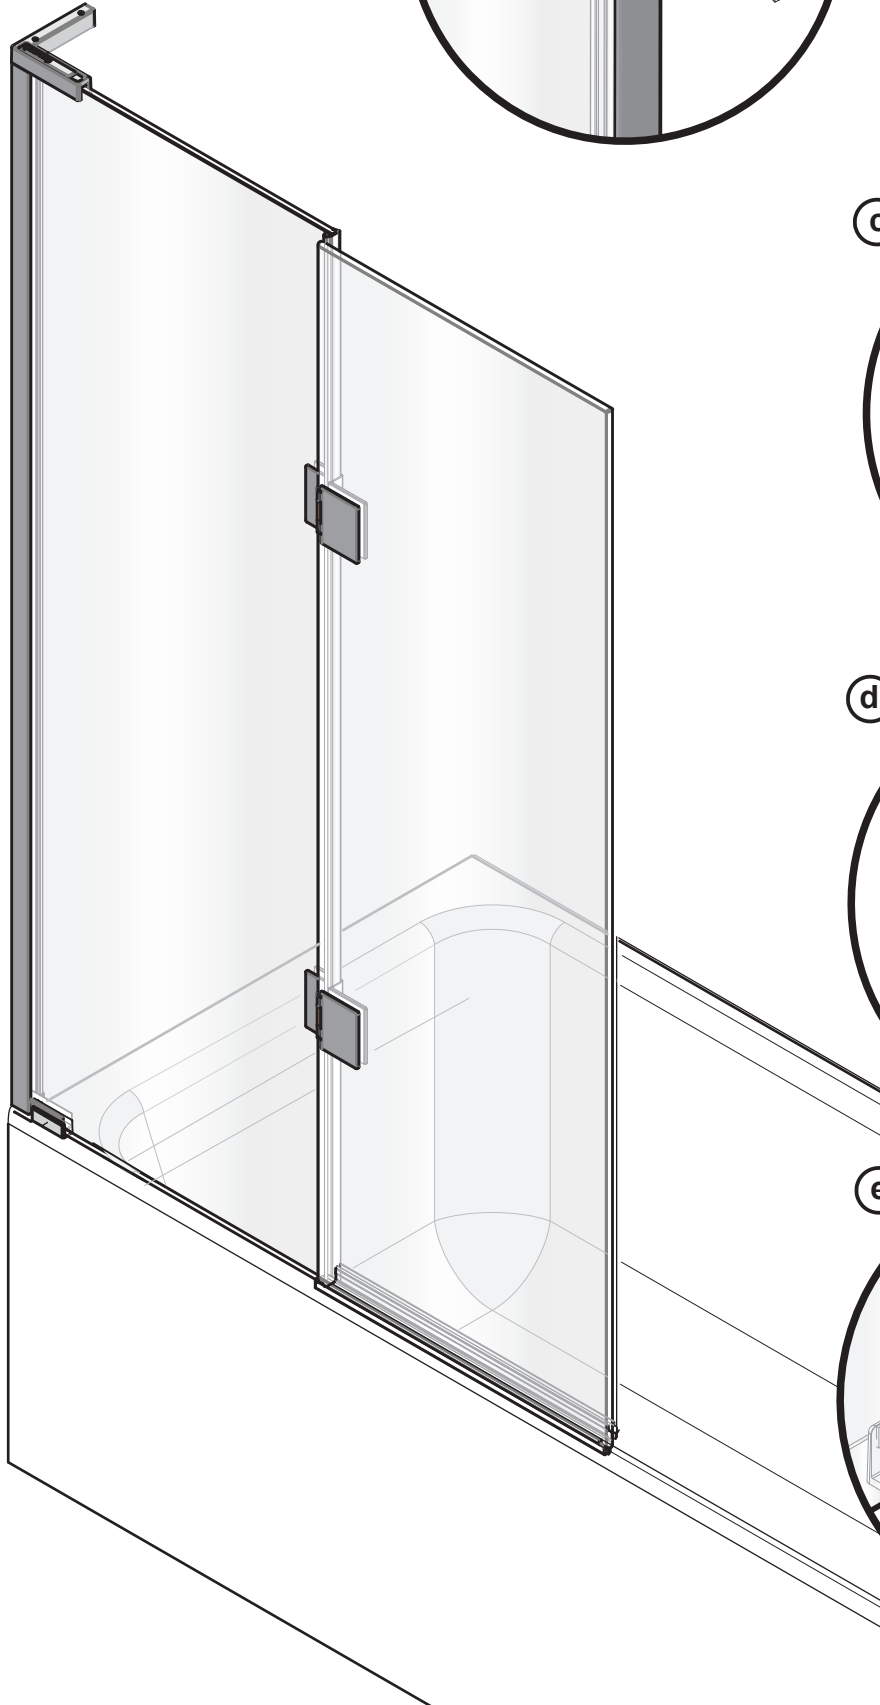
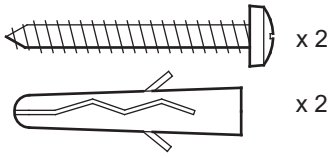


STAGE 4

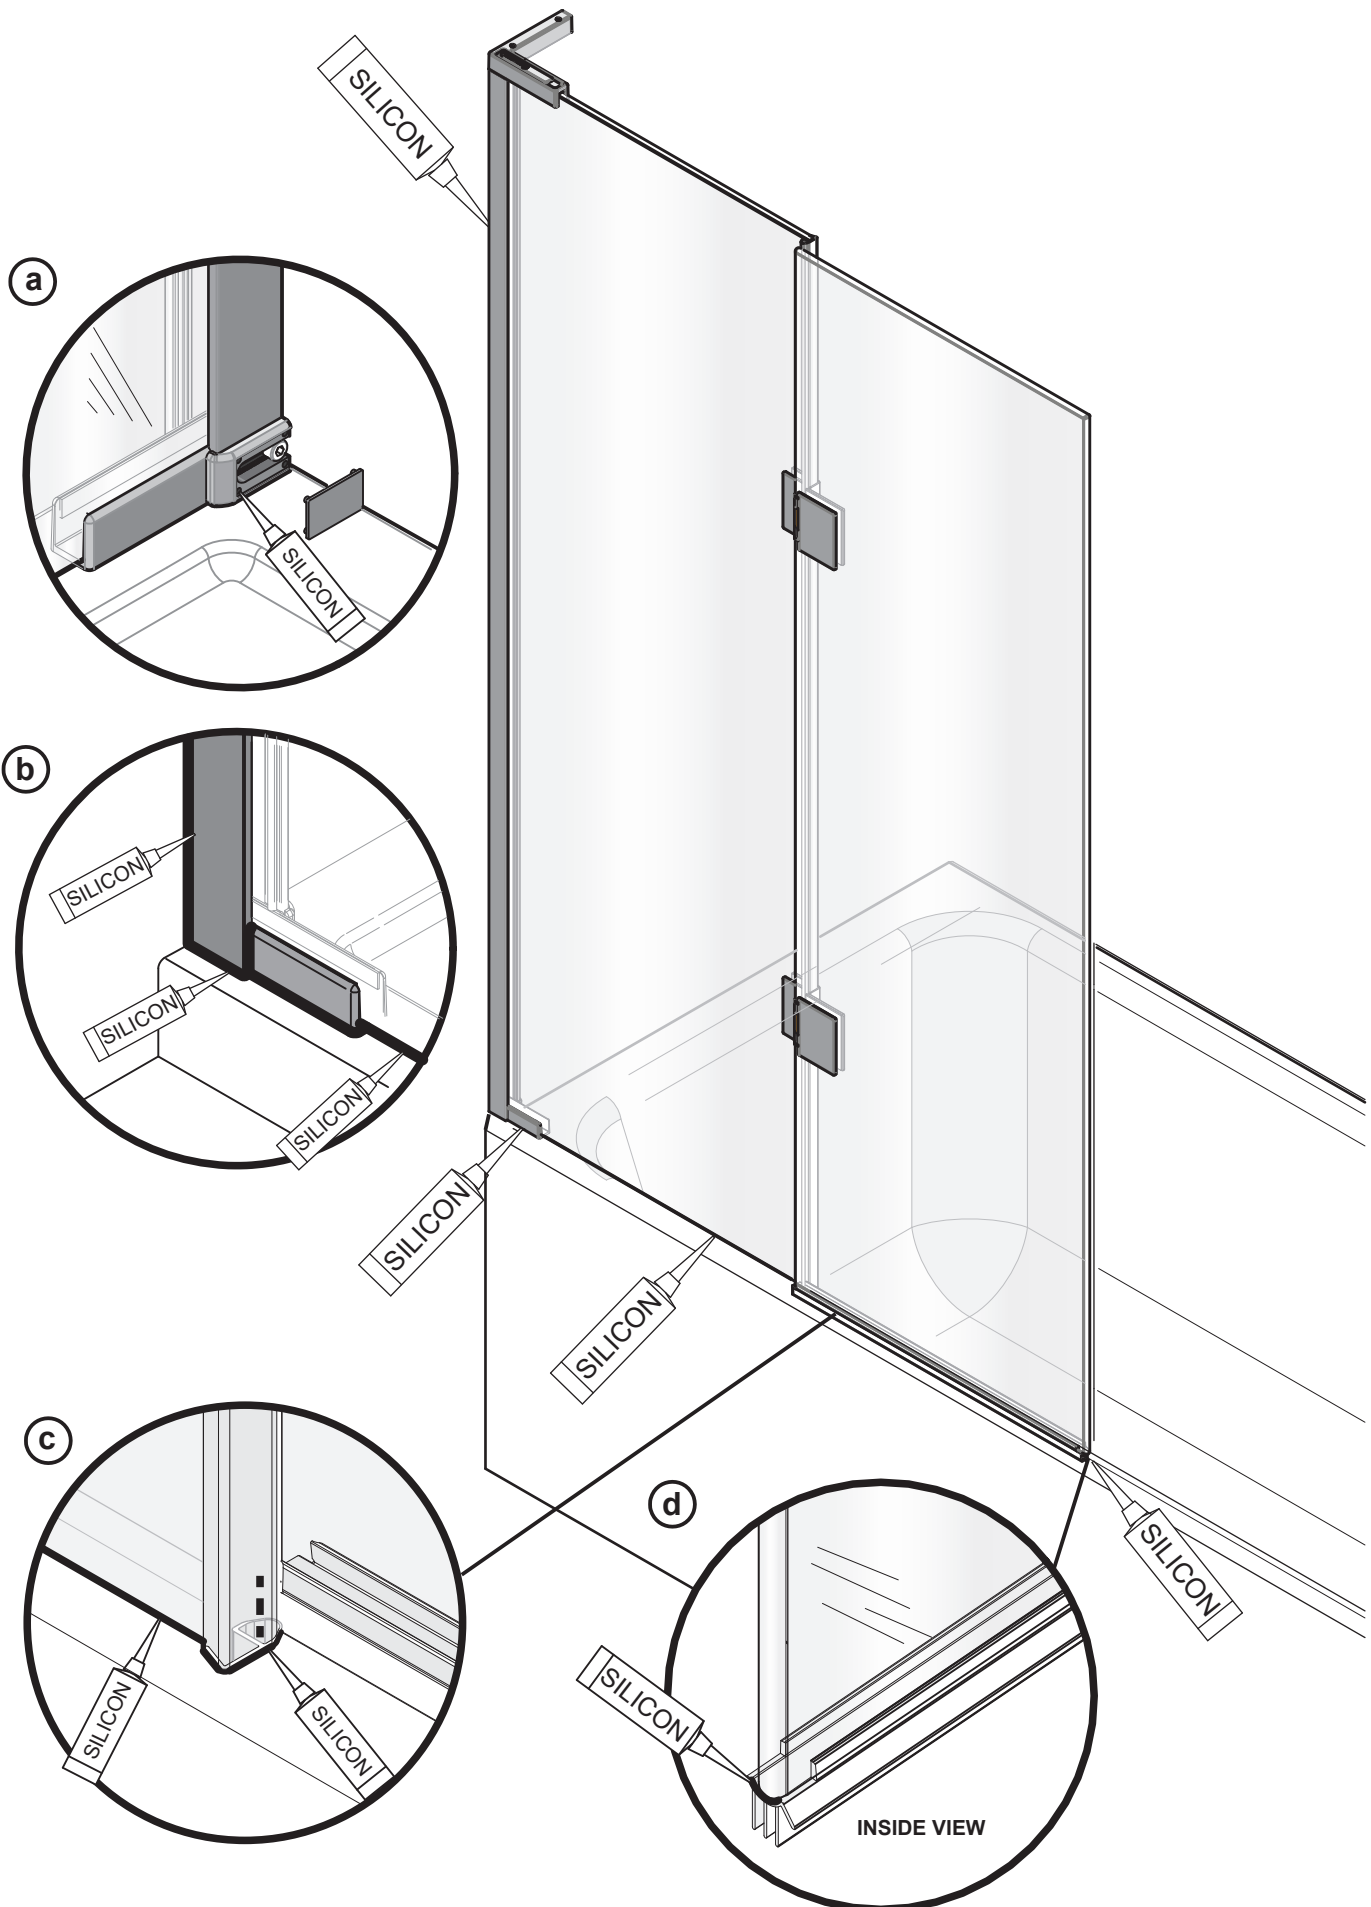

PARTS LIST

9864 AF KIT OF PARTS

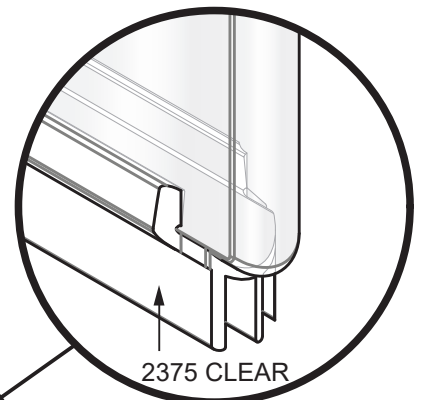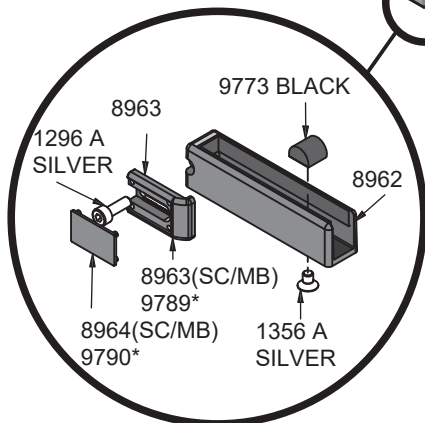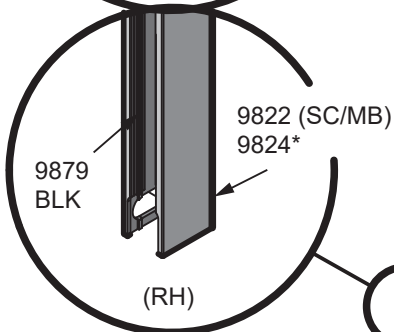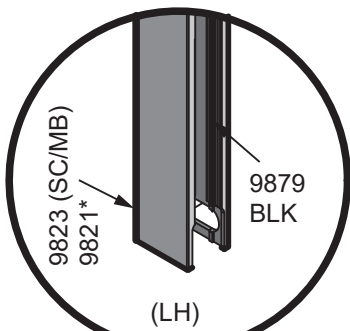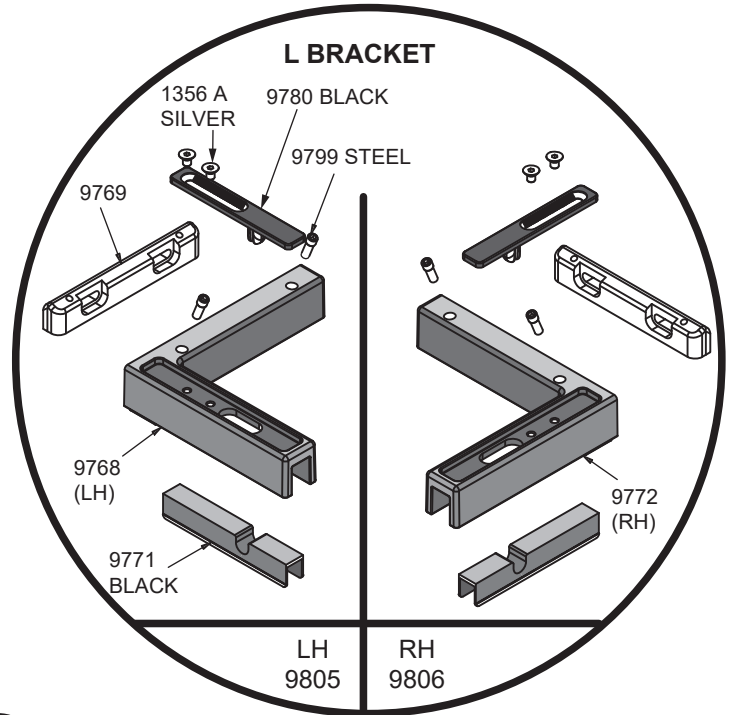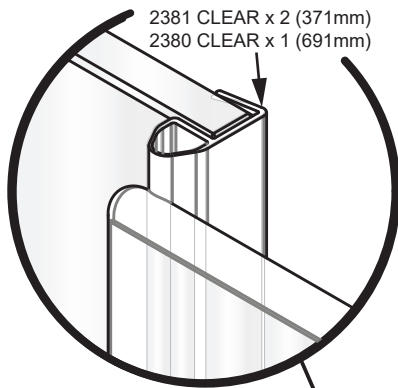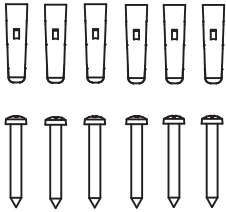

(* ALL FINISHES EXCEPT SC/MB)