


matki

EAUZONE

EPH - HINGED DOOR WITH HINGE PANEL FOR RECESS

BRITISH PATENT NO. 2470778

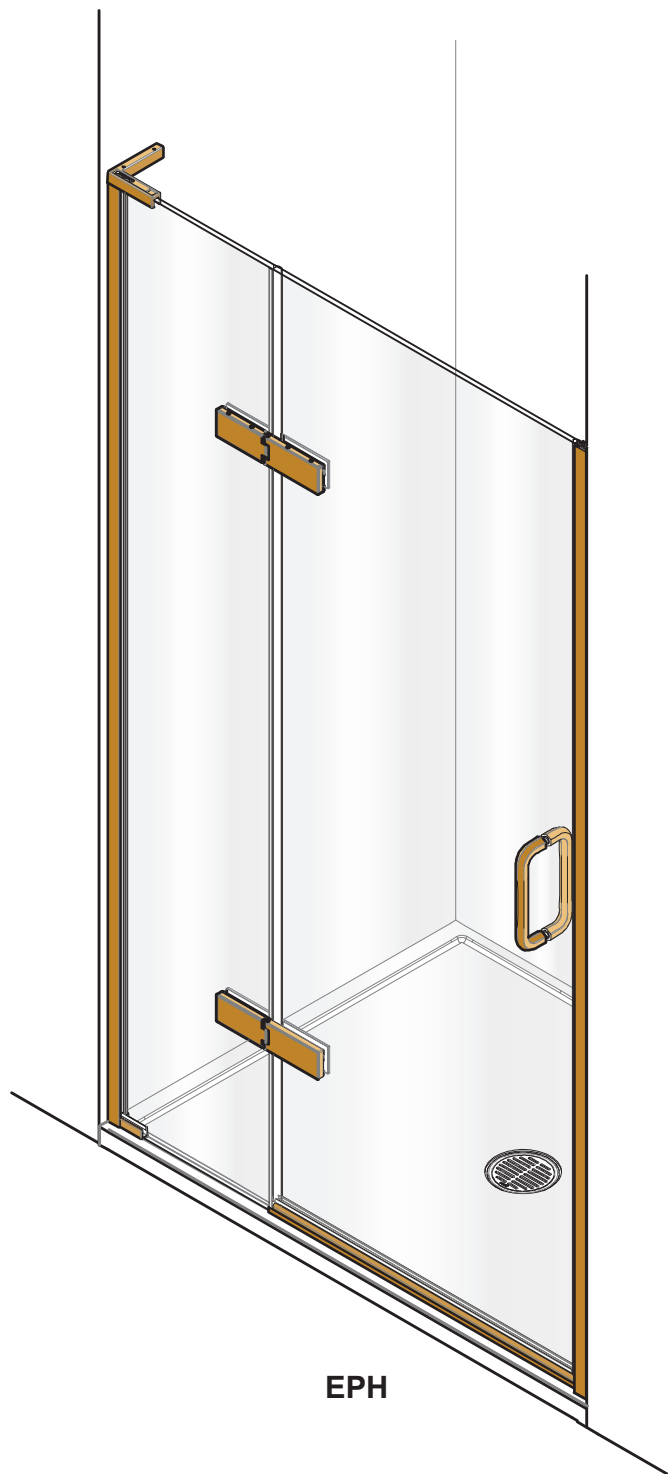

EPH

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA


matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL


BS EN 14428:2015+A1:2018

9915 AF 05/25

Matki recommend that this product is fitted by professional installers

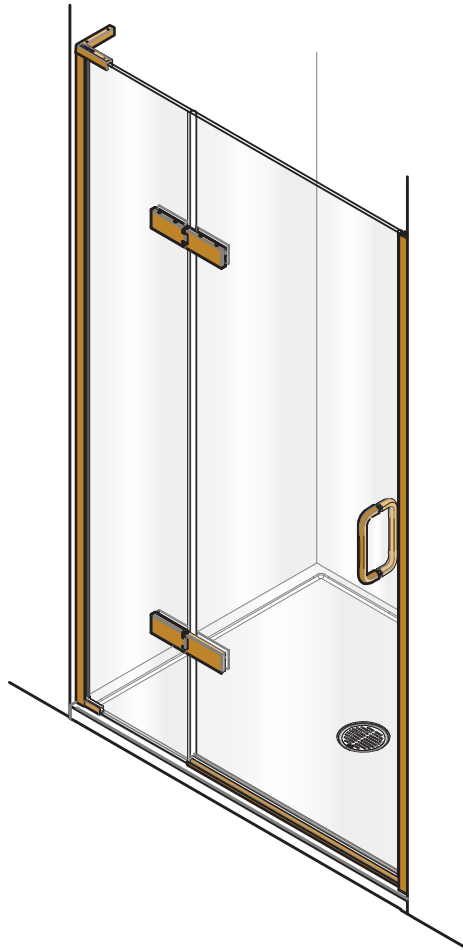

EPH LH

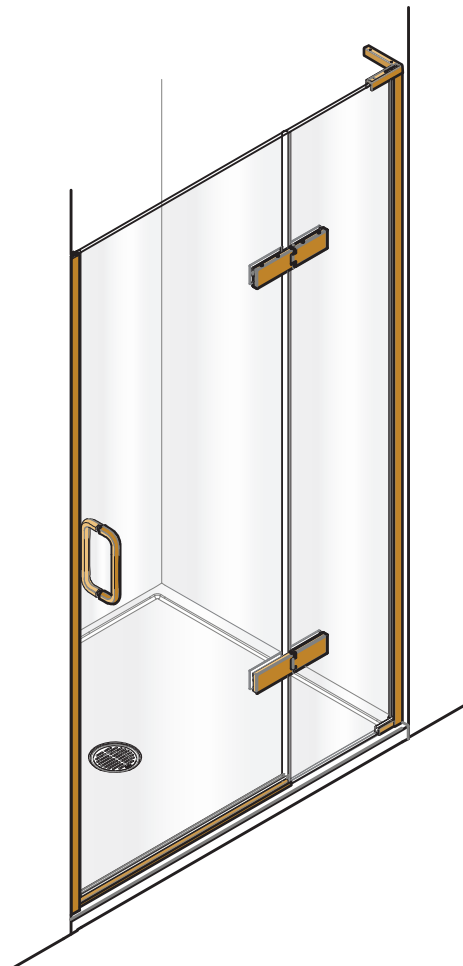

EPH RH

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED DOOR INSTALLATION, REVERSE FOR RH.

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT


1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door, Stage 6. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS

Dimensions are approximate

MODEL RECESS	A + B	A	B
EPH800	770 – 800	600	200
EPH850	820 – 850	600	250
EPH900	870 – 900	700	200
EPH950	920 - 950	700	250
EPH1000	970 – 1000	800	200
EPH1050	1020 - 1050	800	250
EPH1100	1070 – 1100	700	400
EPH1150	1120 - 1150	700	450
EPH1200	1170 – 1200	700	500
EPH1250	1220 - 1250	800	450
EPH1300	1270 – 1300	800	500

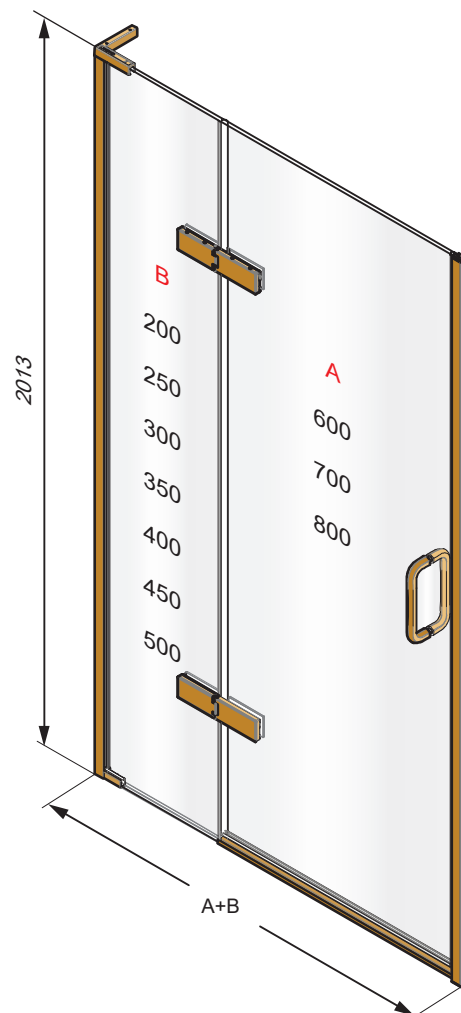


Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width e.g. See below other combinations for Model 1100 all have same total width.







	A + B	A	B
EPHC1100	1070 – 1100	800	300
EPHC1100	1070 – 1100	600	500

SETTING OUT

IMAGES SHOW LH HINGED DOOR INSTALLATION REVERSE FOR RH.







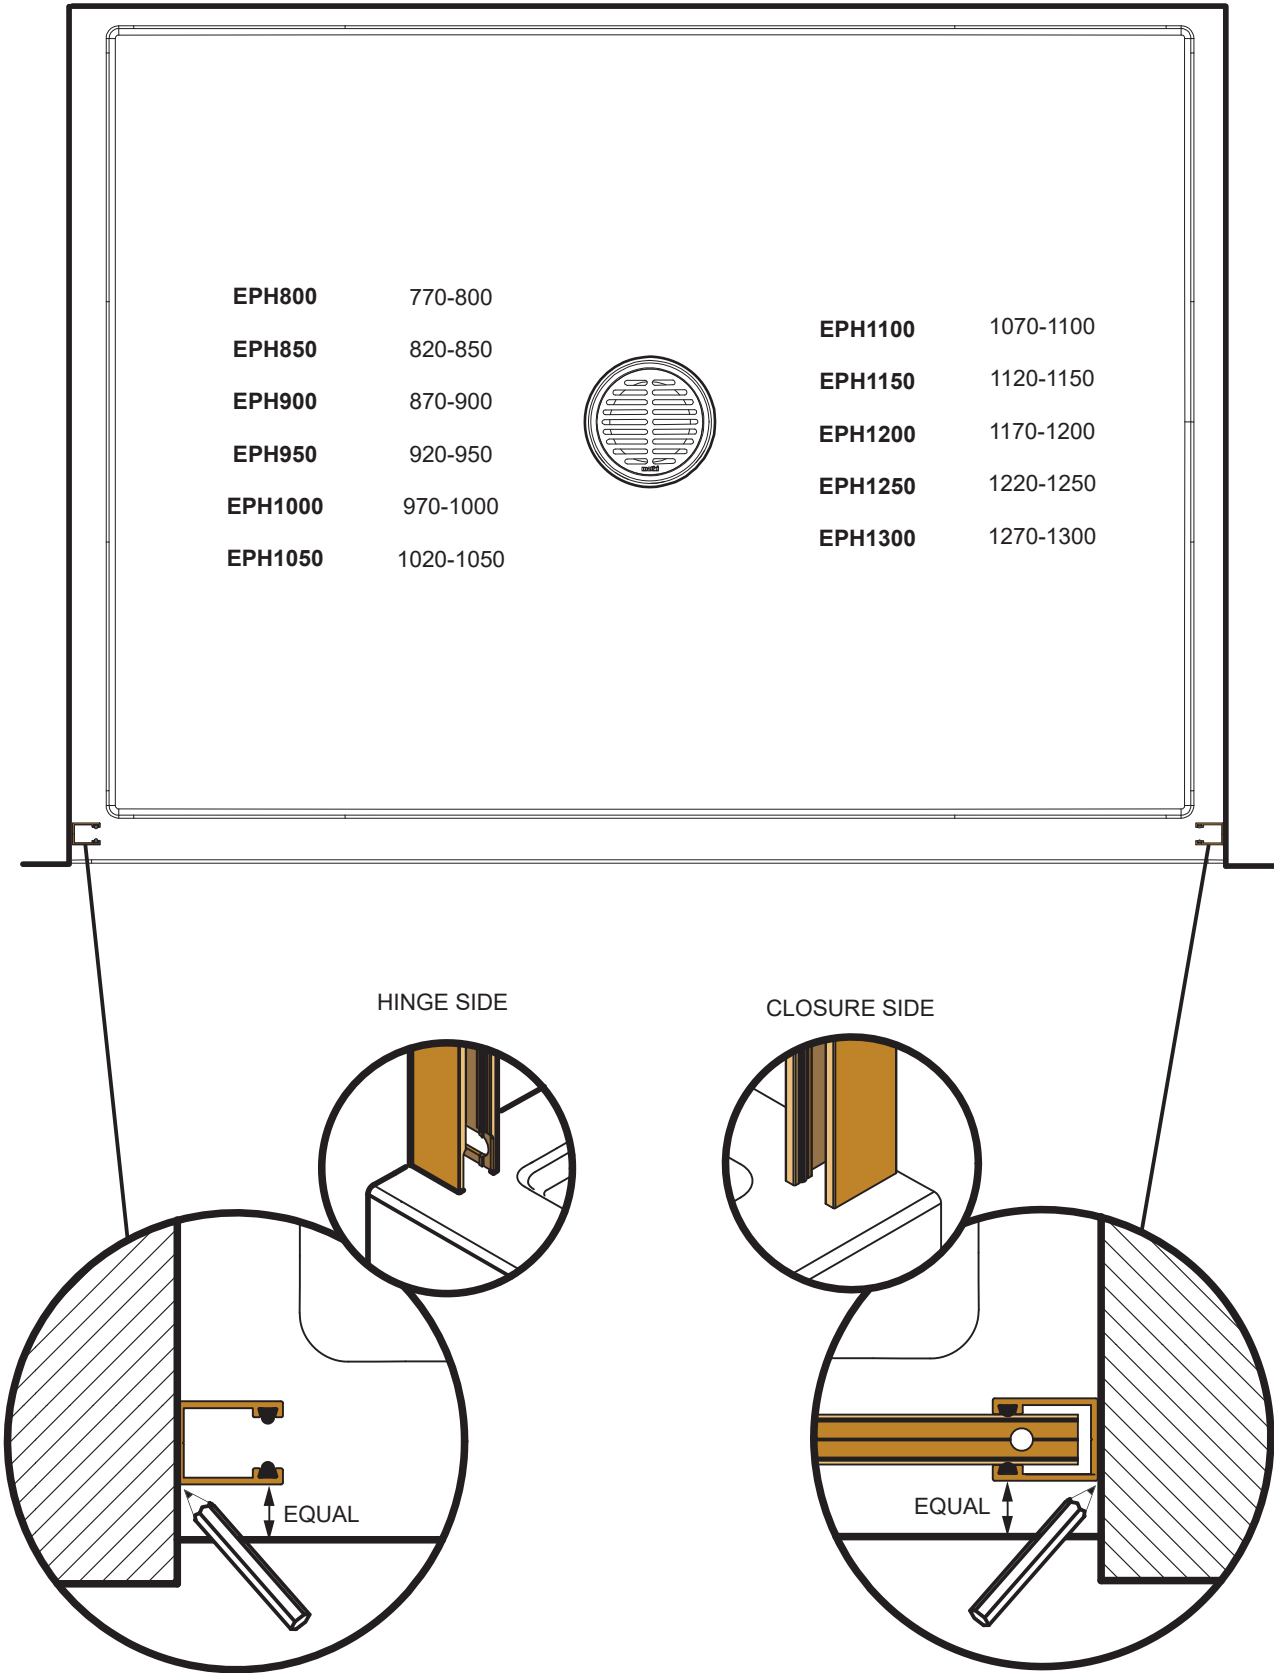


STAGE 1

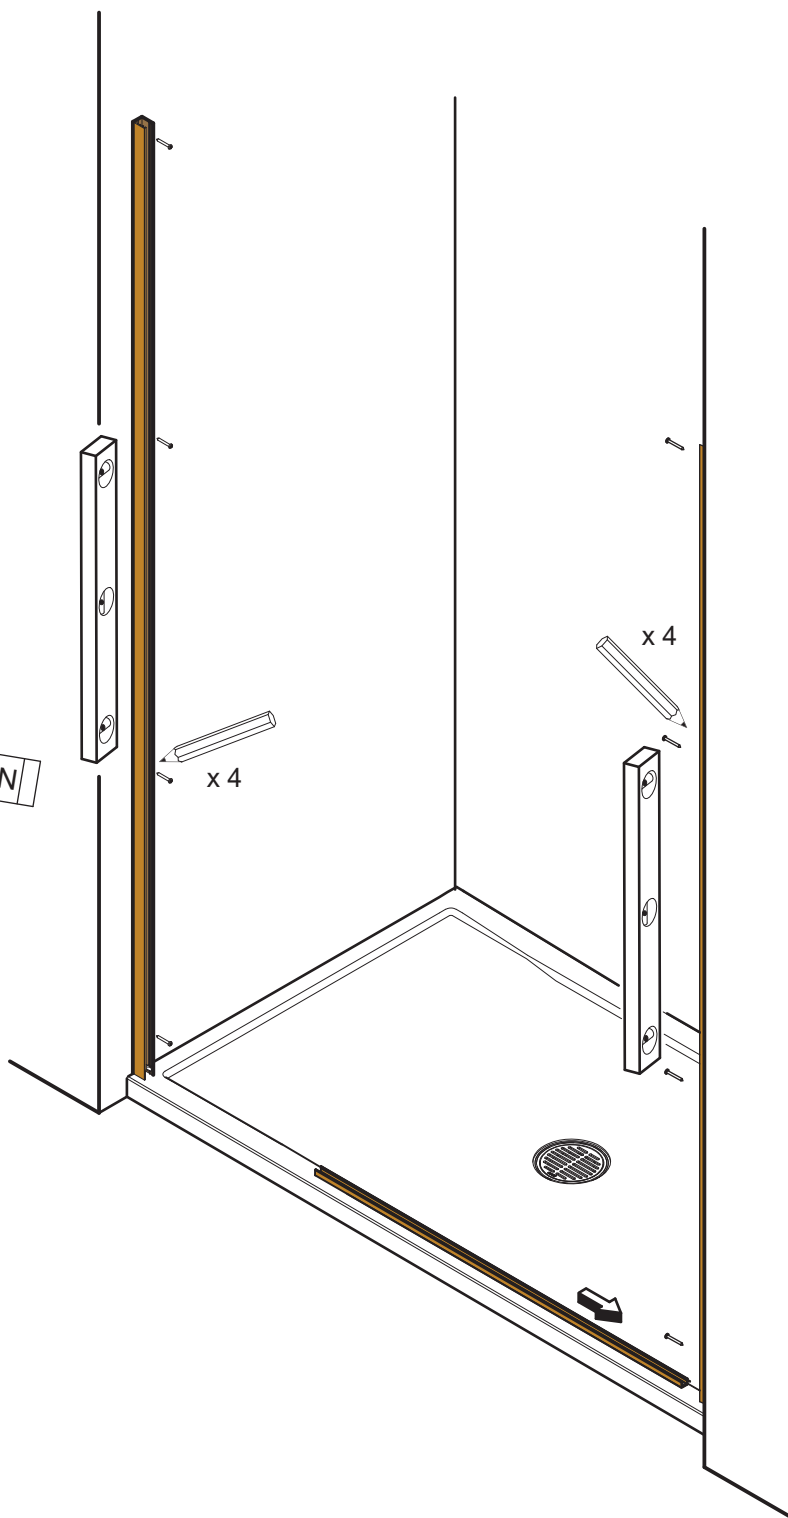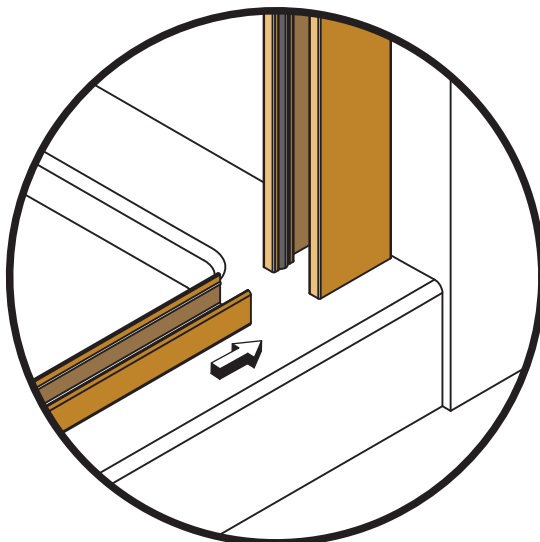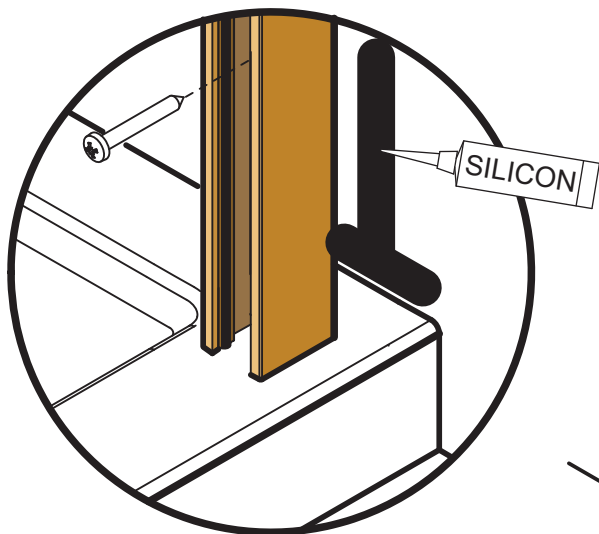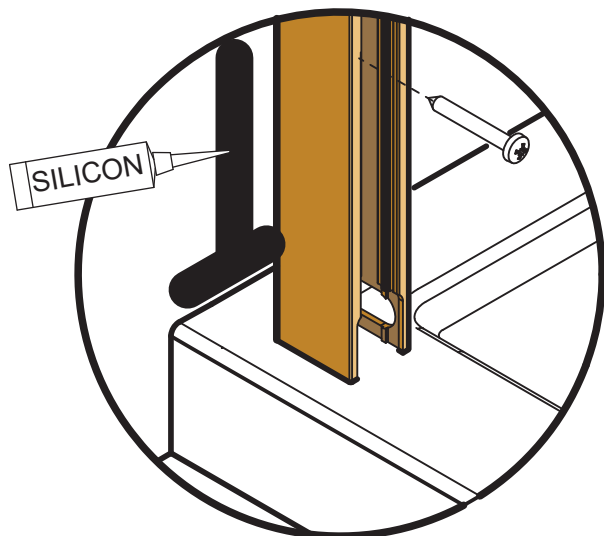
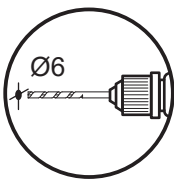
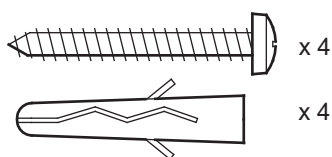


STAGE 2






FOOT IS FACTORY FITTED
ON STANDARD FINISH UNITS

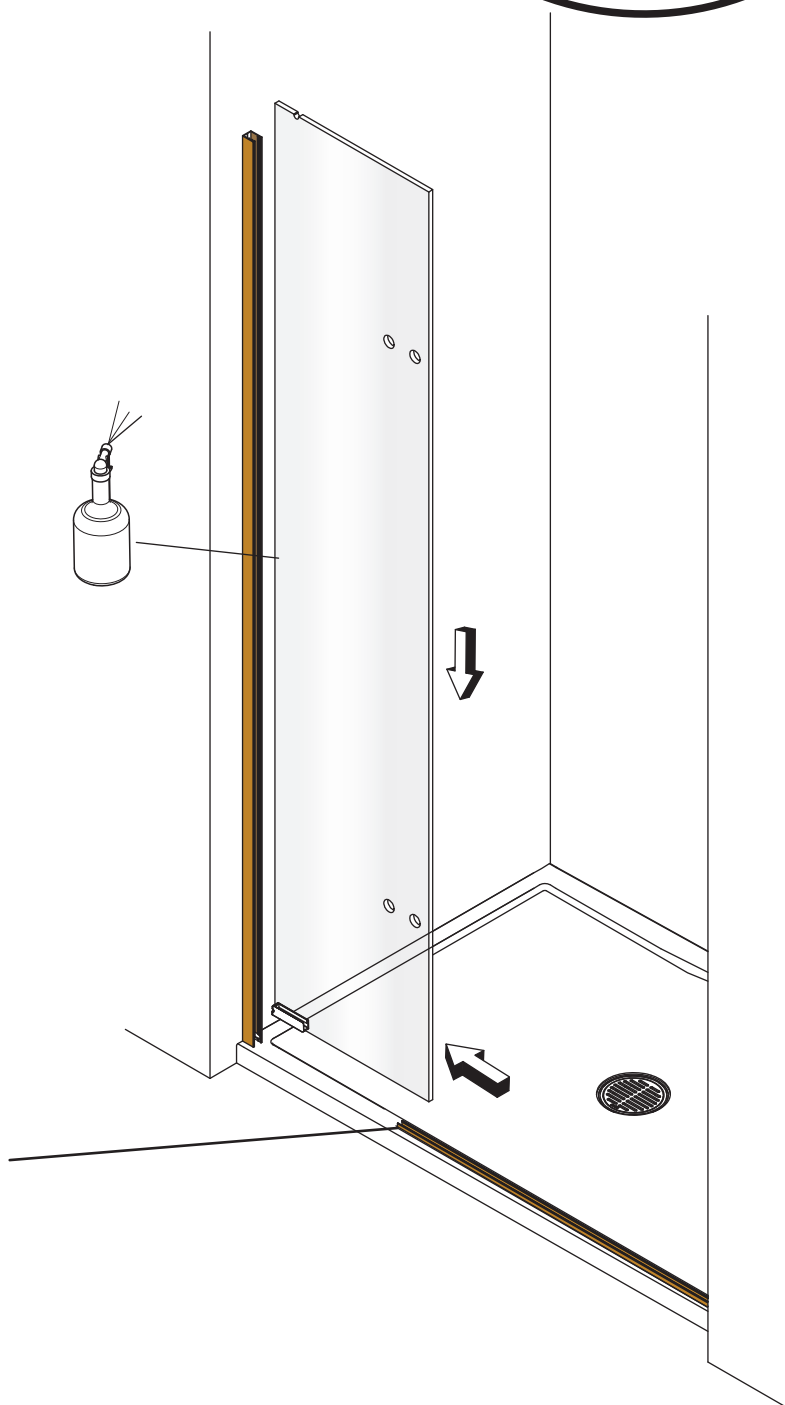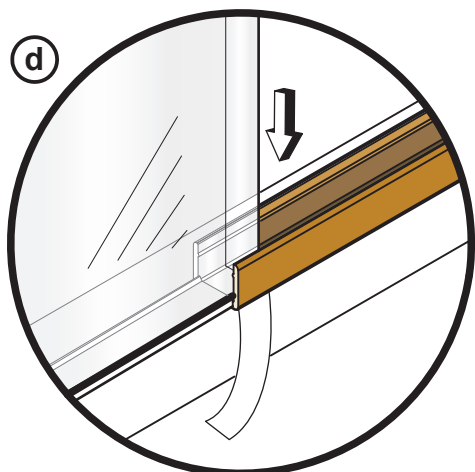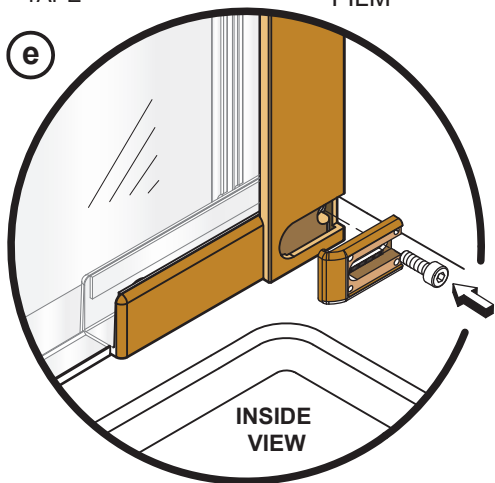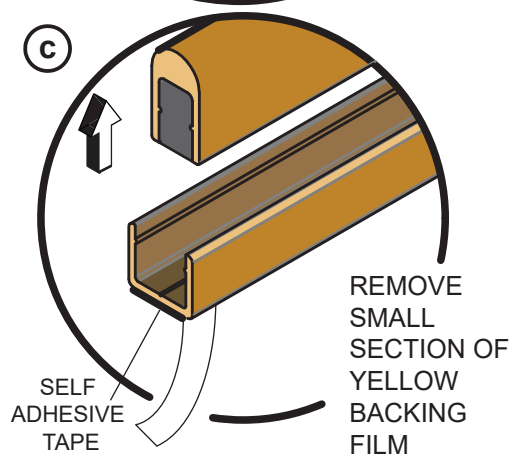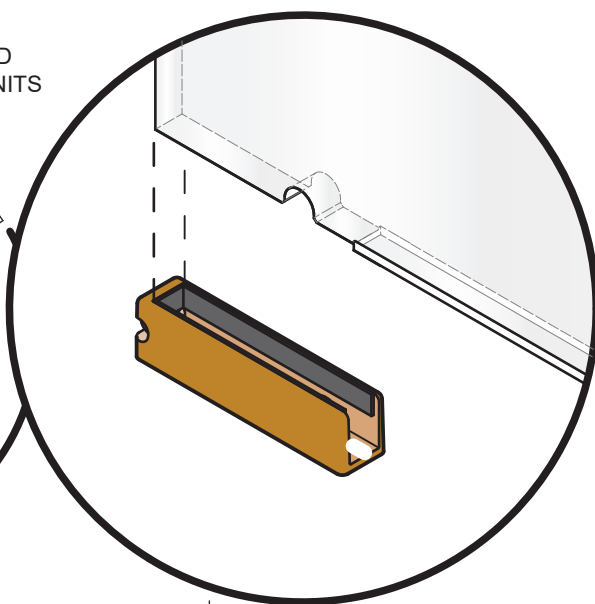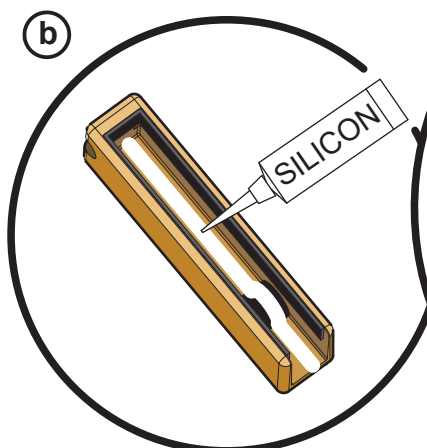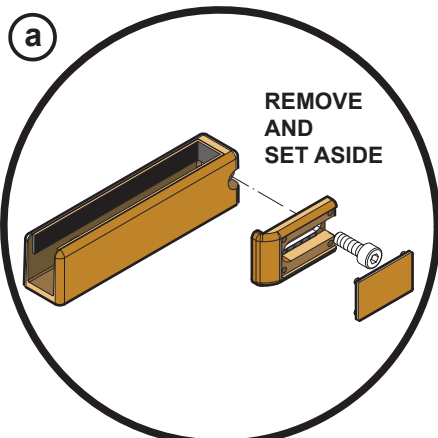






STAGE 3

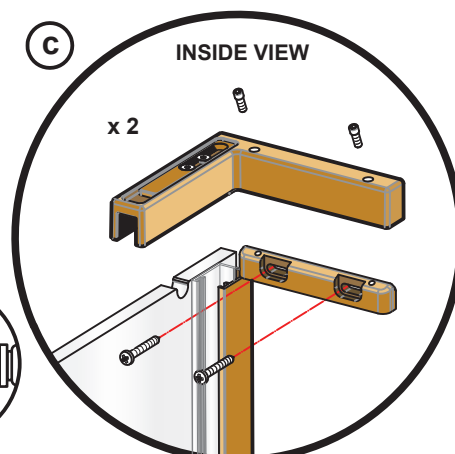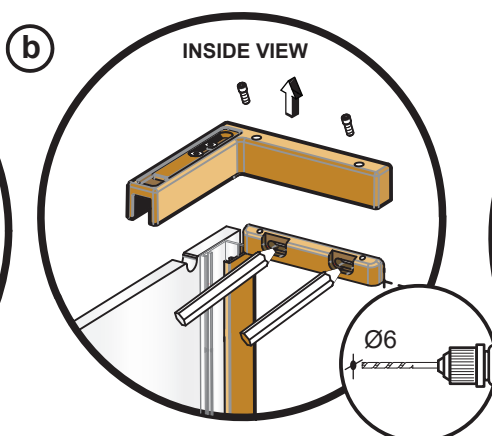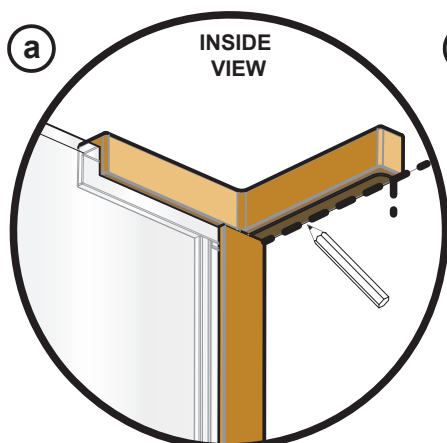

SEAL ON INSIDE OF
WALL MOUNT CAN
BE REMOVED
IF H-SECTION
FIT IS TIGHT

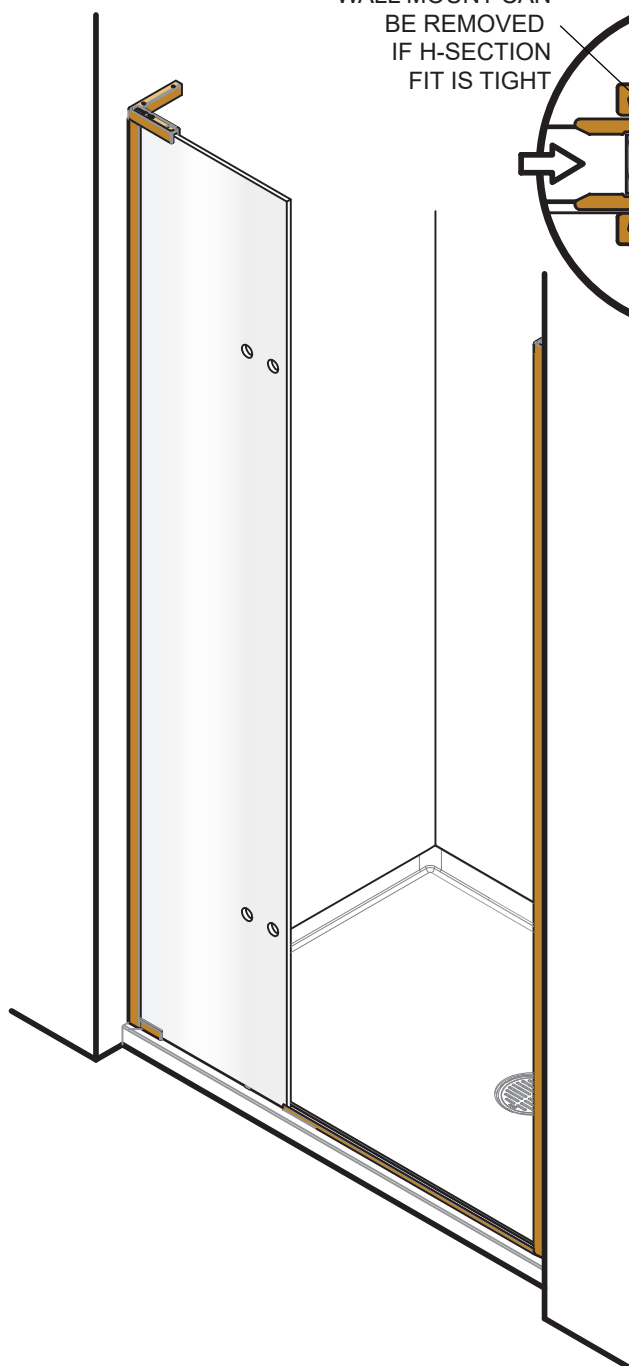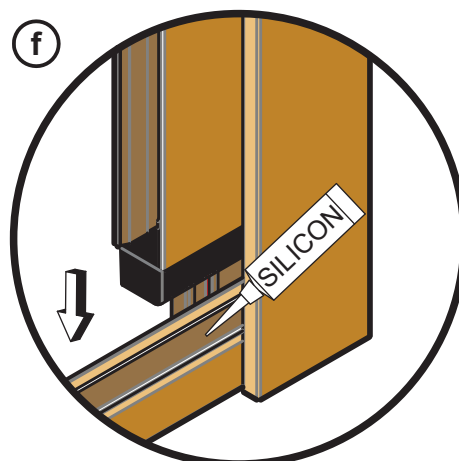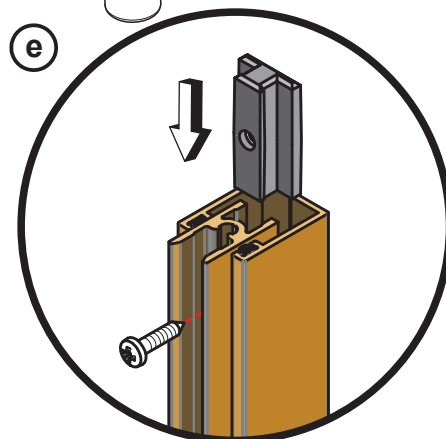
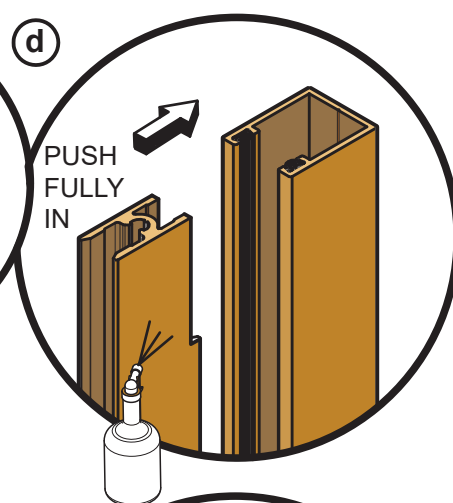
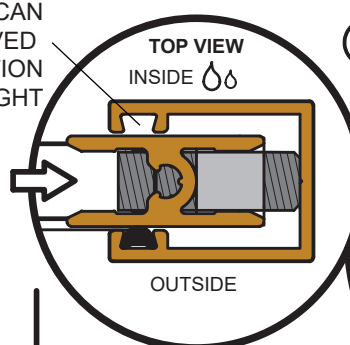


STAGE 4

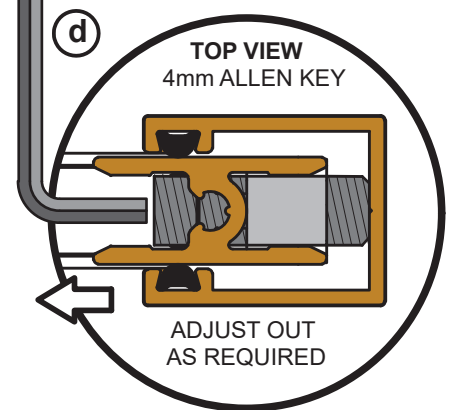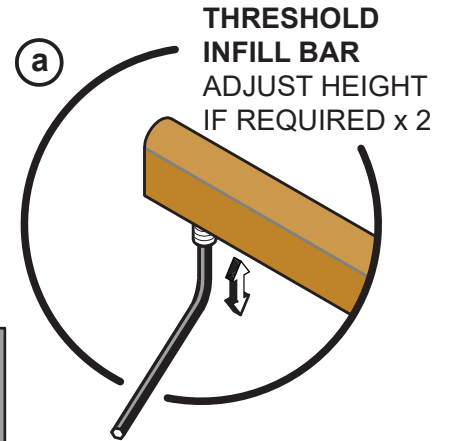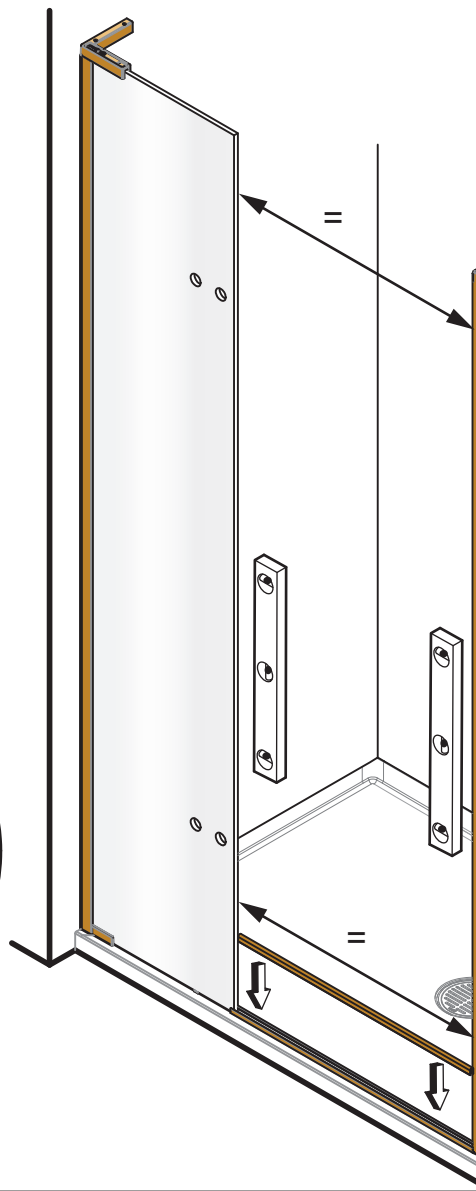
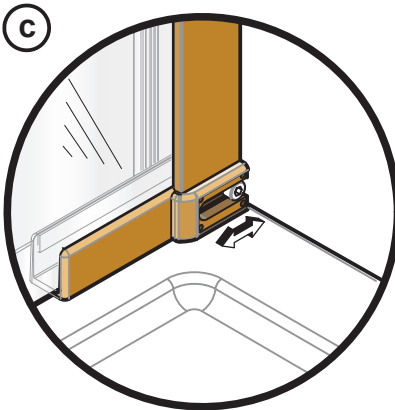
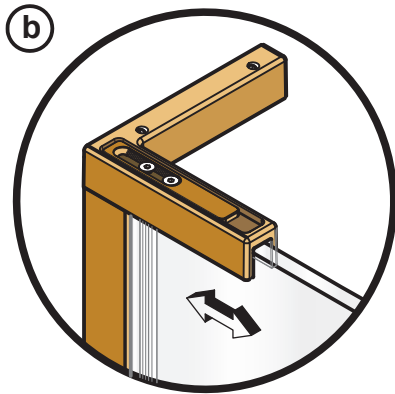


THRESHOLD INFILL BAR

STANDARD

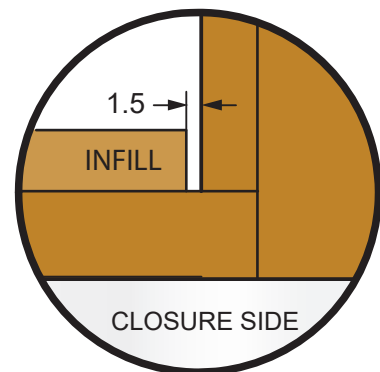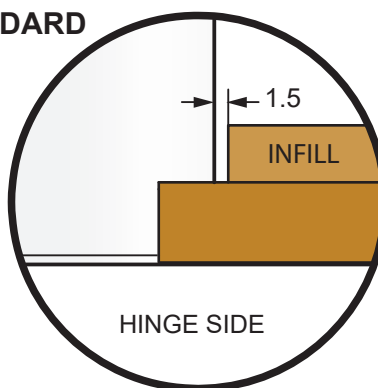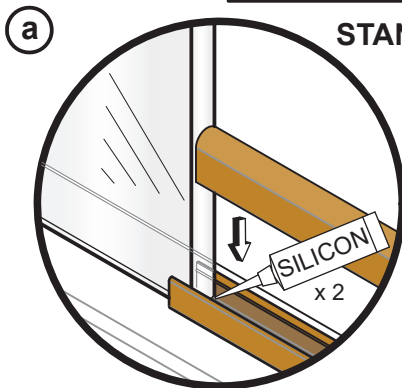


ACCENT FRAMES

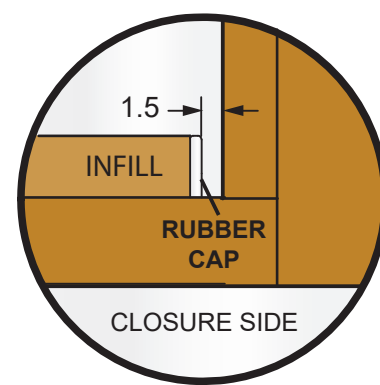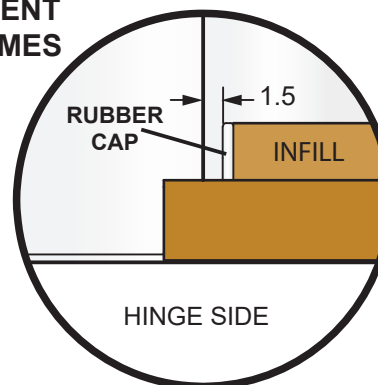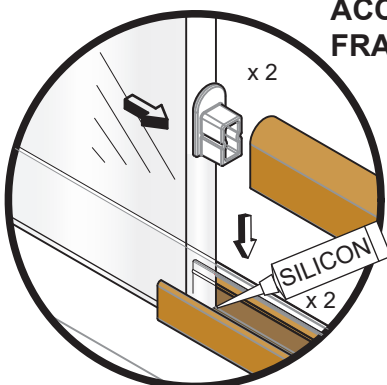


STAGE 5

**IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND**

LH HINGE PANEL ADJUSTMENT BLOCK POSITION

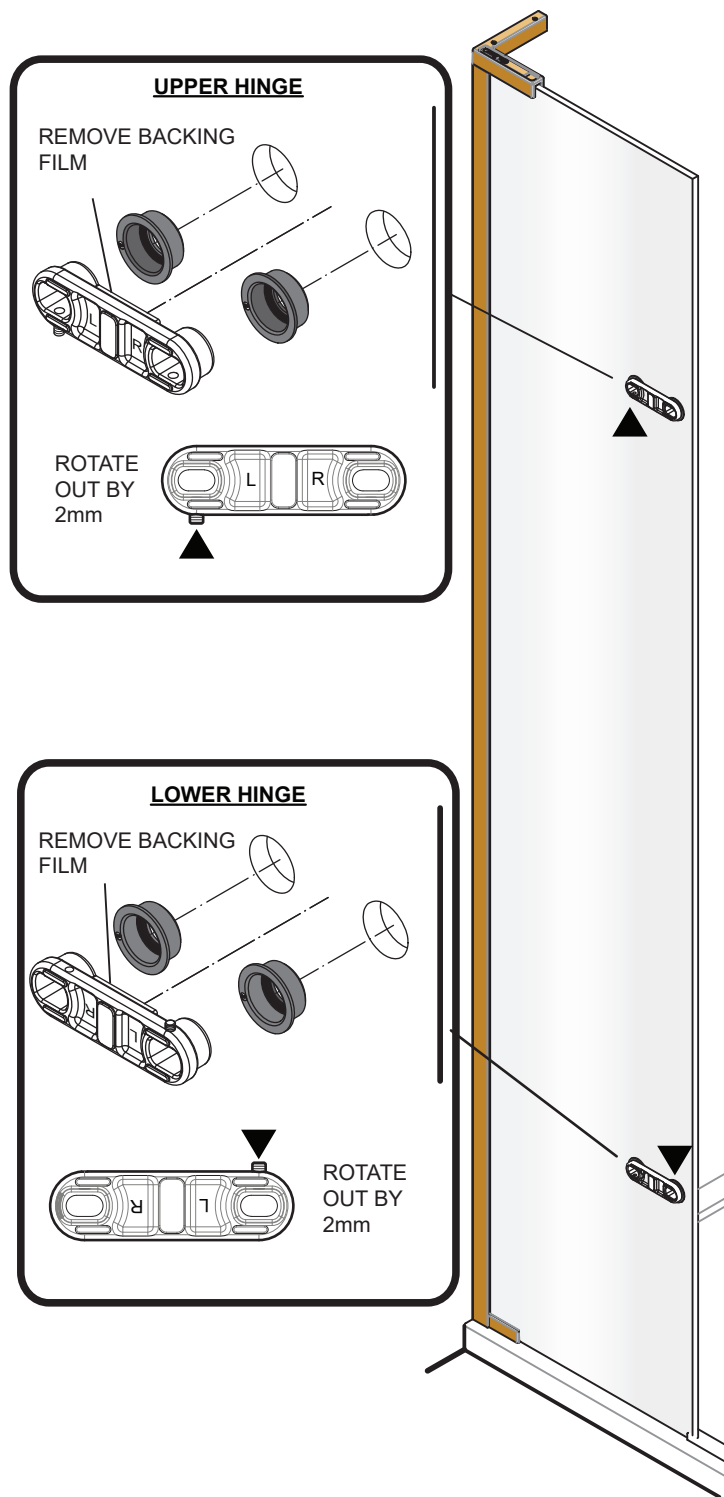

RH HINGE PANEL ADJUSTMENT BLOCK POSITION


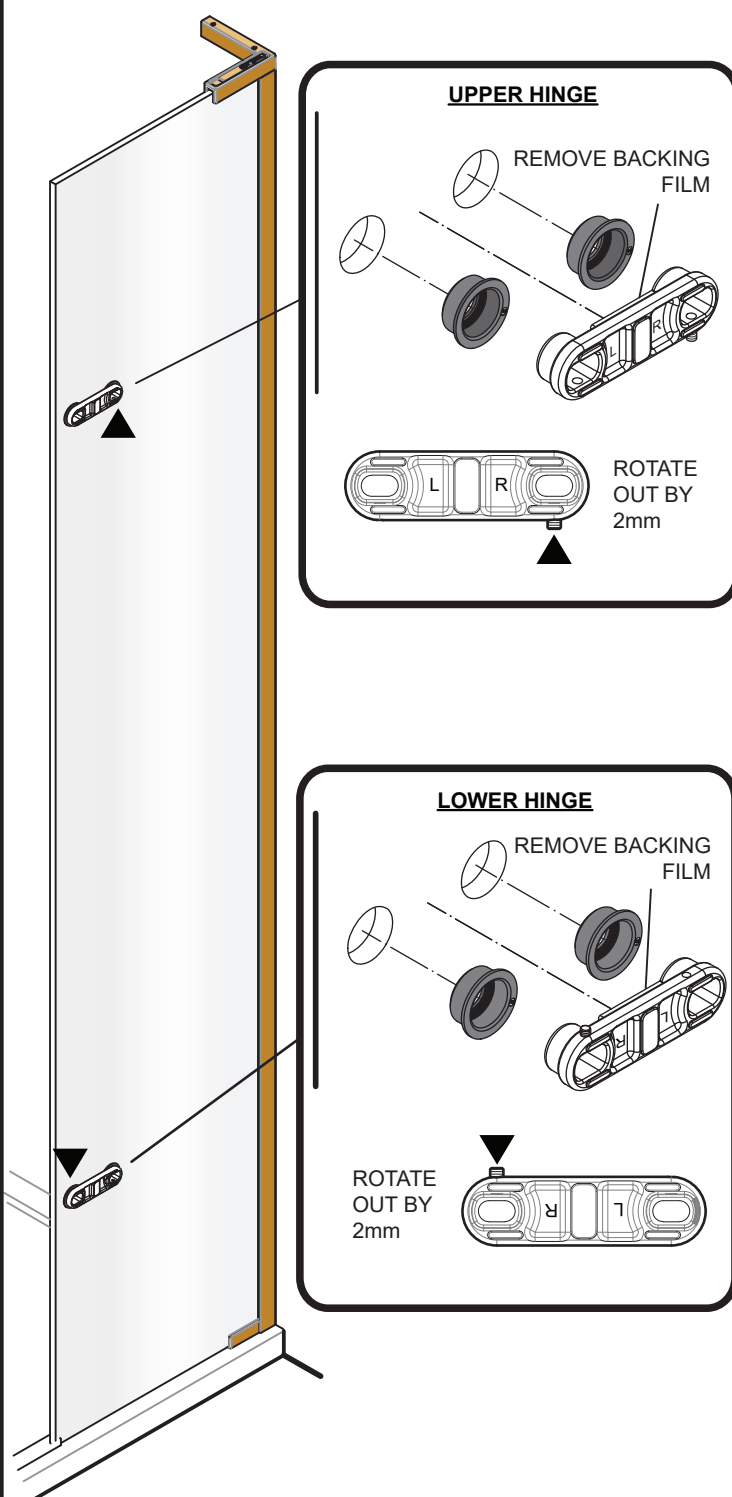


STAGE 6

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND



LH DOOR ADJUSTMENT BLOCK POSITION

RH DOOR ADJUSTMENT BLOCK POSITION



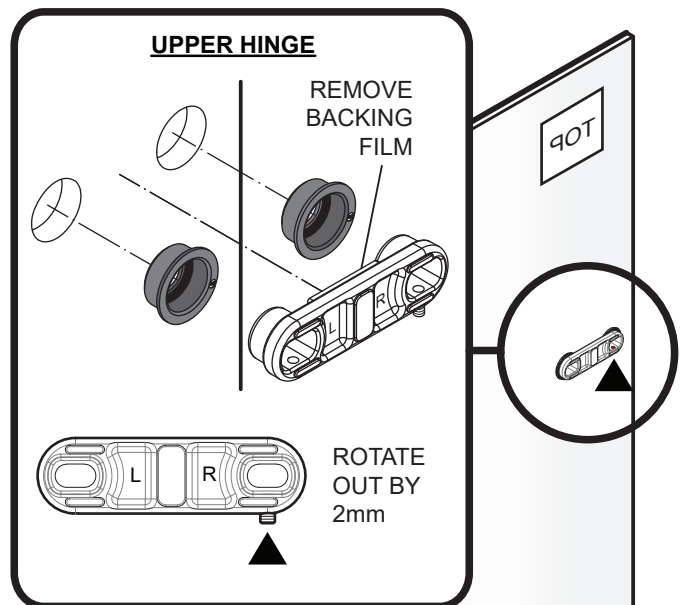
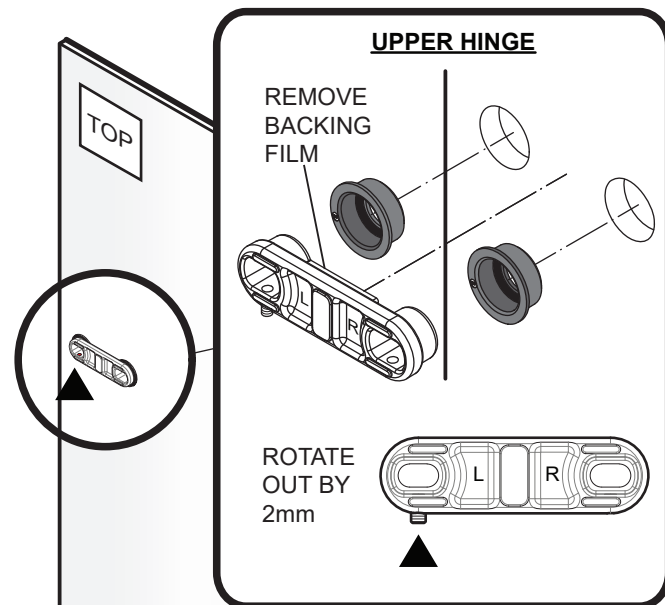


LH DOOR (OUTER SIDE)



RH DOOR (OUTER SIDE)

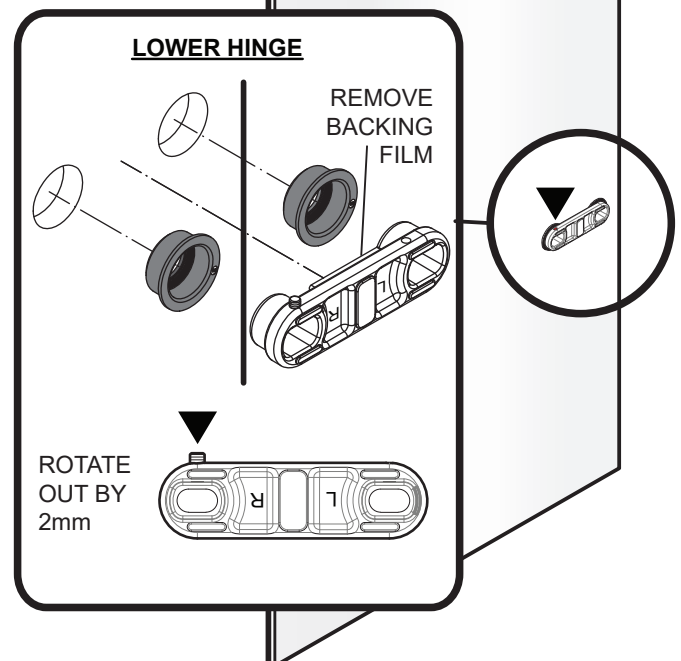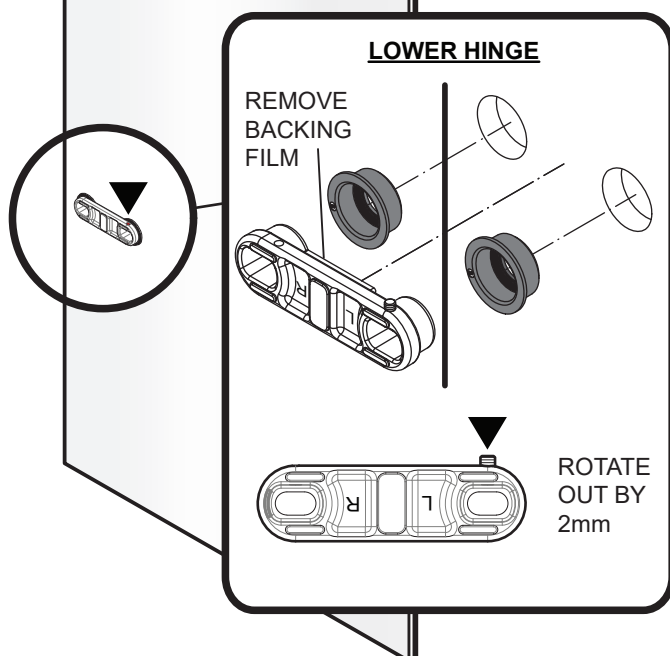





STAGE 7

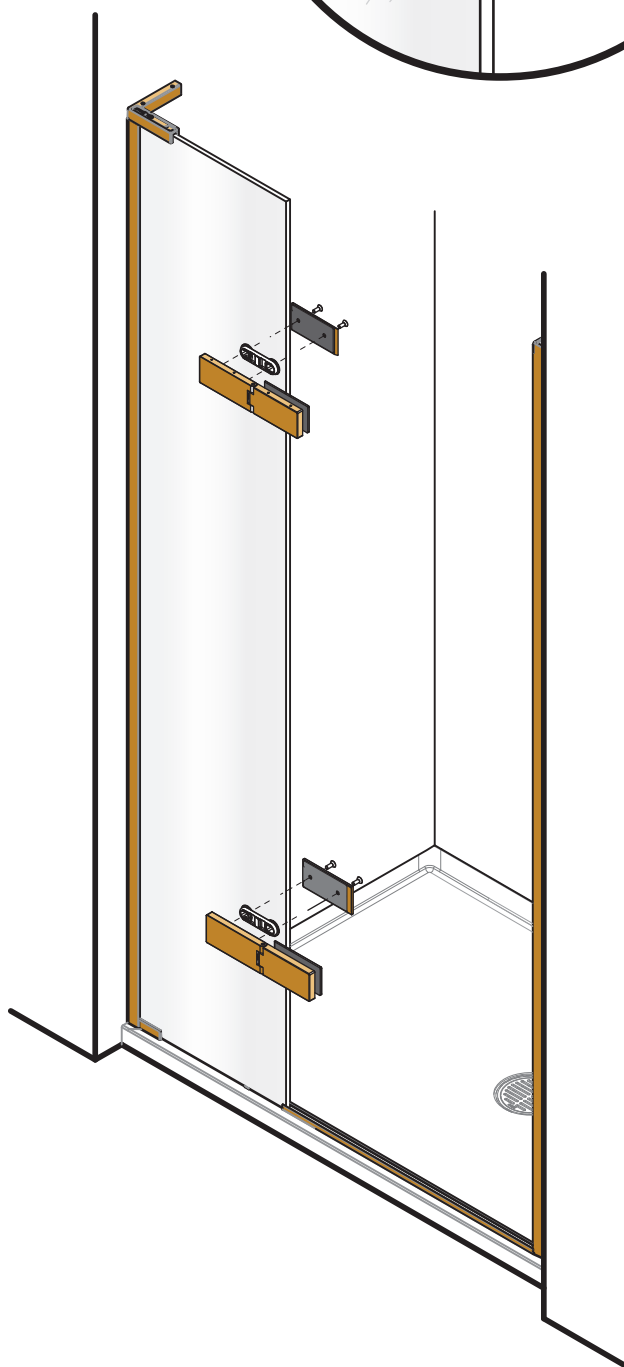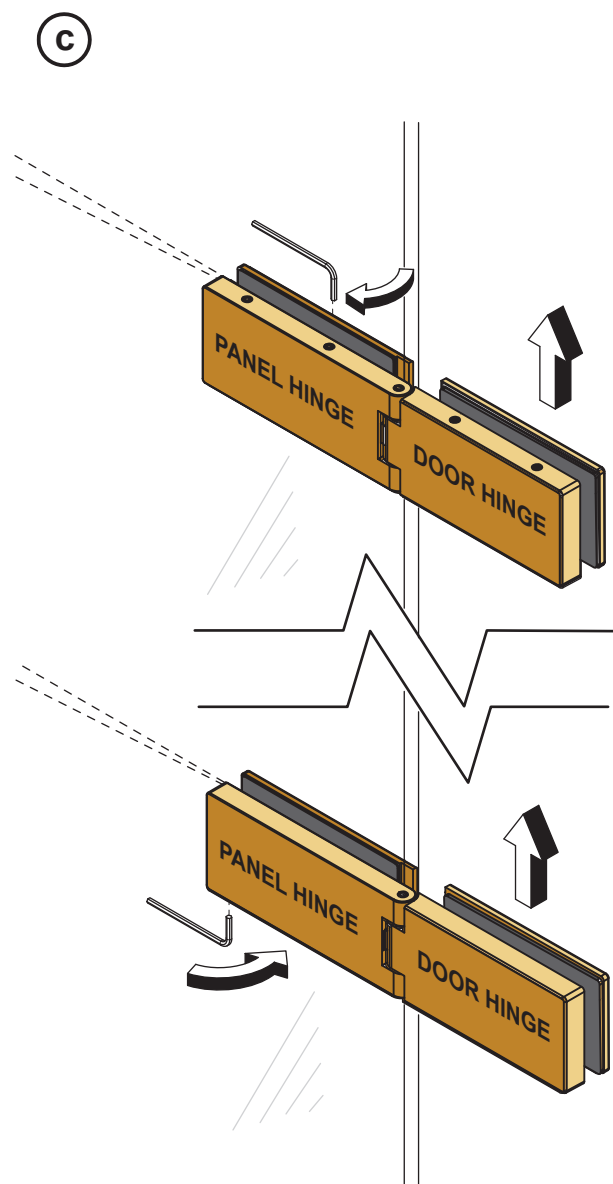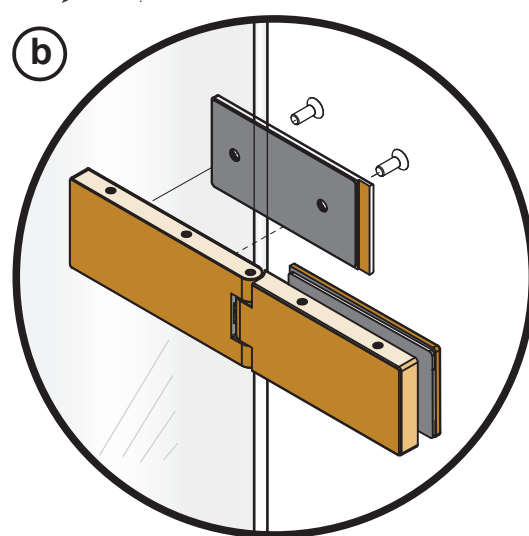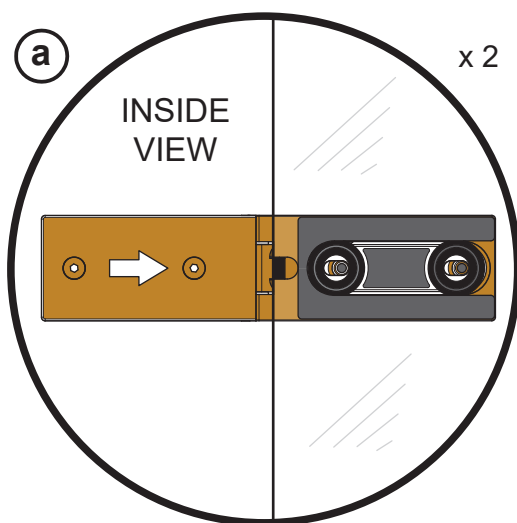



STAGE 8

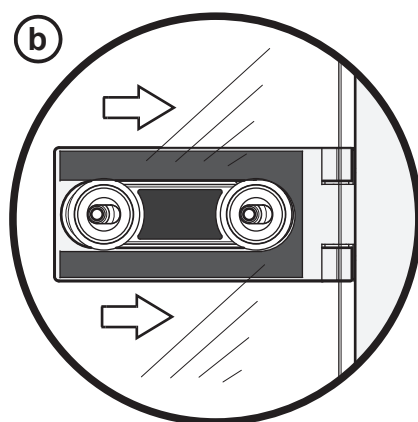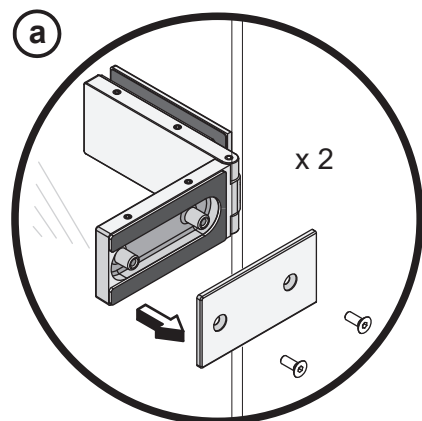

c HINGE VERTICAL SEAL

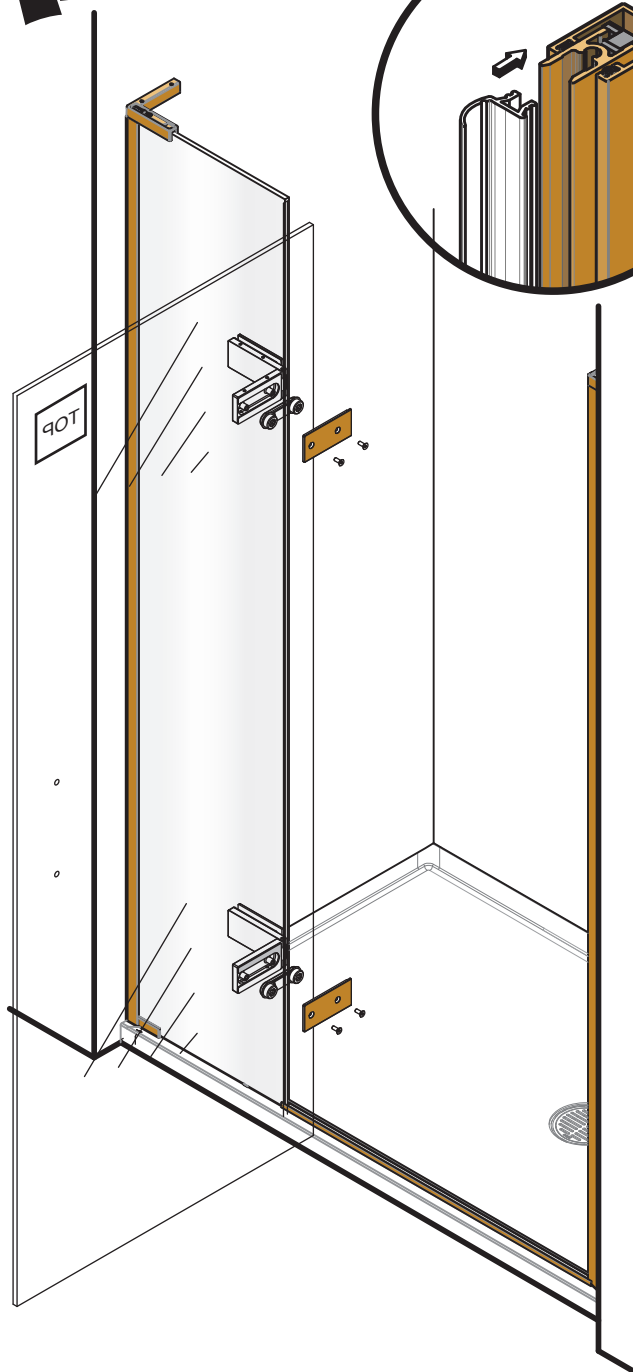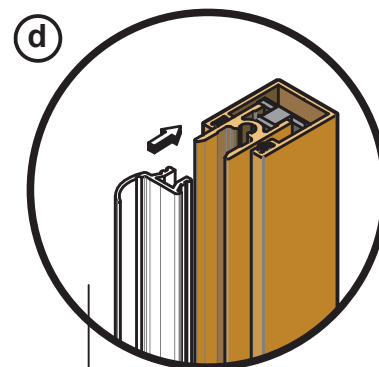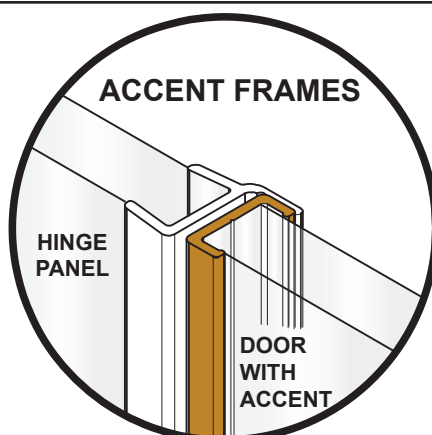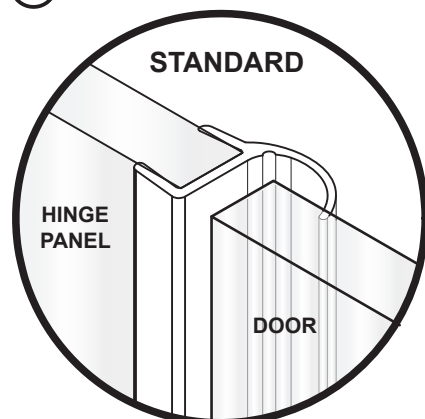

d CLOSURE VERTICAL SEAL

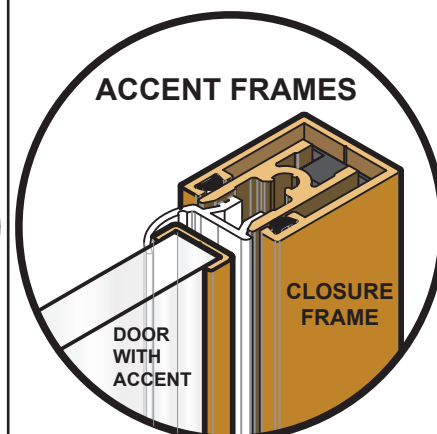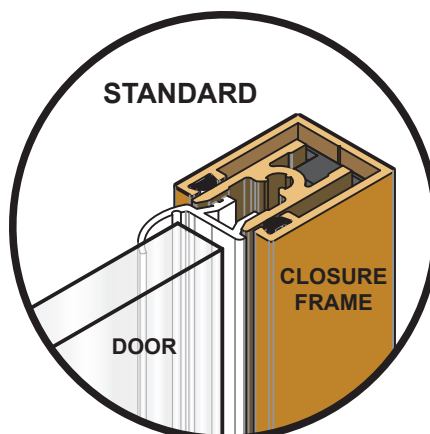


STAGE 9

HANDLE VARIANTS

ILLUSTRIOUS


9808*

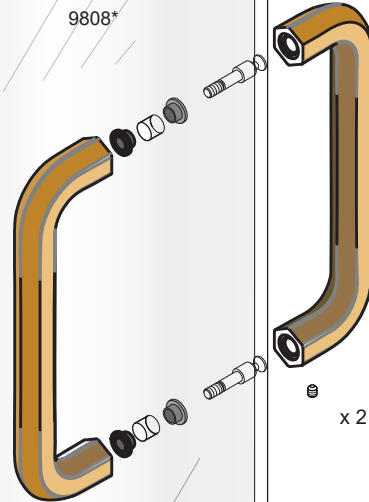

x 2

LINEAR


6185*

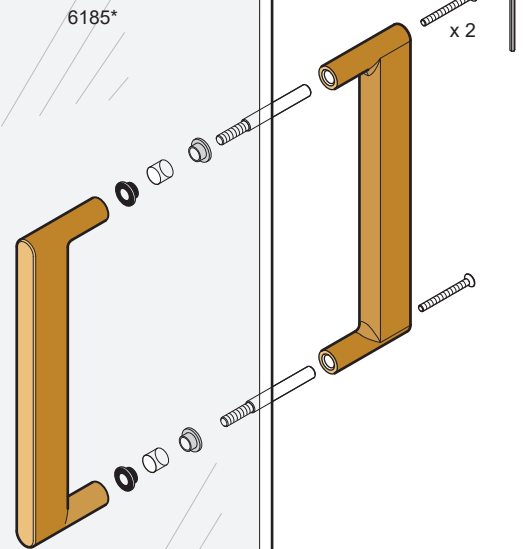

x 2

TRADITIONAL


8632*

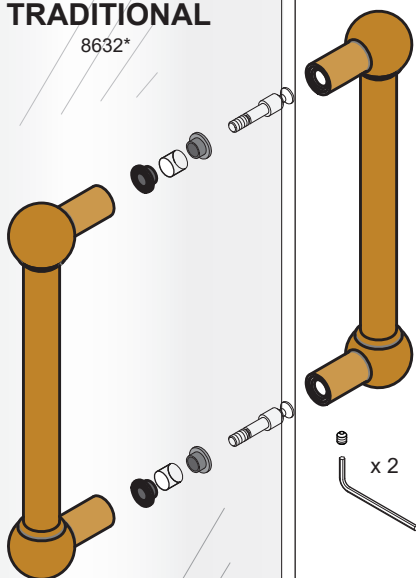

x 2

ENGINEER


9809ASSY*

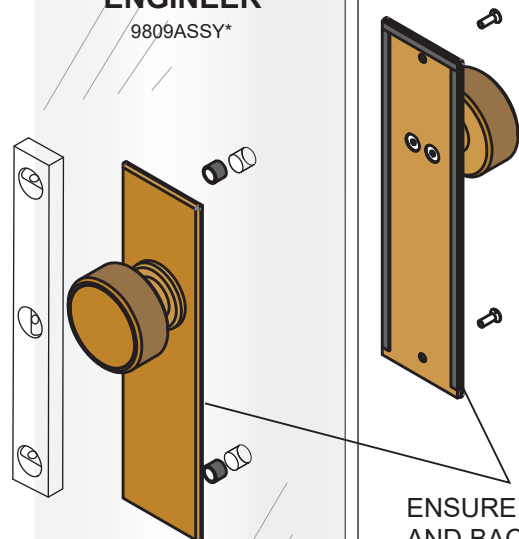



ENSURE FRONT
AND BACK PLATES
ARE ALIGNED
BEFORE REMOVING
BACKING FILM

STAGE 10









(b)

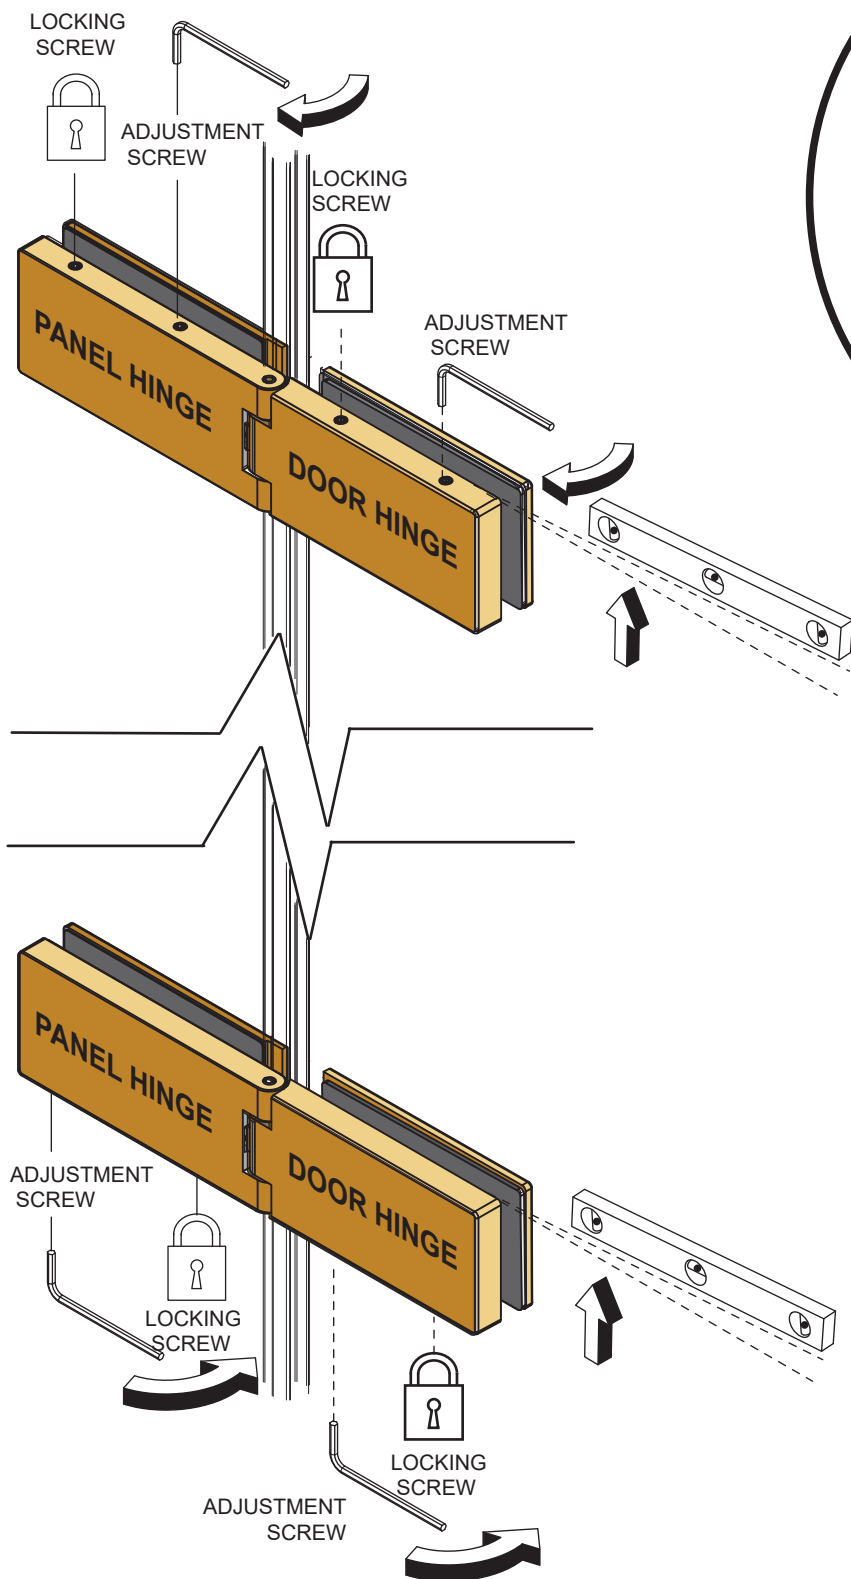


(a)

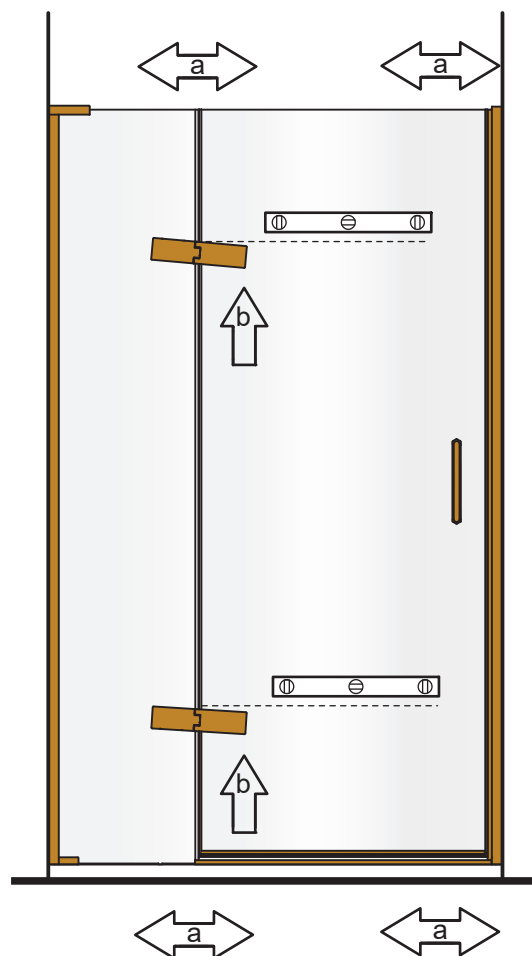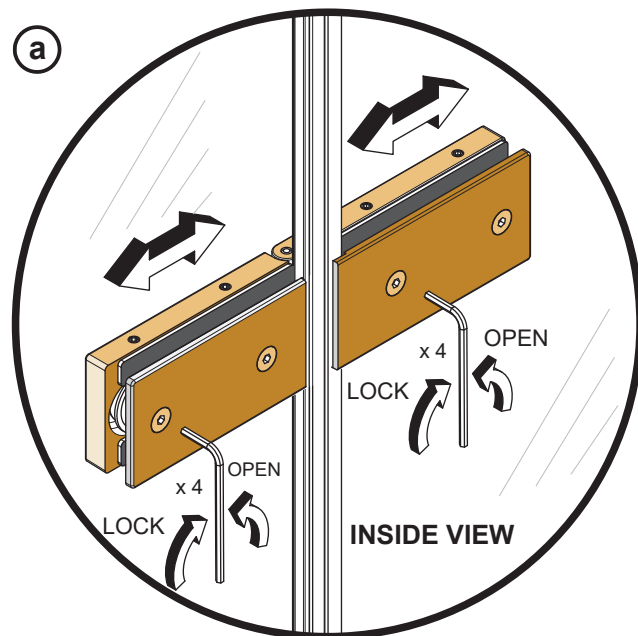

STAGE 11

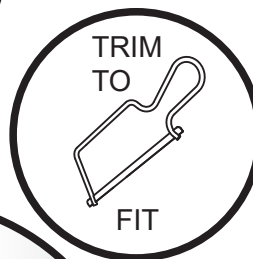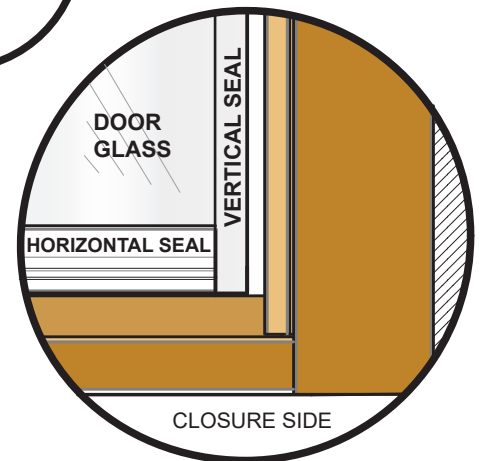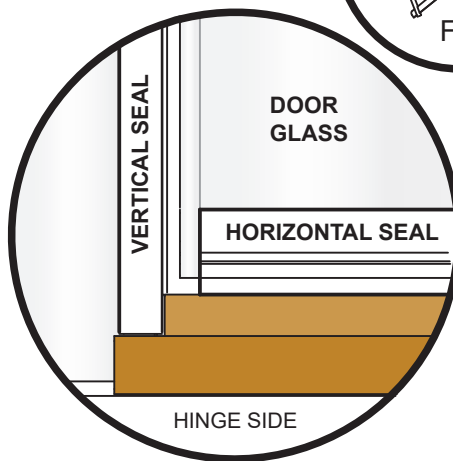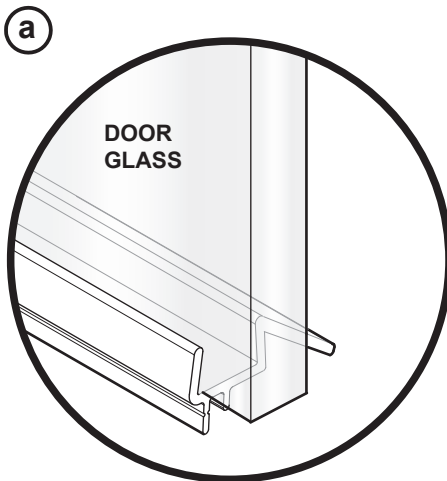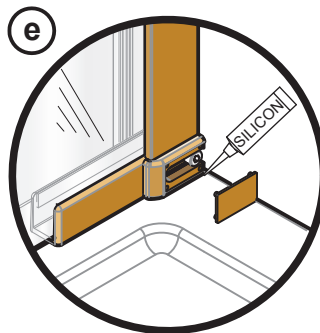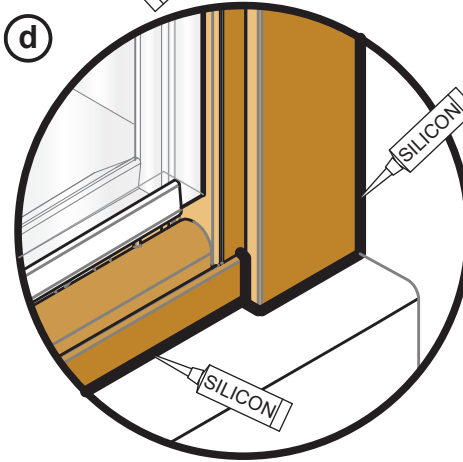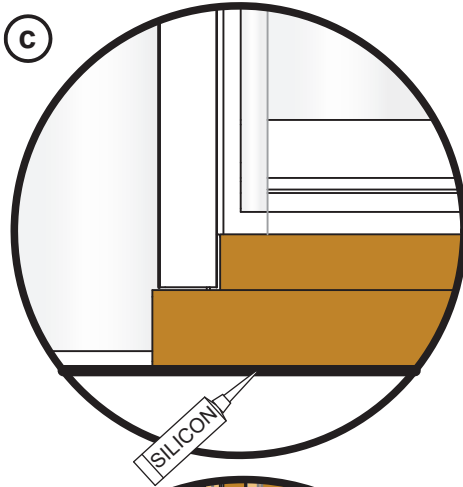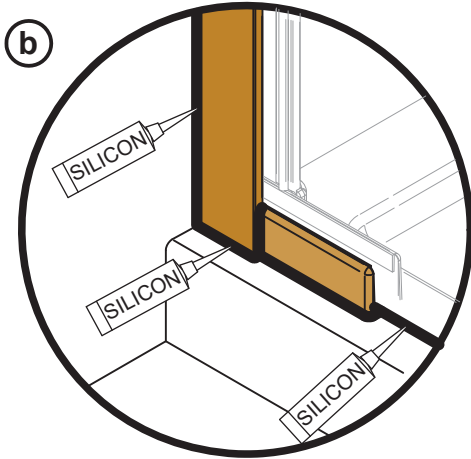


CUT HORIZONTAL SEAL TO LENGTH BETWEEN FINS OF BOTH VERTICAL SEALS

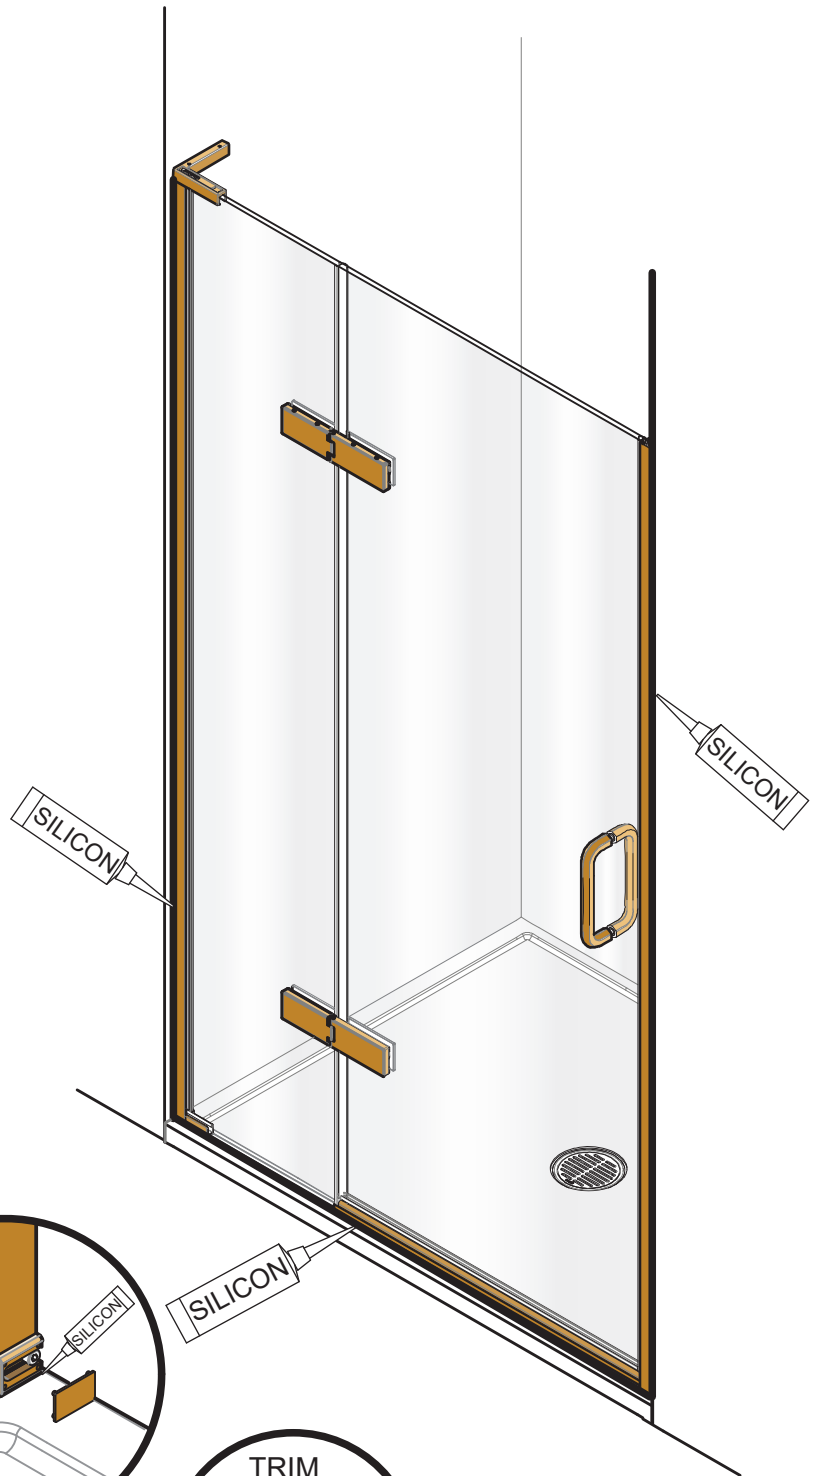

PARTS LIST

CLOSURE FRAME

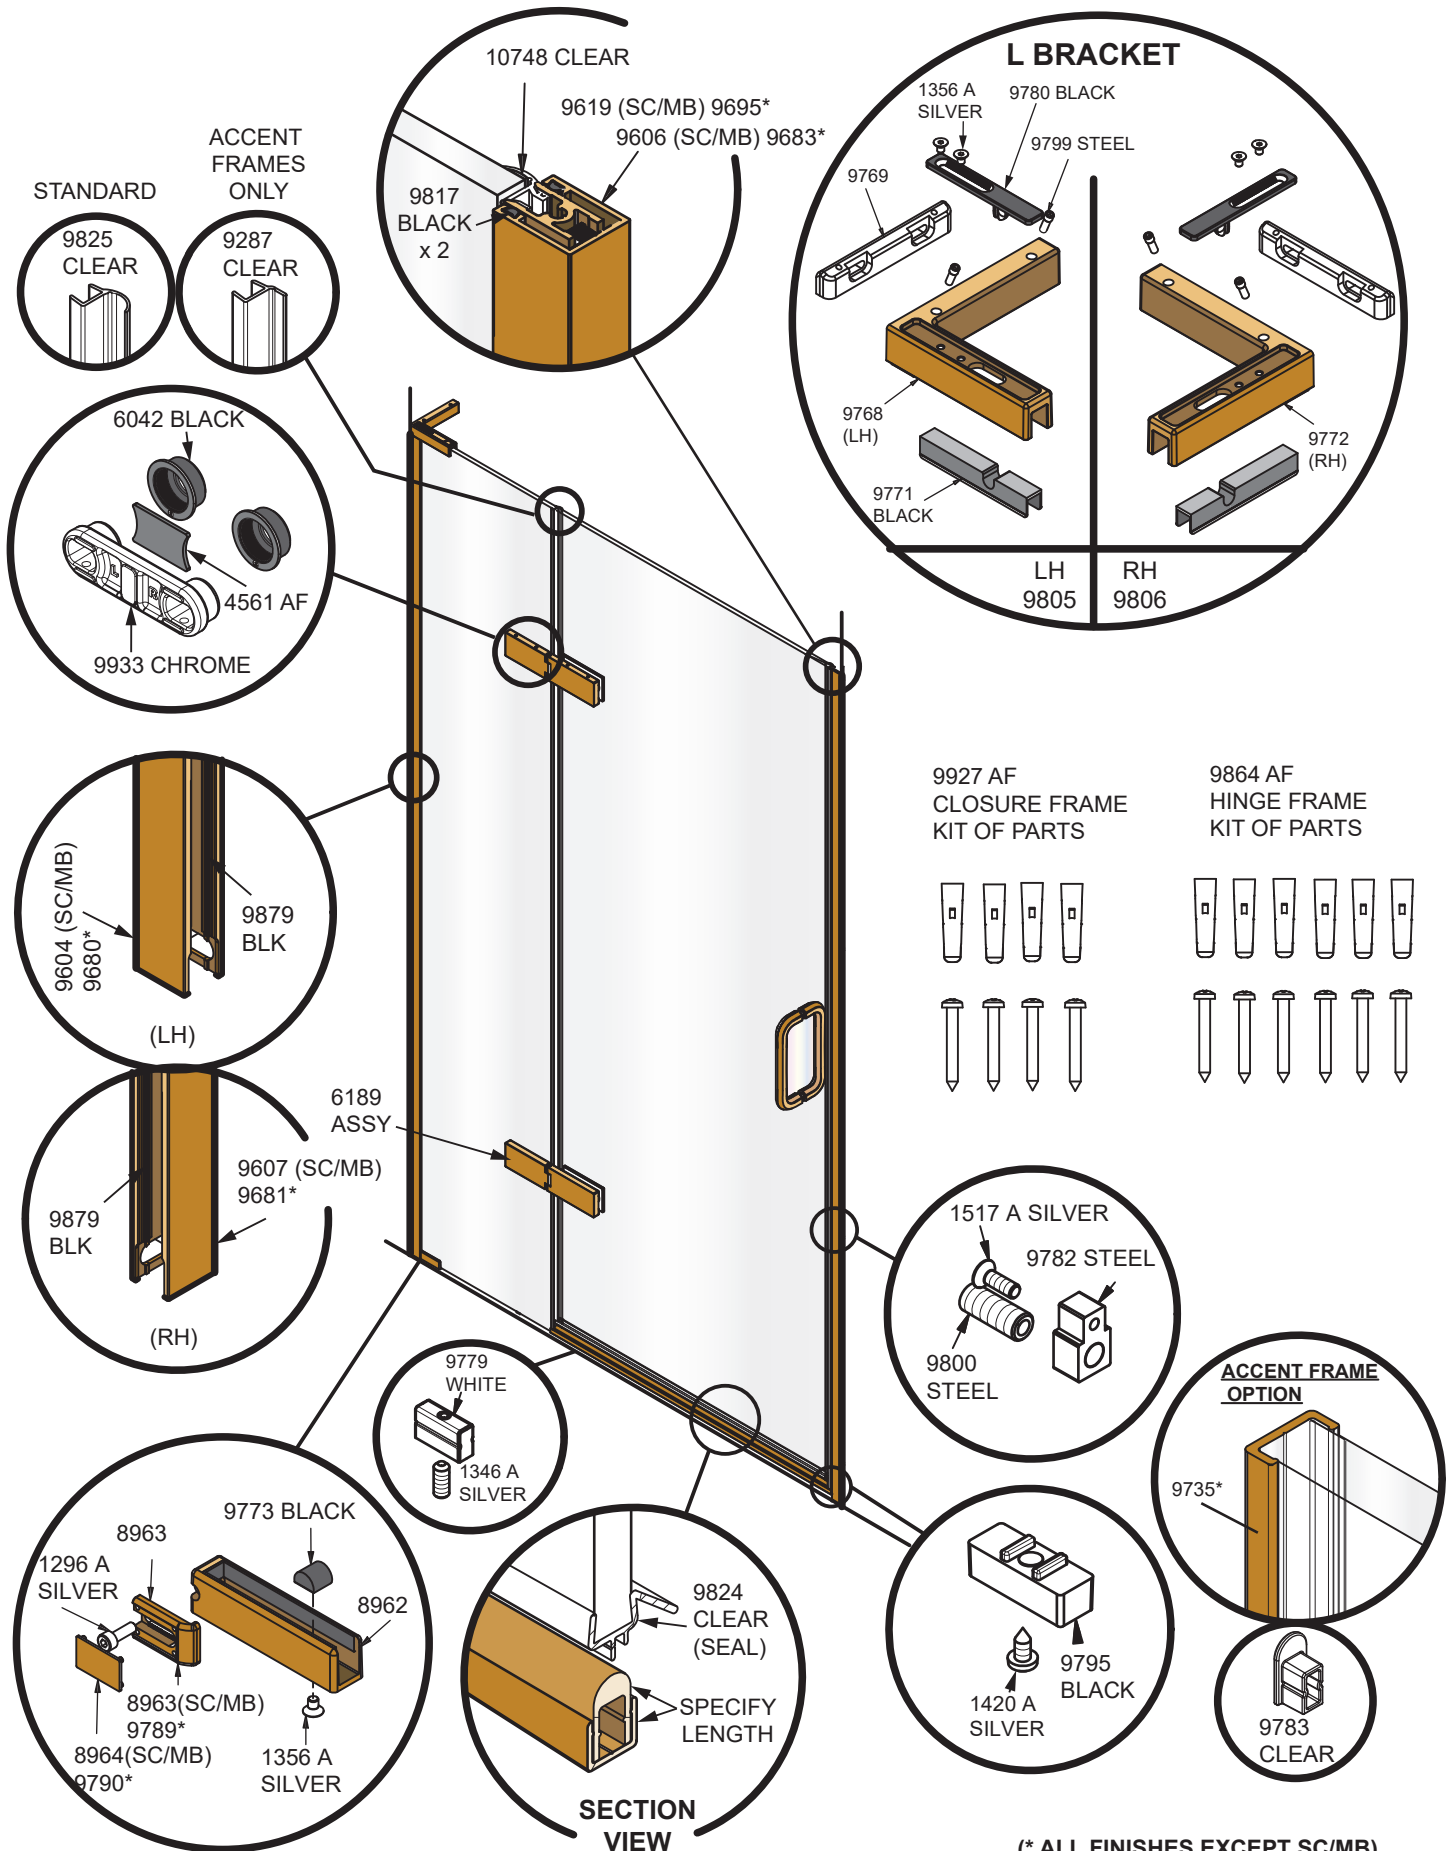

(* ALL FINISHES EXCEPT SC/MB)