


matki

EAUZONE

EPHC - HINGED DOOR WITH HINGE PANEL FOR CORNER

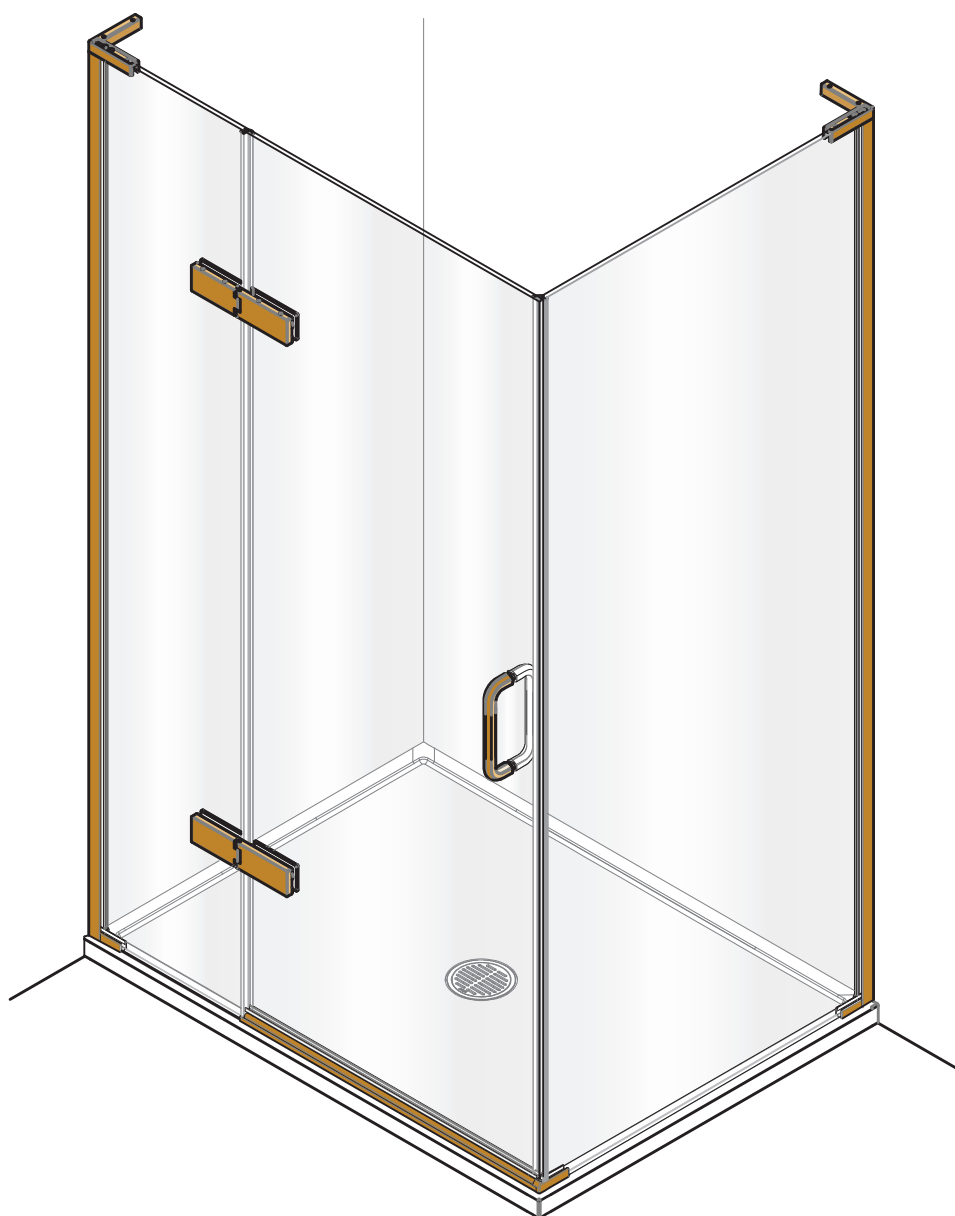

EPHC

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

9916 AF 03/25

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door and Side panel, Stage 7 - 8. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

MODEL CORNER DOOR

	A + B	A	B
EPHC800	769 – 784	600	200
EPHC850	819 – 834	600	250
EPHC900	869 – 884	700	200
EPHC950	919 – 934	700	250
EPHC1000	969 – 984	800	200
EPHC1050	1019 – 1034	800	250
EPHC1100	1069 – 1084	700	400
EPHC1150	1119 – 1134	700	450
EPHC1200	1169 – 1184	700	500
EPHC1250	1219 – 1234	800	450
EPHC1300	1269 – 1284	800	500

SIDE PANEL

	C
EPHC700SP	668 – 683
EPHC760SP	728 – 743
EPHC800SP	768 – 783
EPHC900SP	868 – 883
EPHC1000SP	968 – 983

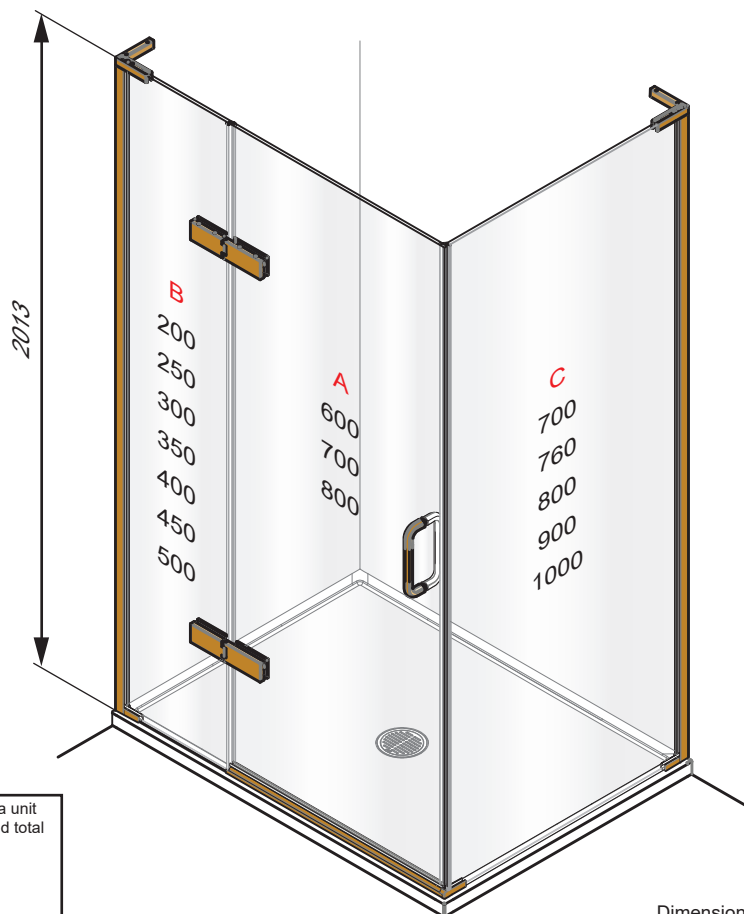


Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width e.g. See below other combinations for Model 1100 all have same total width.

	A + B	A	B
EPHC1100	1066 – 1081	800	300
EPHC1100	1066 – 1081	600	500






Dimensions are approximate

SETTING OUT

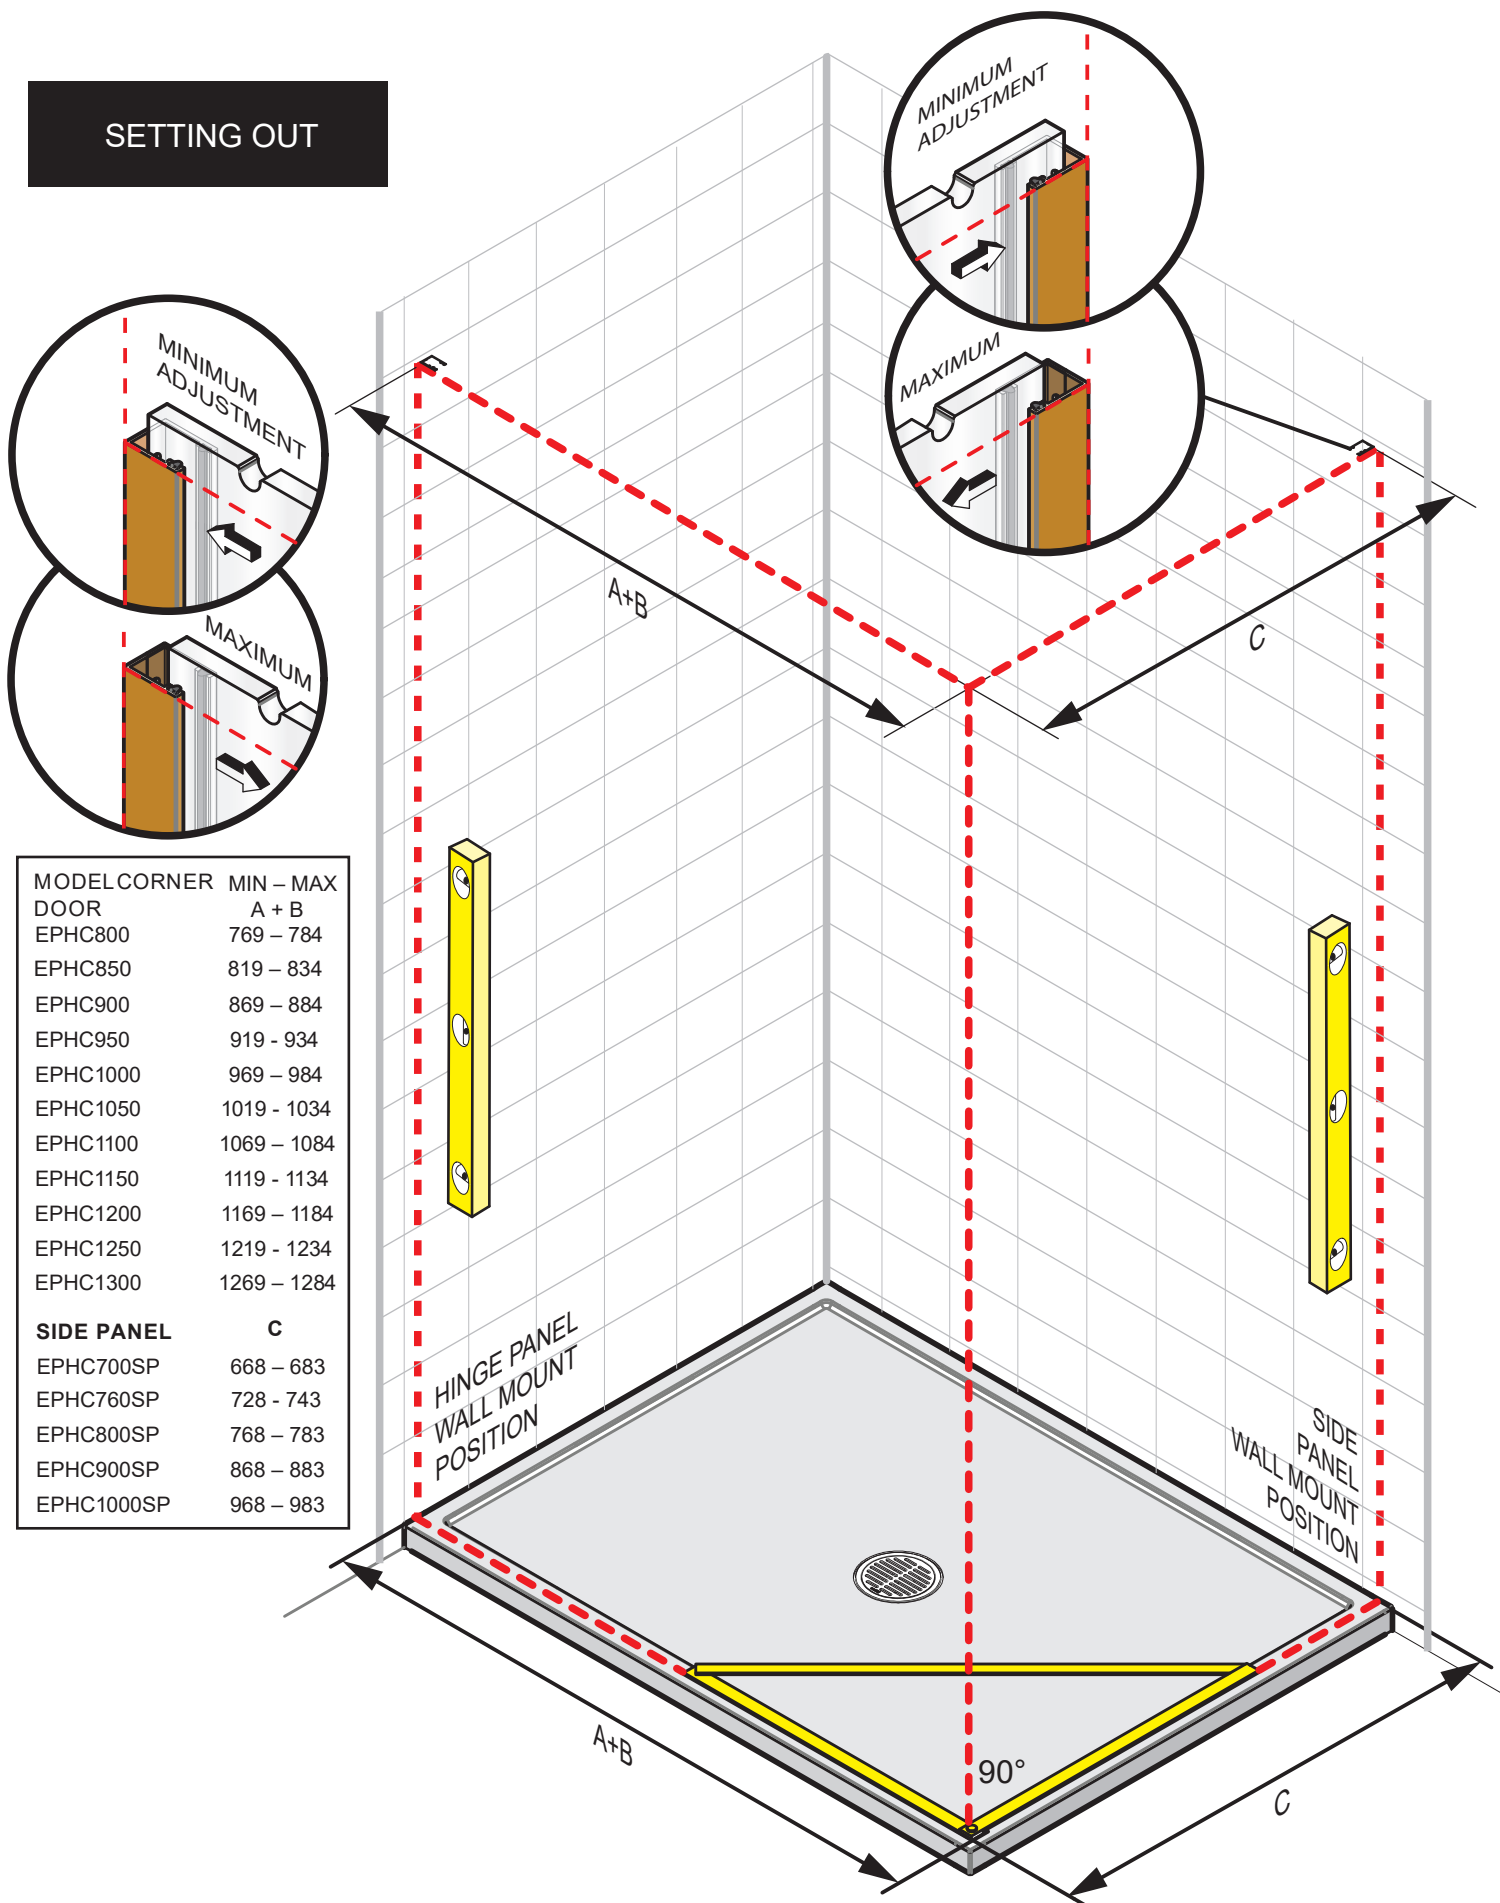


Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1




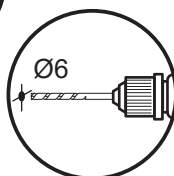
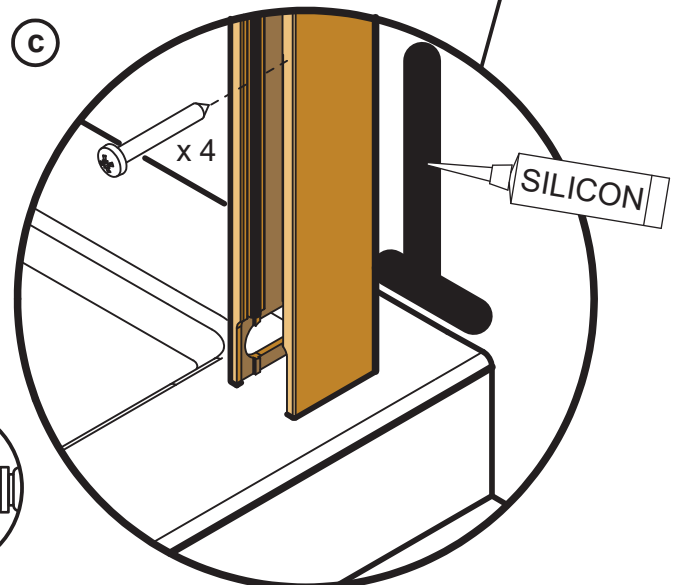
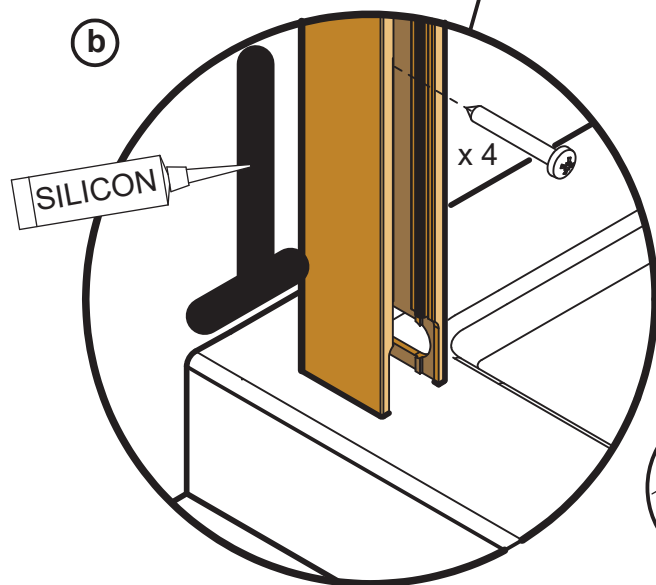
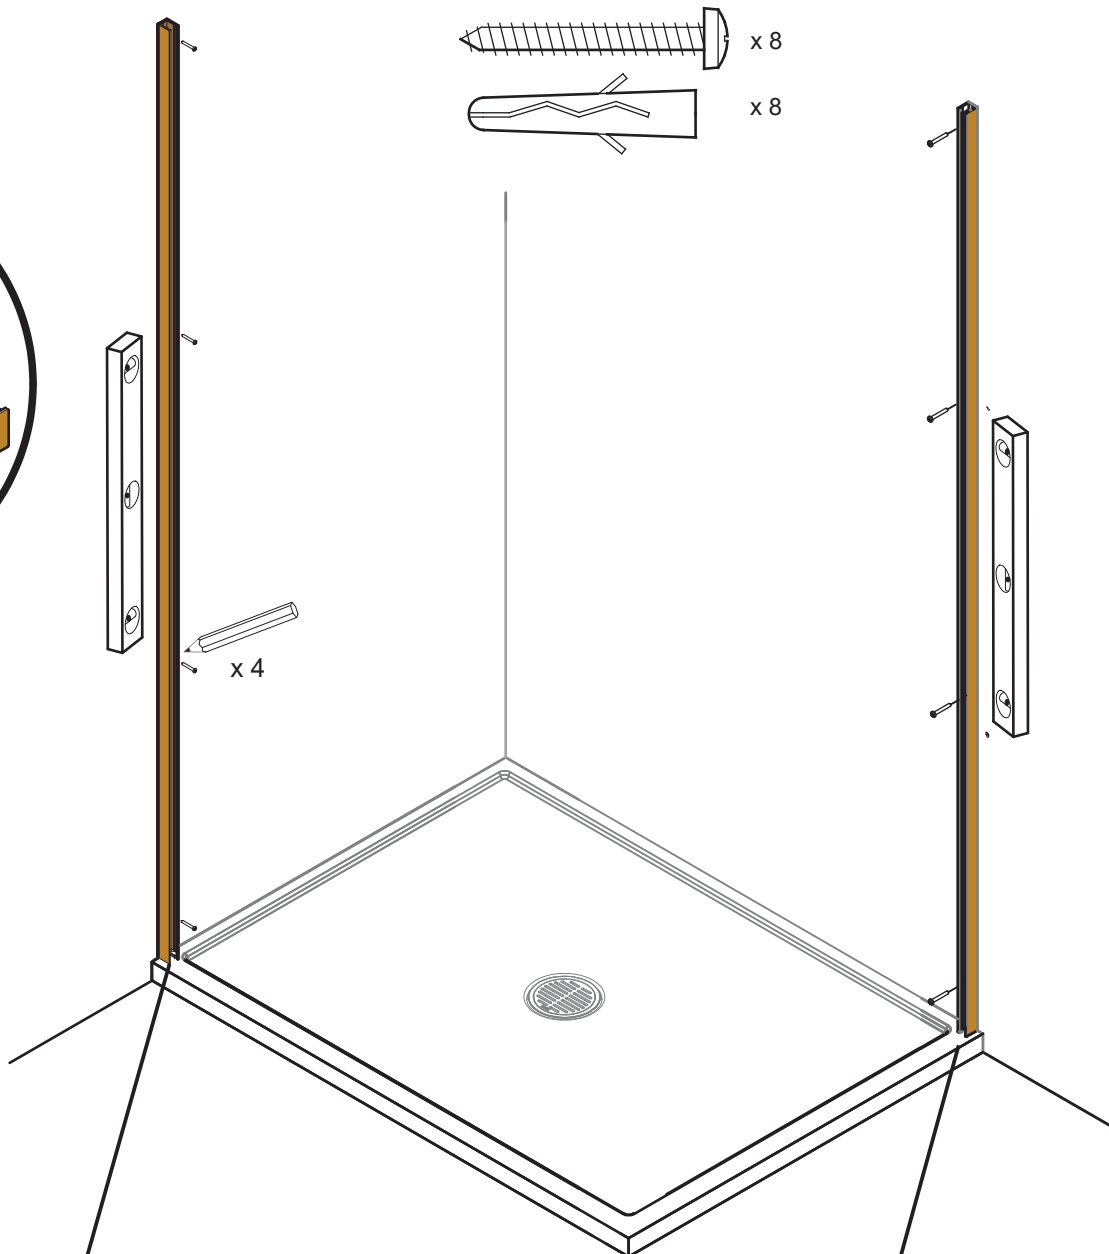
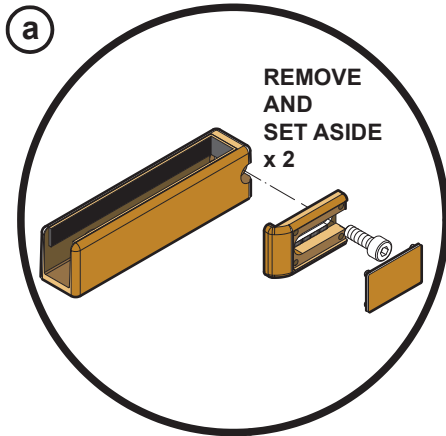


IMAGES SHOW LH PANEL HINGED DOOR INSTALLATION REVERSE FOR RH.







STAGE 2

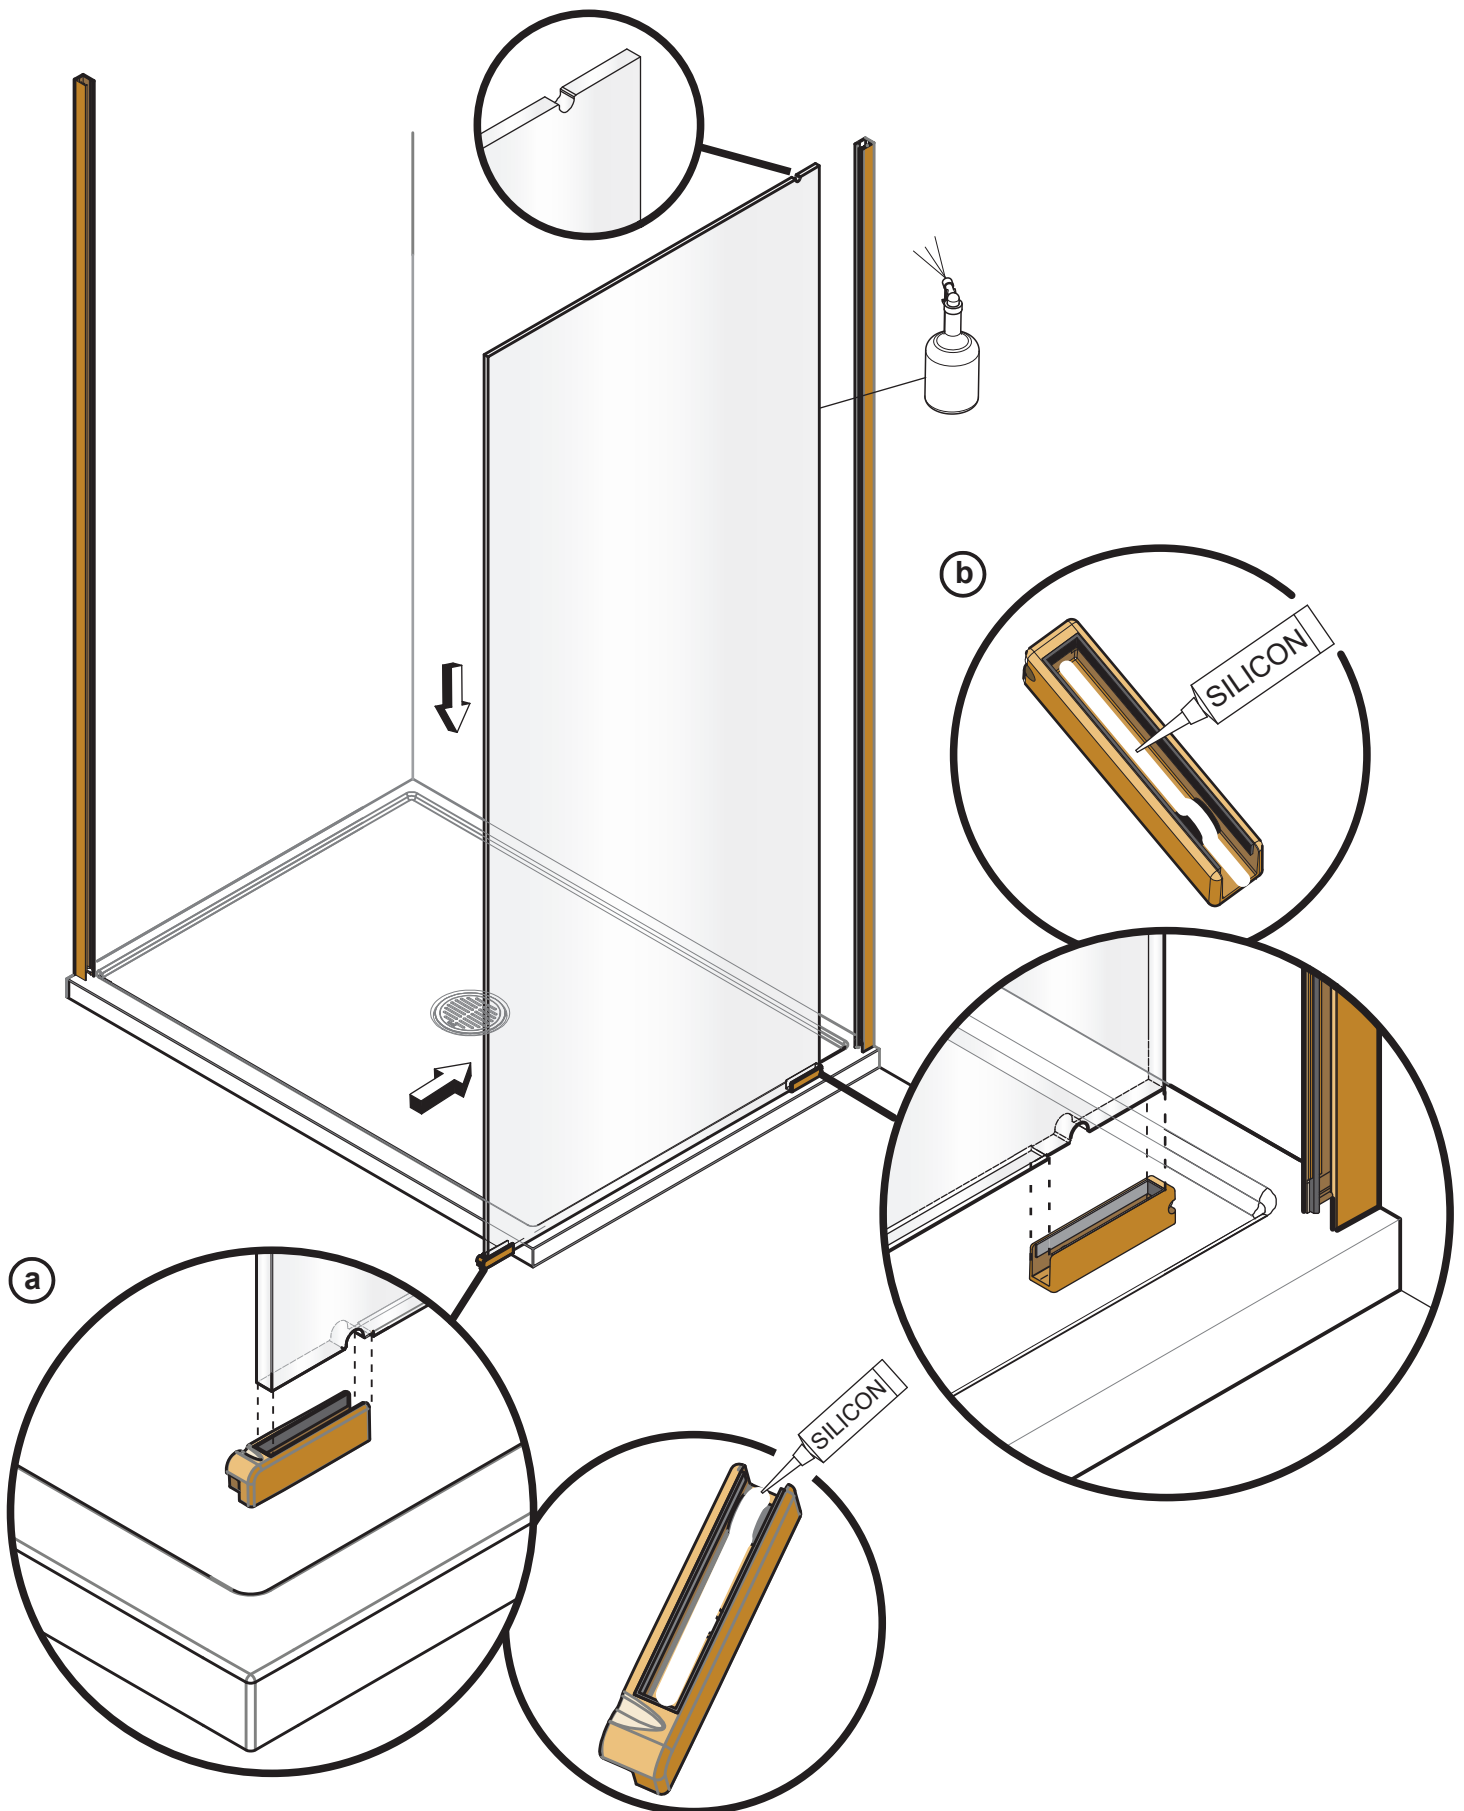




STAGE 3

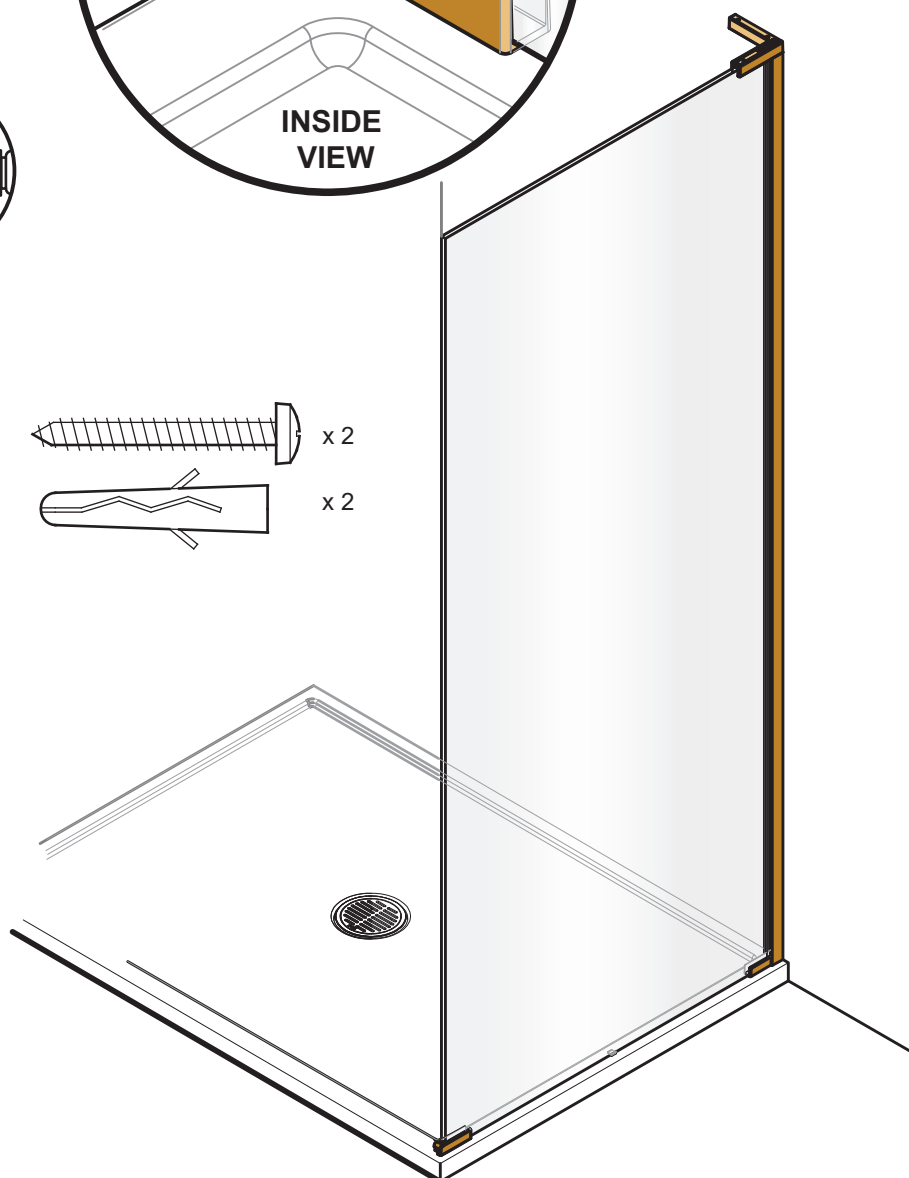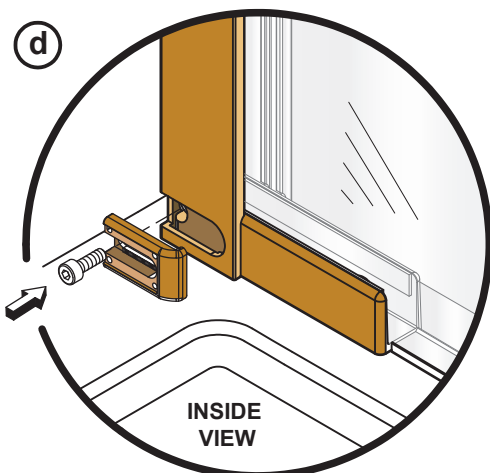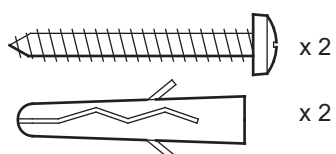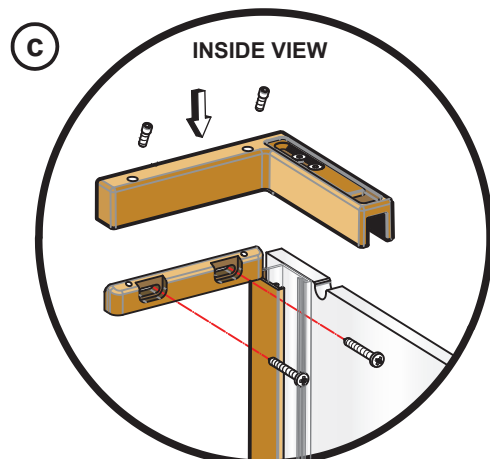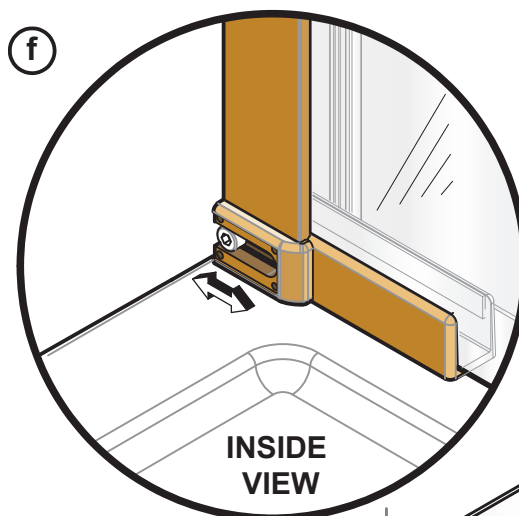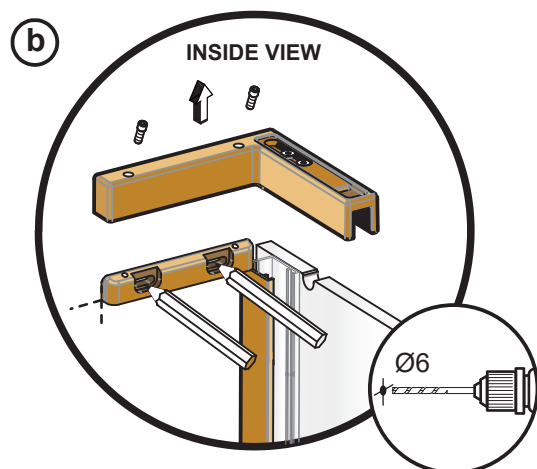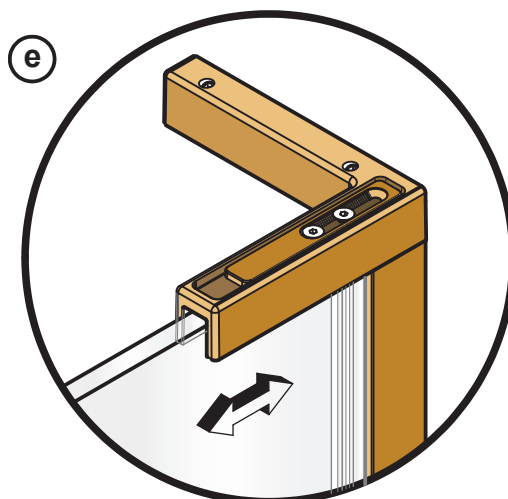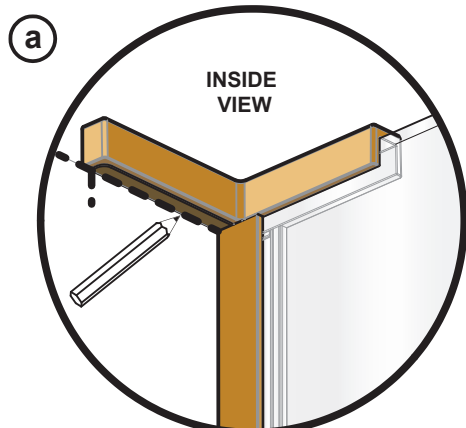

STAGE 4

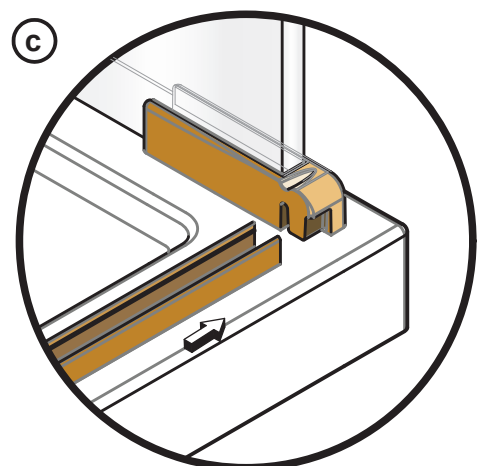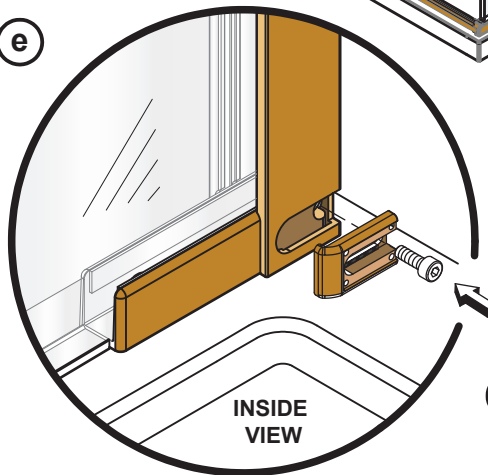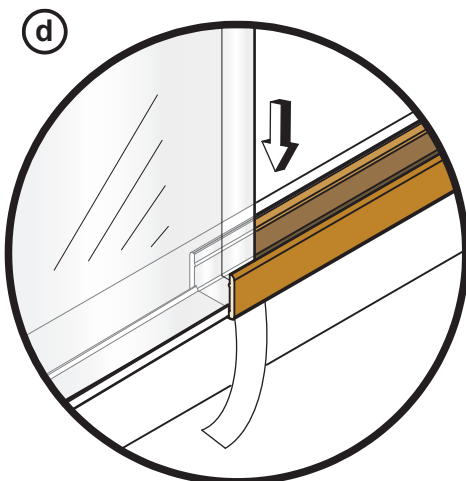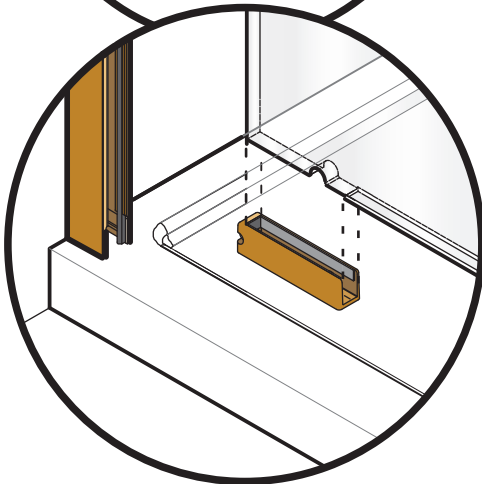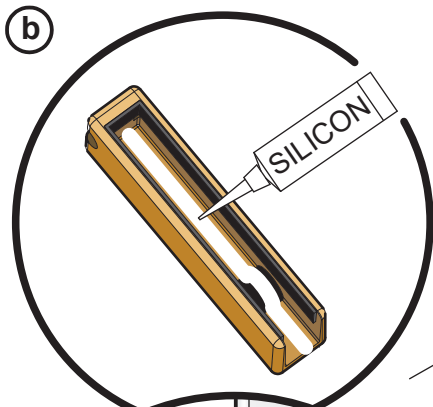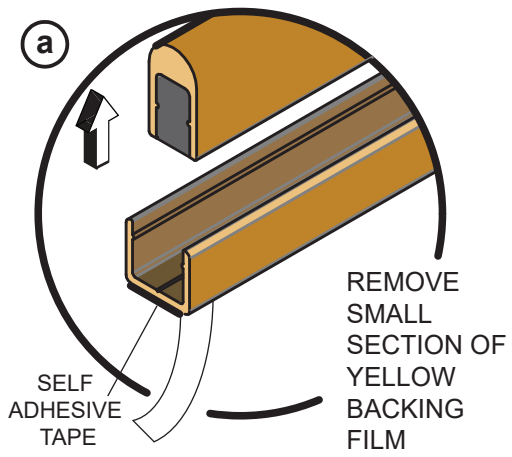


STAGE 5

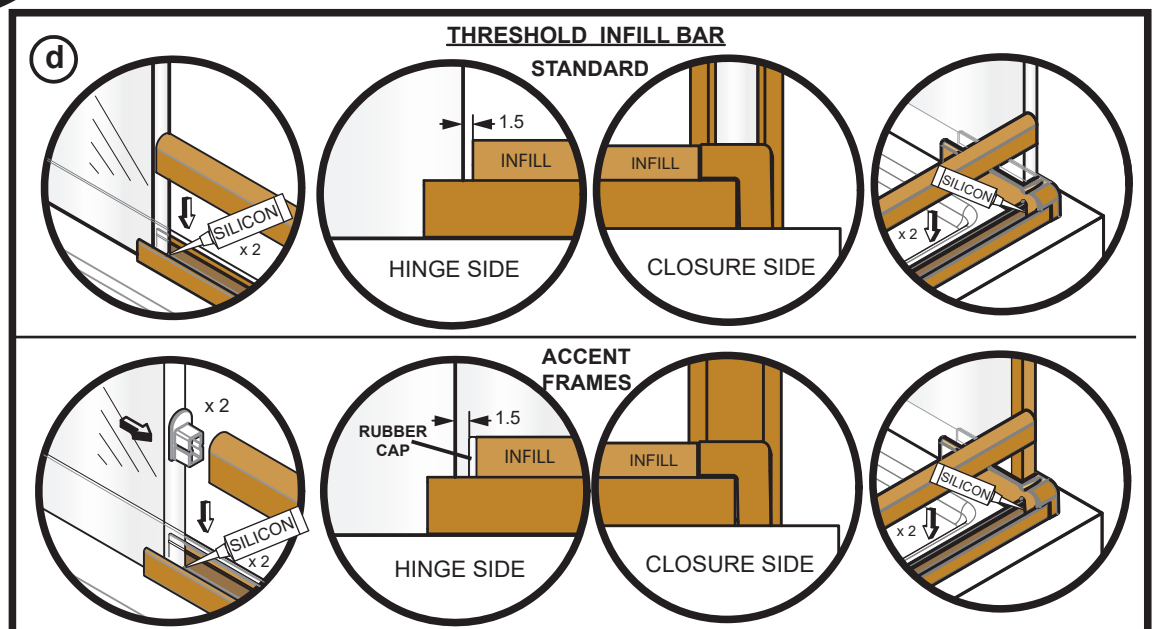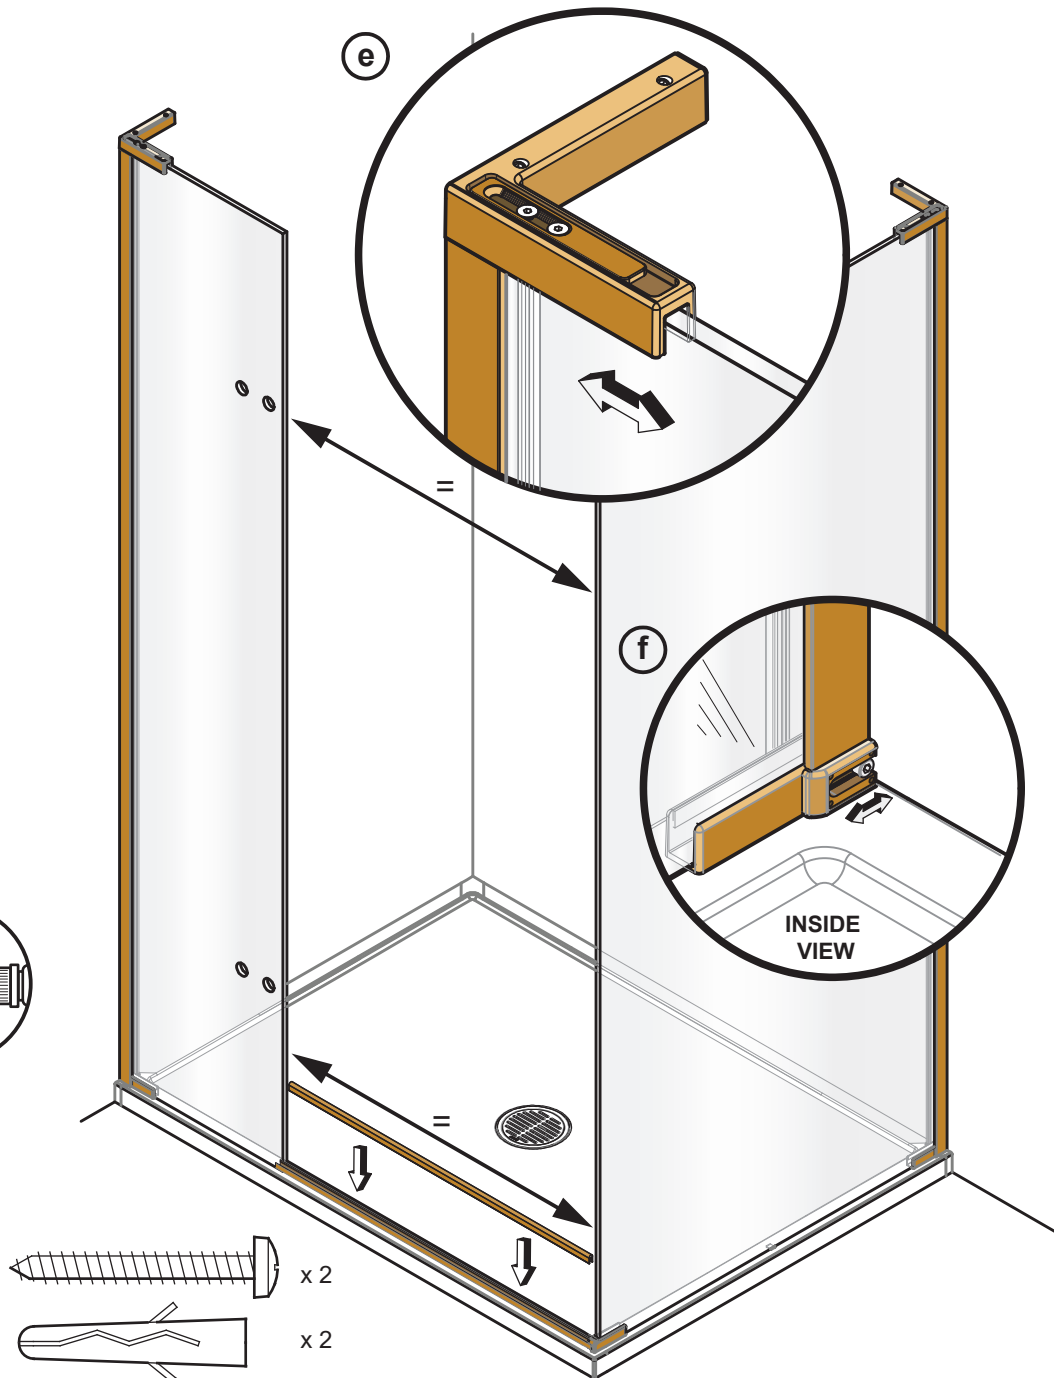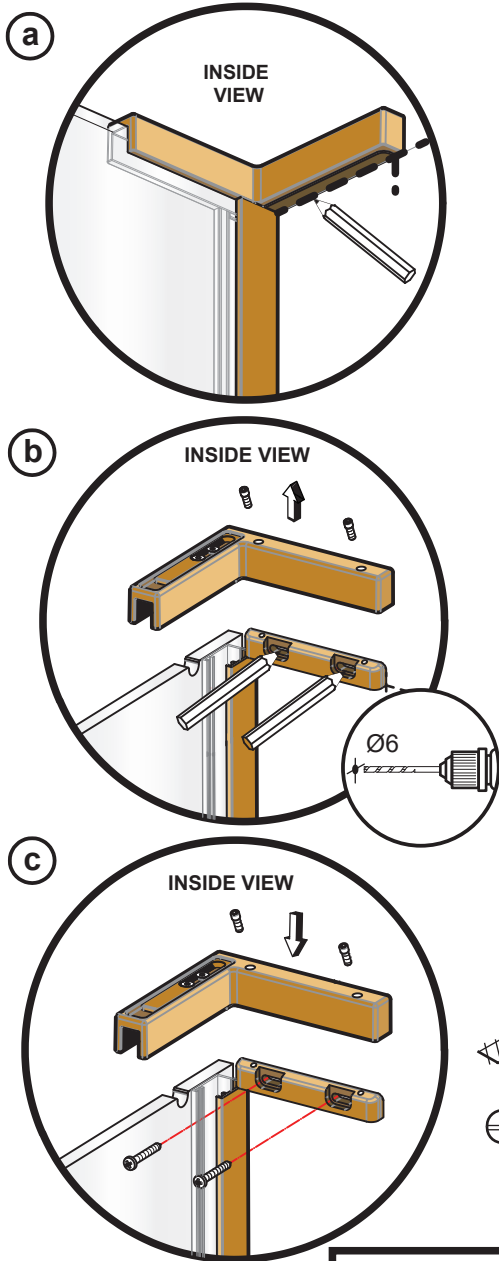


STAGE 6

**IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND**

LH HINGE PANEL ADJUSTMENT BLOCK POSITION

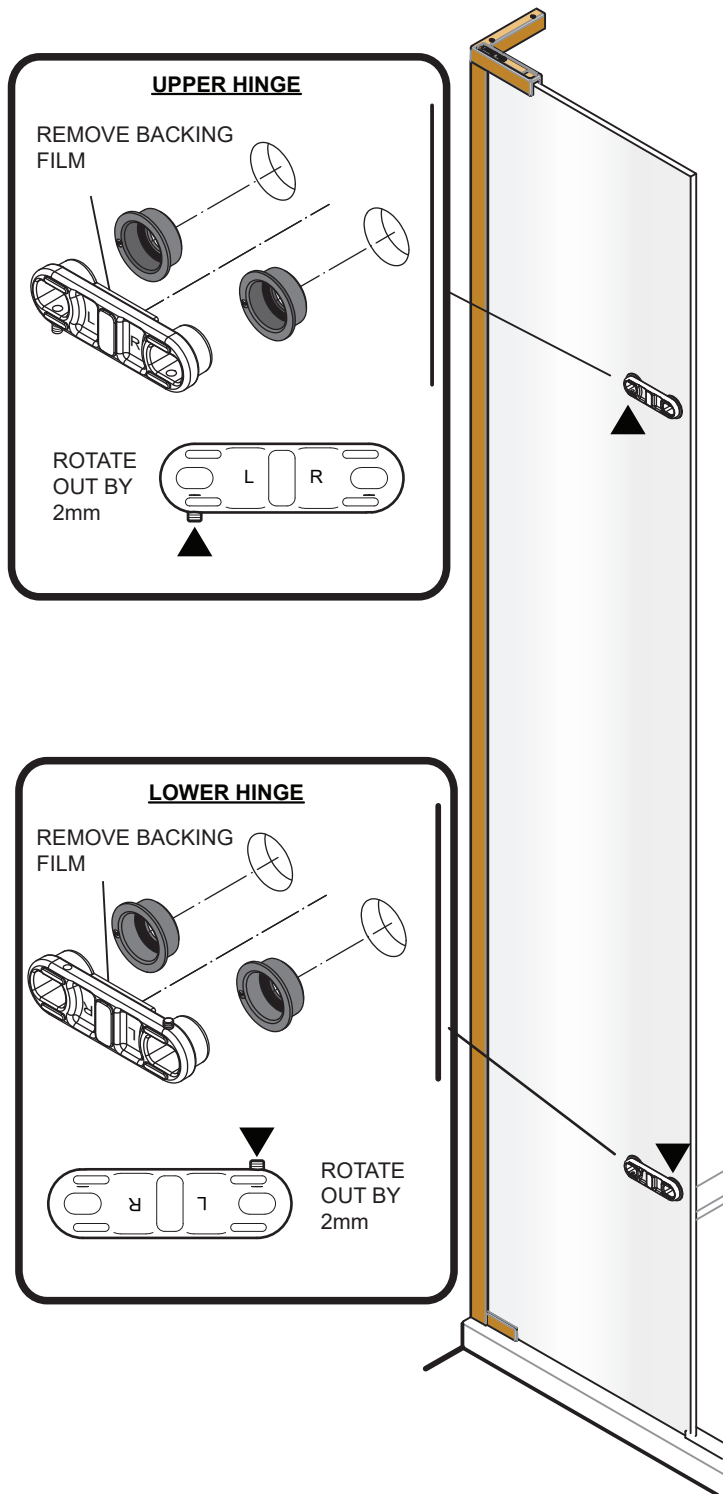

RH HINGE PANEL ADJUSTMENT BLOCK POSITION


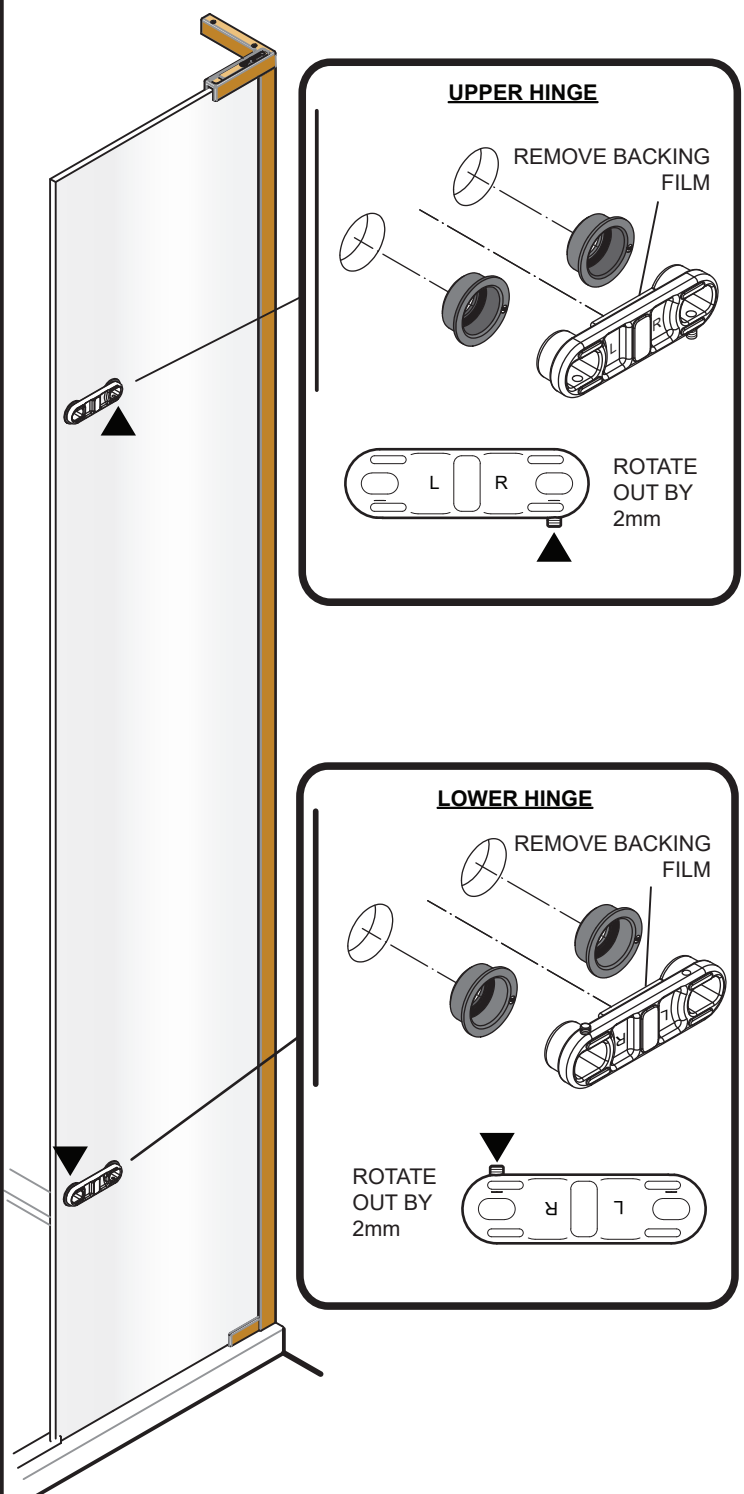


STAGE 7





IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH DOOR ADJUSTMENT BLOCK POSITION




RH DOOR ADJUSTMENT BLOCK POSITION

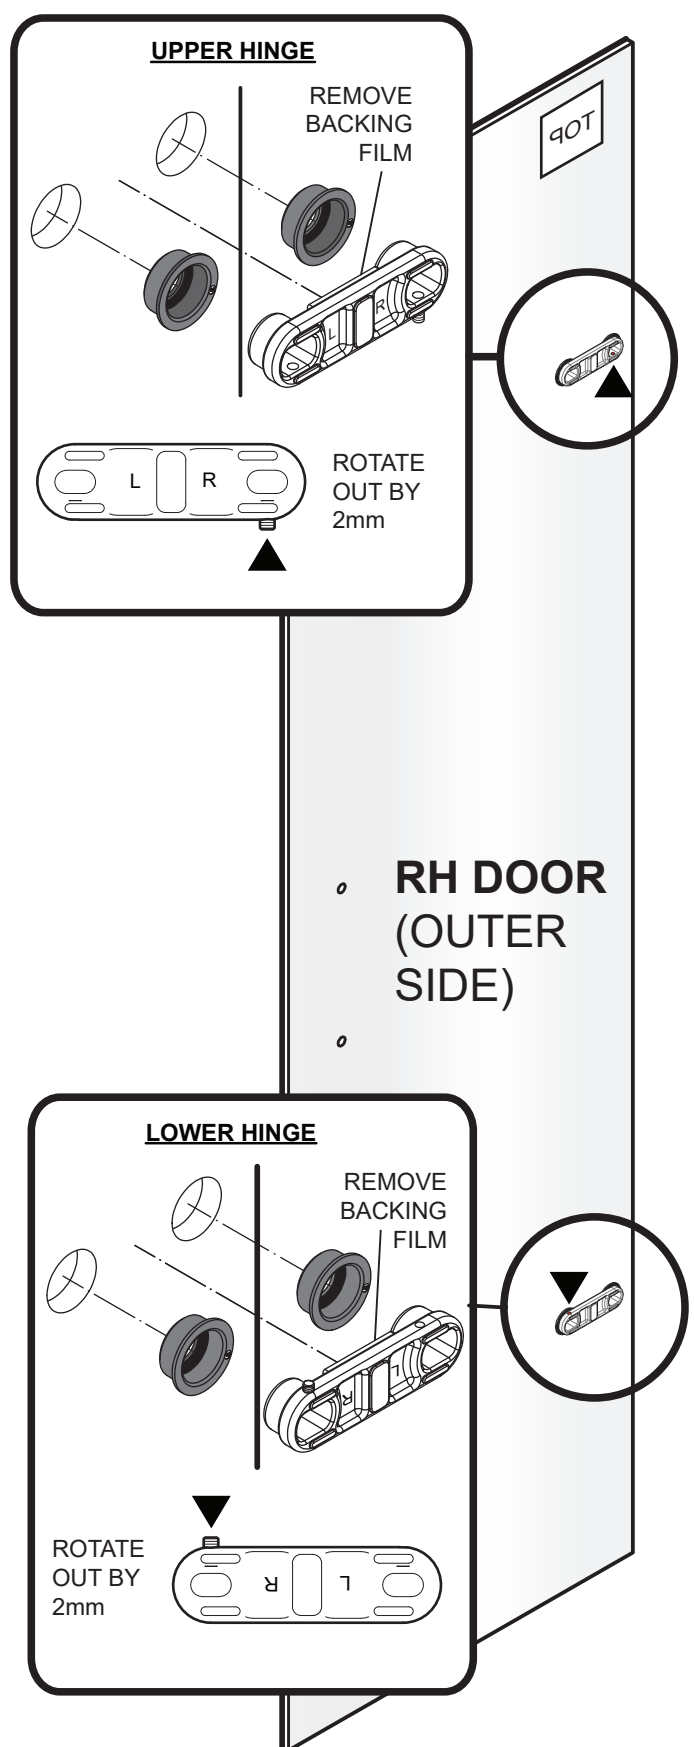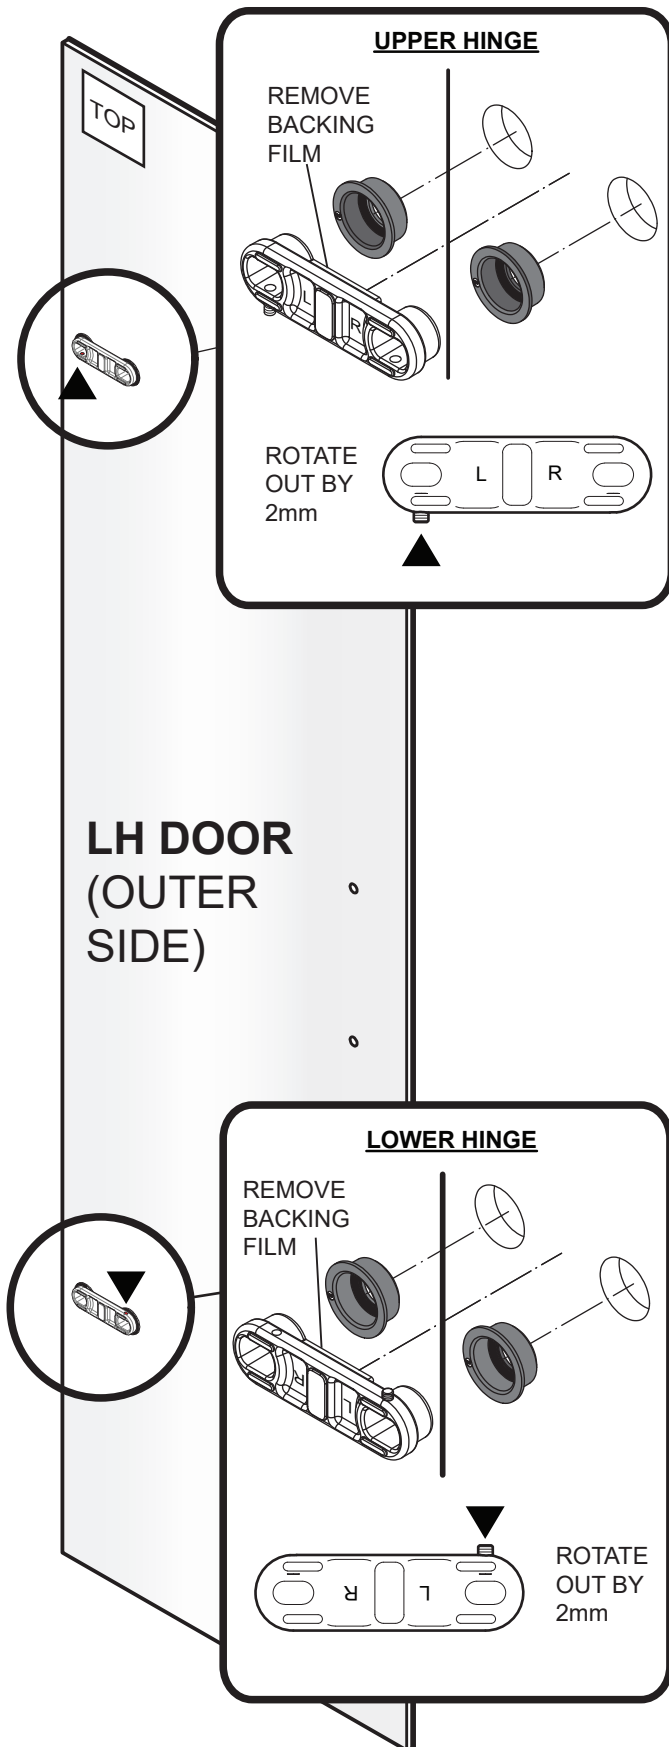



STAGE 8

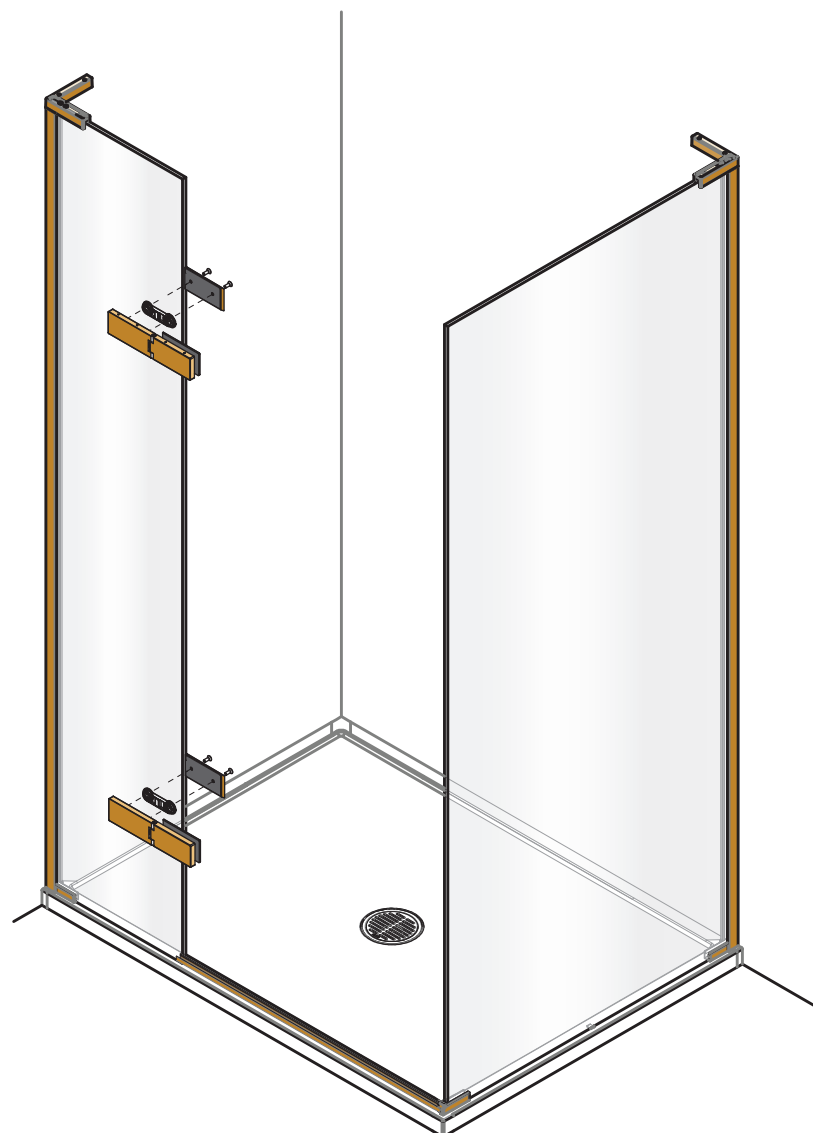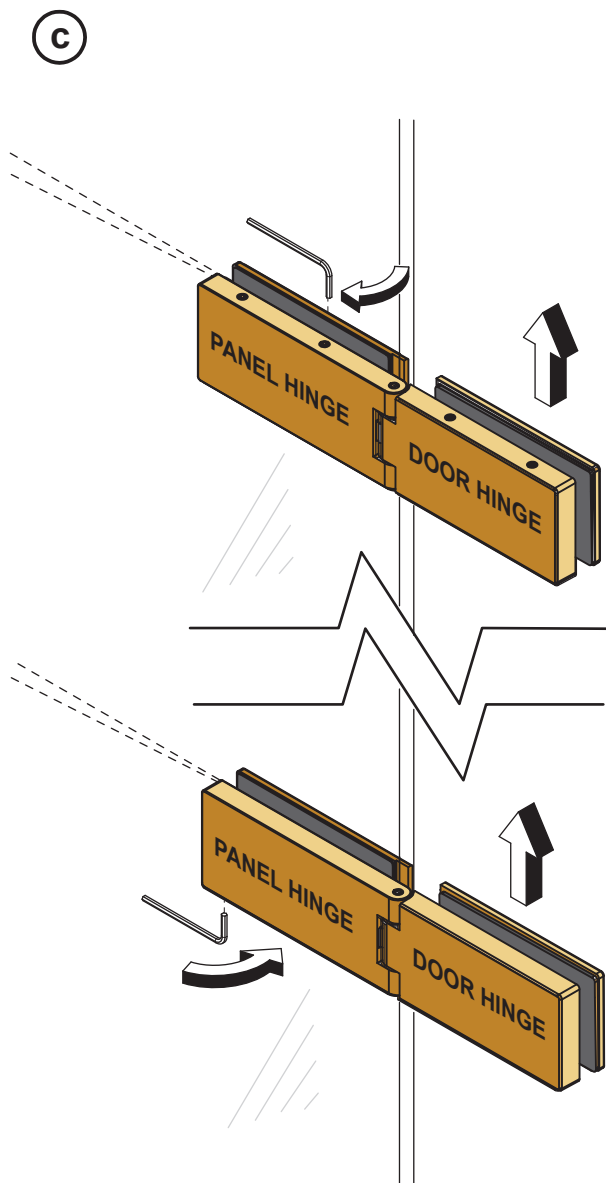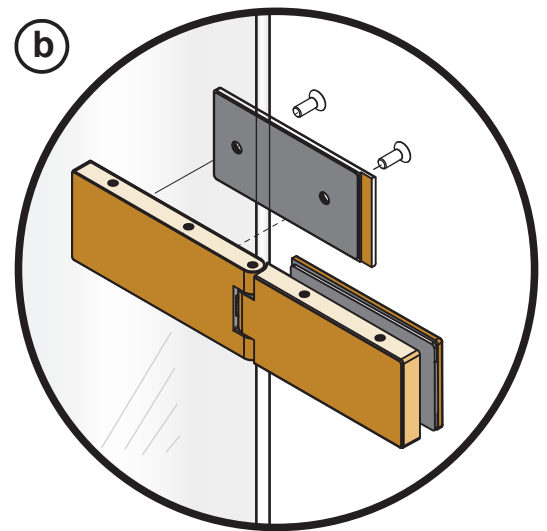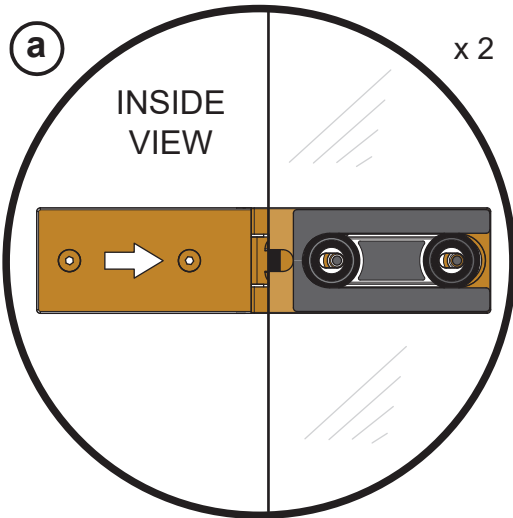



STAGE 9

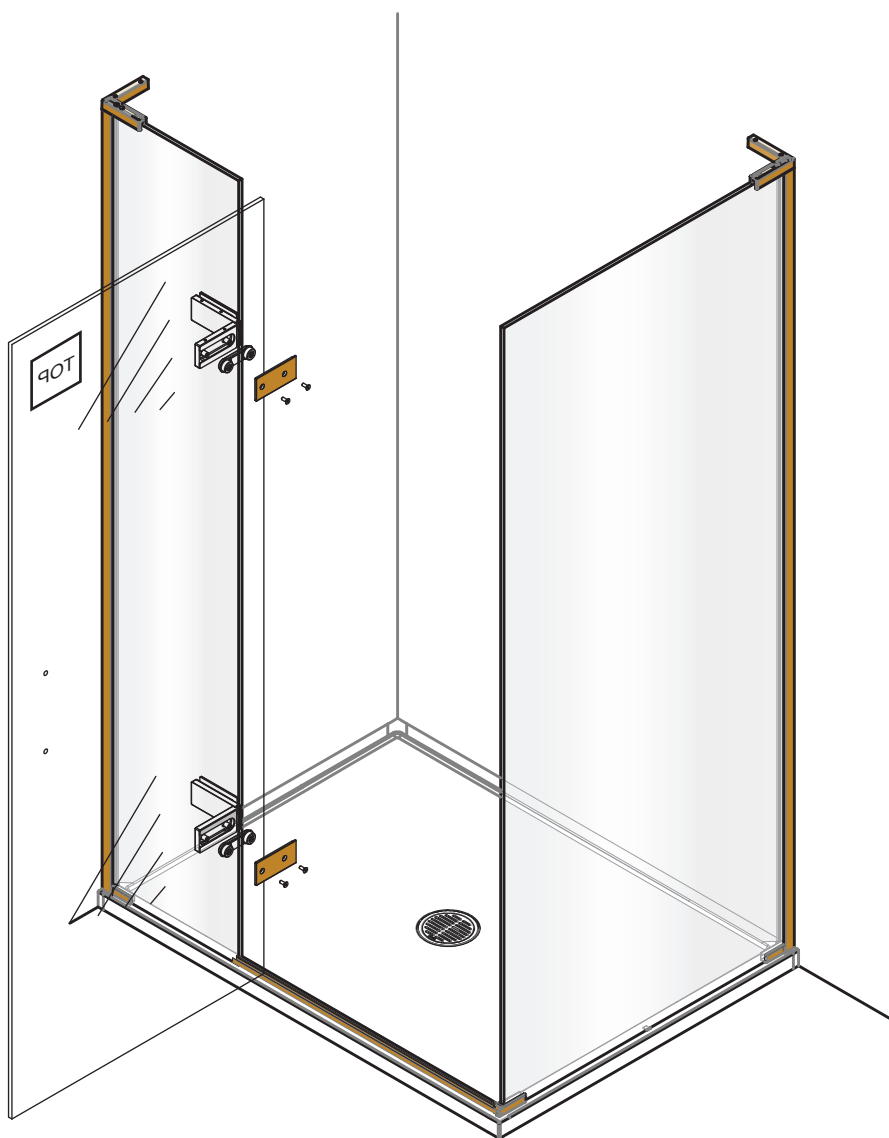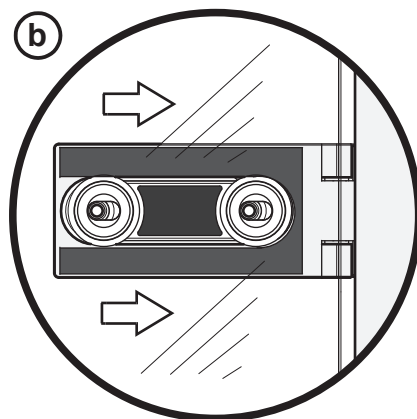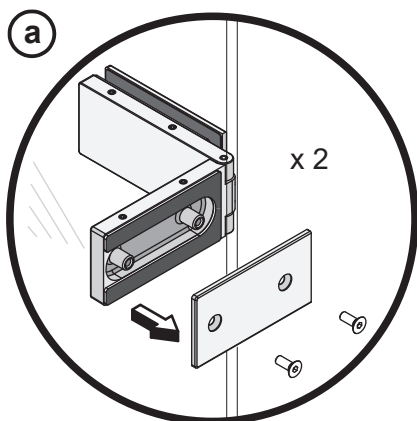

c HINGE VERTICAL SEAL

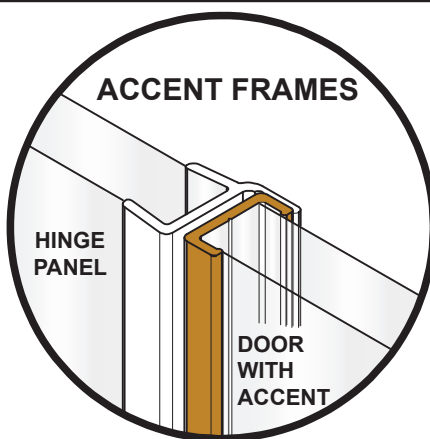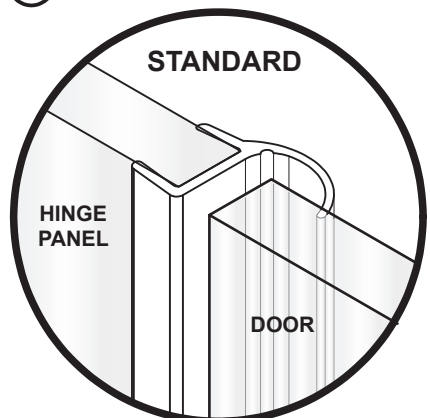


d CLOSURE VERTICAL SEAL

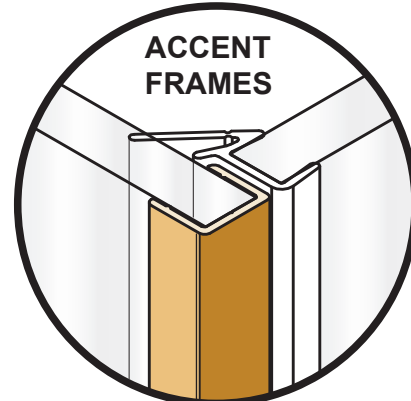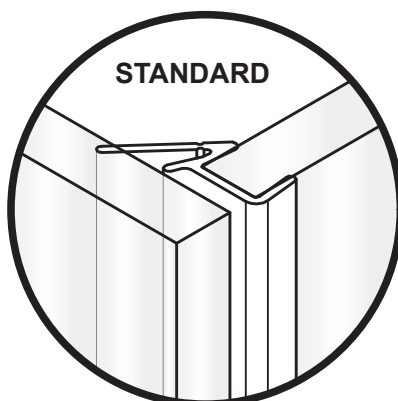


STAGE 10

HANDLE VARIANTS


ILLUSTRIOUS
9808*

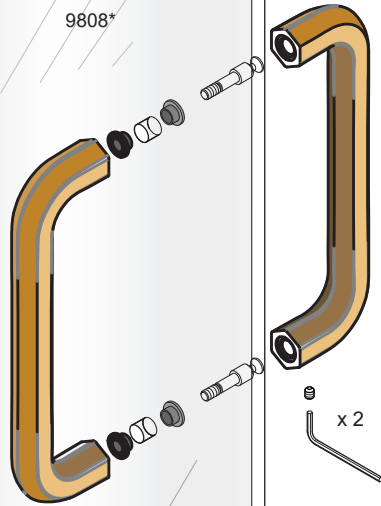


LINEAR
6185*

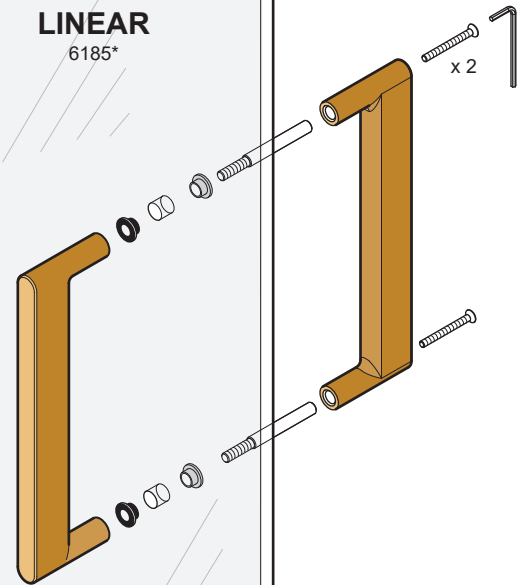

TRADITIONAL
8632*

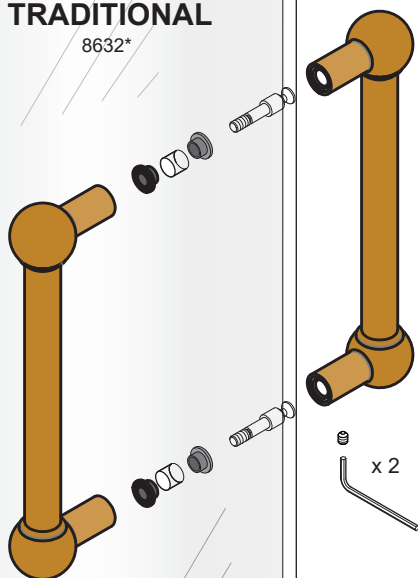


ENGINEER
9809ASSY*

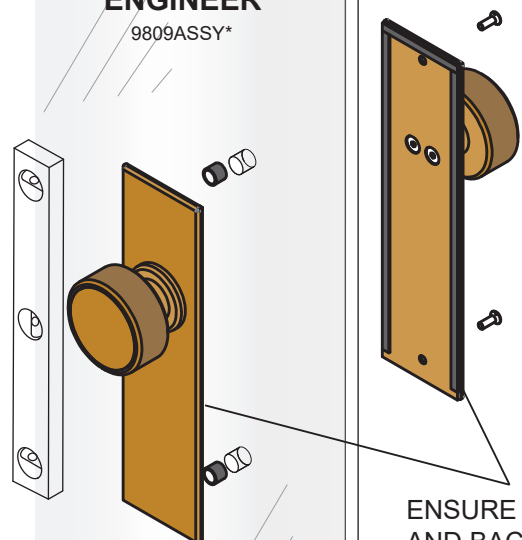


ENSURE FRONT
AND BACK PLATES
ARE ALIGNED
BEFORE REMOVING
BACKING FILM

STAGE 11


(b)

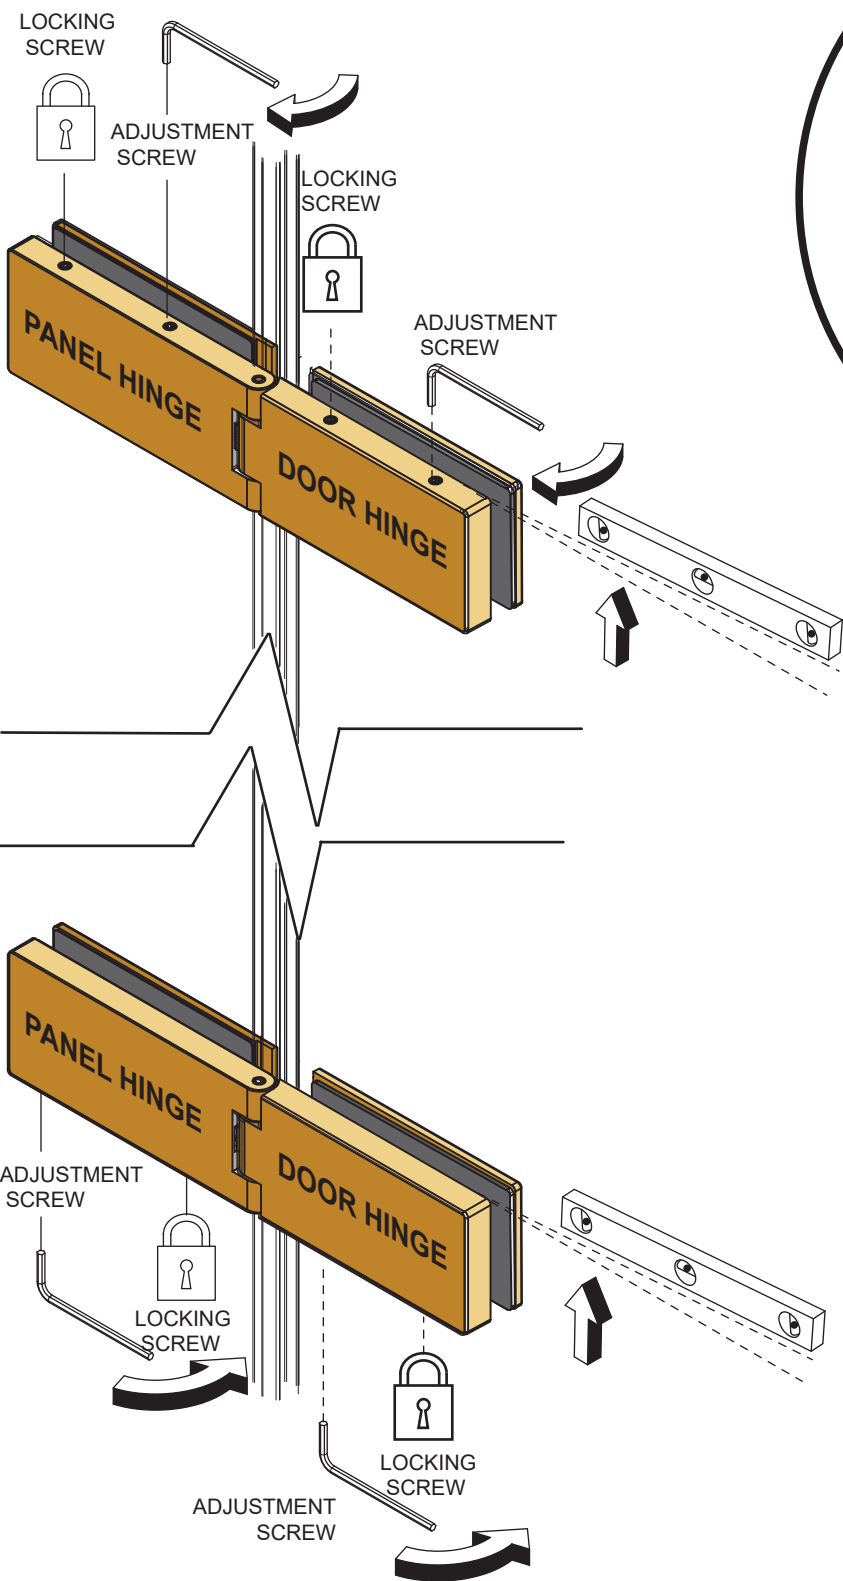


(a)

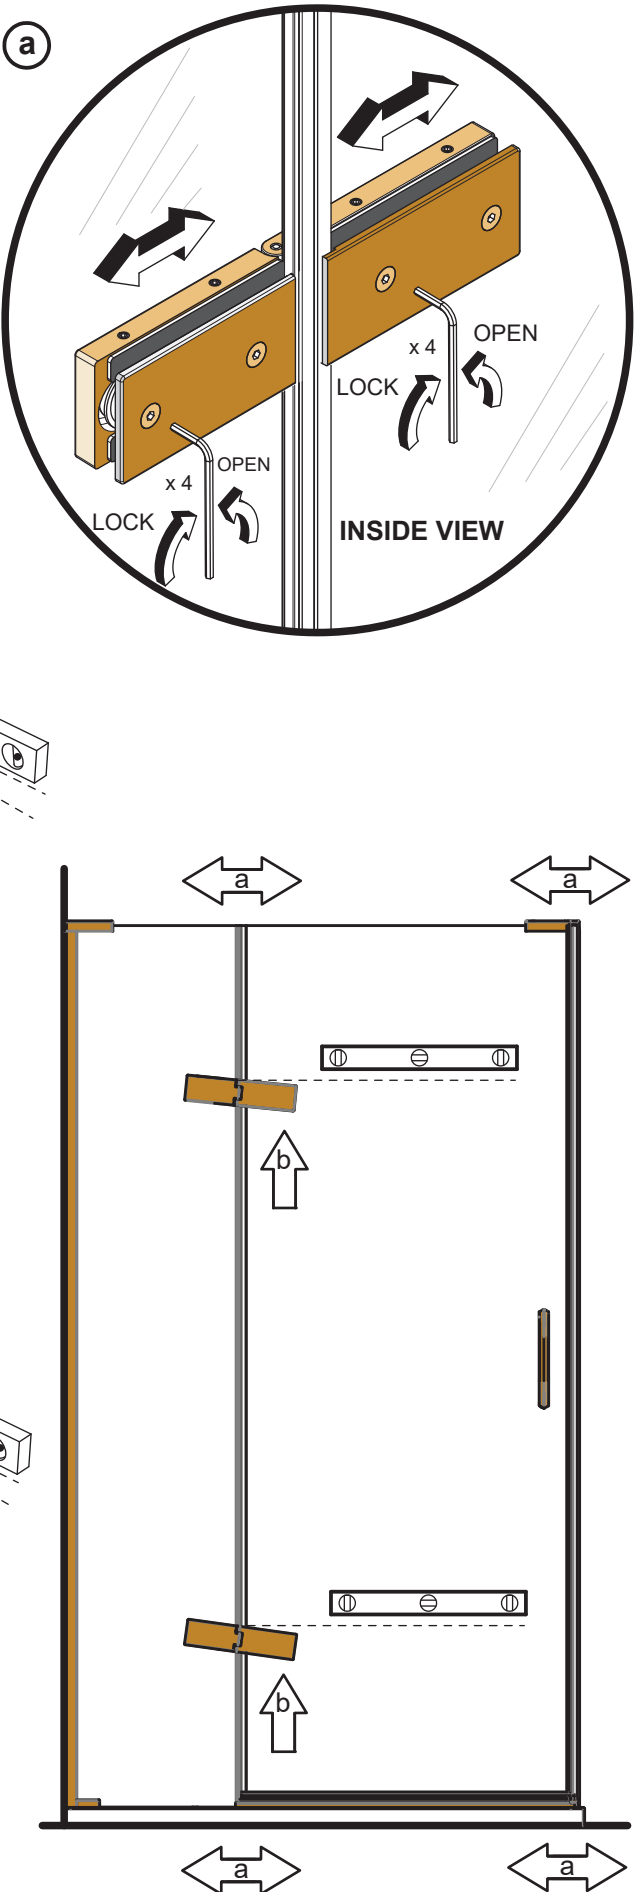

STAGE 12

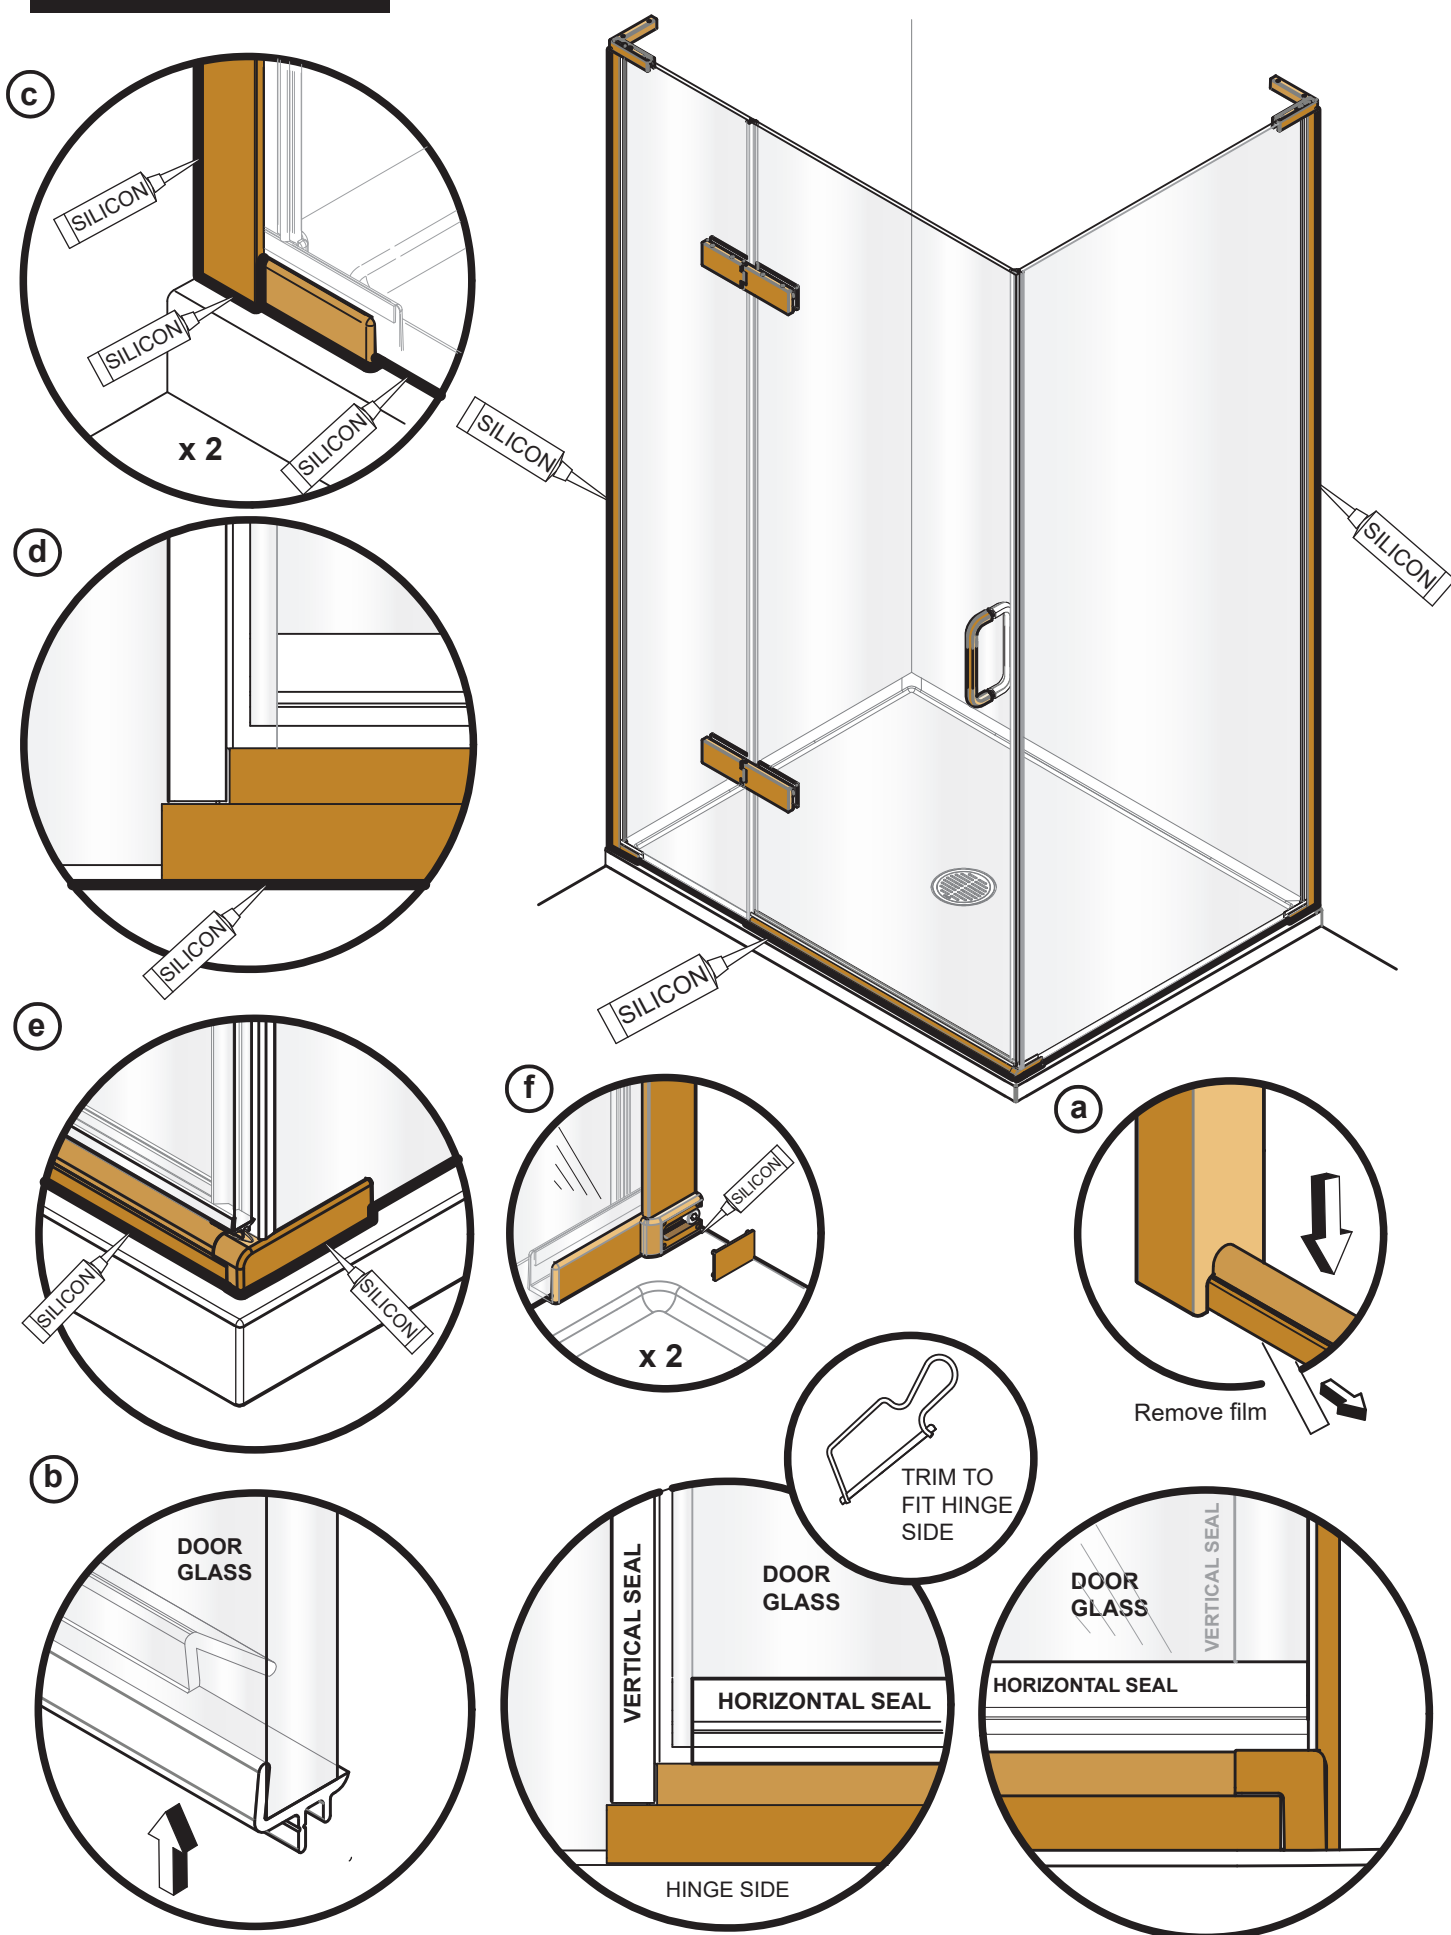

PARTS LIST

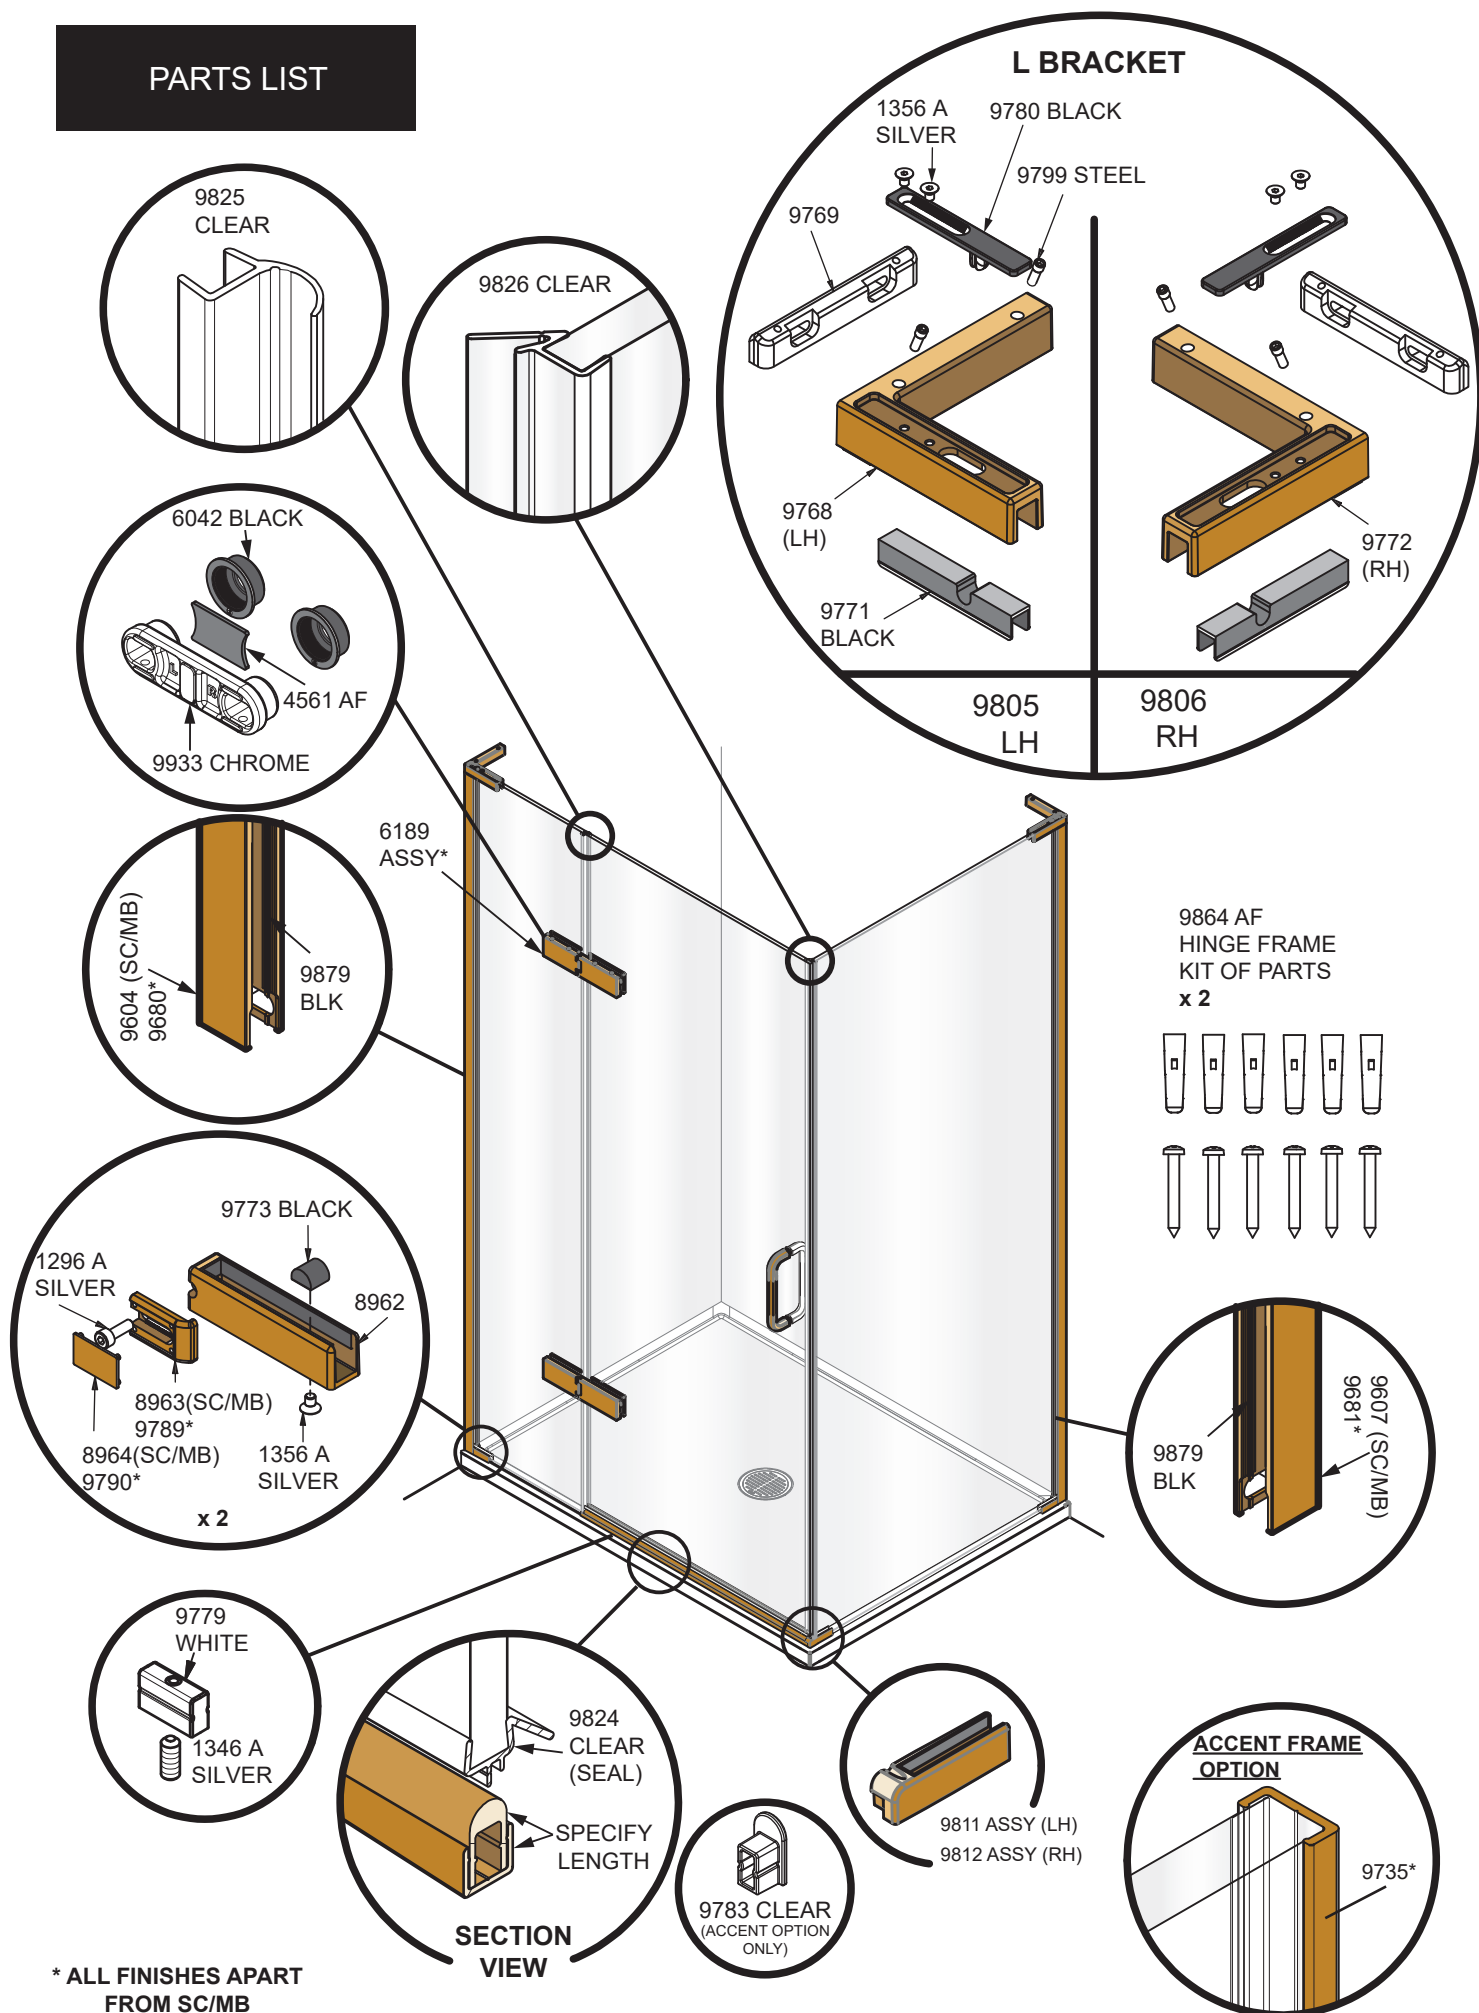

* ALL FINISHES APART FROM SC/MB