


matki

EAUZONE

EPWC - HINGED DOOR FROM WALL, INLINE
AND SIDE PANEL FOR CORNER

BRITISH PATENT NO:2470778

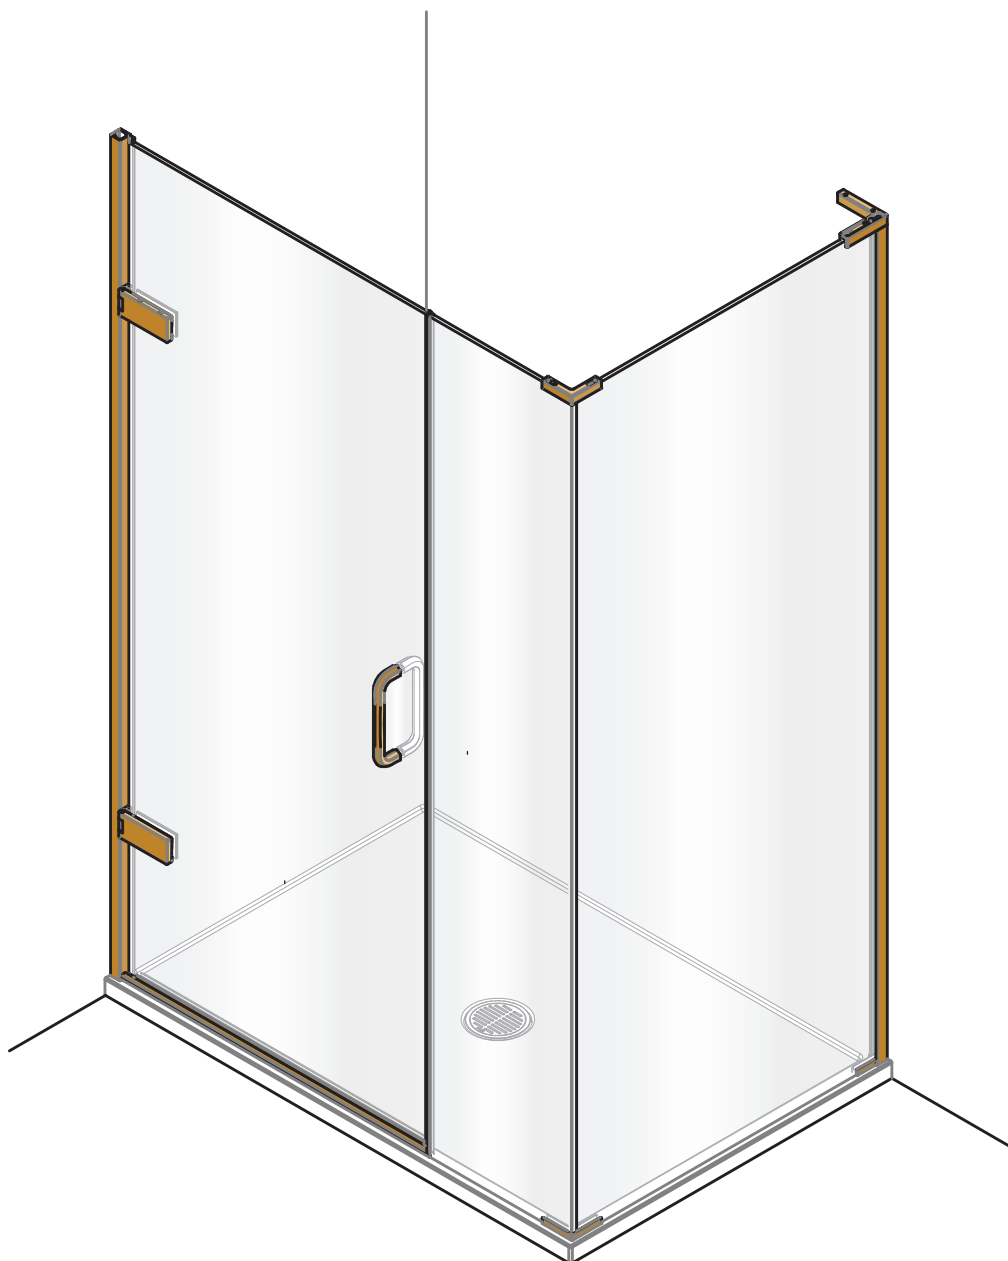

EPWC

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

9918 AF 03/25

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting the Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Side panel and Door, Stage 6+9. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS


Dimensions are approximate.
Images show LH Hinge Door installation. Reverse for RH.

MODEL CORNER DOOR

	A + B	A	B
EPWC800	768 – 783	600	200
EPWC850	818 – 833	600	250
EPWC900	868 – 883	700	200
EPWC950	918 – 933	700	250
EPWC1000	968 – 983	800	200
EPWC1050	1018 – 1033	800	250
EPWC1100	1068 – 1083	900	200
EPWC1150	1118 – 1133	900	250
EPWC1200	1168 – 1183	800	400
EPWC1250	1218 – 1233	800	450
EPWC1300	1268 – 1283	900	400
EPWC1350	1318 – 1333	900	450
EPWC1400	1368 – 1383	900	500
EPWC1450	1418 – 1433	900	550
EPWC1500	1468 – 1483	900	600



MODEL SIDE PANEL

	C
EPWC700SP	666 – 681
EPWC760SP	726 – 741
EPWC800SP	766 – 781
EPWC900SP	866 – 881
EPWC1000SP	966 – 981

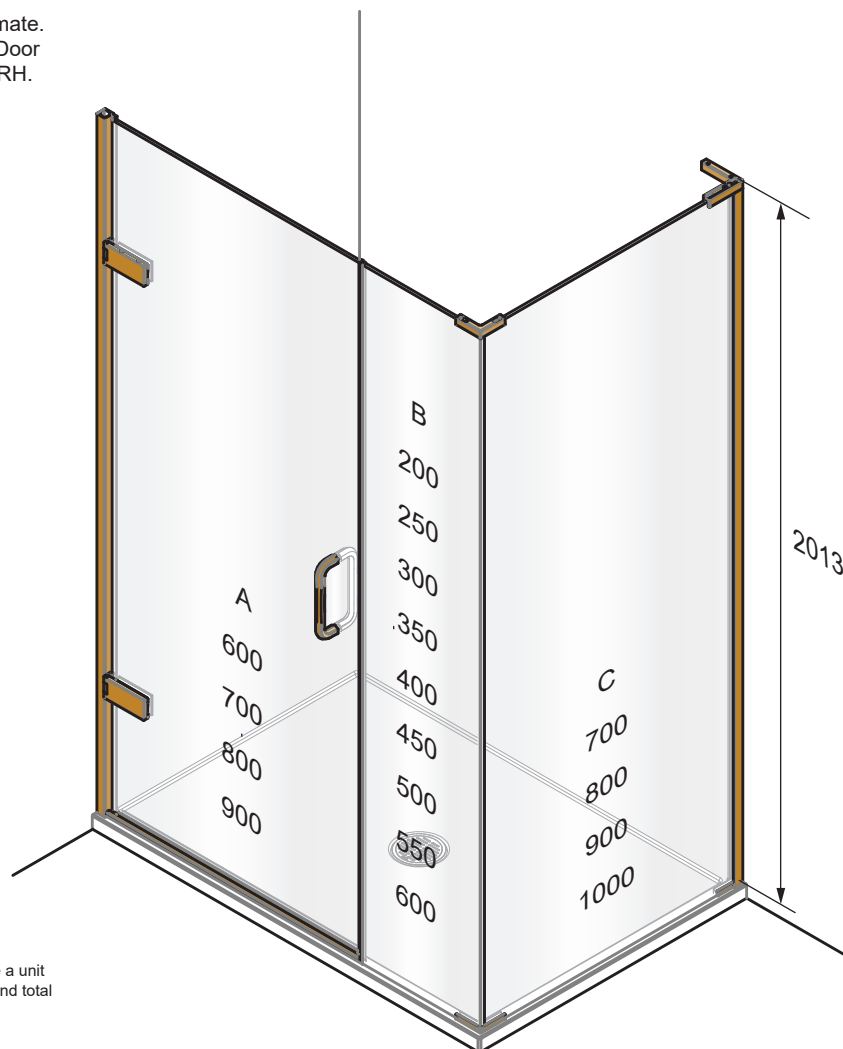


Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width.

SETTING OUT

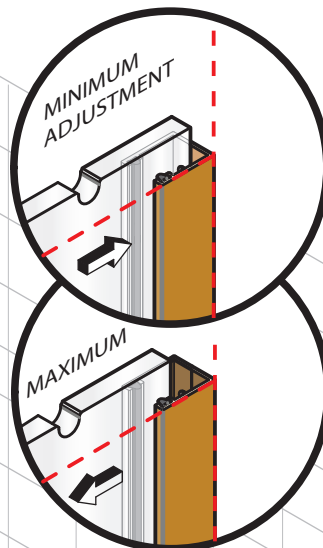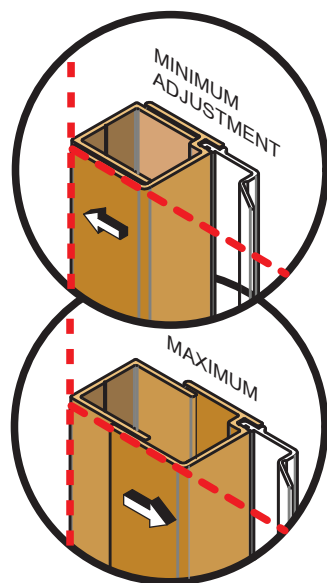


MODEL	A + B MAX - MIN
EPWC800	768 - 783
EPWC850	818 - 833
EPWC900	868 - 883
EPWC950	918 - 933
EPWC1000	968 - 983
EPWC1050	1018 - 1033
EPWC1100	1068 - 1083
EPWC1150	1118 - 1133
EPWC1200	1168 - 1183
EPWC1250	1218 - 1233
EPWC1300	1268 - 1283
EPWC1350	1318 - 1333
EPWC1400	1368 - 1383
EPWC1450	1418 - 1433
EPWC1500	1468 - 1483

MODEL SIDE PANEL	C
EPWC700SP	666 - 681
EPWC760SP	726 - 741
EPWC800SP	766 - 781
EPWC900SP	866 - 881
EPWC1000SP	966 - 981

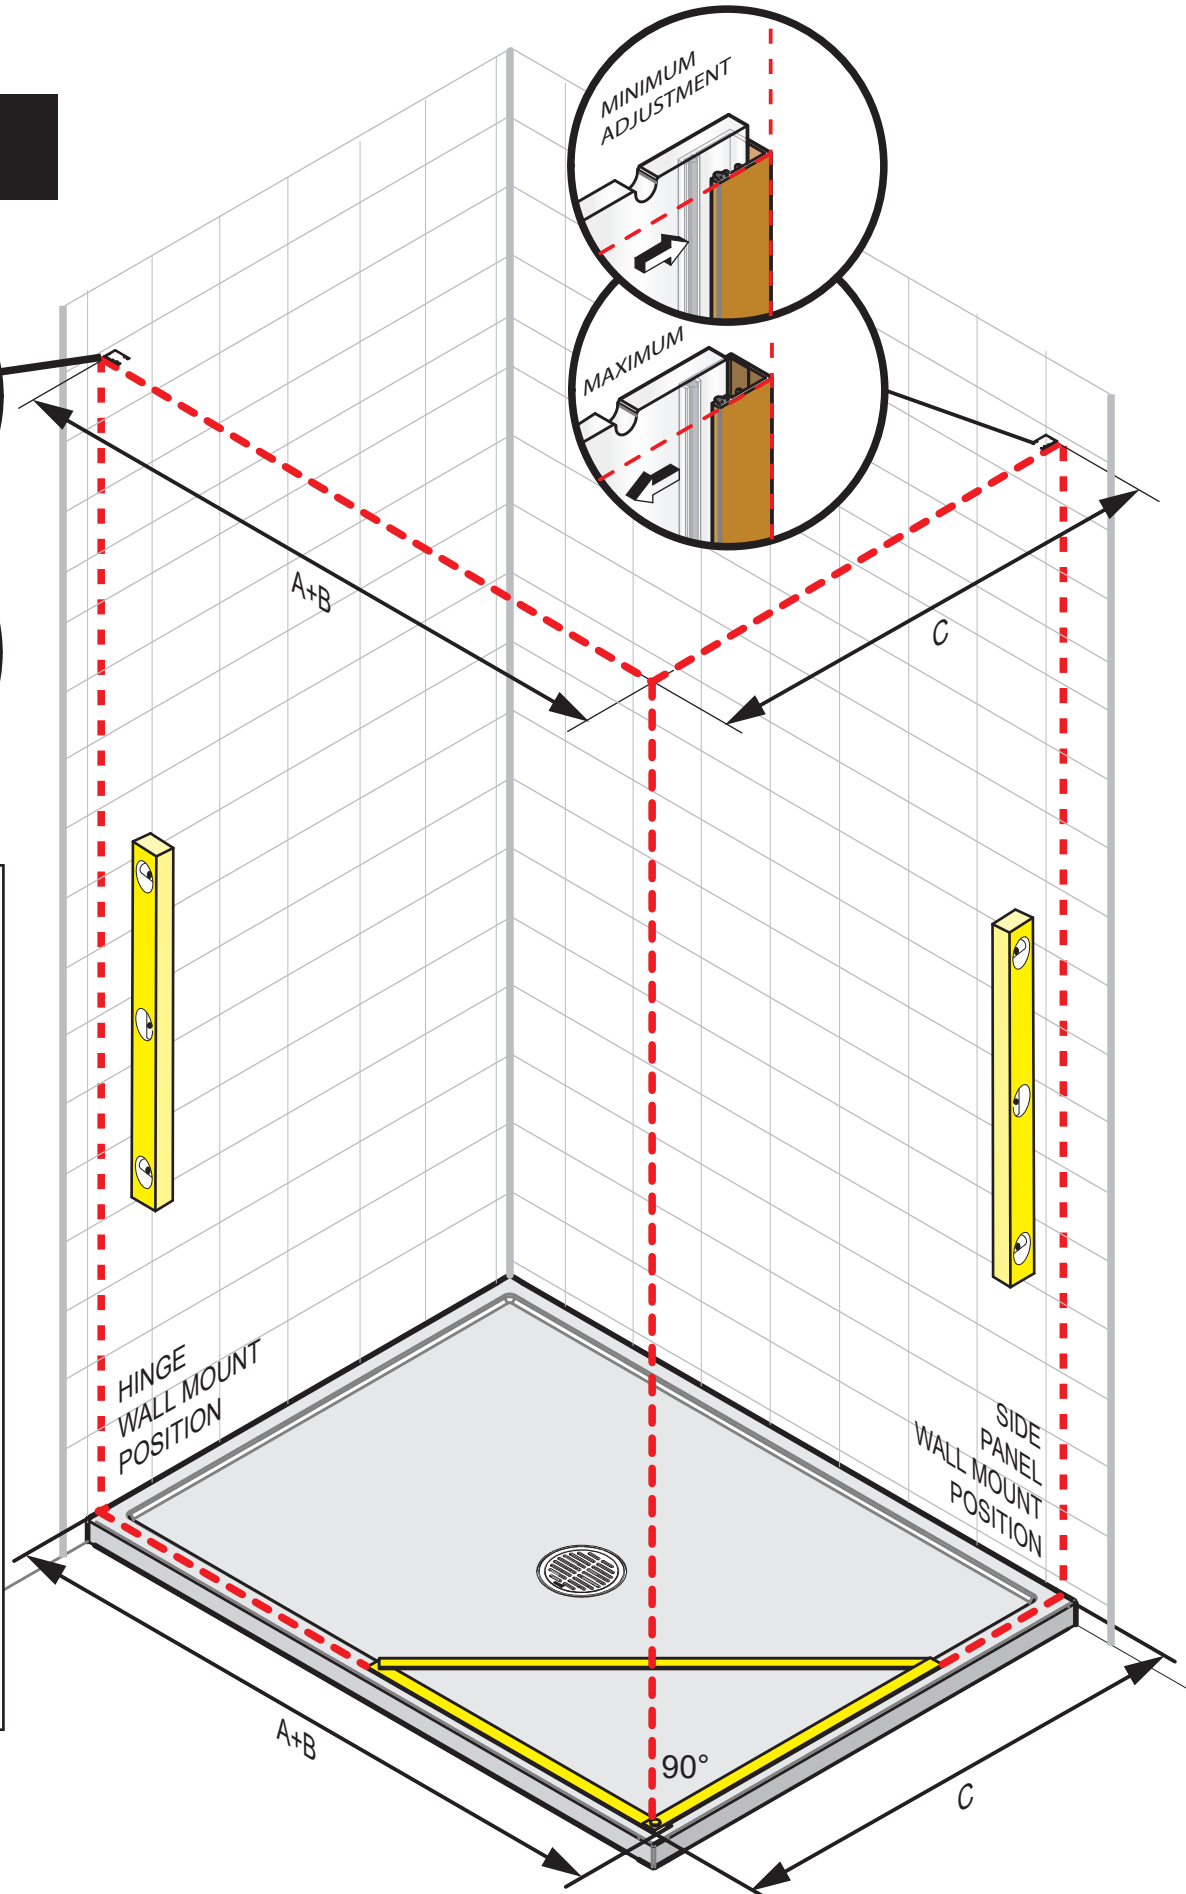


Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1








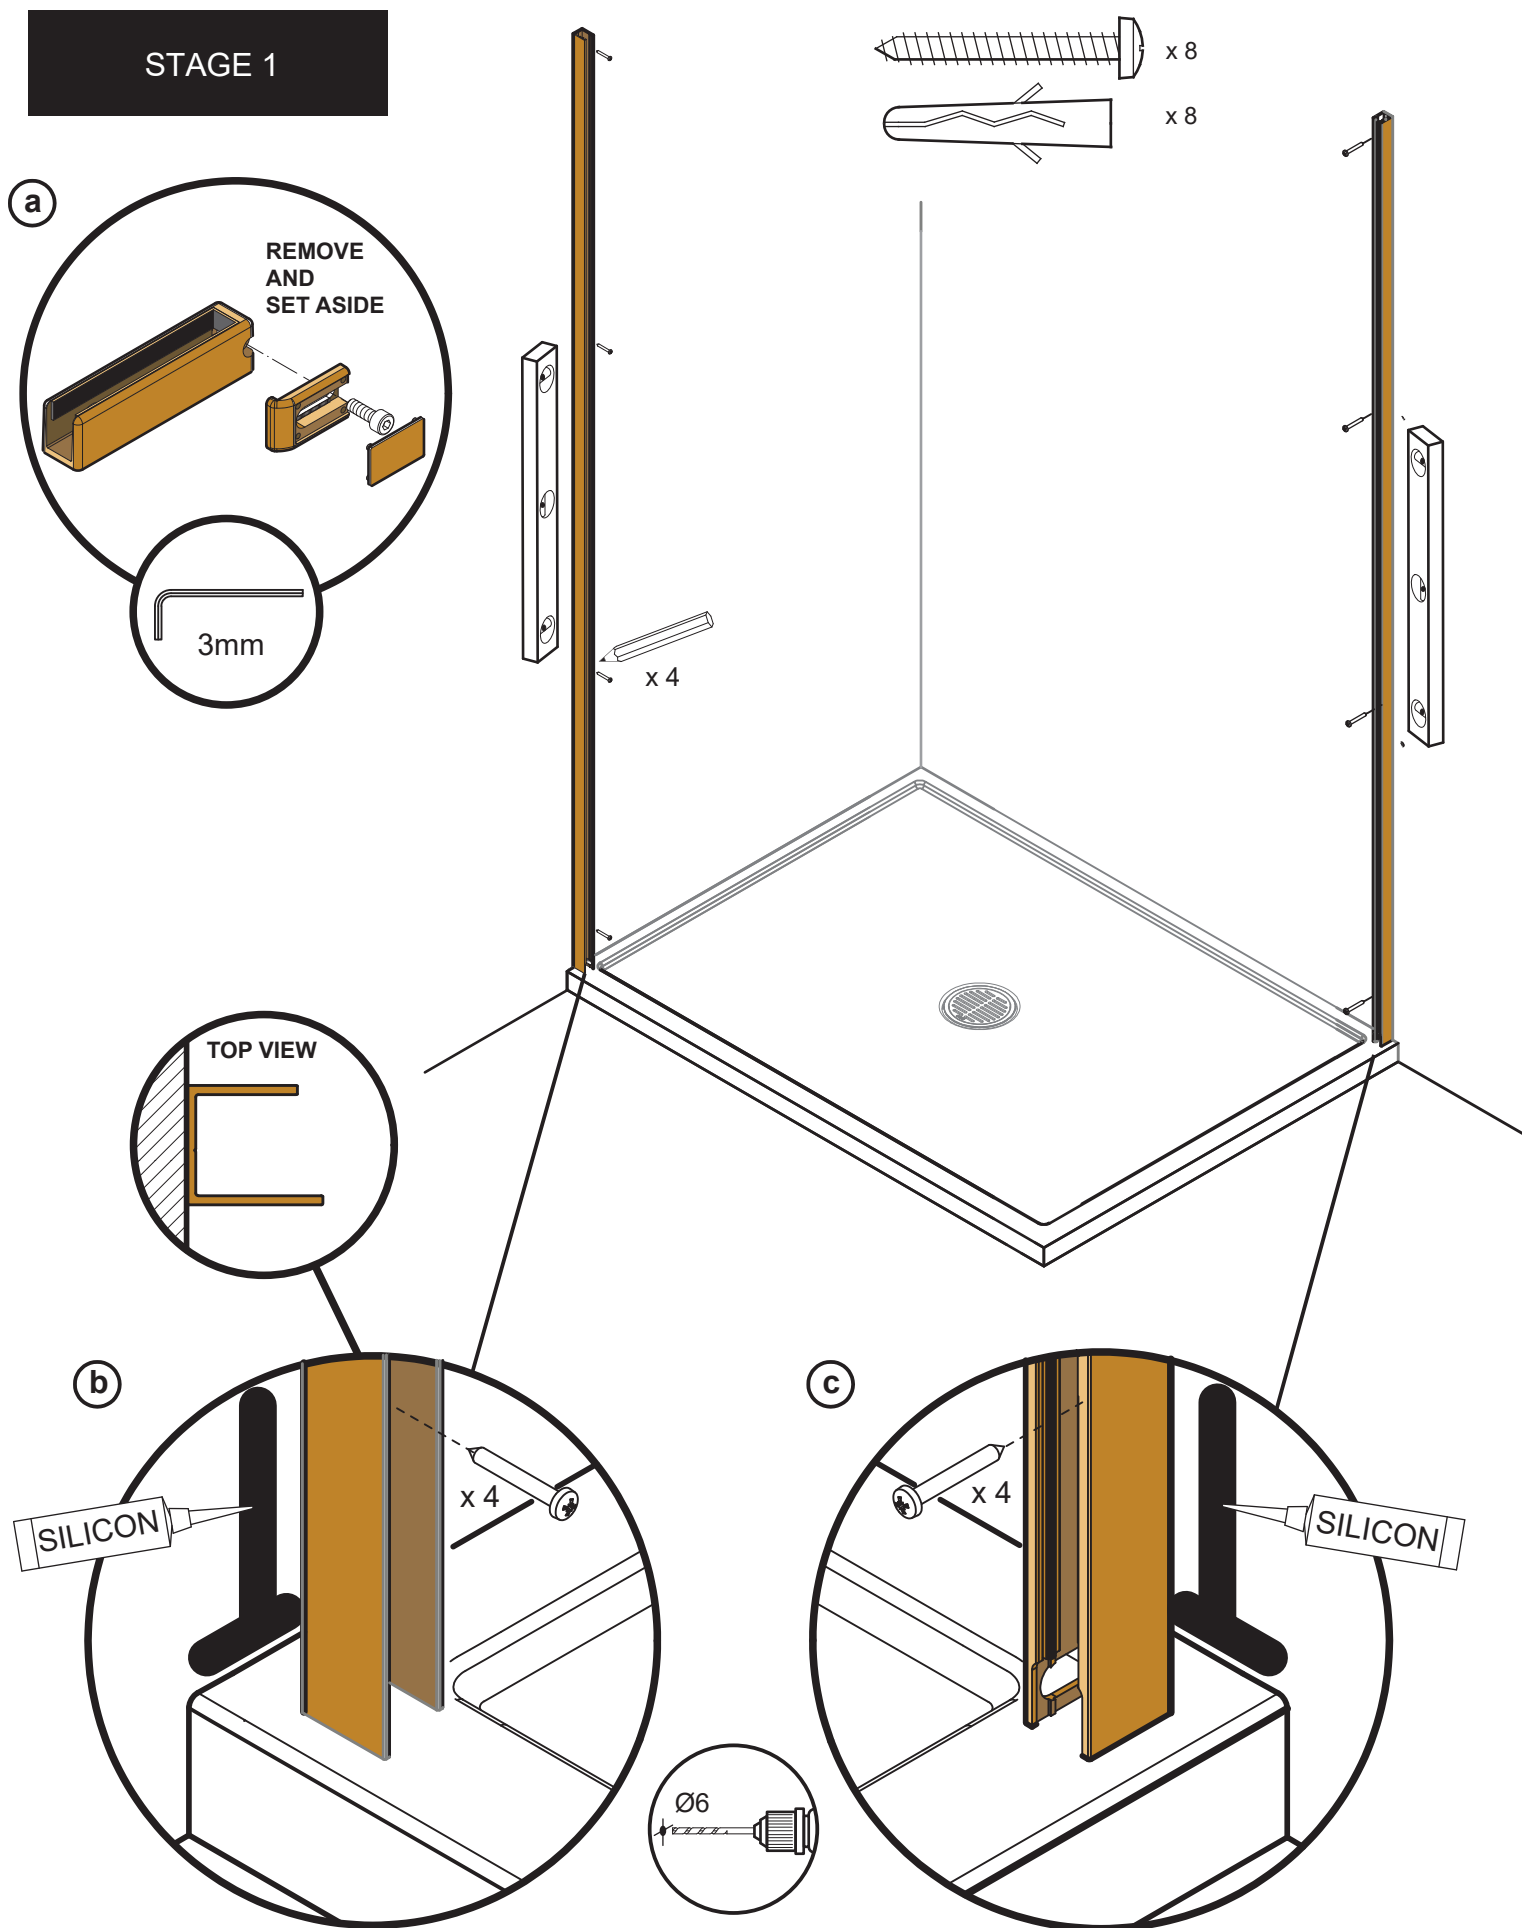


IMAGES SHOW LH PANEL HINGED DOOR INSTALLATION REVERSE FOR RH.

STAGE 2

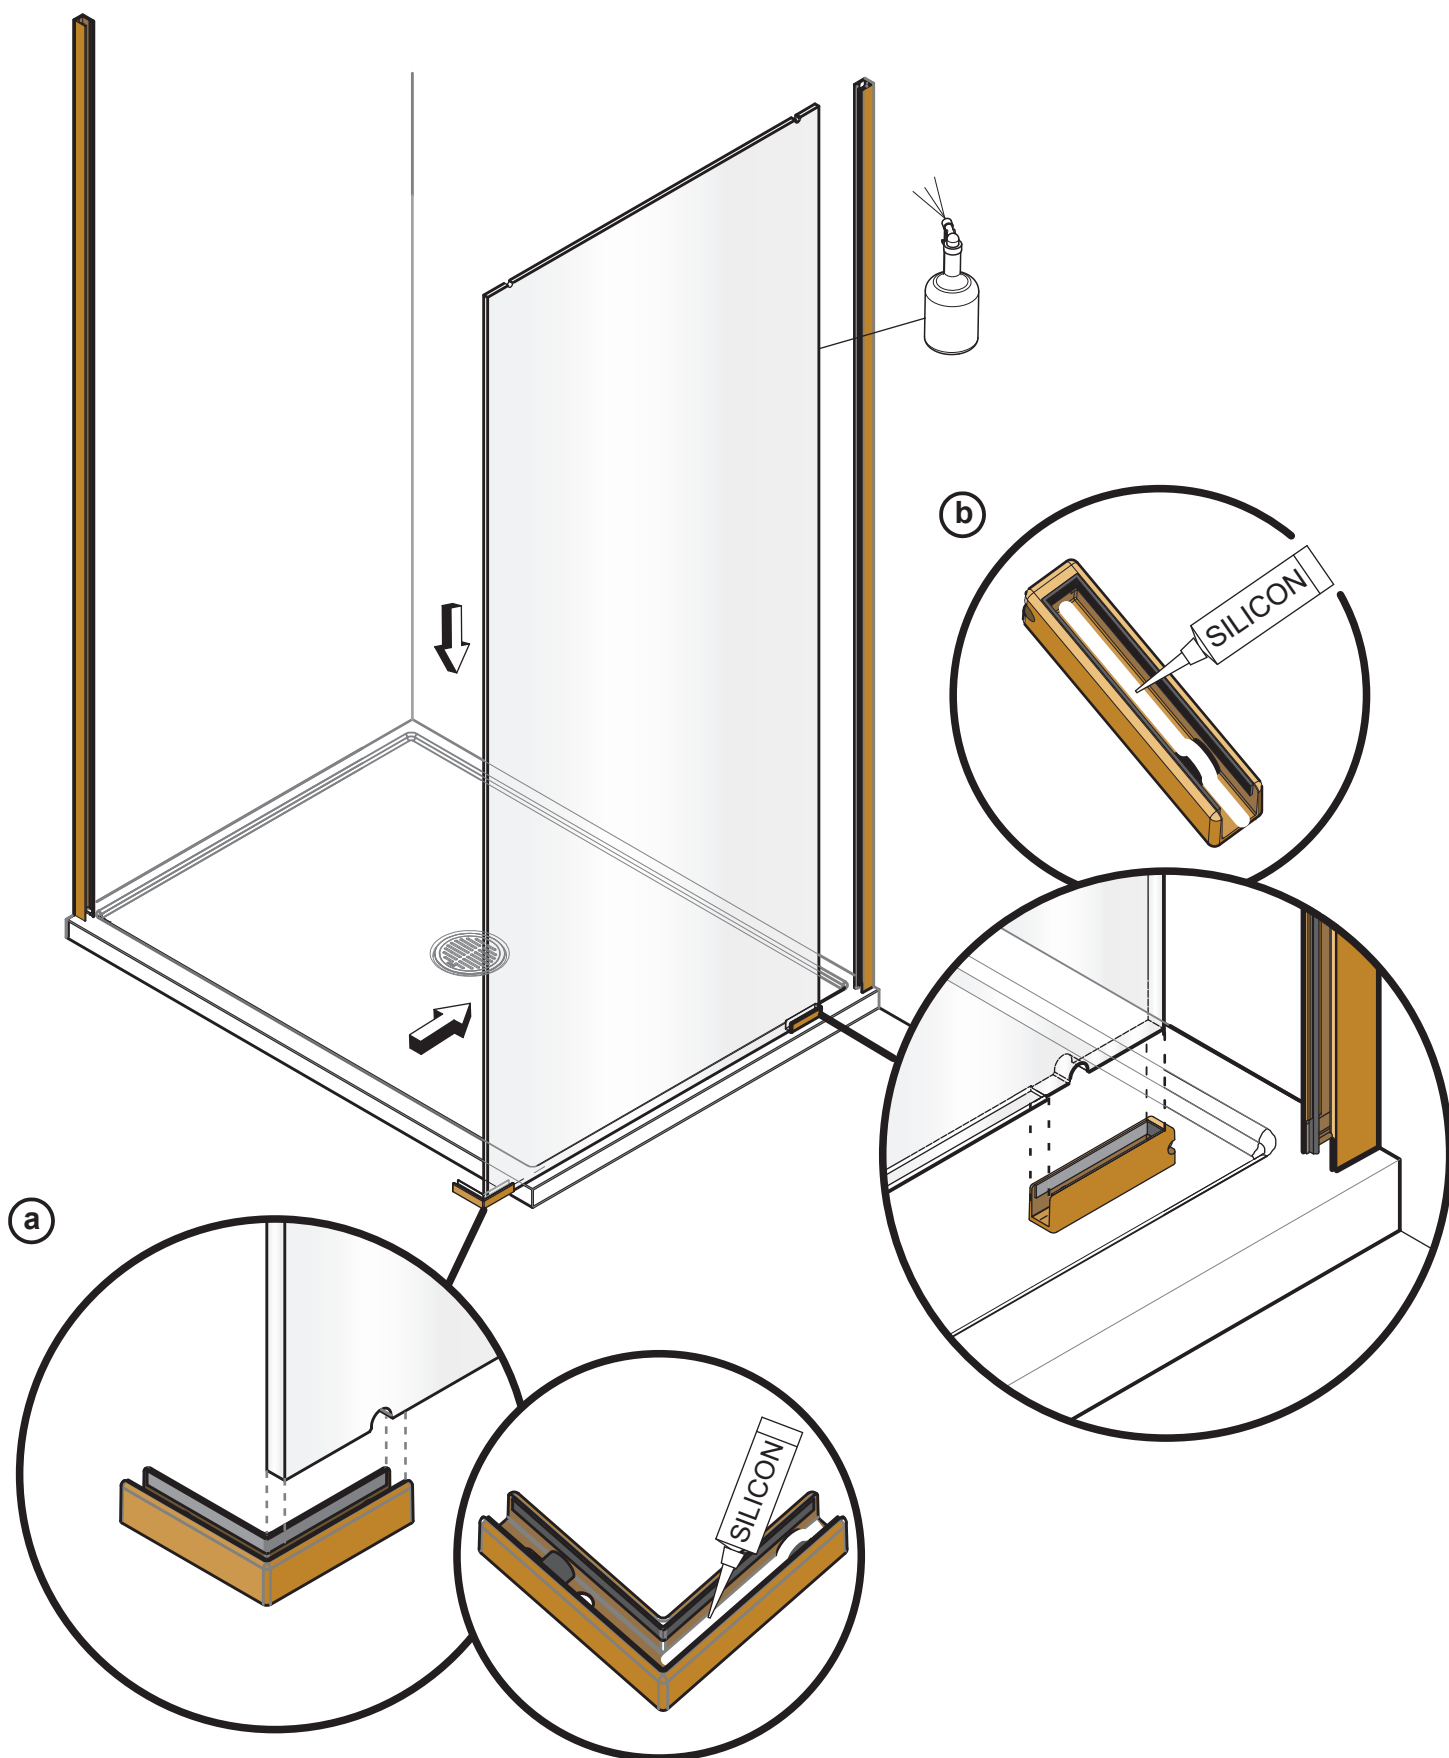


STAGE 3

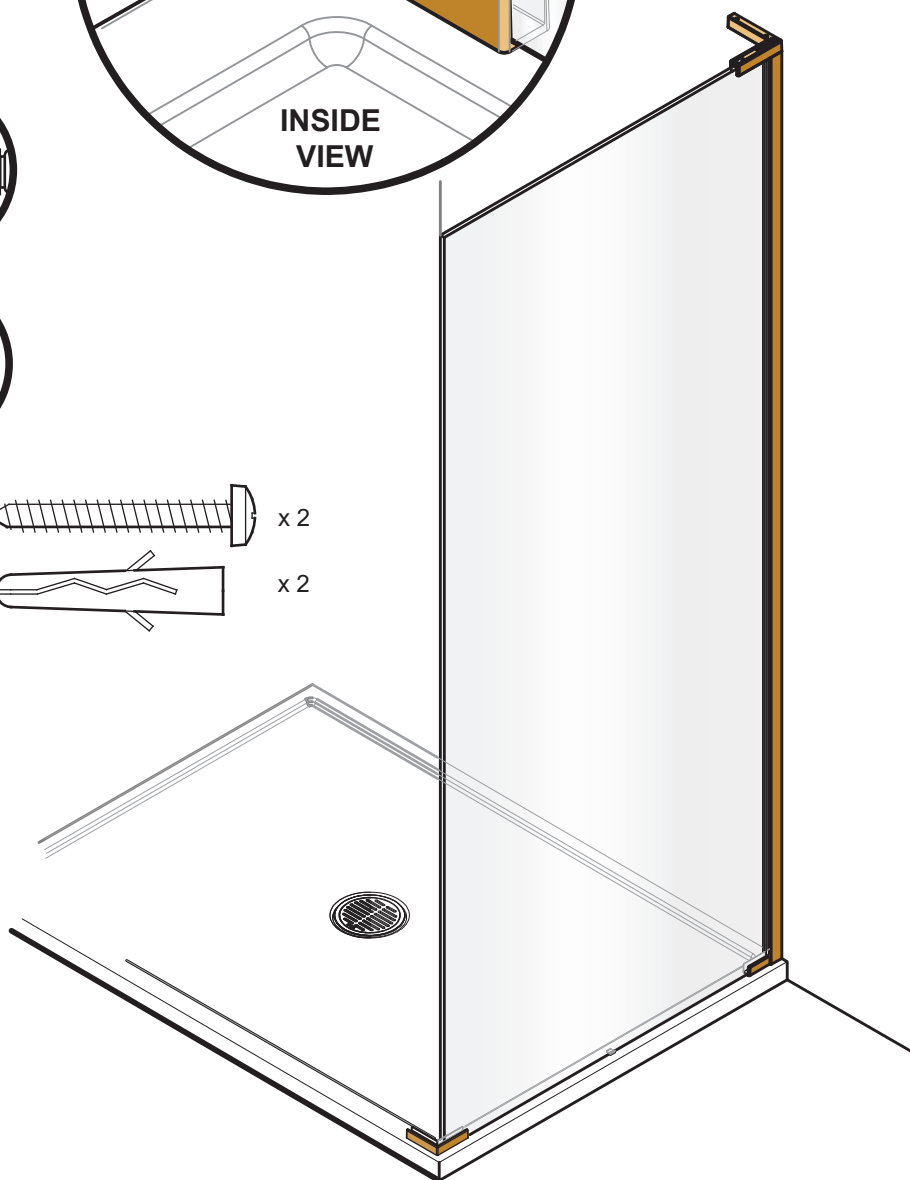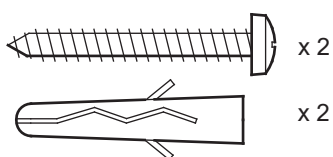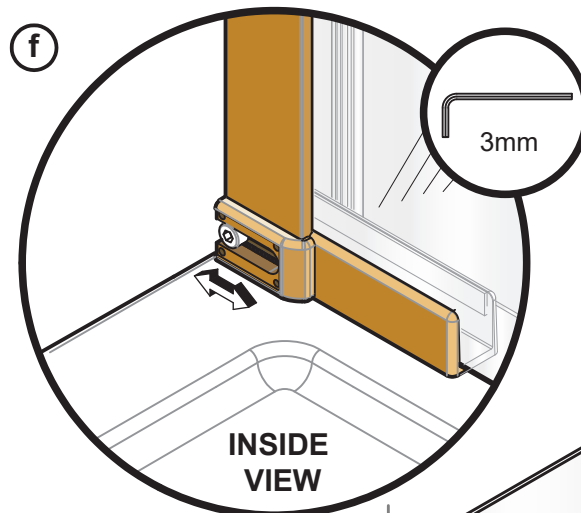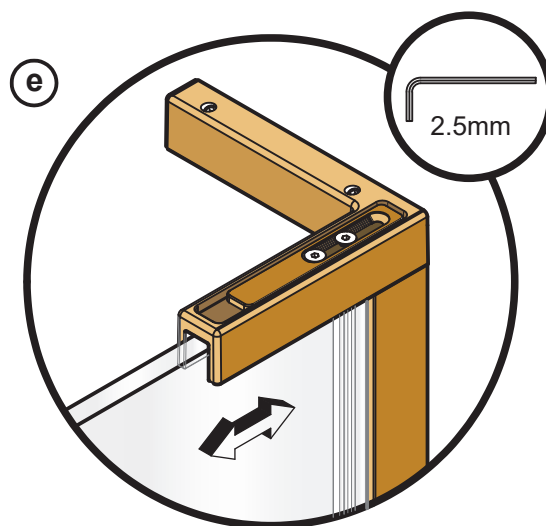
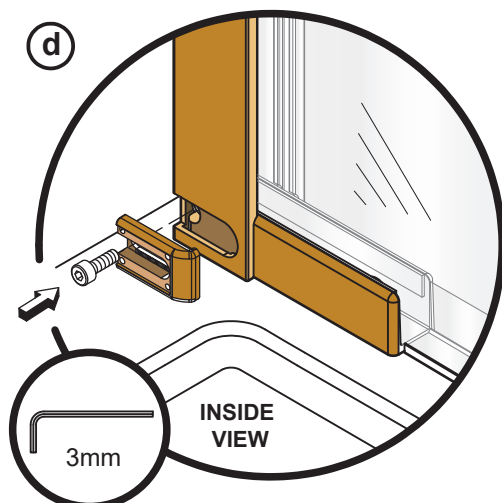
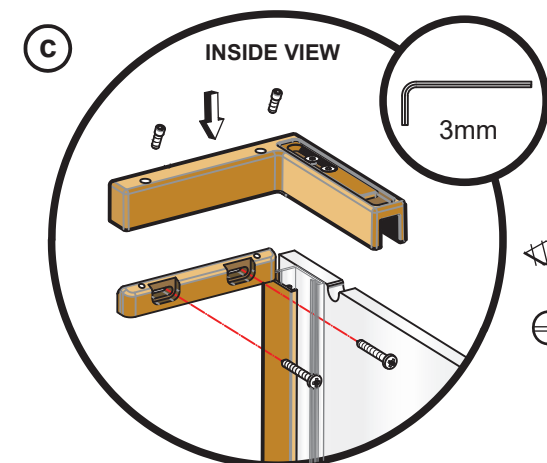
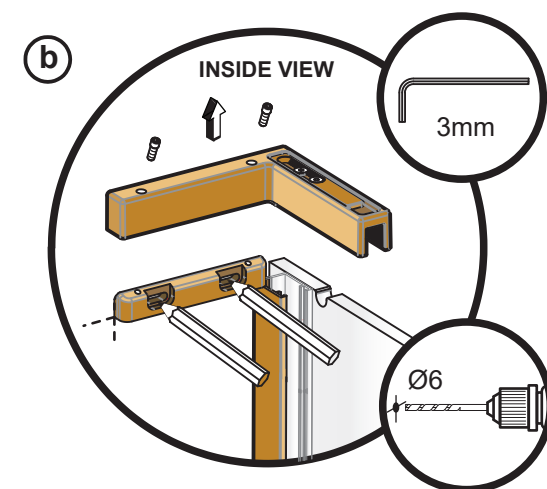
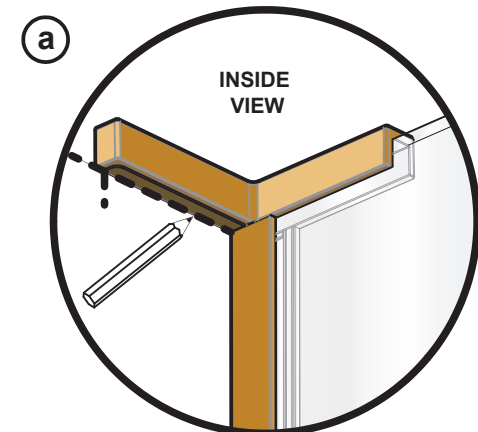


STAGE 4


FITTING THE INLINE PANEL

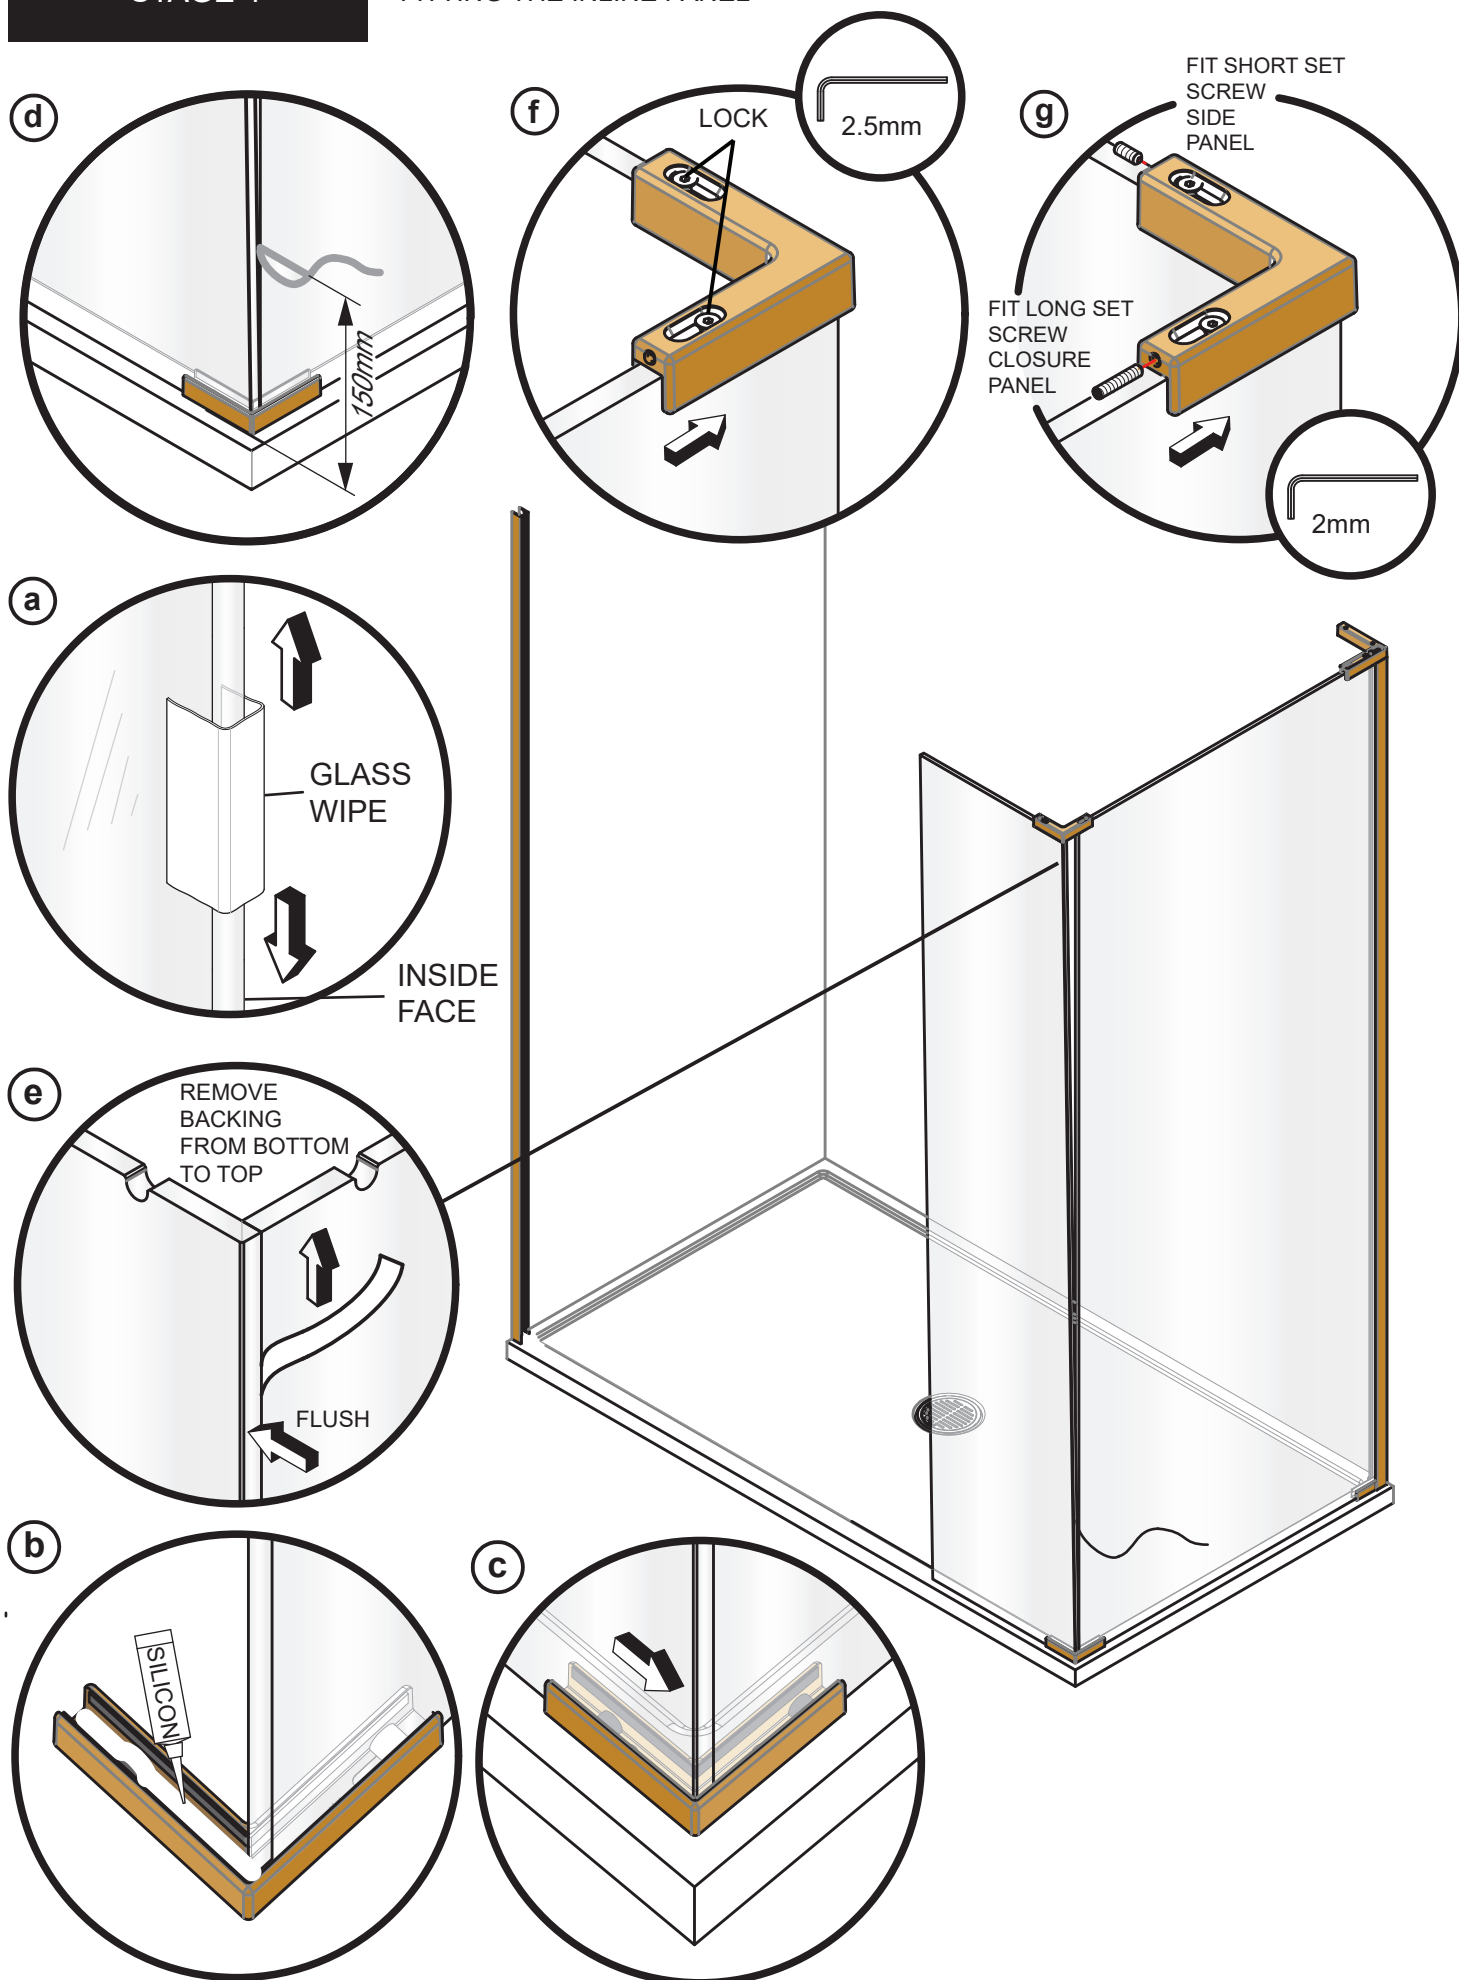


STAGE 5

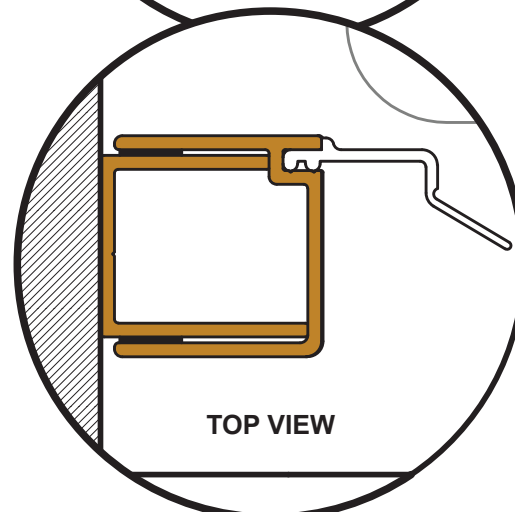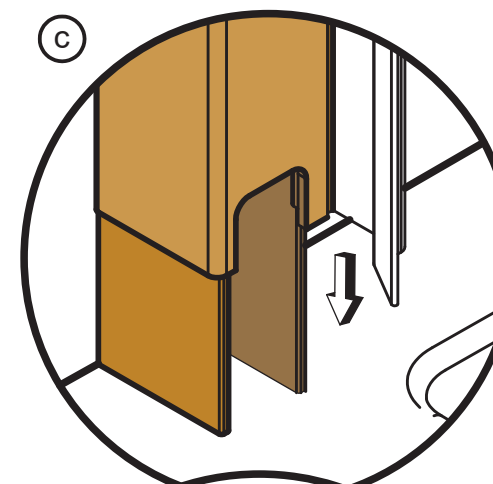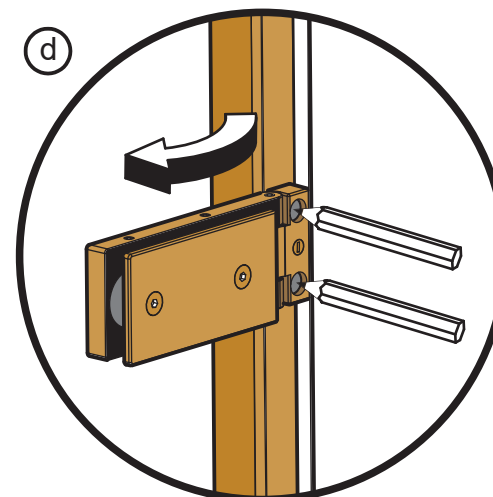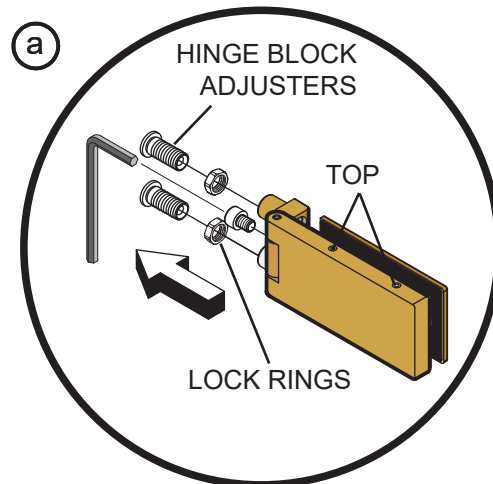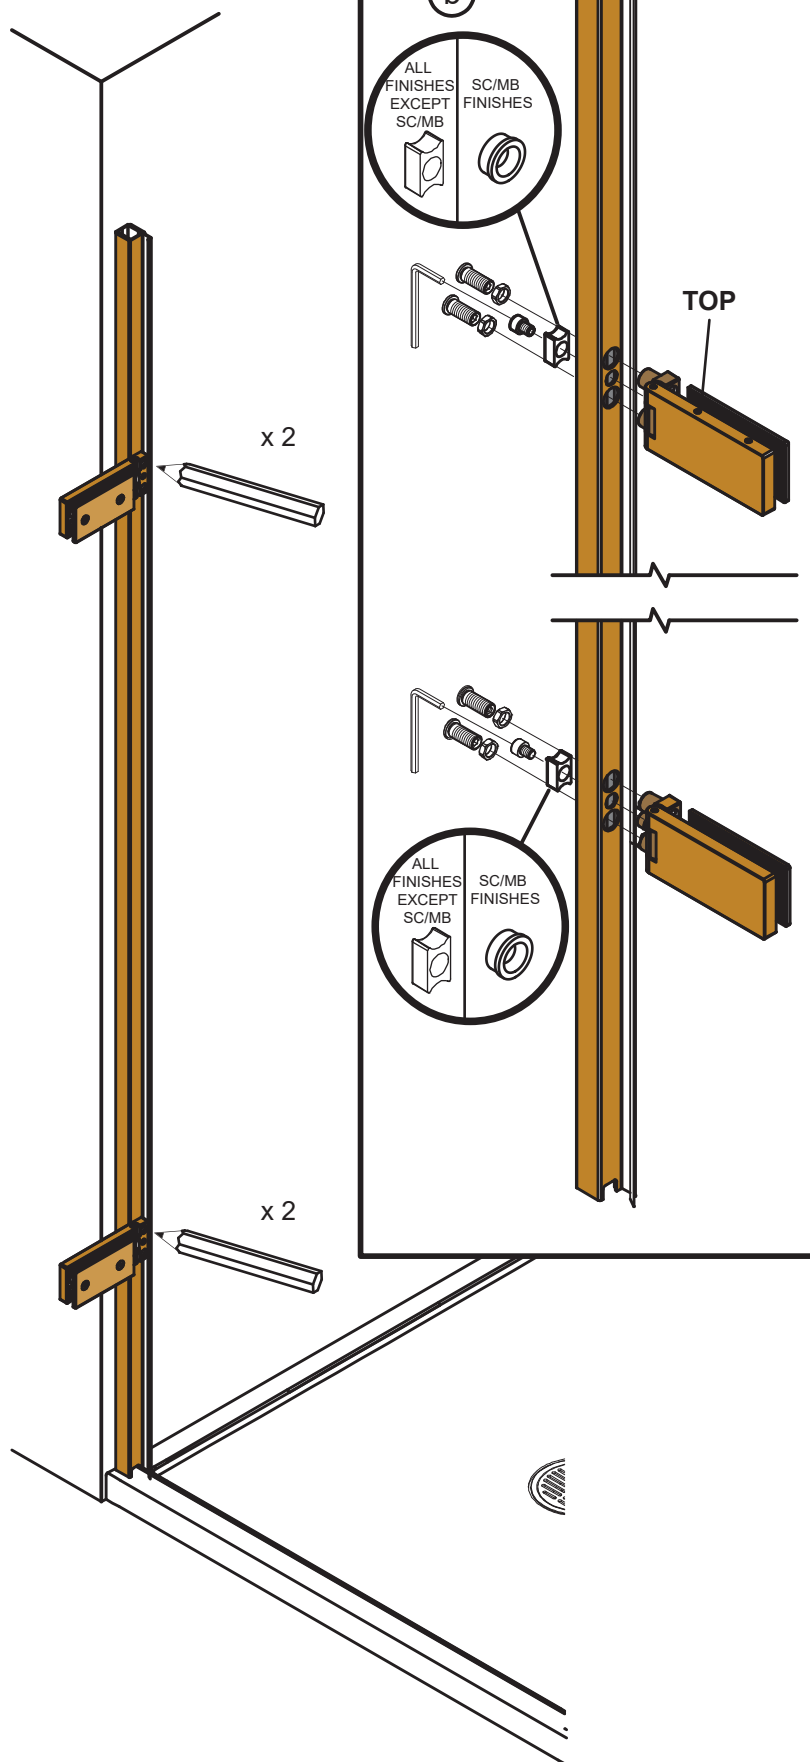

STAGE 6

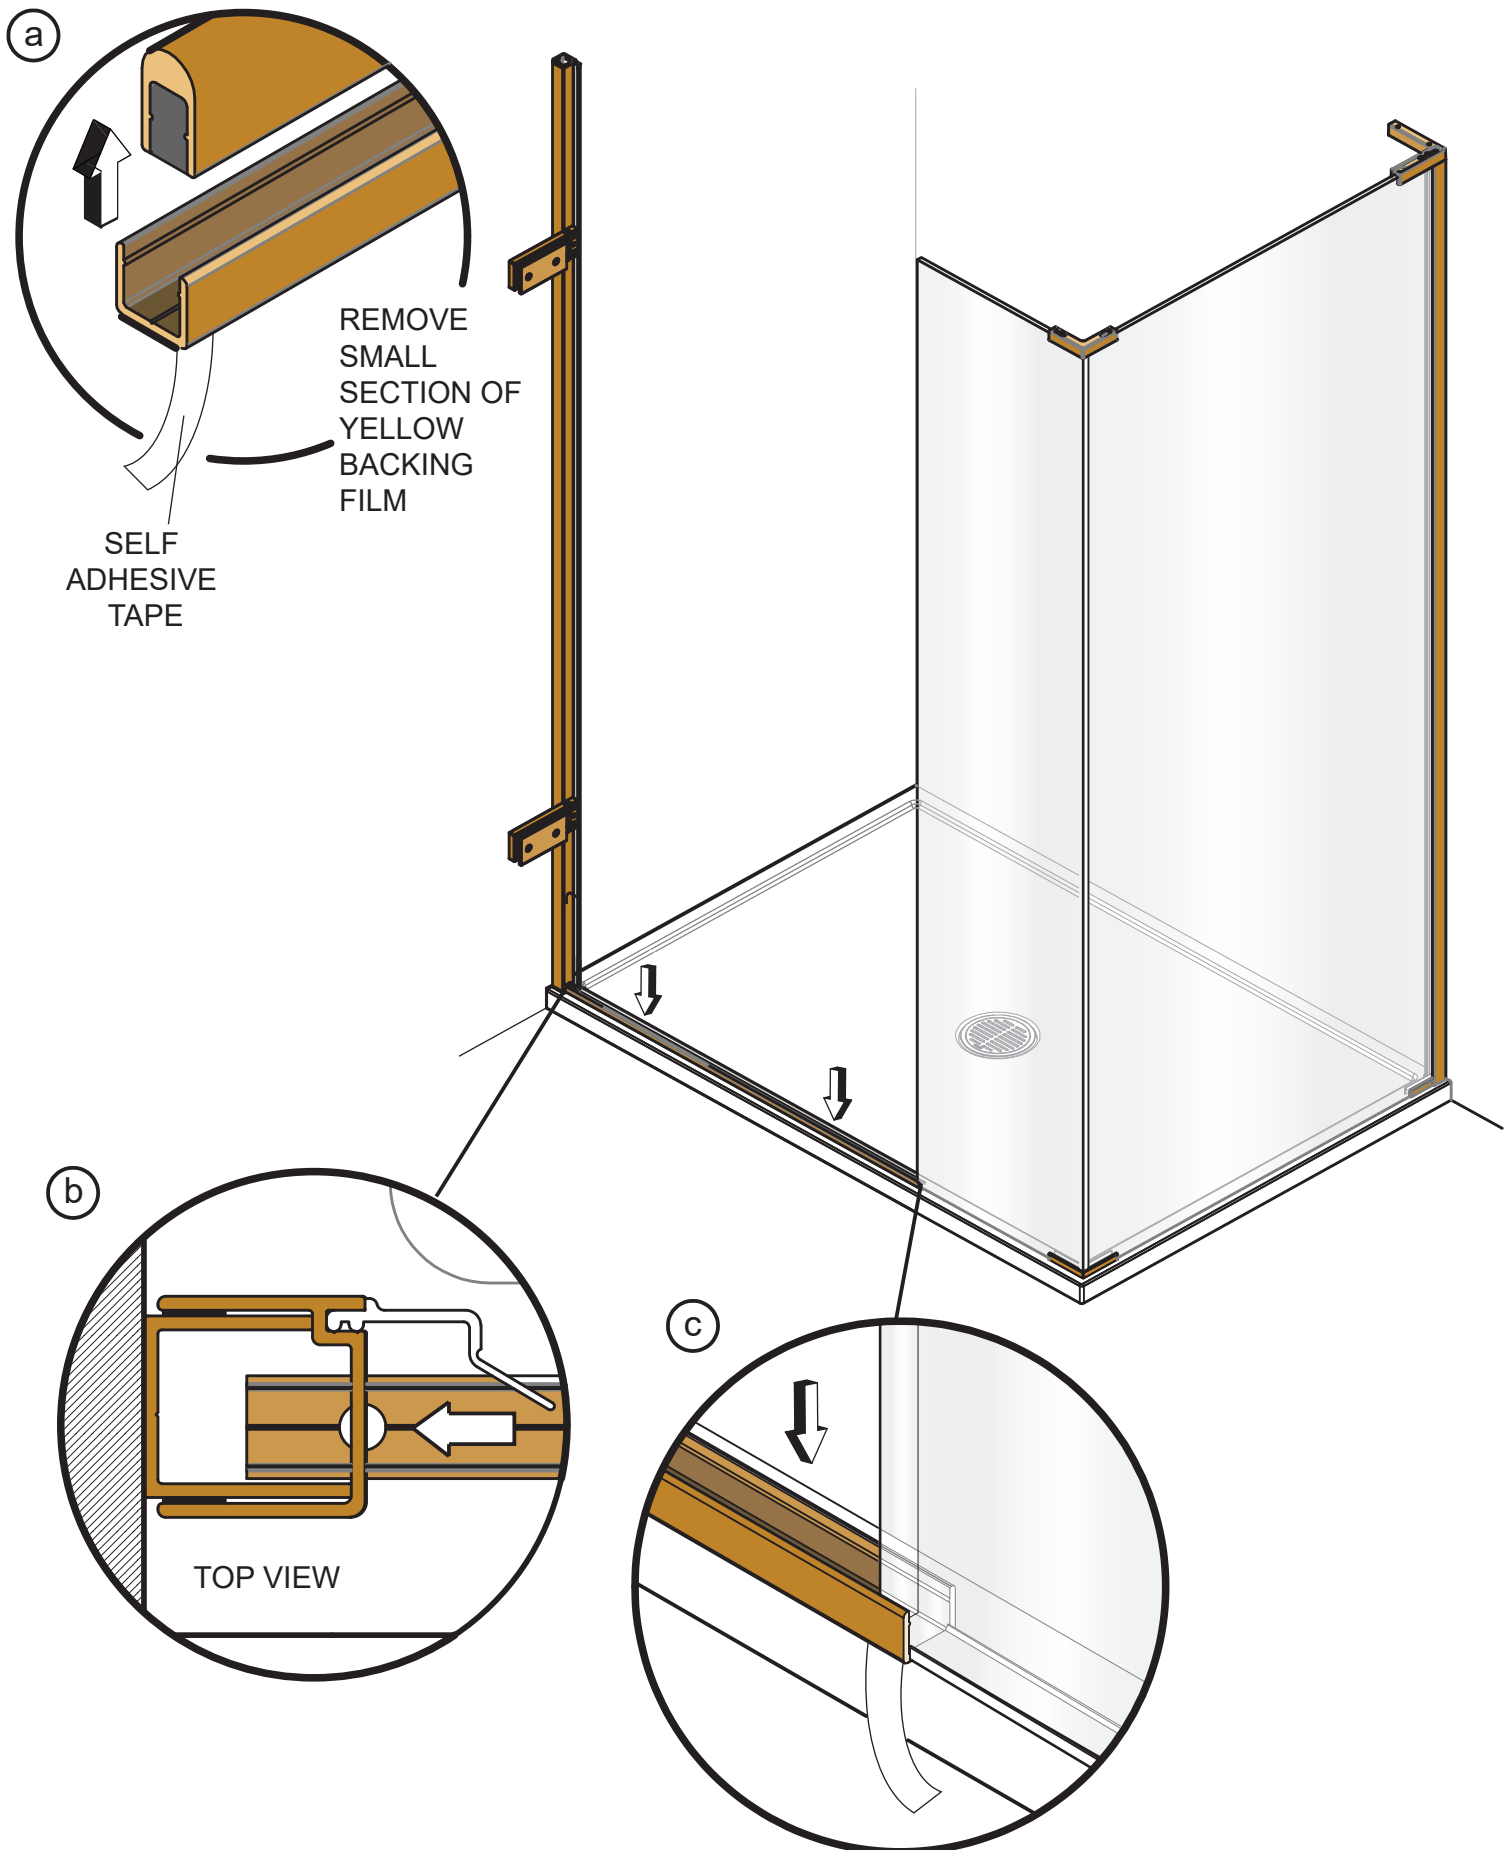

STAGE 7

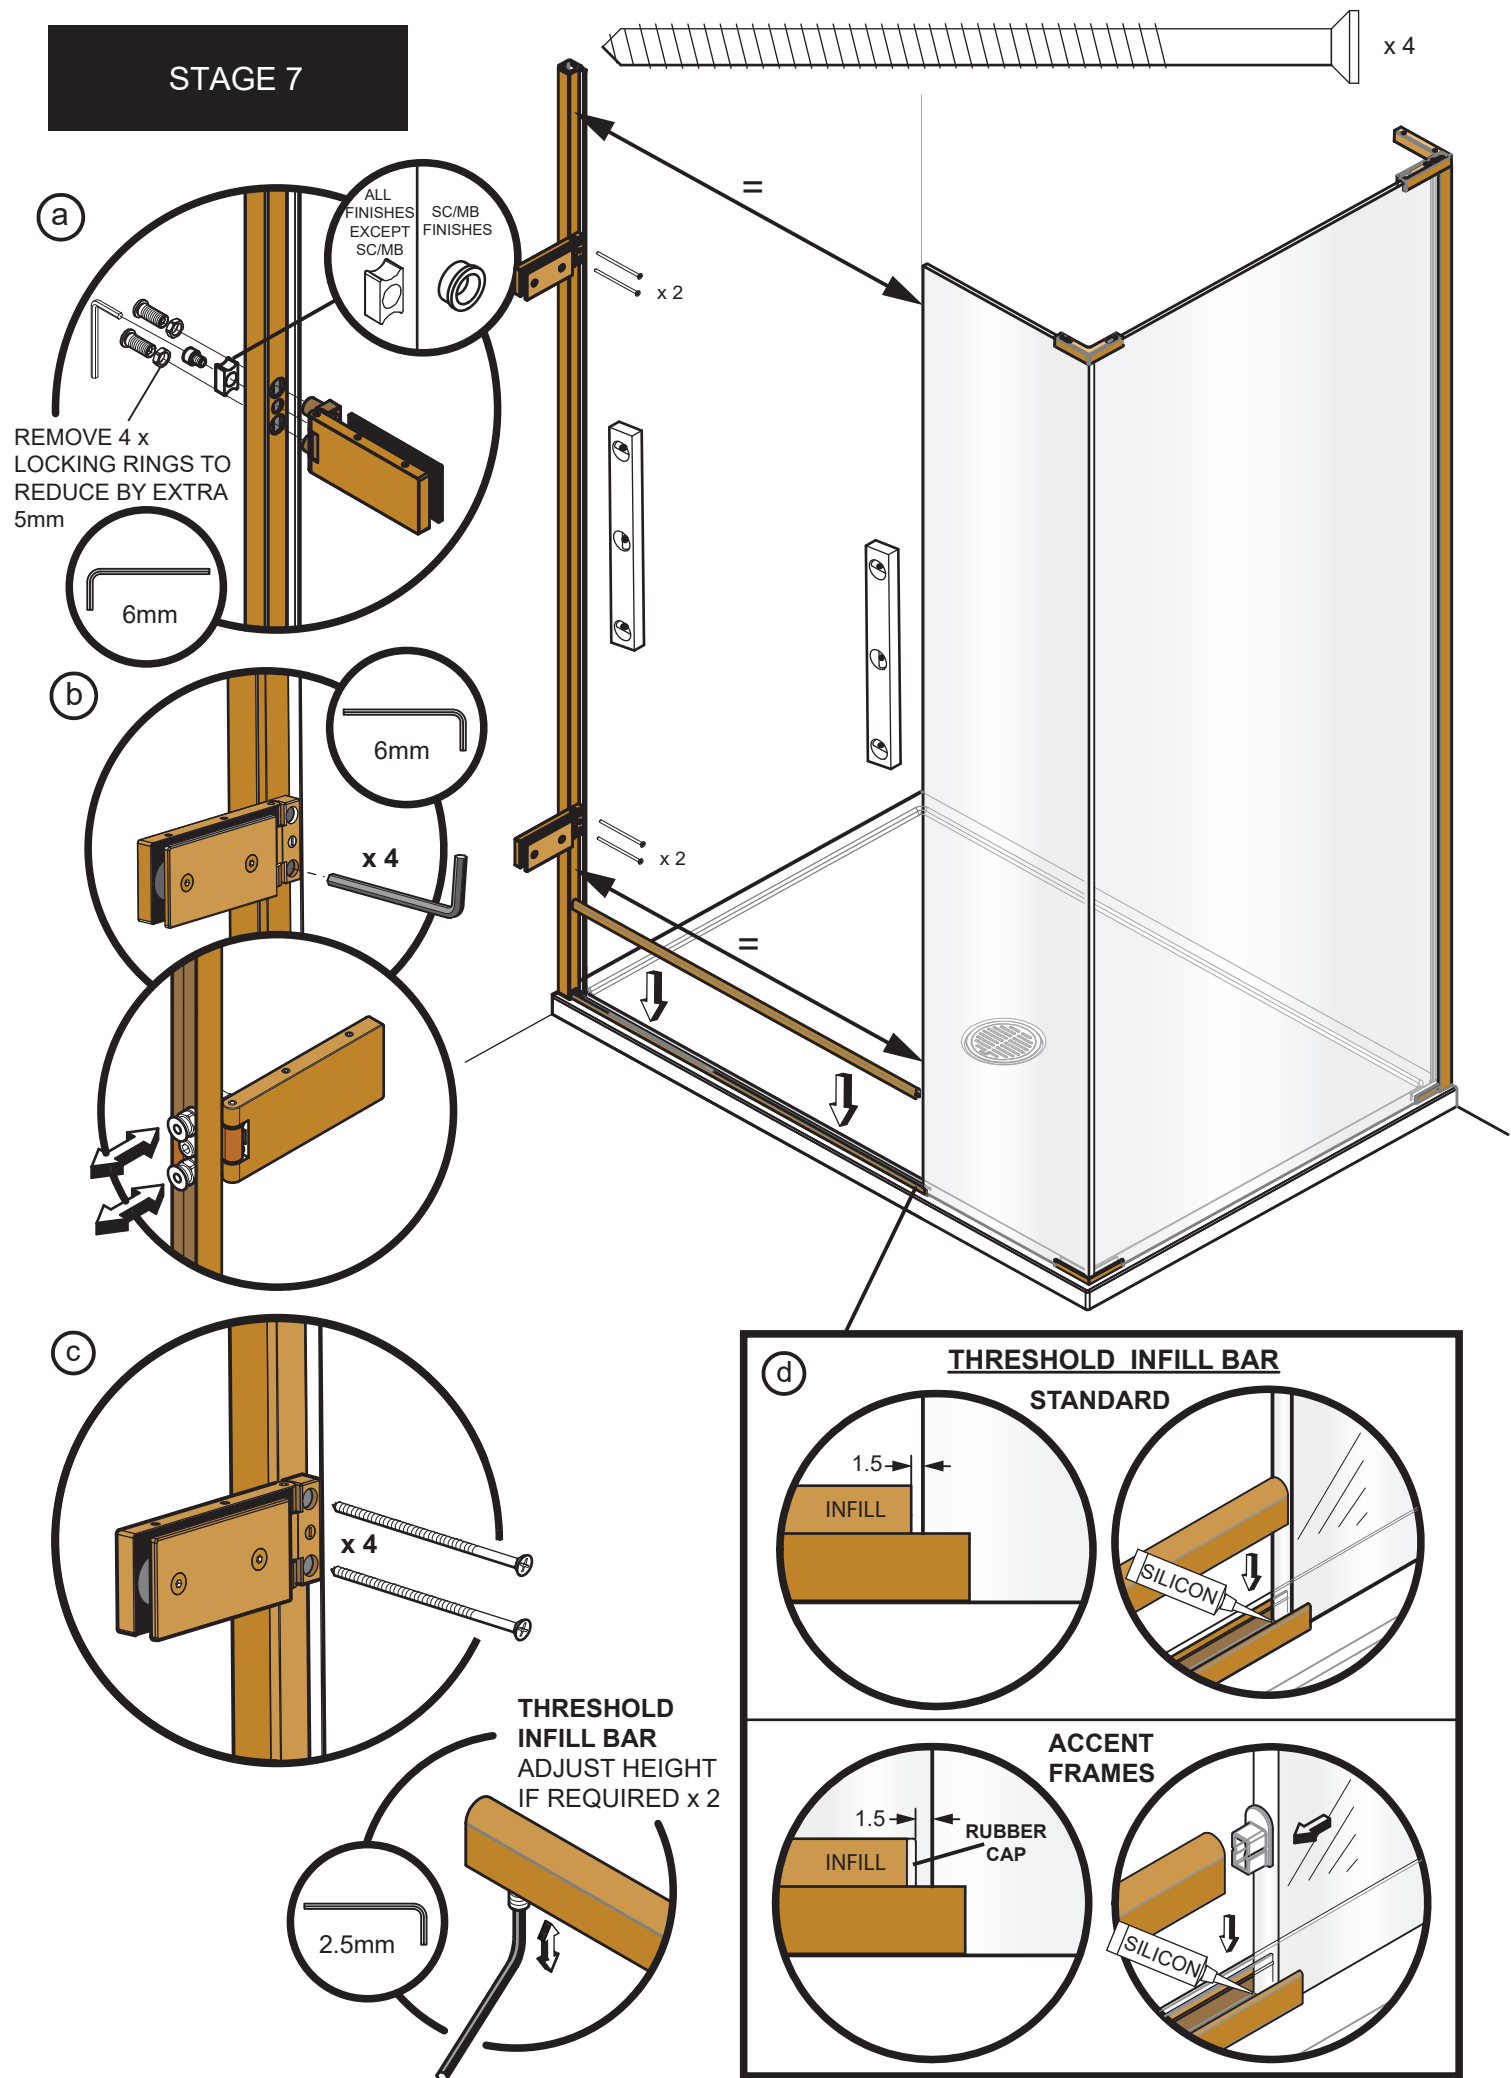



STAGE 8

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND


LH DOOR ADJUSTMENT BLOCK POSITION

RH DOOR ADJUSTMENT BLOCK POSITION









2.5mm

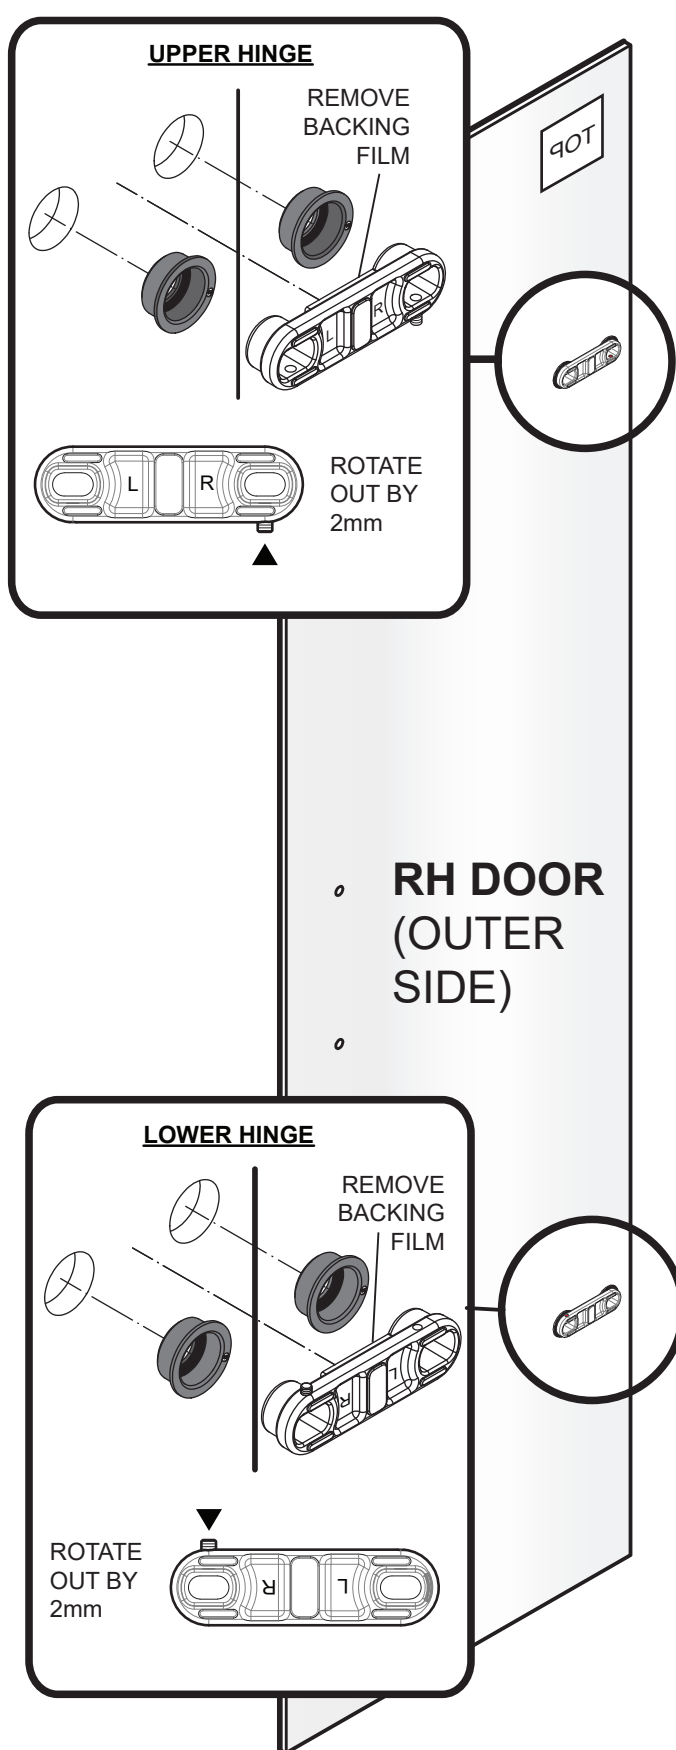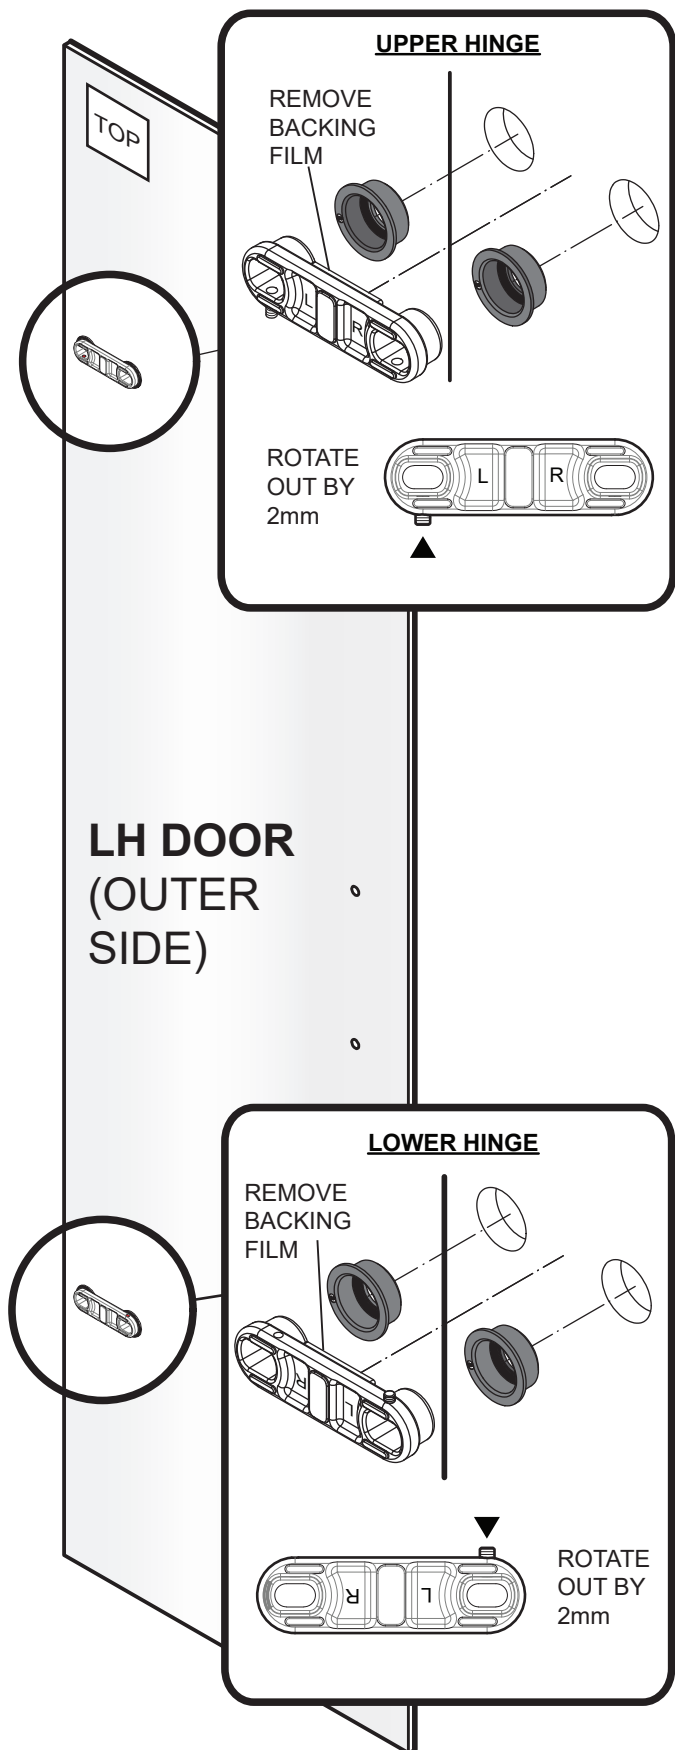

STAGE 9



CLOSURE VERTICAL SEAL

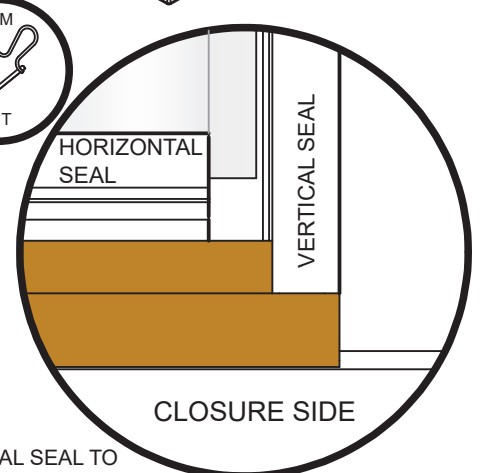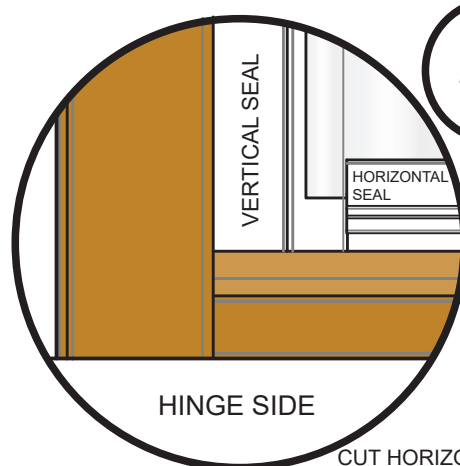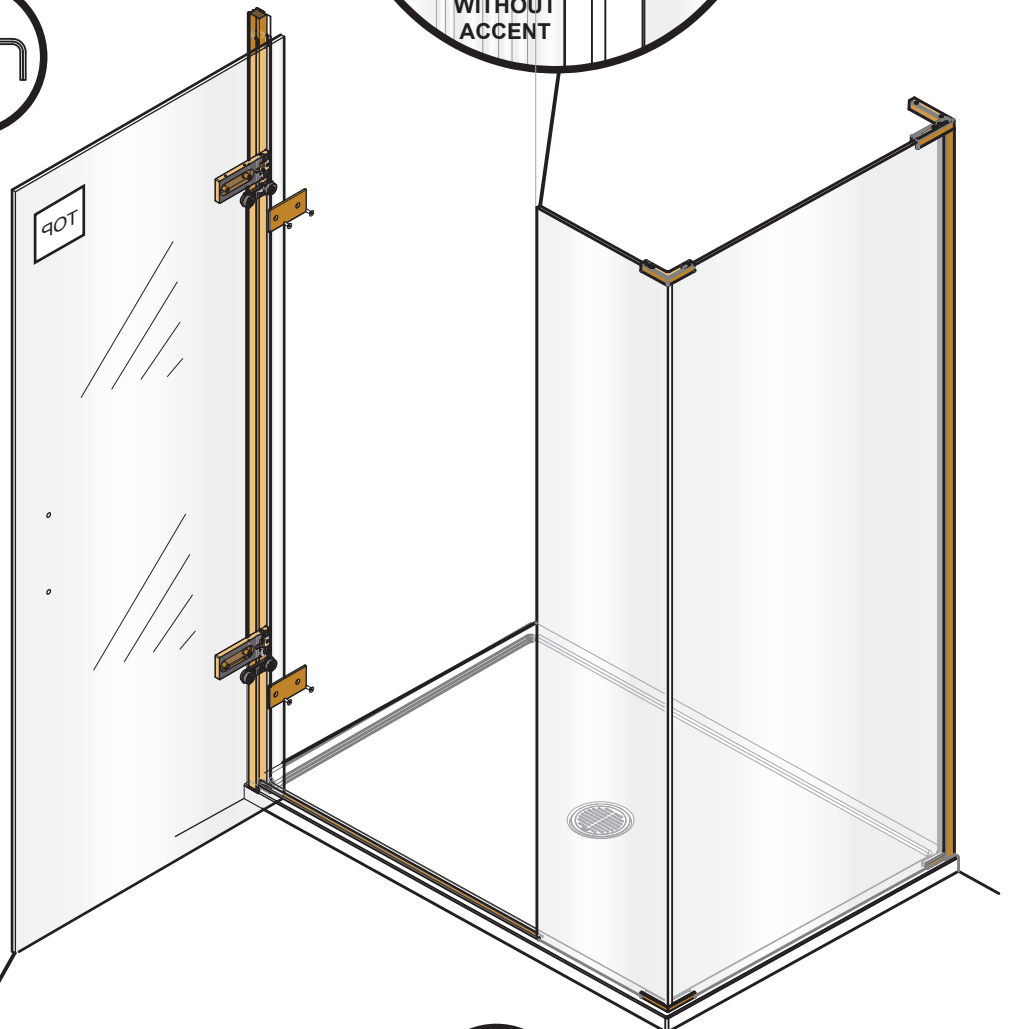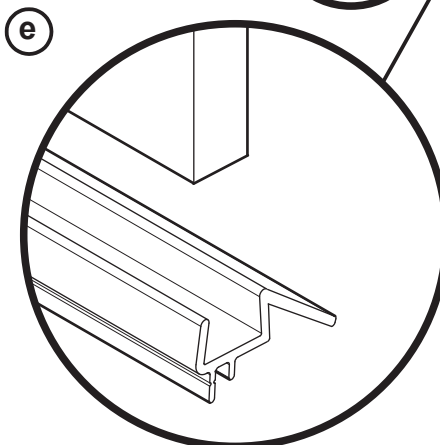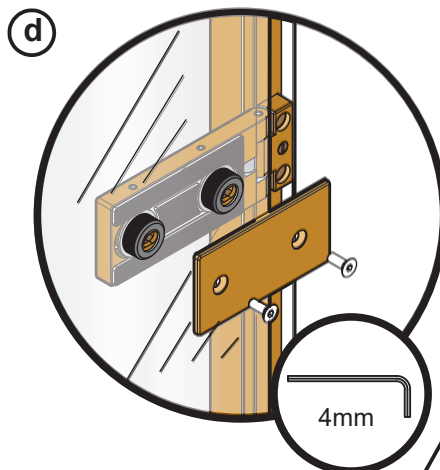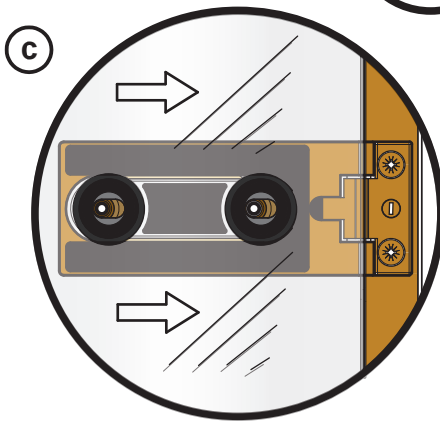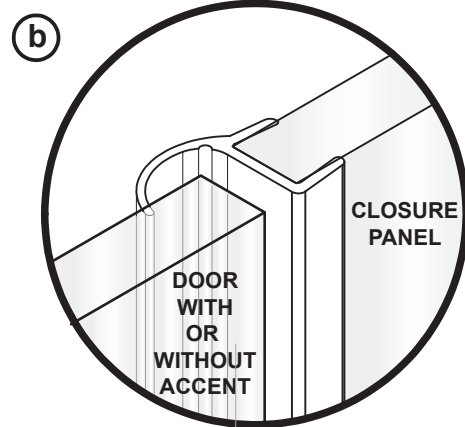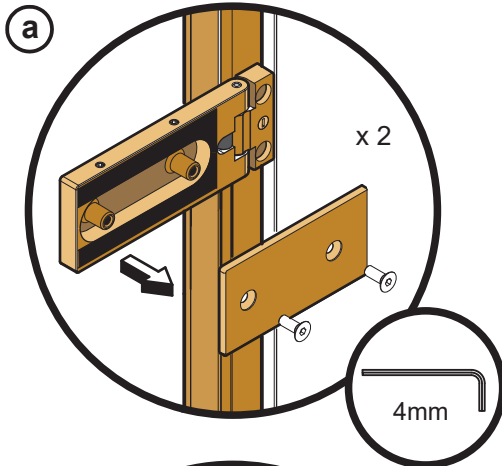


CUT HORIZONTAL SEAL TO LENGTH BETWEEN FINS OF BOTH VERTICAL SEALS





STAGE 10

(b)

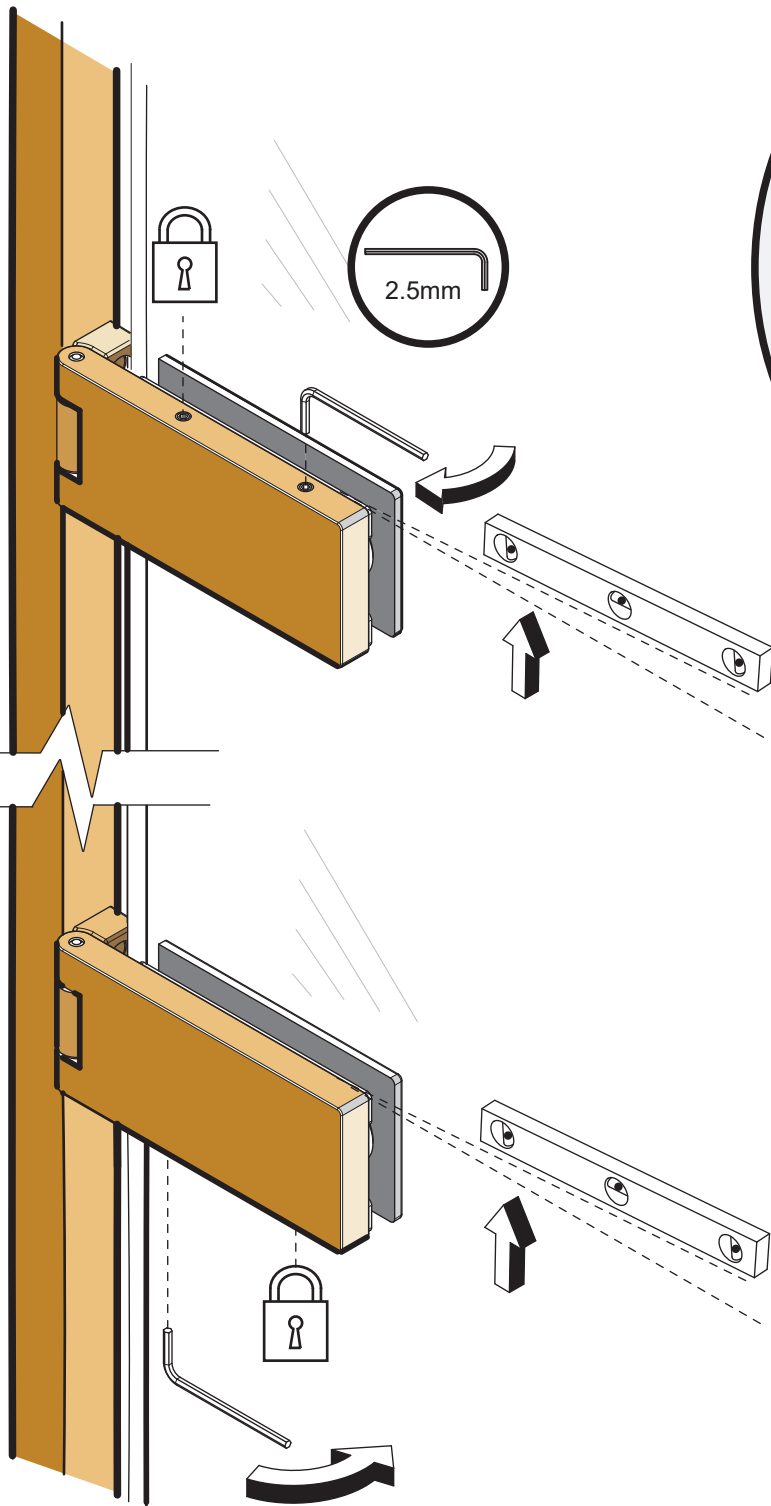


(a)

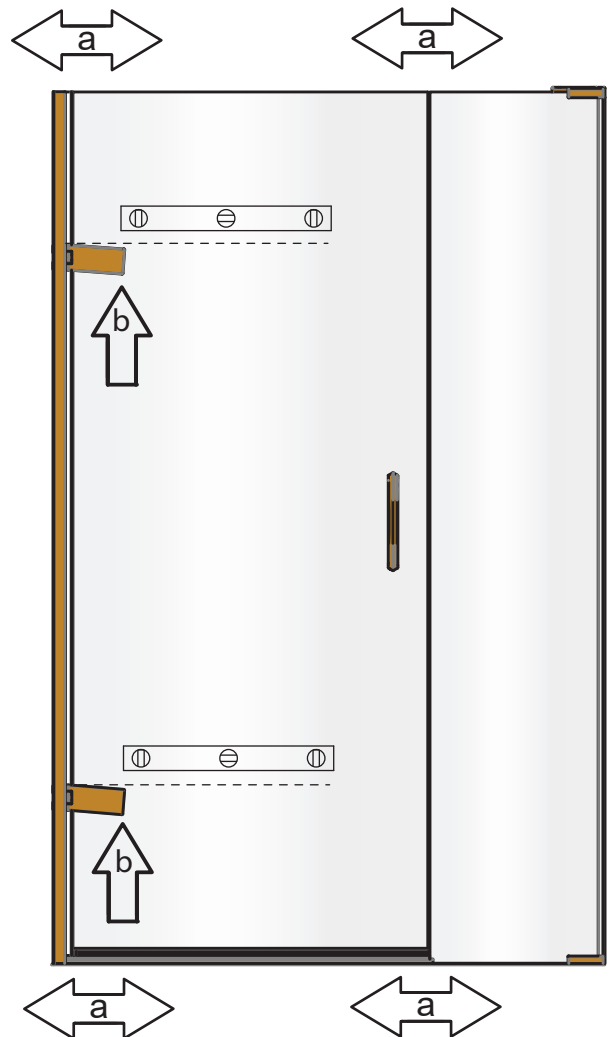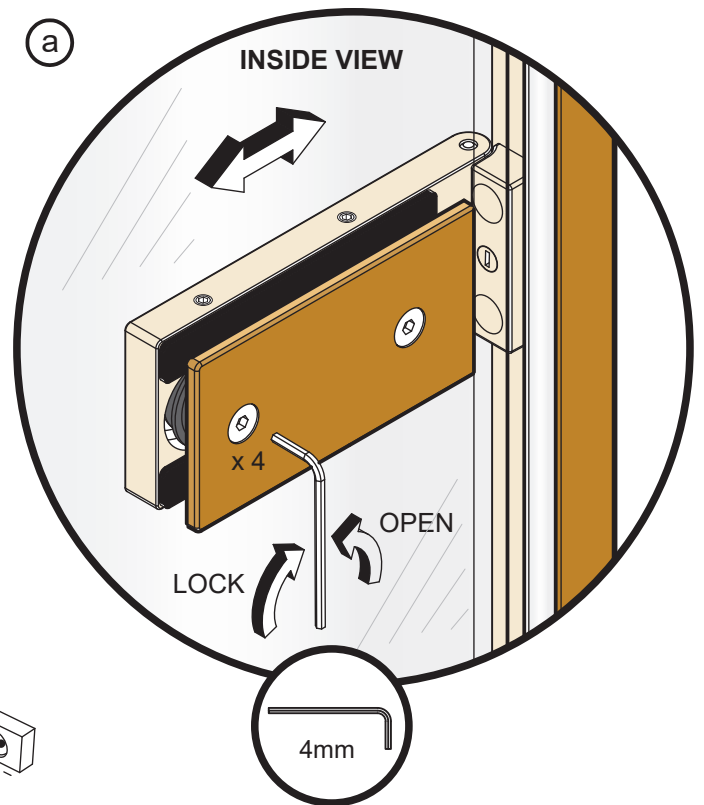


STAGE 11

HANDLE VARIANTS


ILLUSTRIOUS

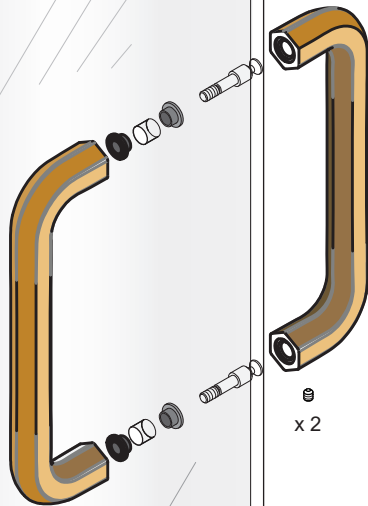


LINEAR

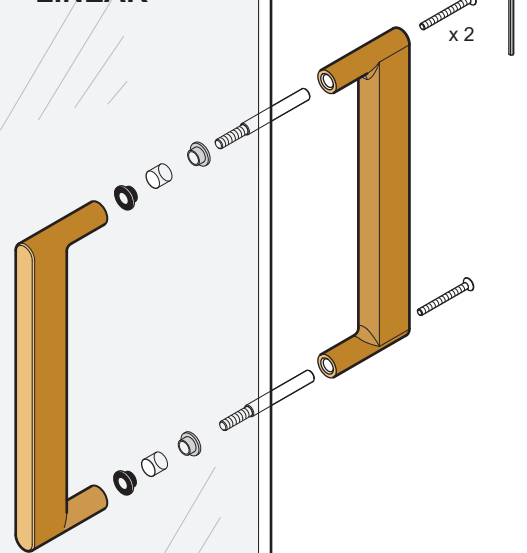









TRADITIONAL

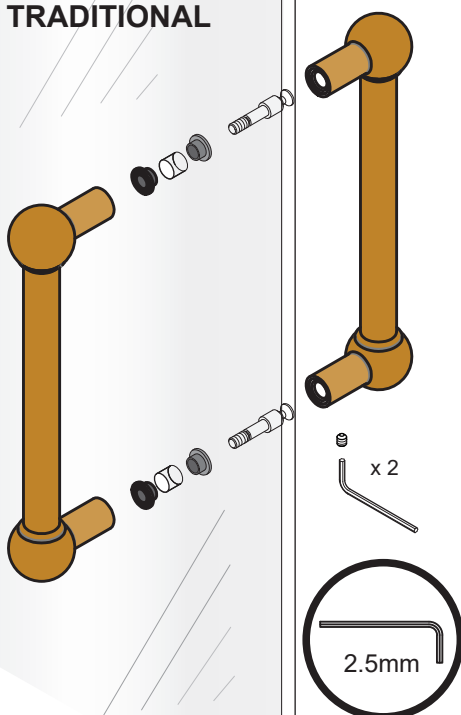

ENGINEER

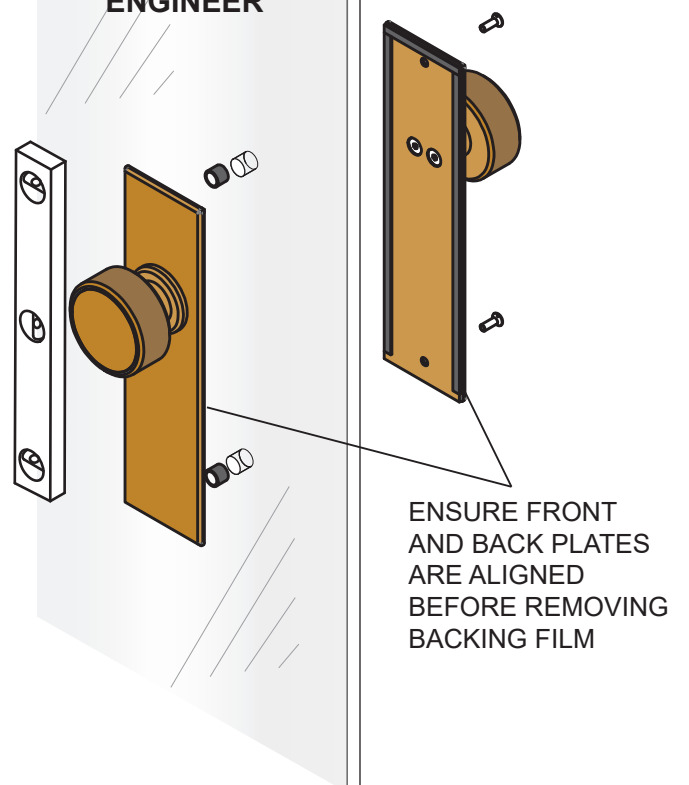


STAGE 12

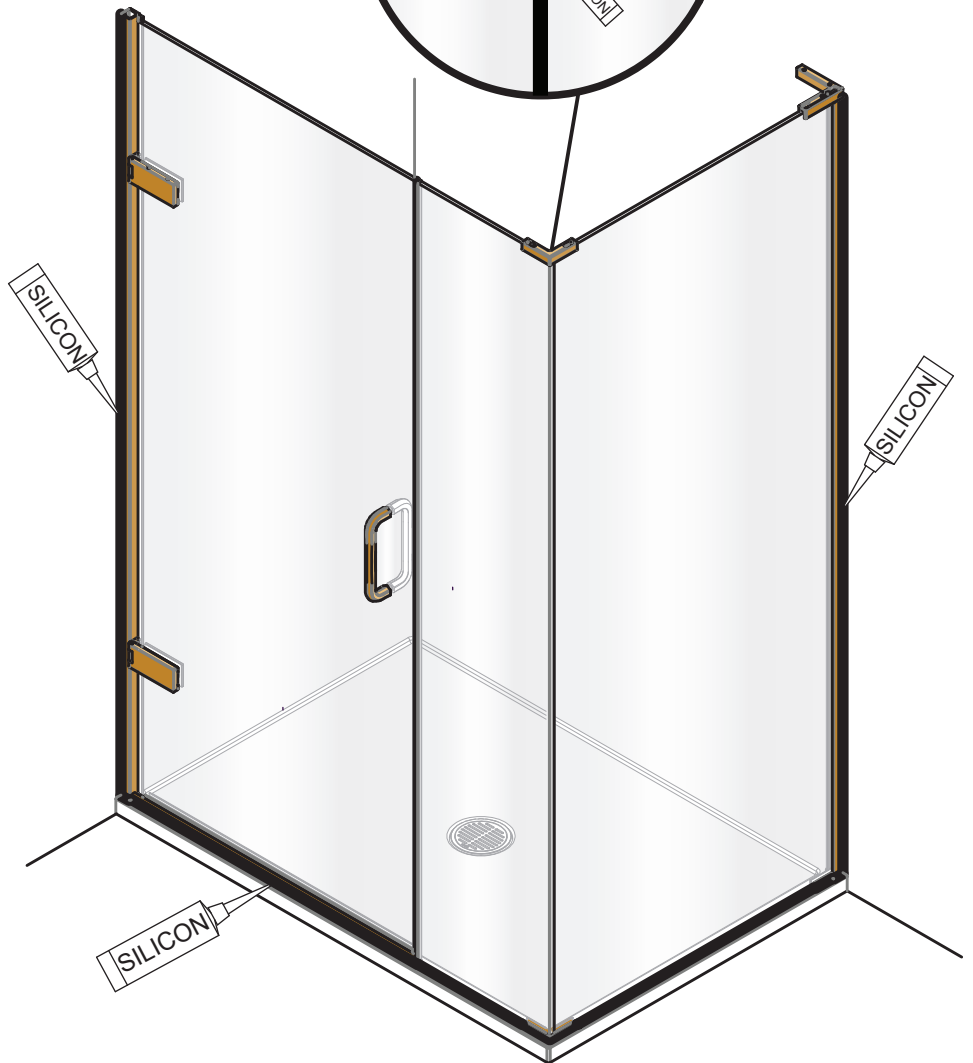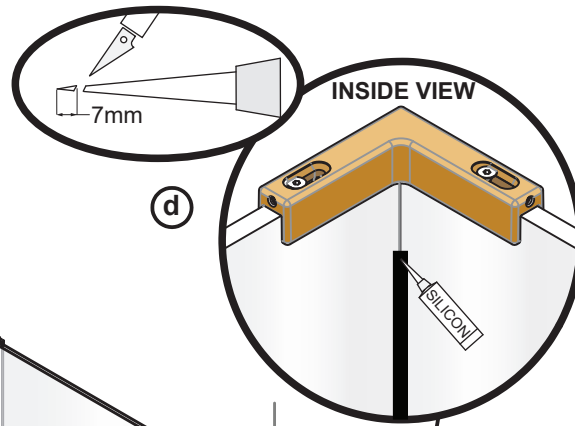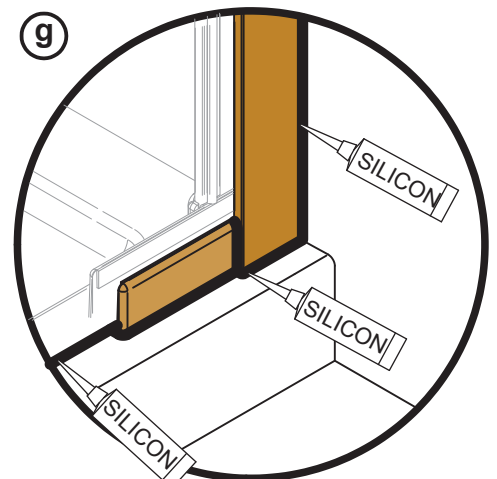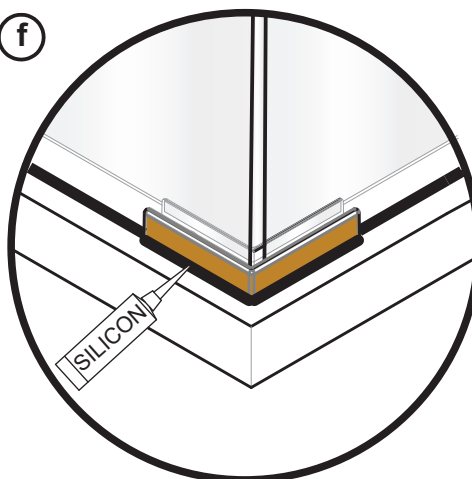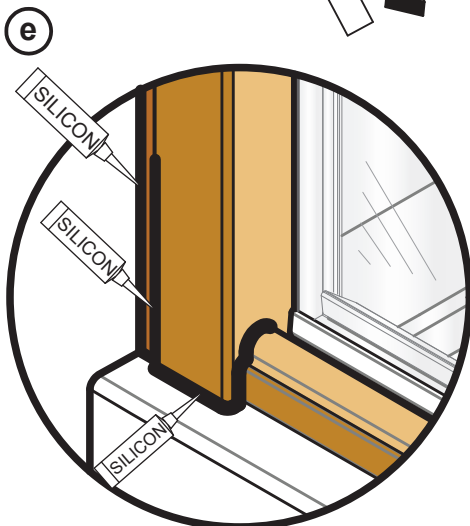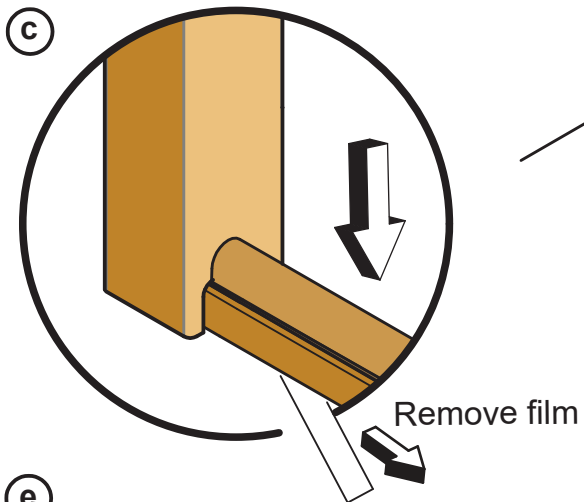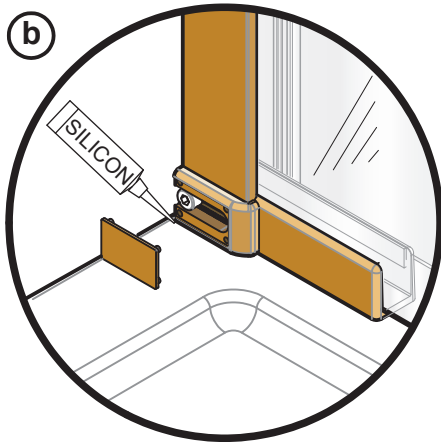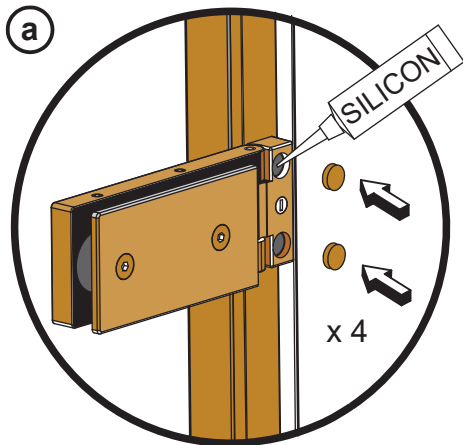


PARTS LIST


9927 AF HINGE FRAME KIT OF PARTS

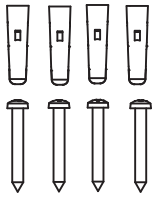


LH - 9611 (SC/MB) 9687*
RH - 9612 (SC/MB) 9688*
9616 (SC/MB) 9692*

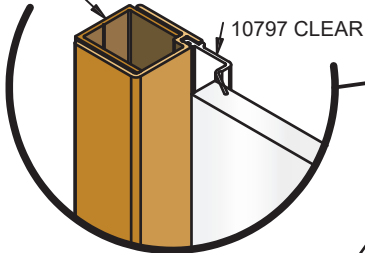


10621
ASSEMBLY
(SC/MB)
10620
ASSEMBLY*

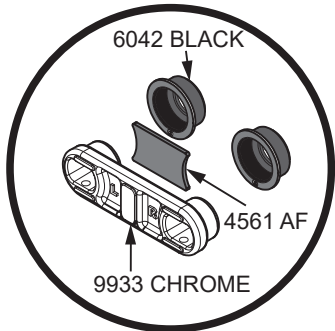

ACCENT FRAME OPTION

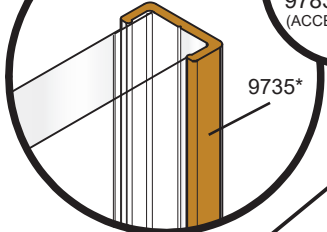


9783 CLEAR
(ACCENT OPTION
ONLY)

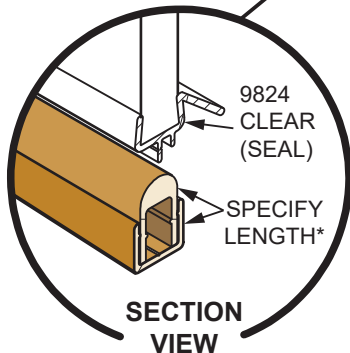


SECTION
VIEW


9807

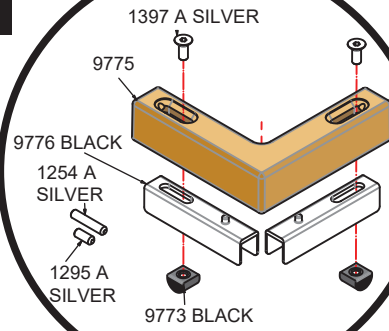


L BRACKET

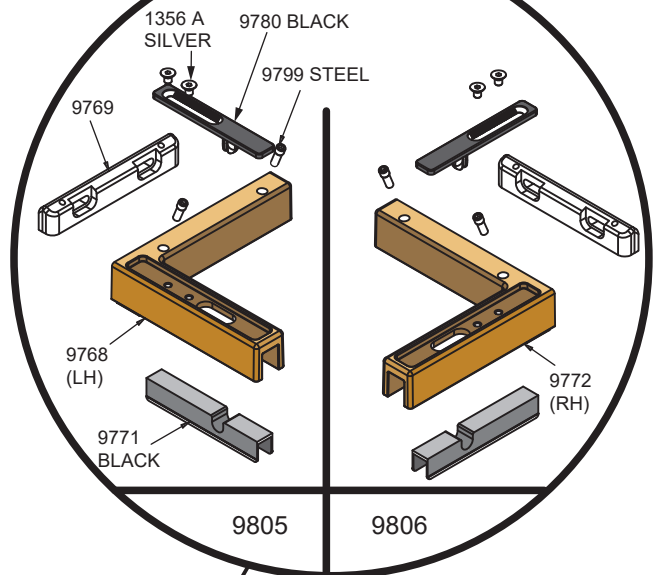

9825
CLEAR

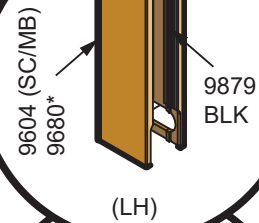


(LH)

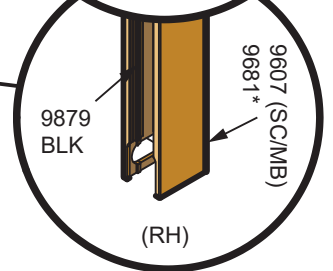


(RH)


9810 ASSY*

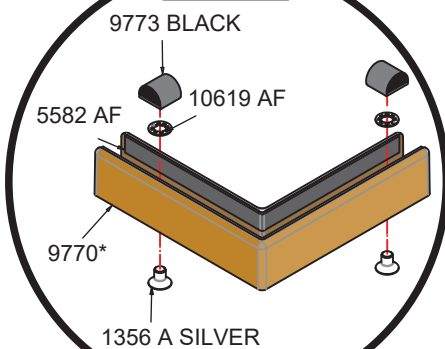

9926 AF WALL HINGE KIT OF PARTS

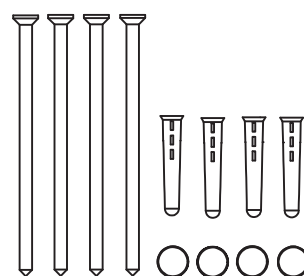

9864 AF WALL FRAME KIT OF PARTS

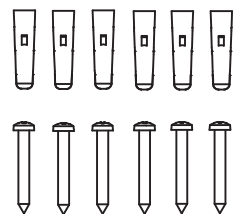

* ALL FINISHES APART
FROM SC/MB