


matki

EAUZONE

EPI - INWARD OPENING HINGED DOOR WITH HINGE PANEL AND INLINE PANEL FOR RECESS

BRITISH PATENT NO:2470778

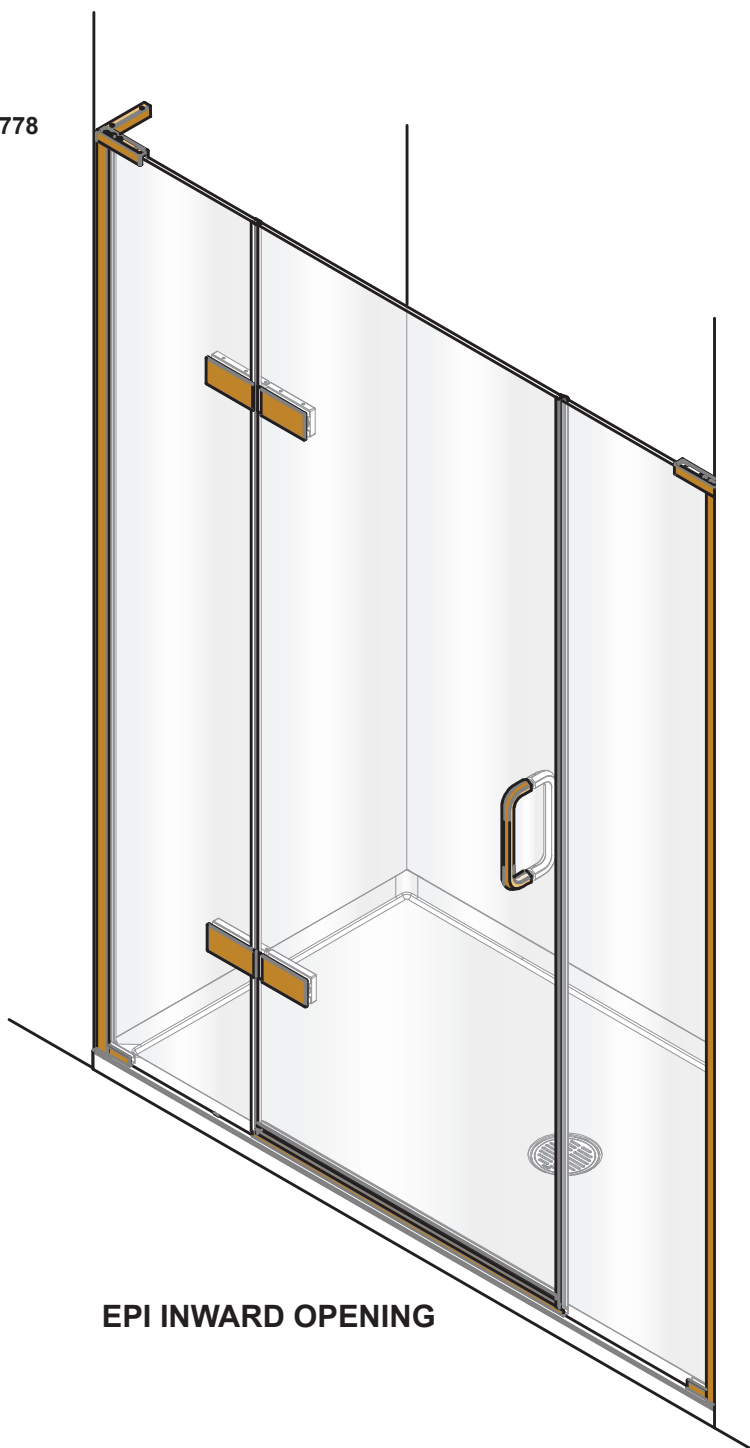

EPI INWARD OPENING

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10737 AF 03/25

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door, Stage 6. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.


CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS

MODEL	A + B + C*	A	B	C
EPI1000	970-1000	600	200	200
EPI1050	1020-1050	600	250	200
EPI1100	1070-1100	700	200	200
EPI1150	1120-1150	700	250	200
EPI1200	1170-1200	800	200	200
EPI1250	1220-1250	800	250	200
EPI1300	1270-1300	700	200	400
EPI1350	1320-1350	800	250	300
EPI1400	1370-1400	800	200	400
EPI1450	1420-1450	800	250	400
EPI1500	1470-1500	700	400	400
EPI1550	1520-1550	800	400	350
EPI1600	1570-1600	800	400	400
EPI1650	1620-1650	800	450	400
EPI1700	1670-1700	800	450	450
EPI1750	1720-1750	800	500	450
EPI1800	1770-1800	800	500	500
EPI1850	1820-1850	800	500	550
EPI1900	1870-1900	800	500	600


Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width e.g. See below other combinations for Model 1200 all have same total width.

EPI1200	1170 – 1190	800	200	200
EPI1200	1170 – 1190	600	400	200





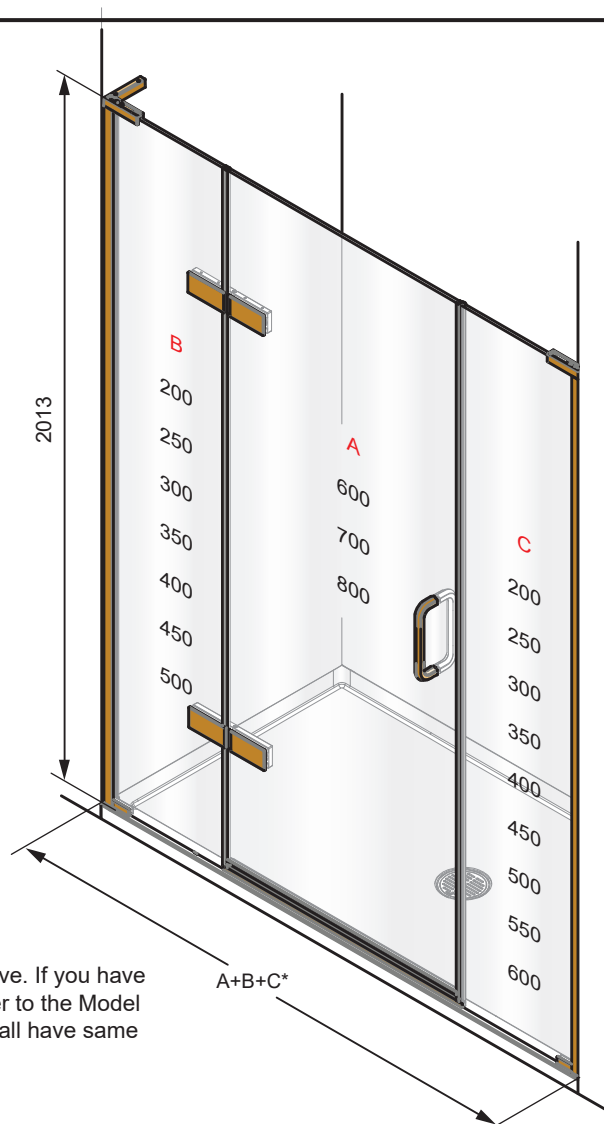


SETTING OUT

DIAGRAMS SHOW EPI LH HINGED DOOR, REVERSE FOR RH







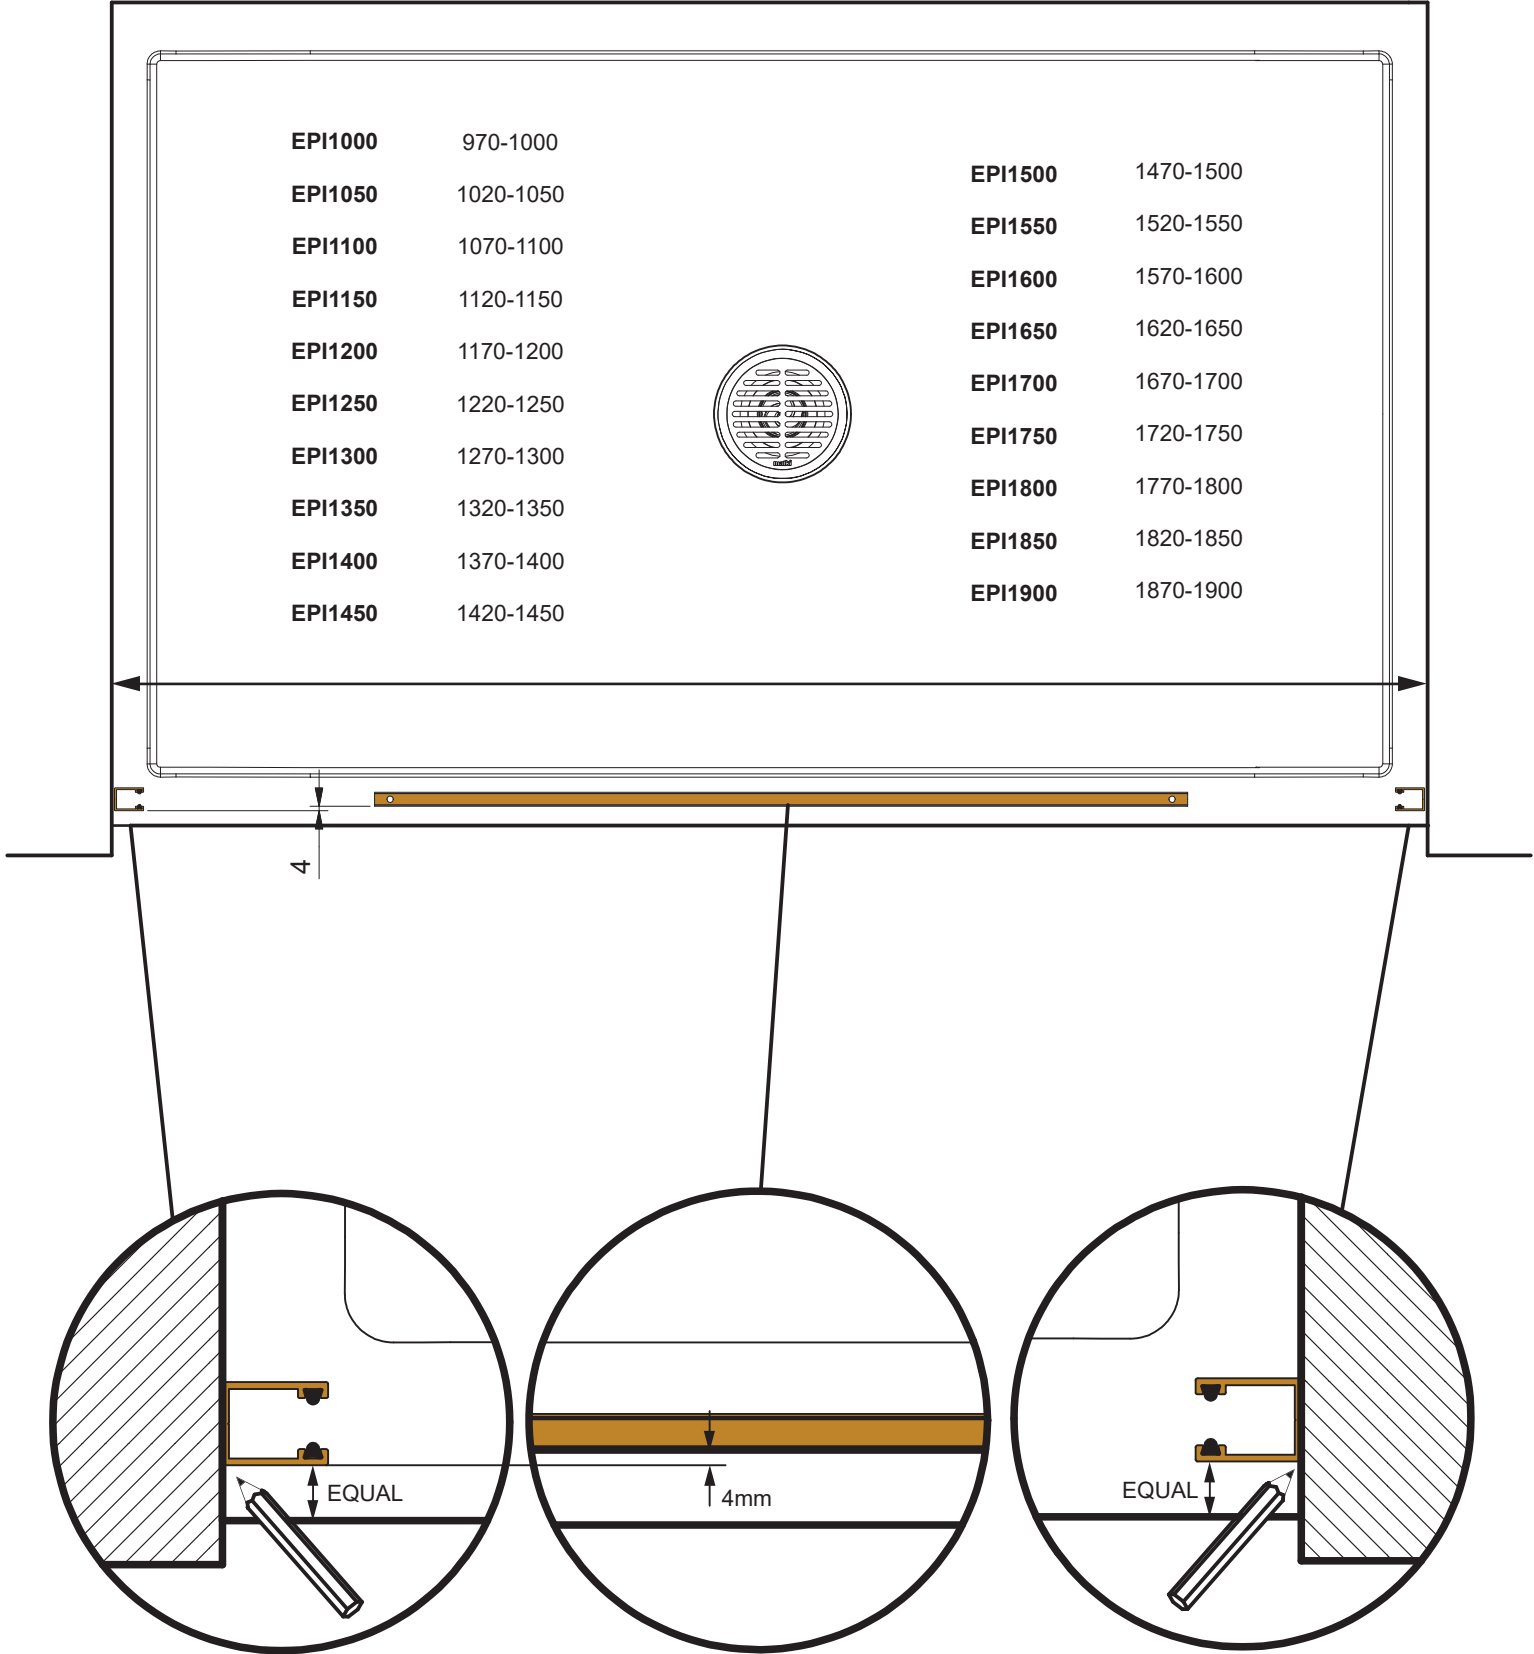


STAGE 1



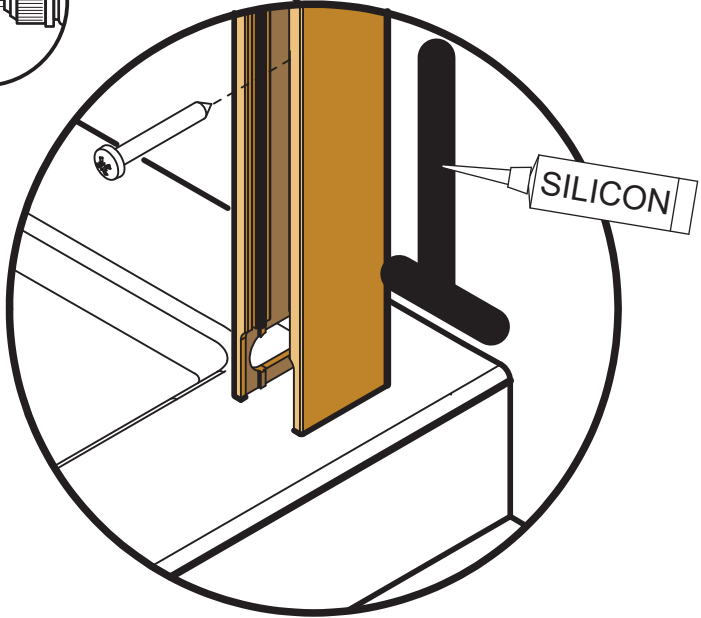
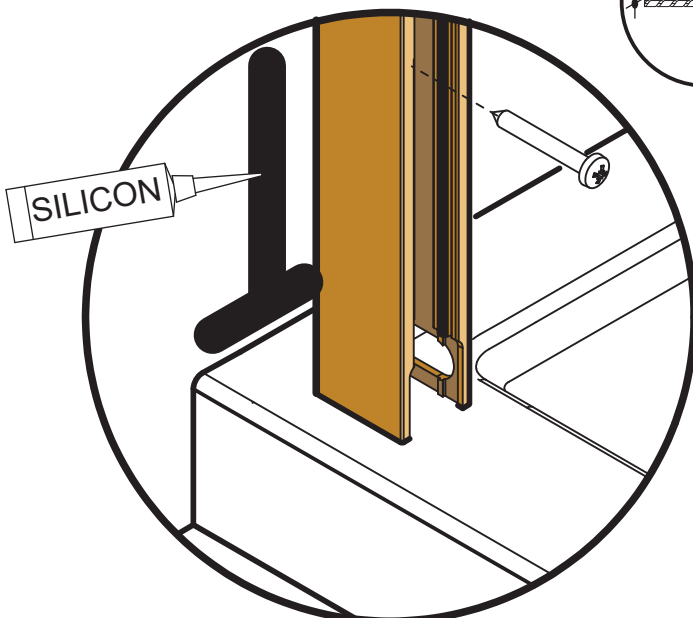
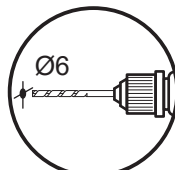
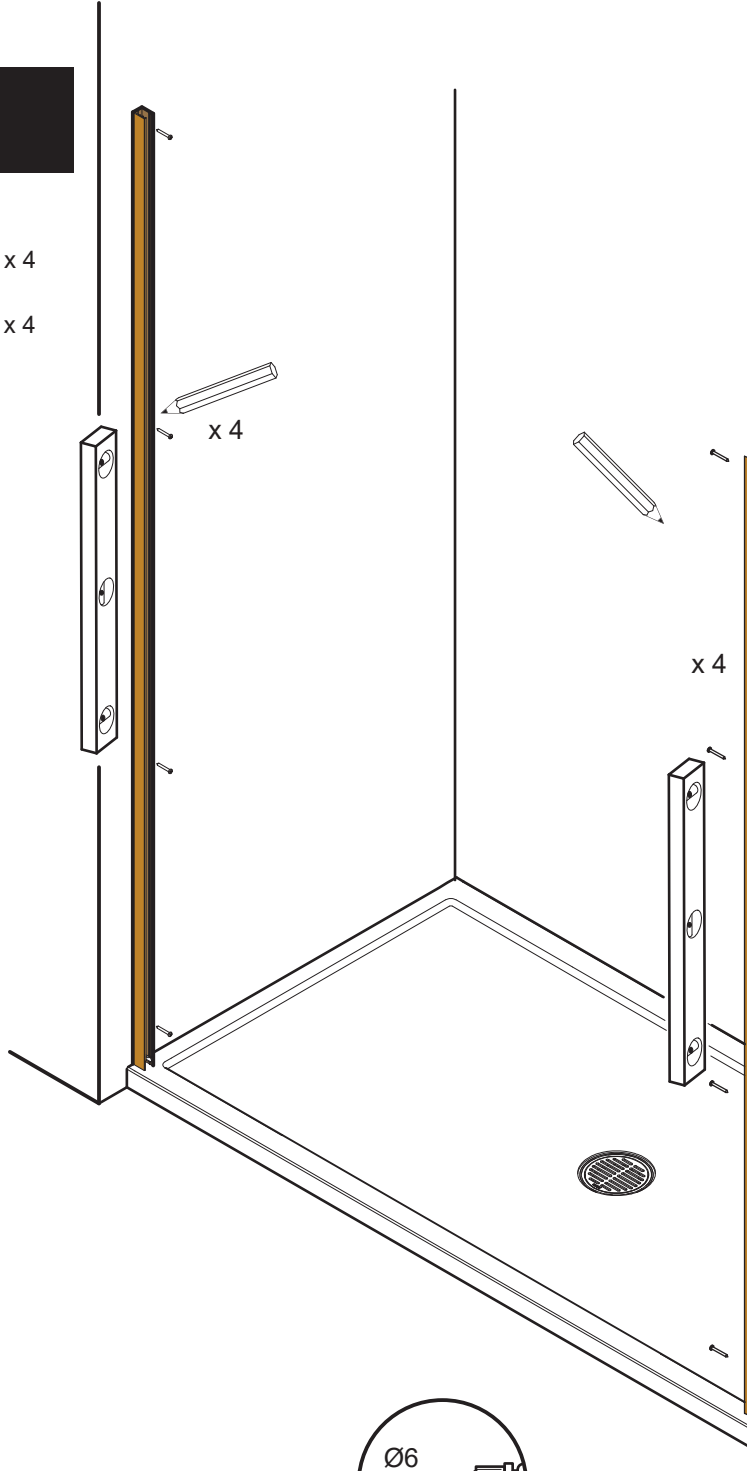
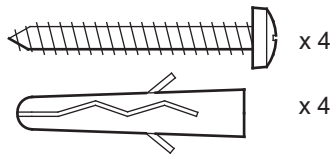


STAGE 2






FOOT IS FACTORY FITTED
ON STANDARD FINISH UNITS

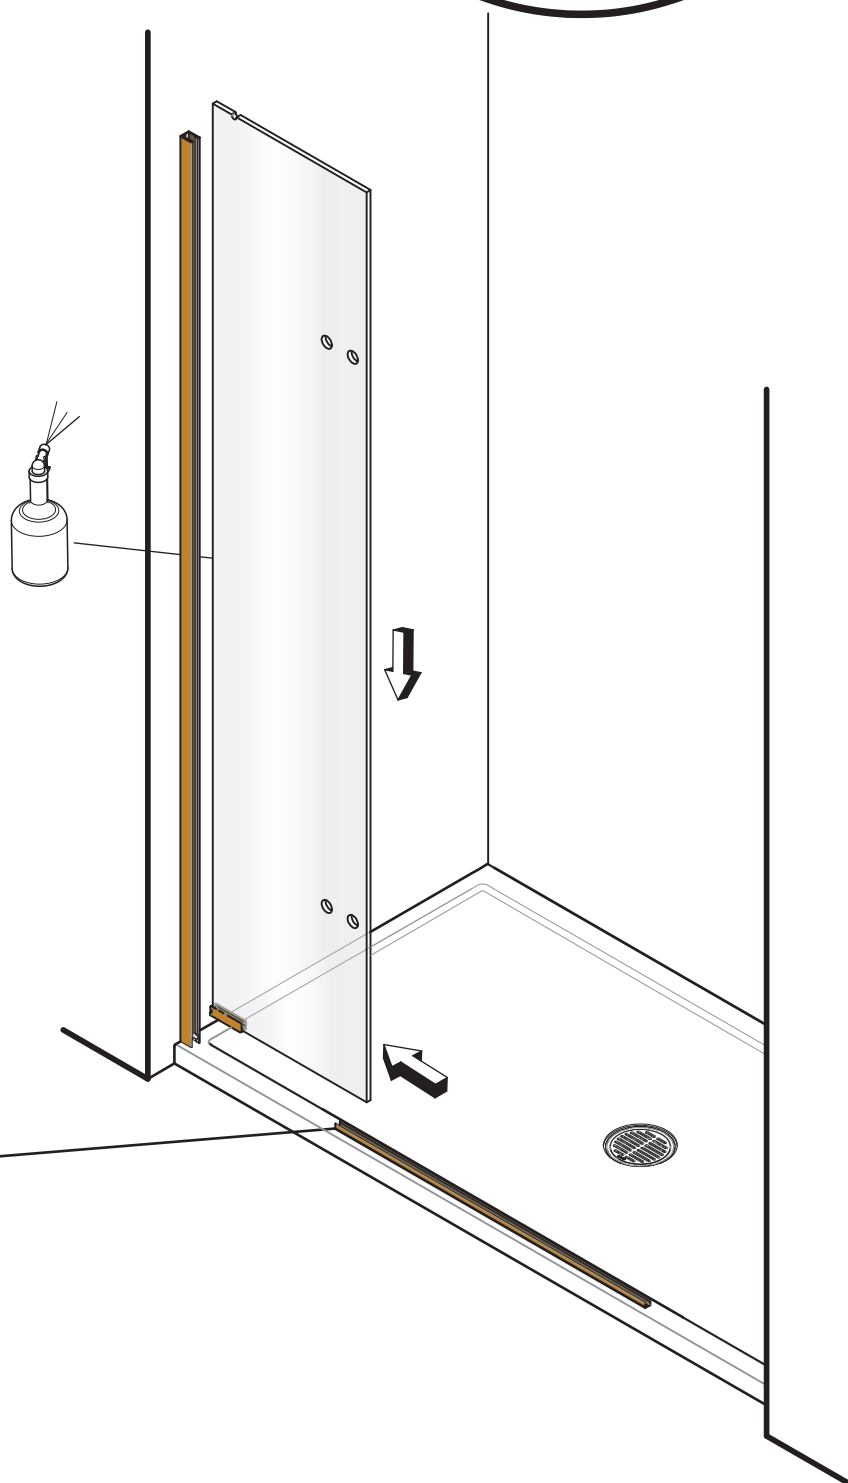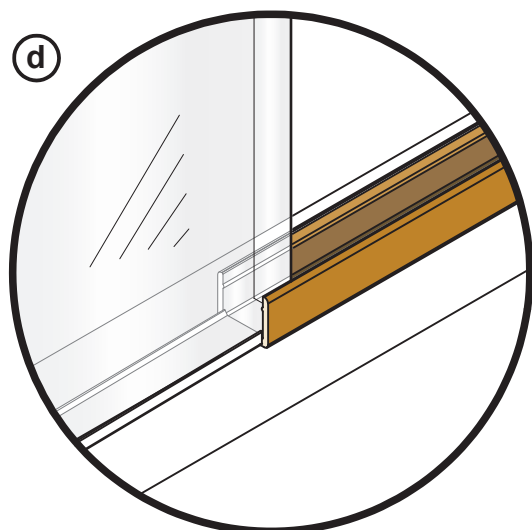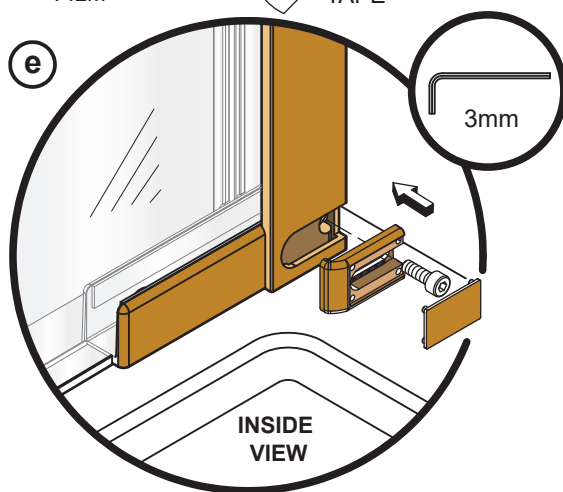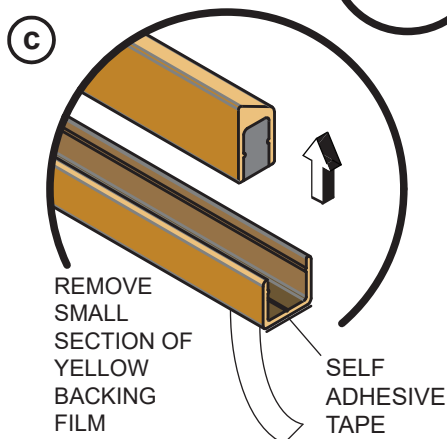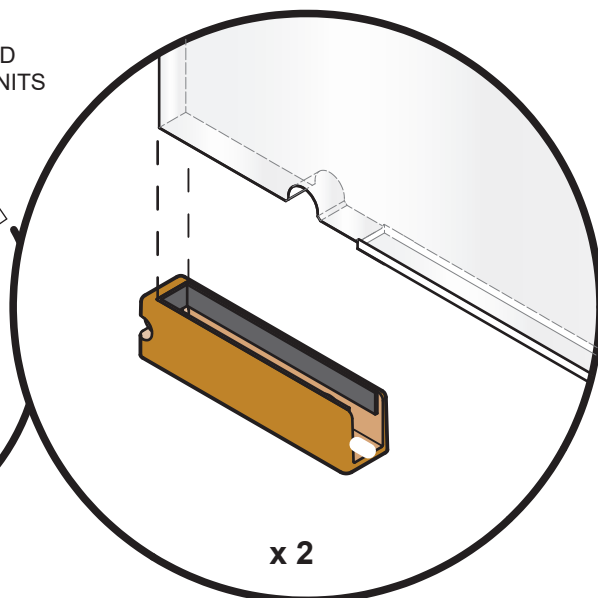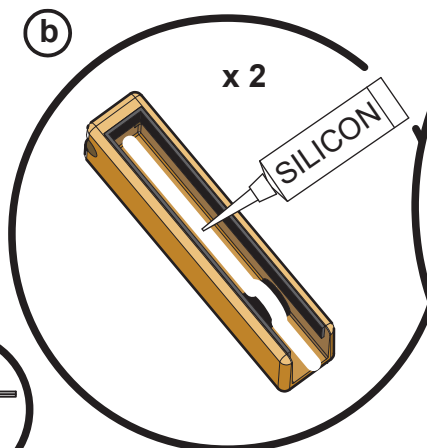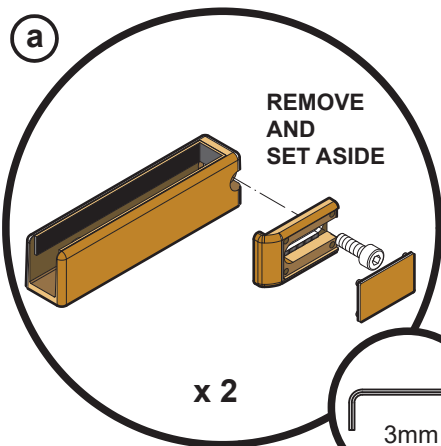

STAGE 3

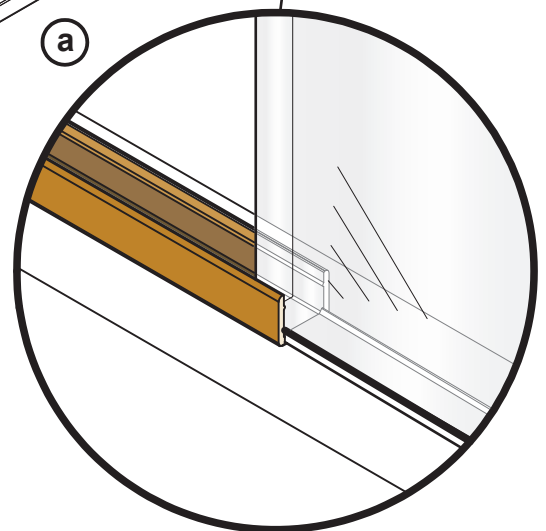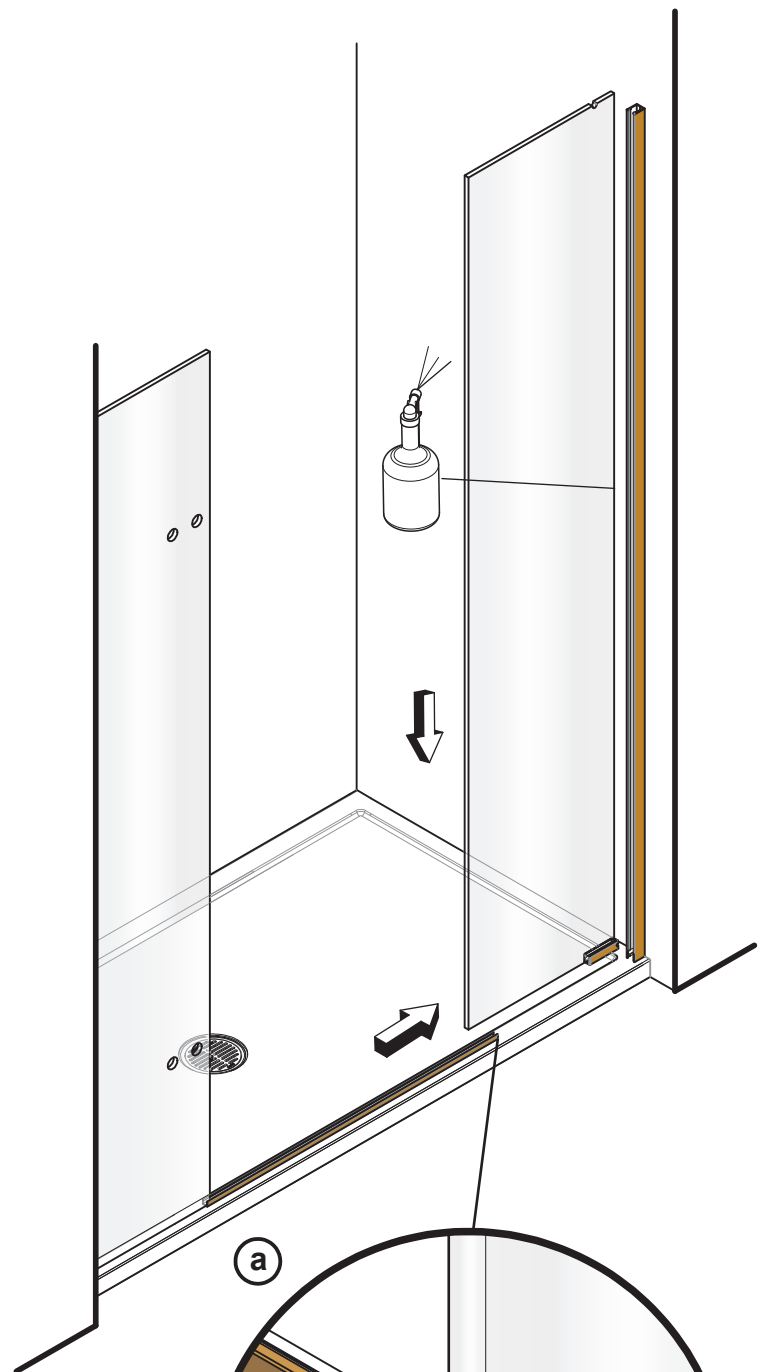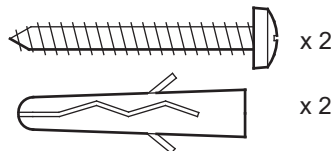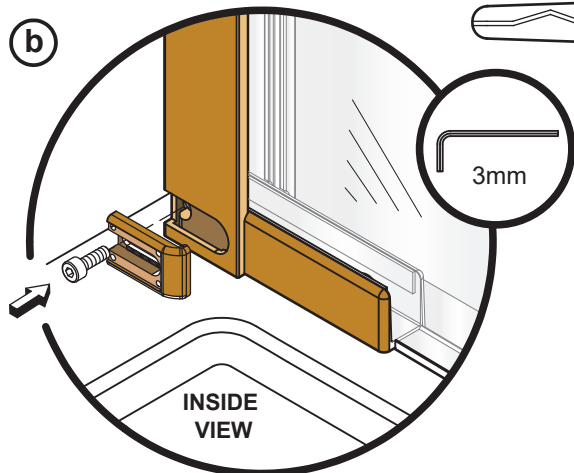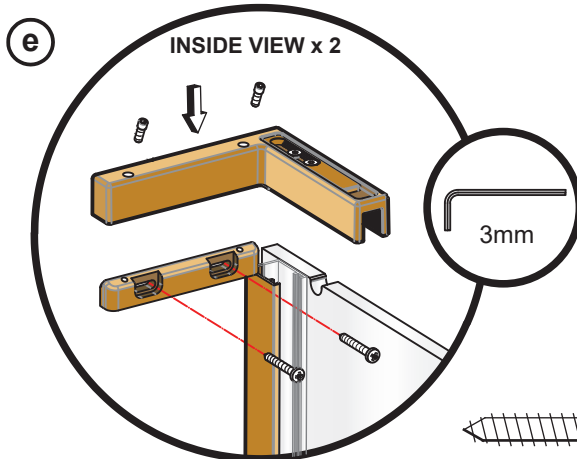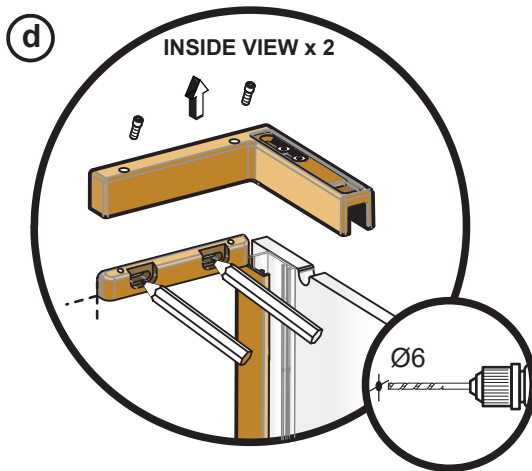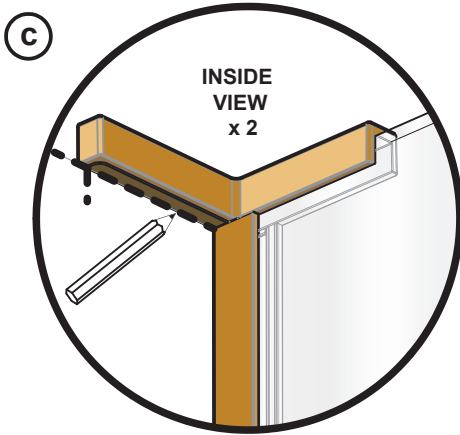

STAGE 4

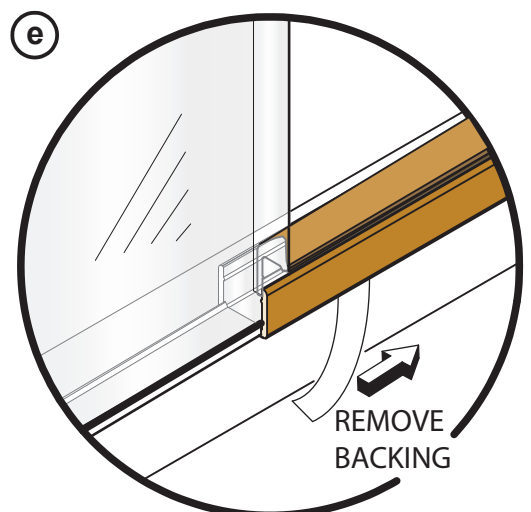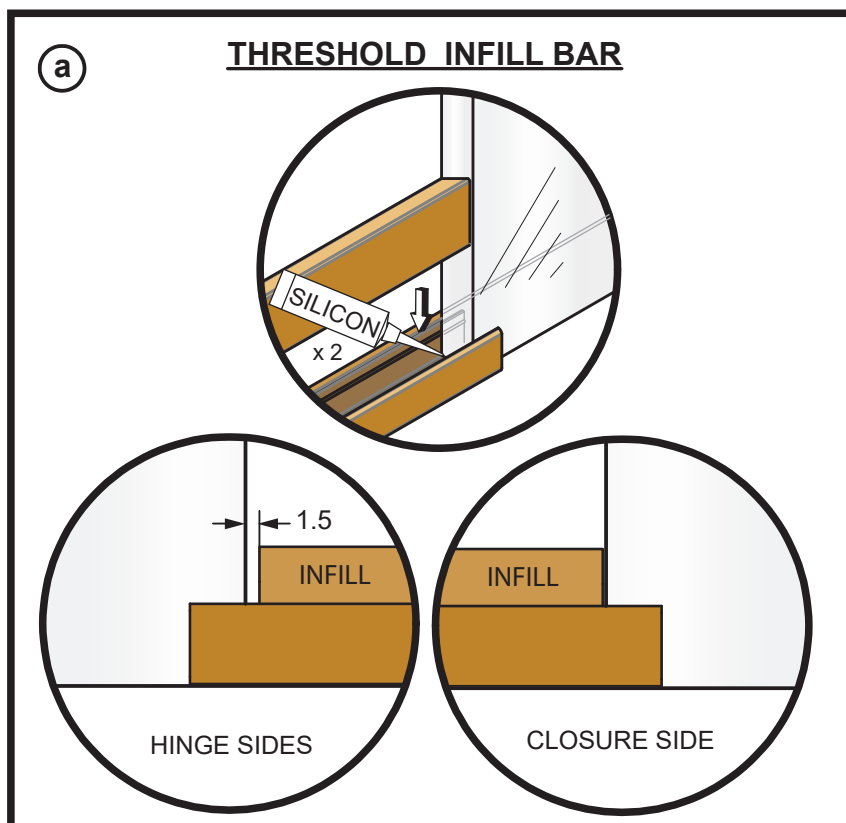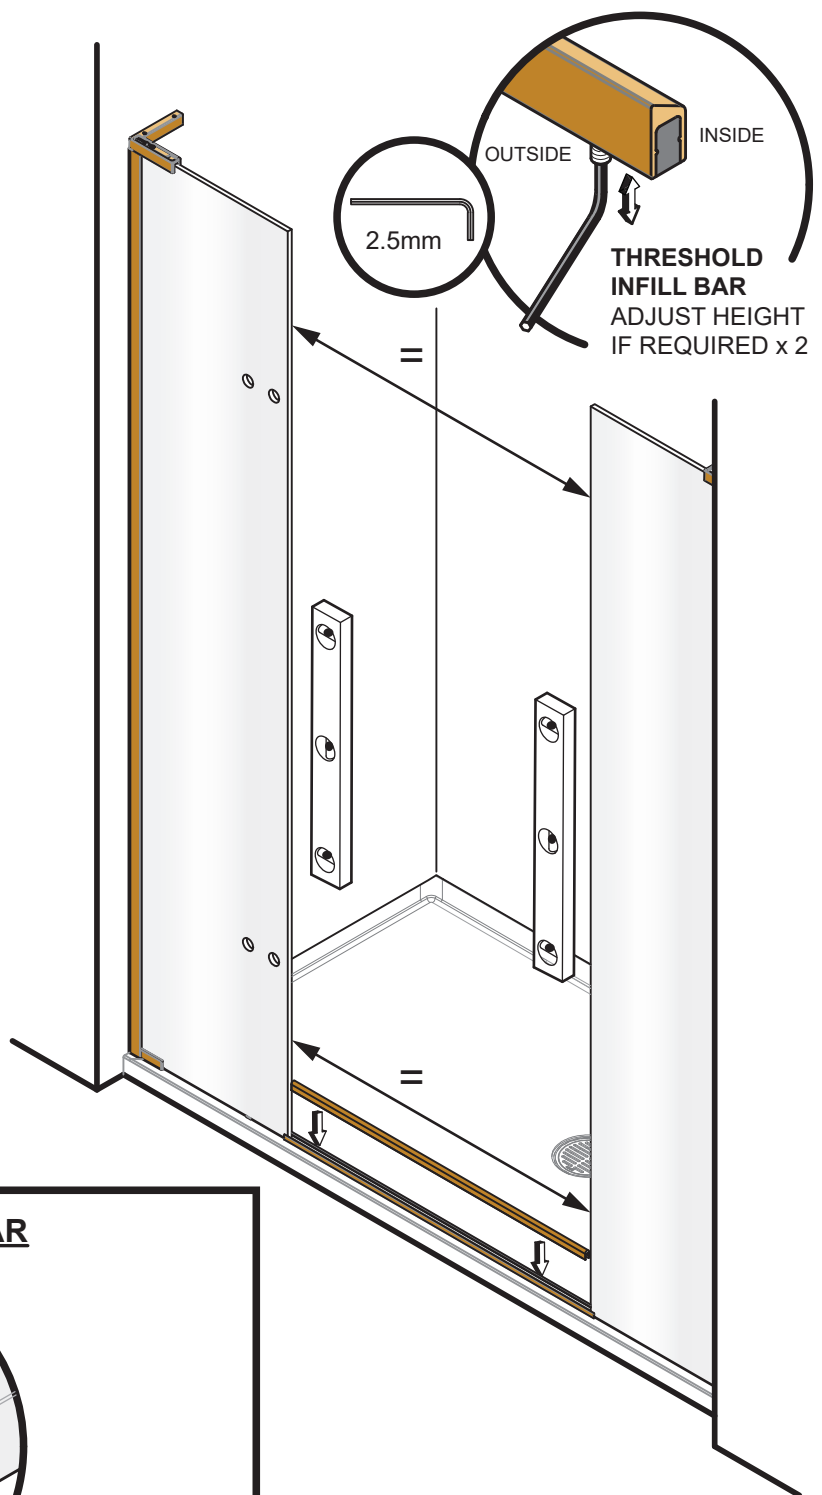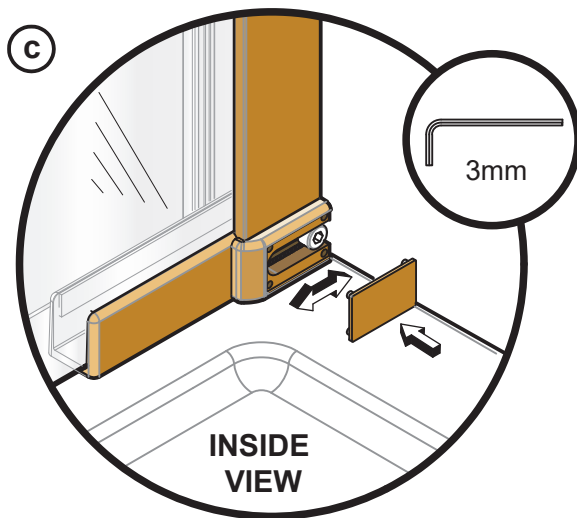
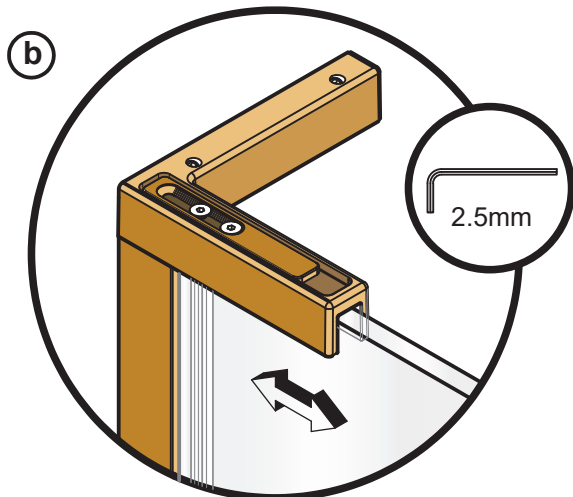


STAGE 5

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND

LH HINGE PANEL ADJUSTMENT BLOCK POSITION

RH HINGE PANEL ADJUSTMENT BLOCK POSITION

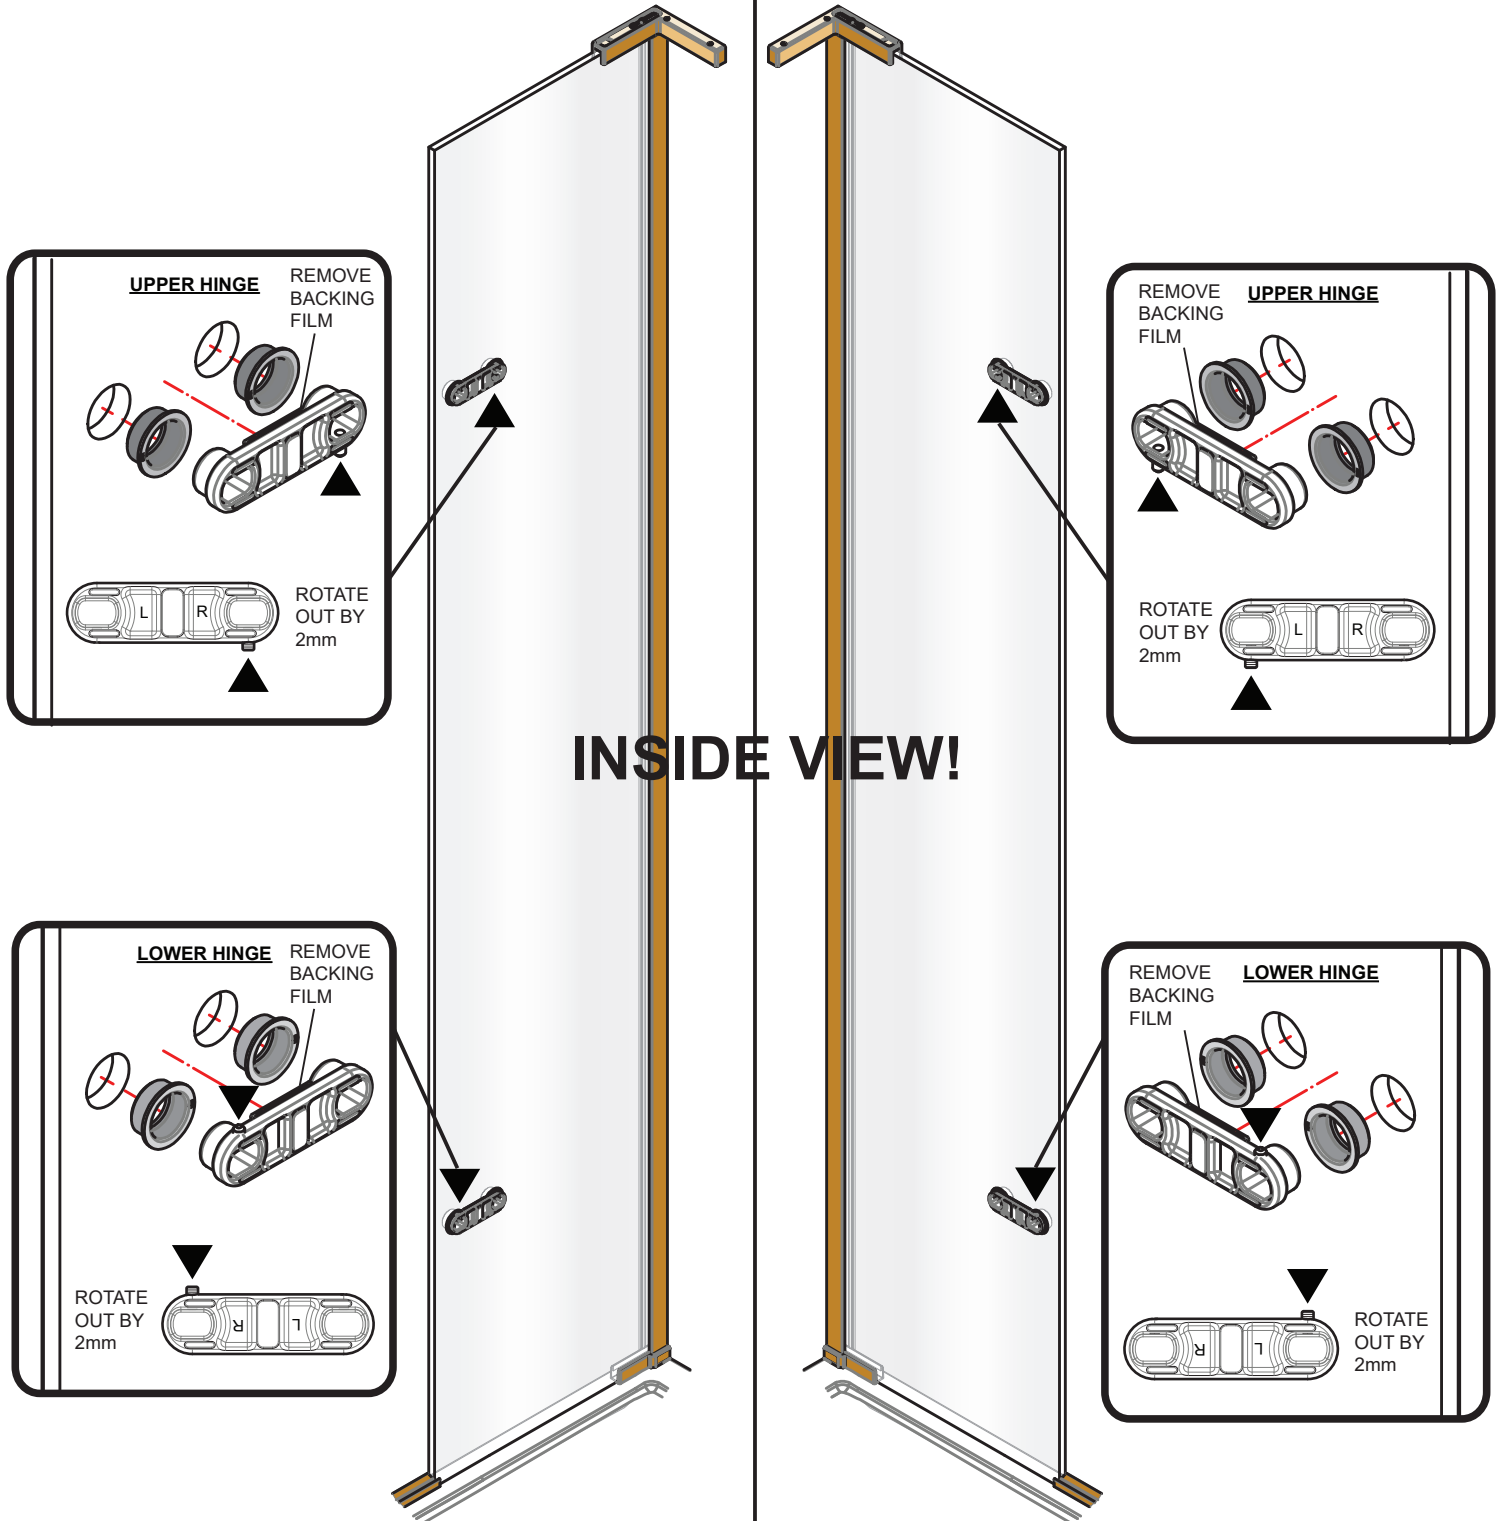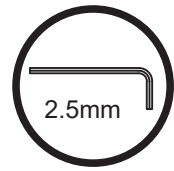


STAGE 6


IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH MOVING PANEL ADJUSTMENT BLOCK POSITION


RH MOVING PANEL ADJUSTMENT BLOCK POSITION

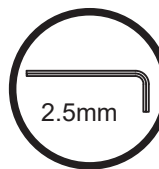

UPPER HINGE

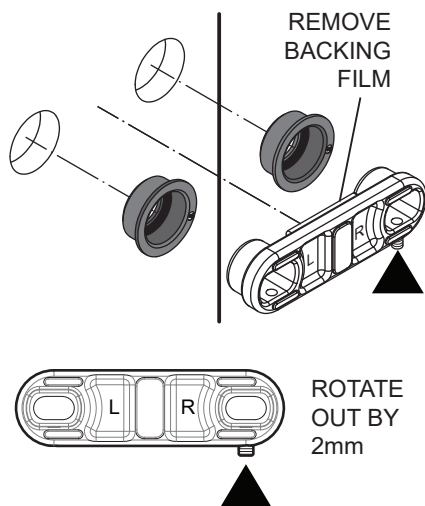

UPPER HINGE

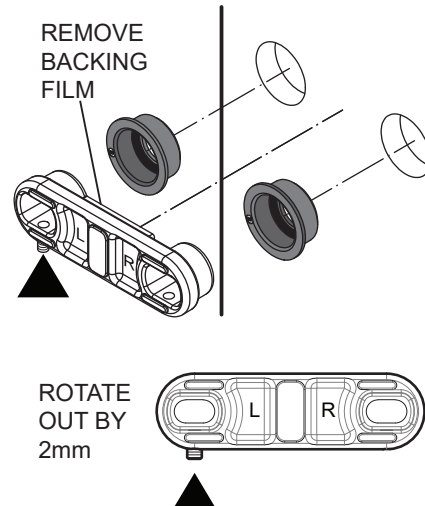


INSIDE VIEW!


LH DOOR (OUTER SIDE)

RH DOOR (OUTER SIDE)

LOWER HINGE

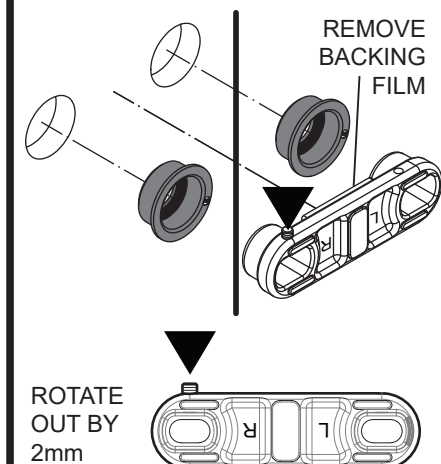


LOWER HINGE

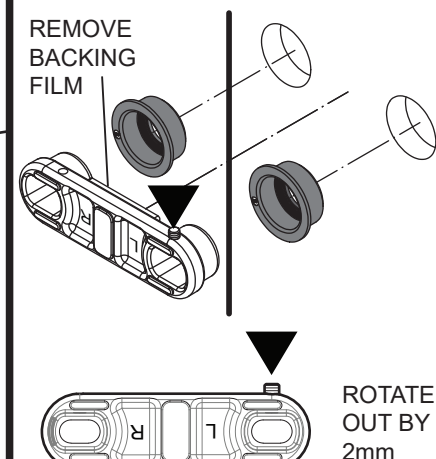

STAGE 7

a

x 2



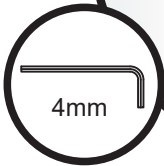


b







x 2

c

2.5mm

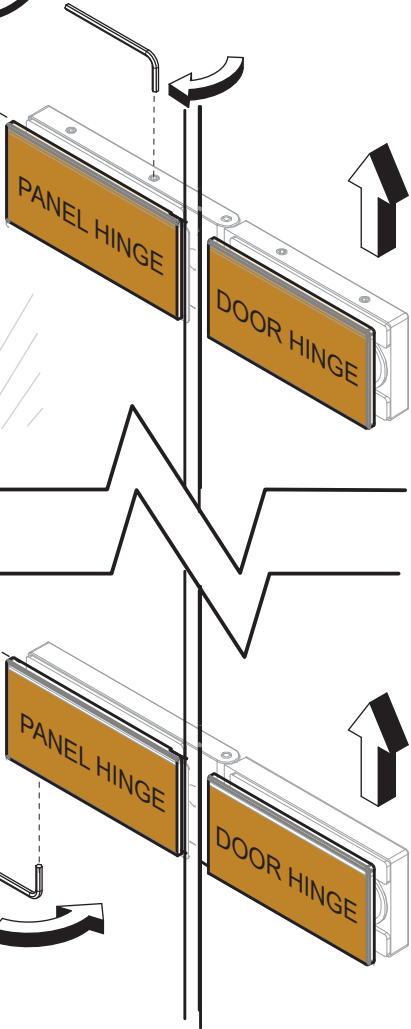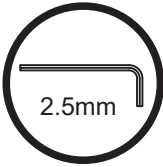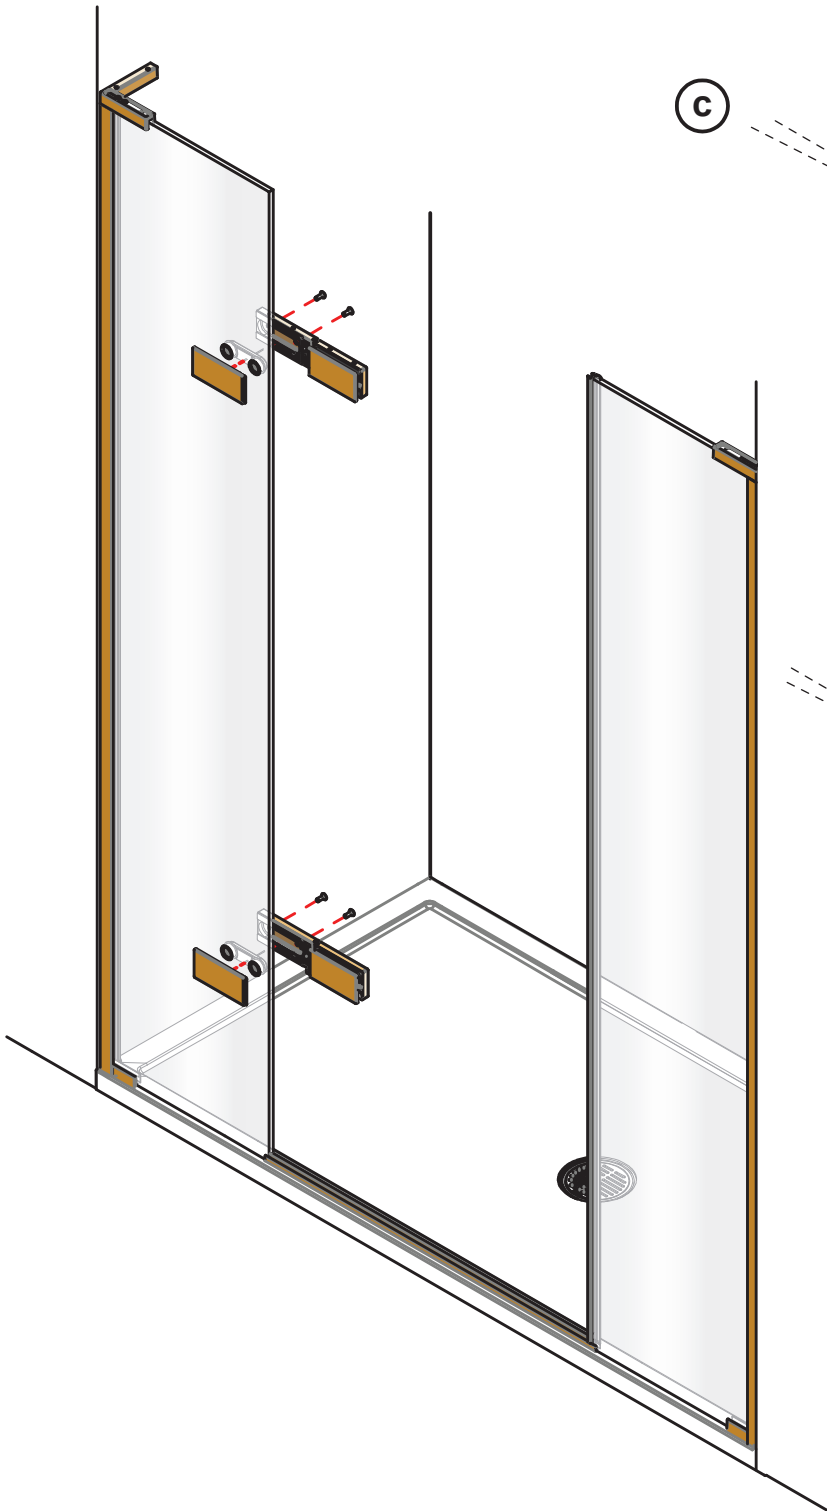

STAGE 8

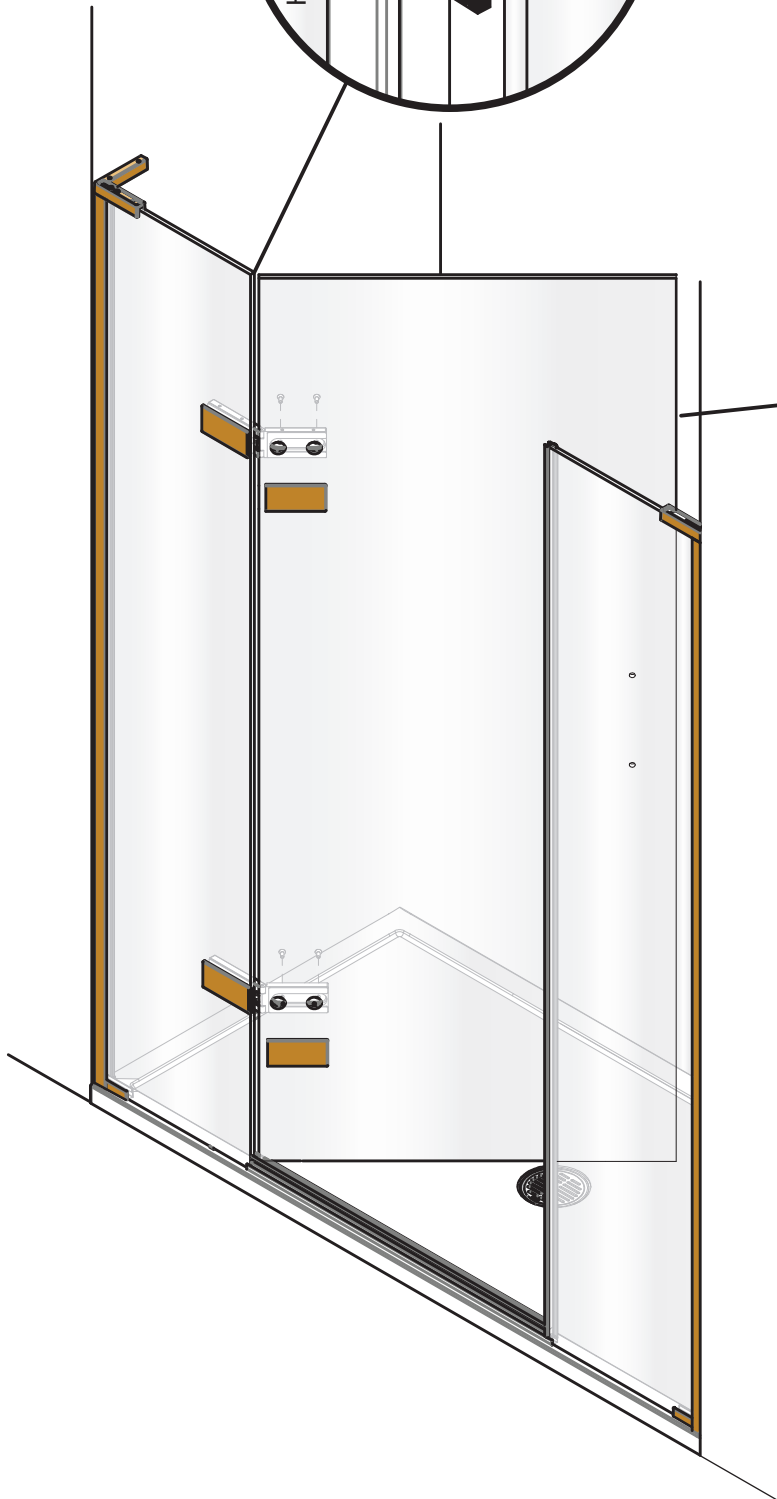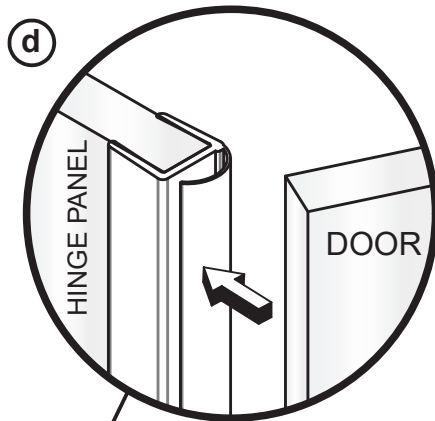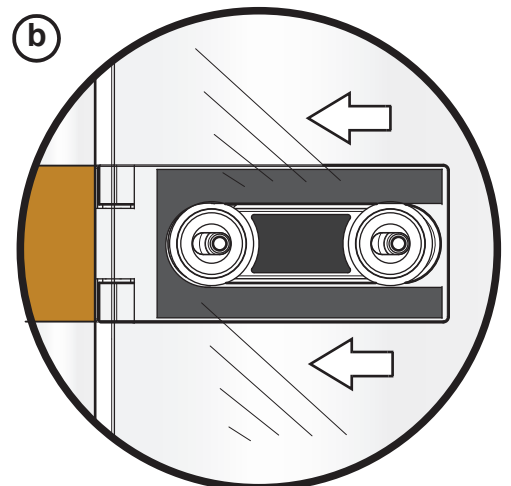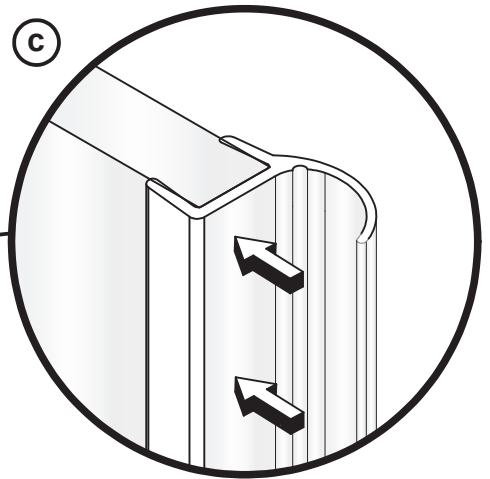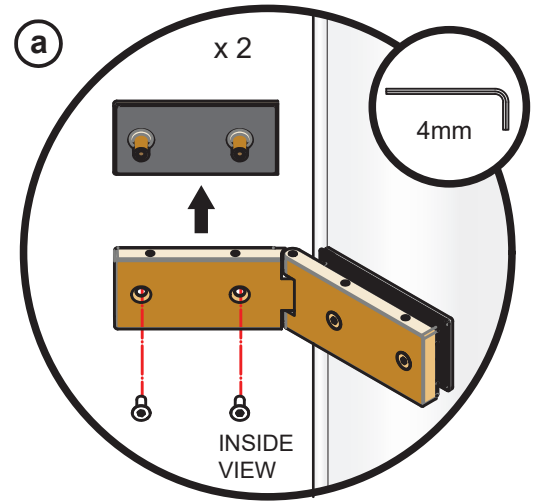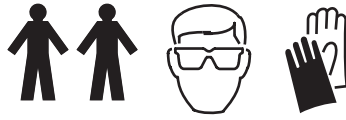


STAGE 9

HANDLE VARIANTS

ILLUSTRIOUS


9808*

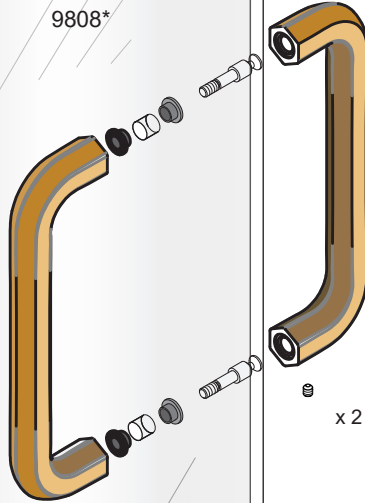

x 2

LINEAR


6185*

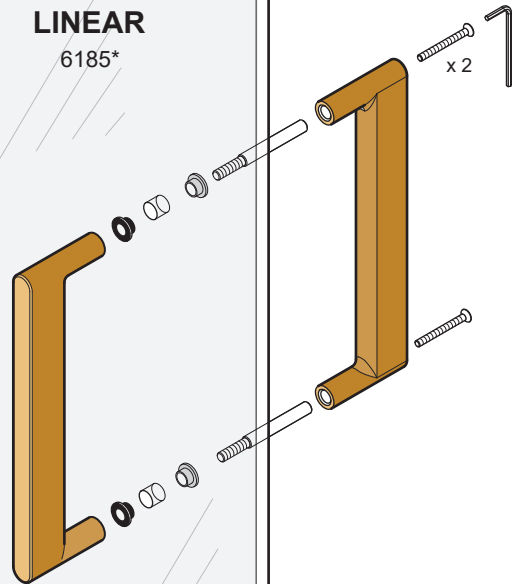

x 2

TRADITIONAL


8632*

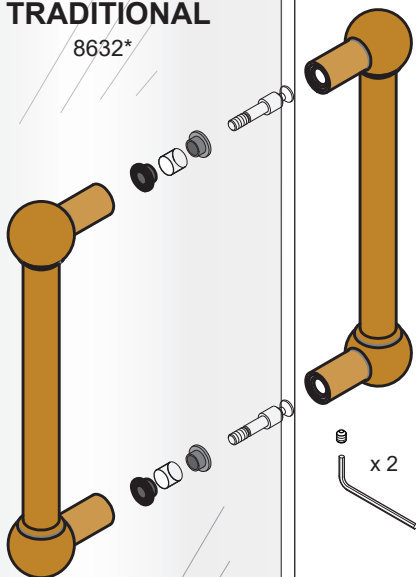

x 2

ENGINEER


9809ASSY*

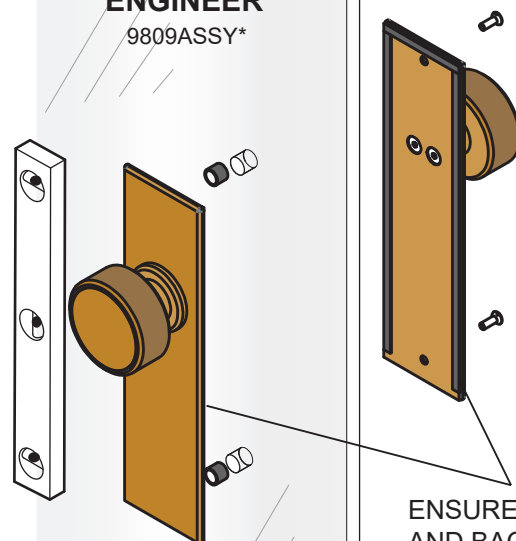



ENSURE FRONT
AND BACK PLATES
ARE ALIGNED
BEFORE REMOVING
BACKING FILM

STAGE 10


(a)

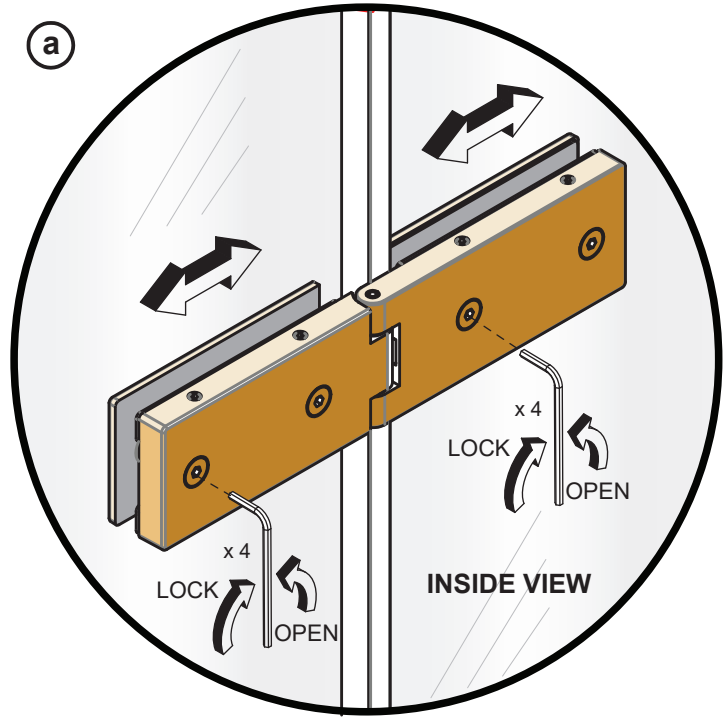





(b)

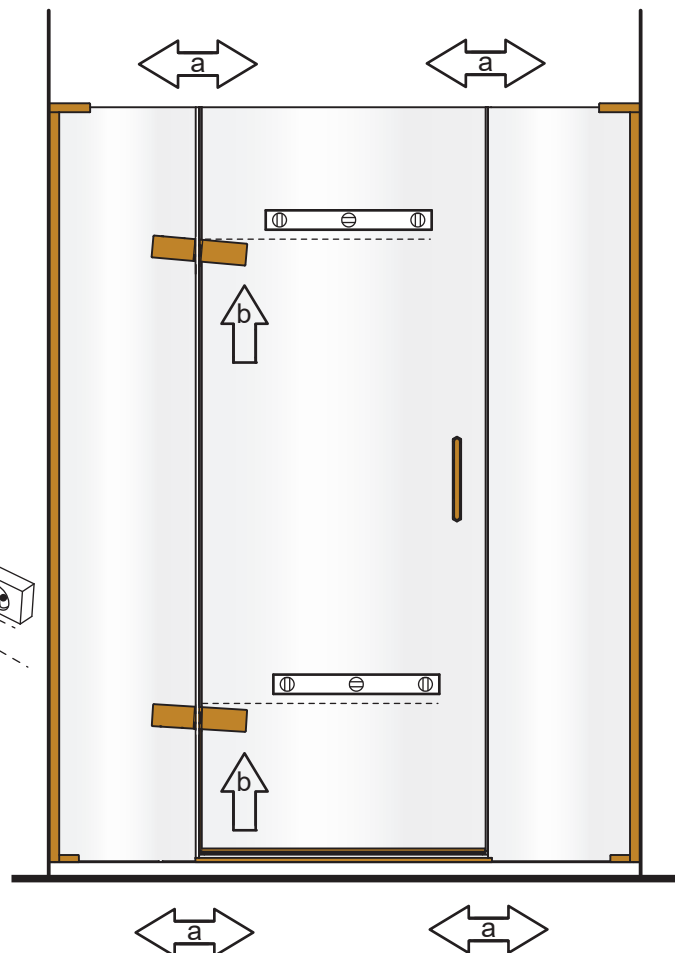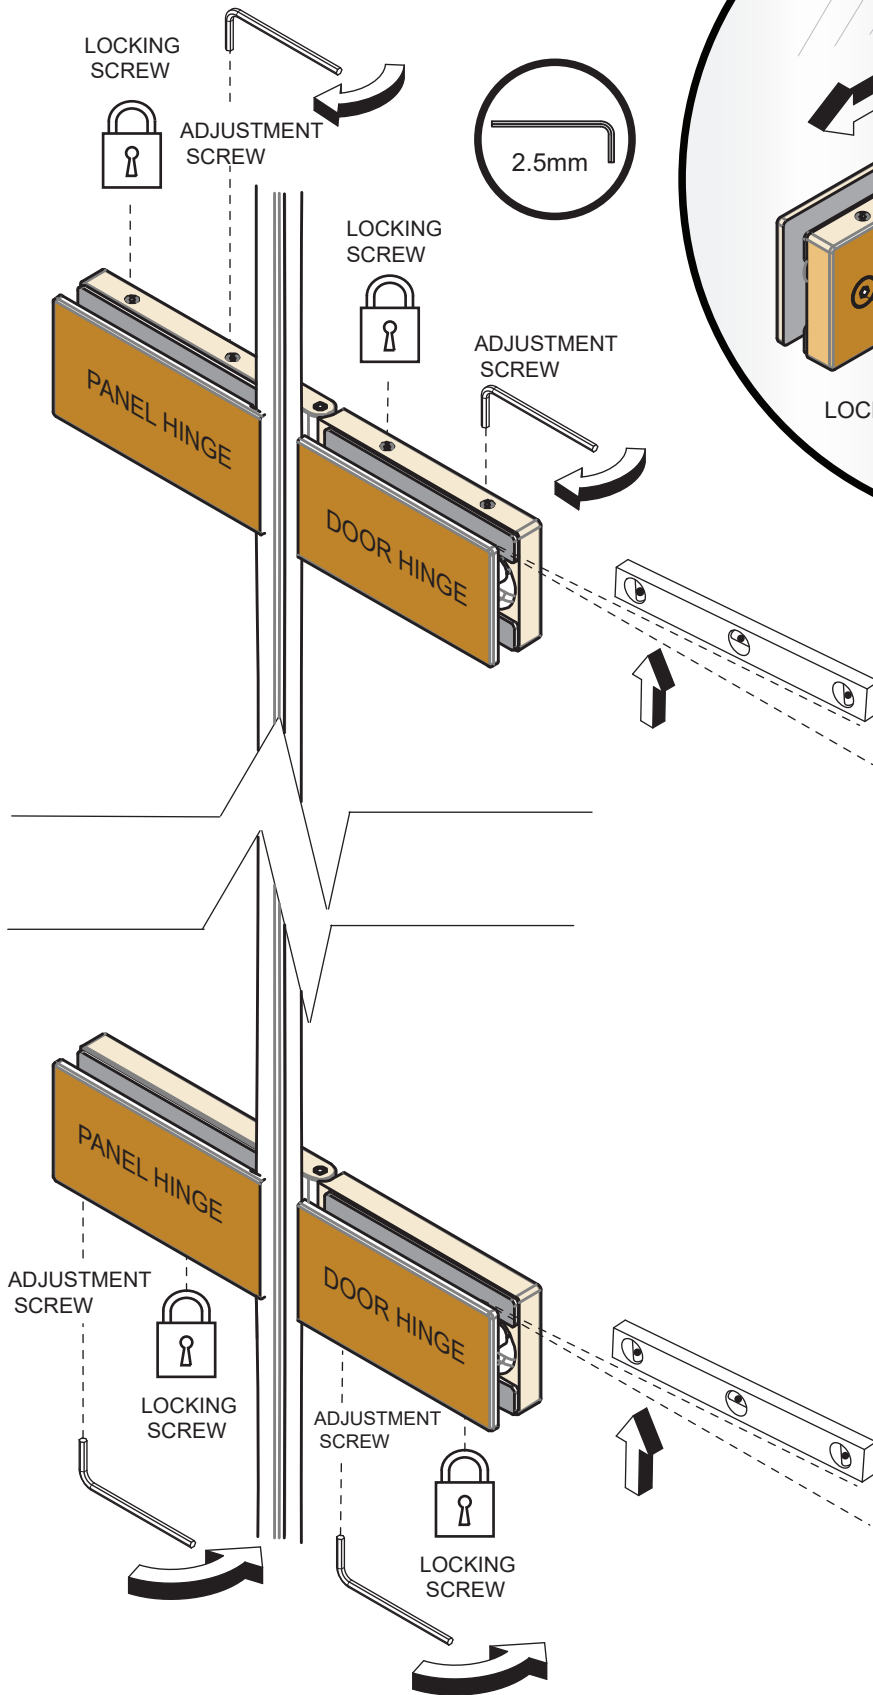


STAGE 11

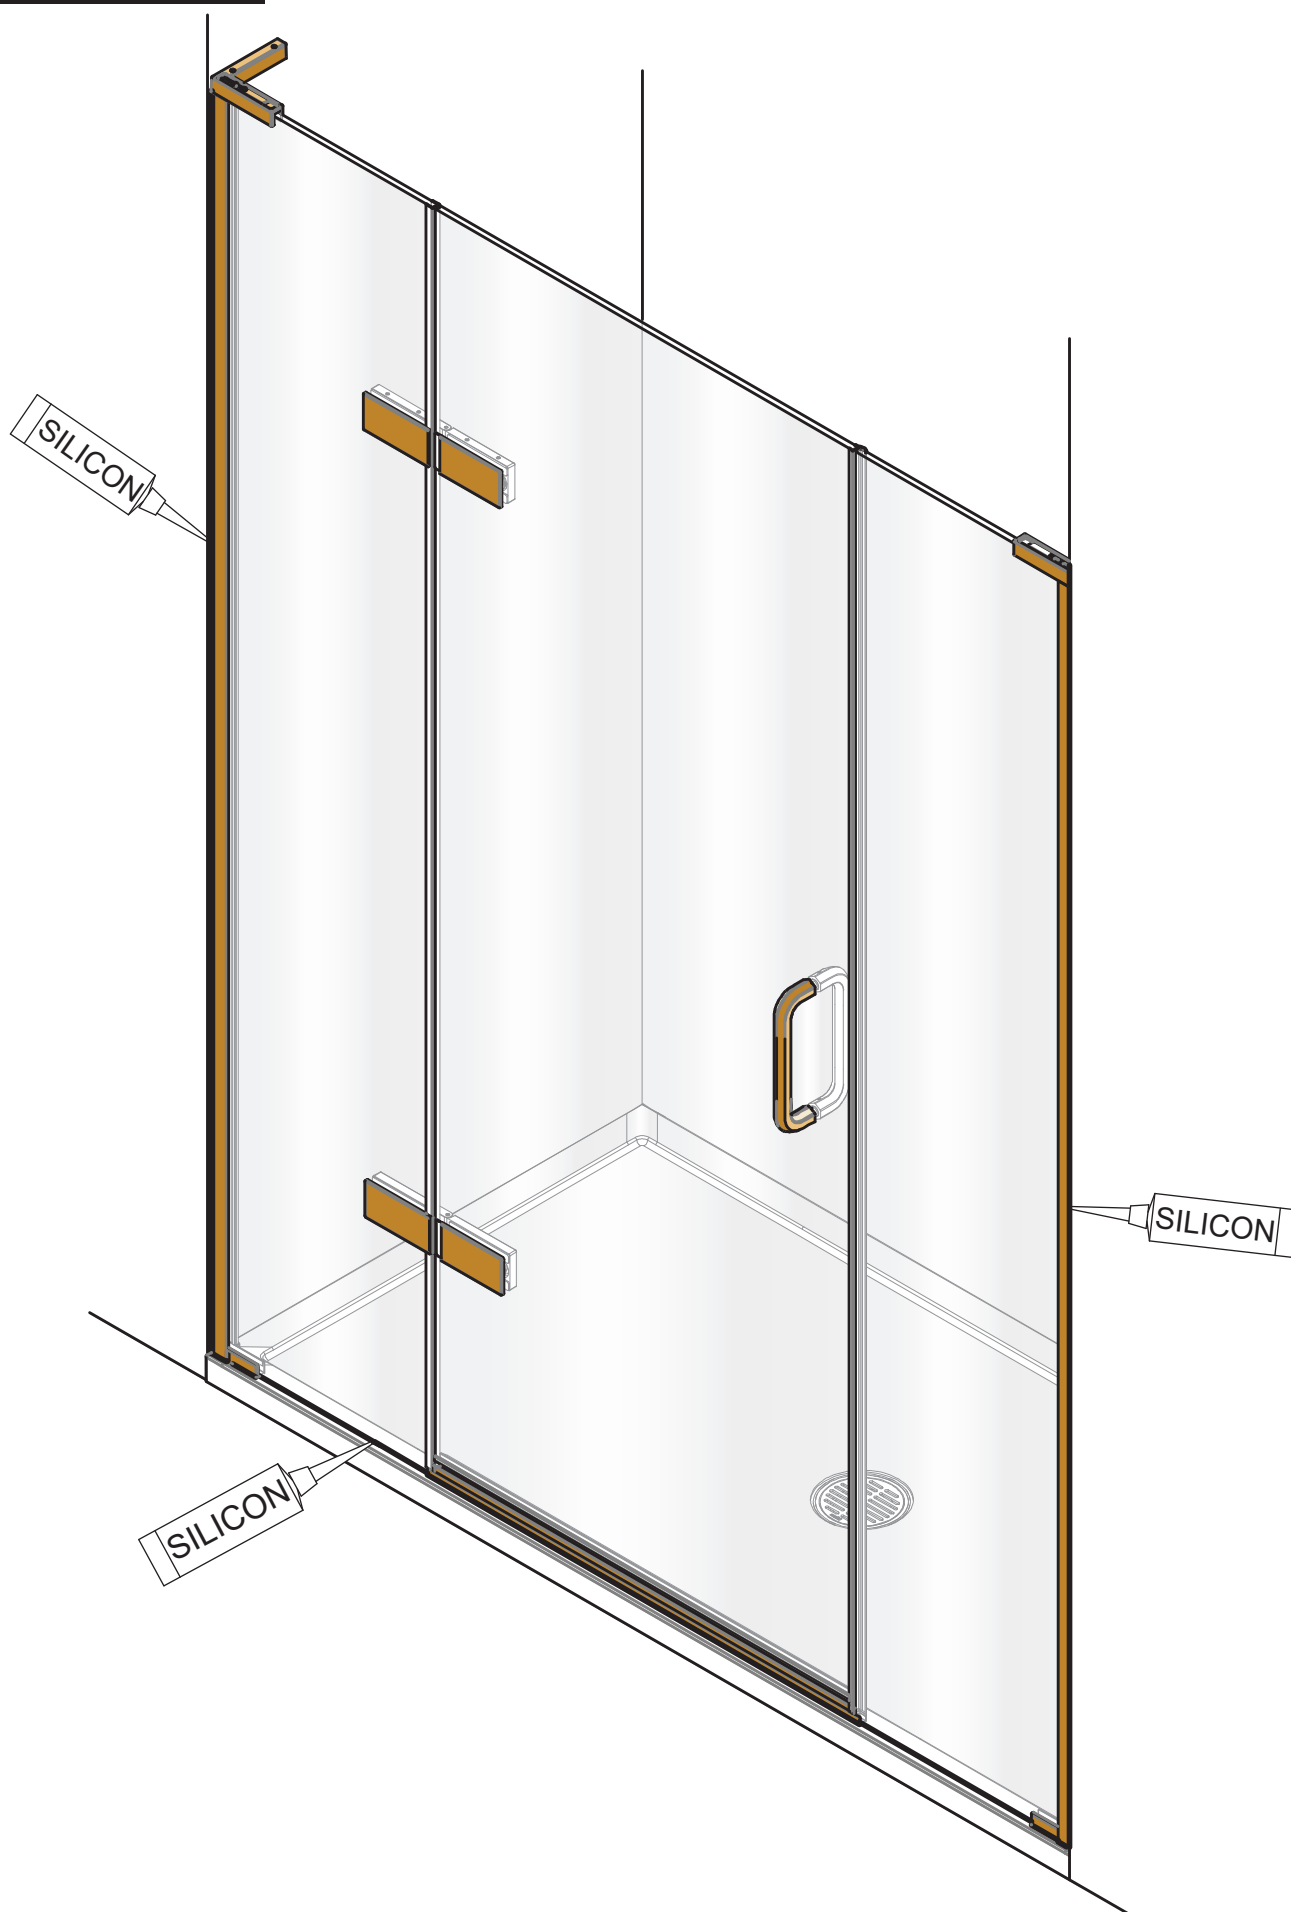

STAGE 11 - CONT

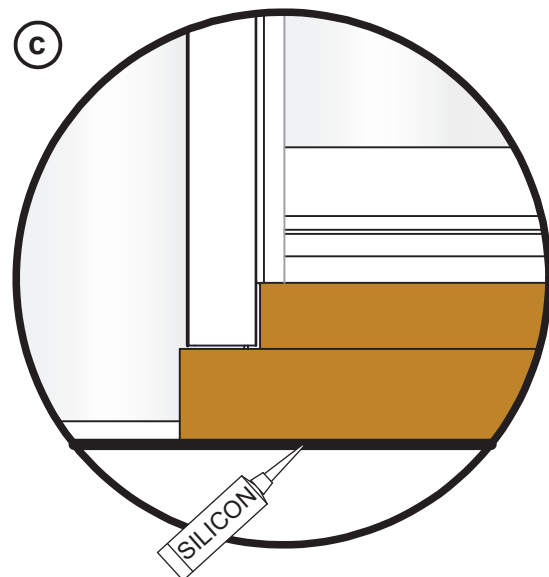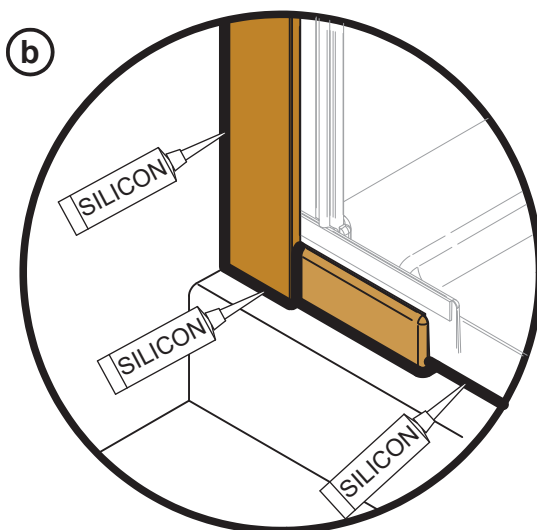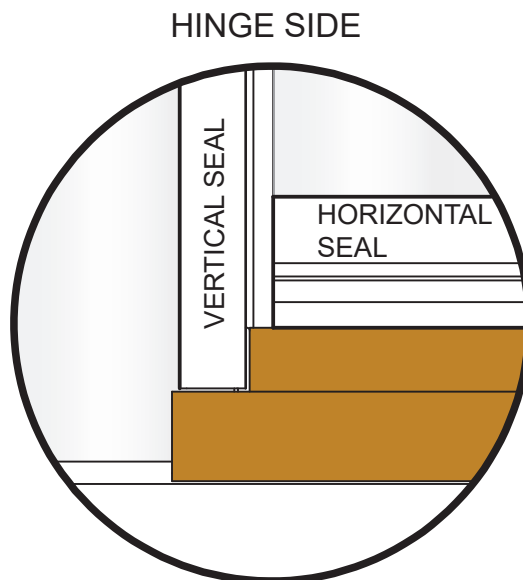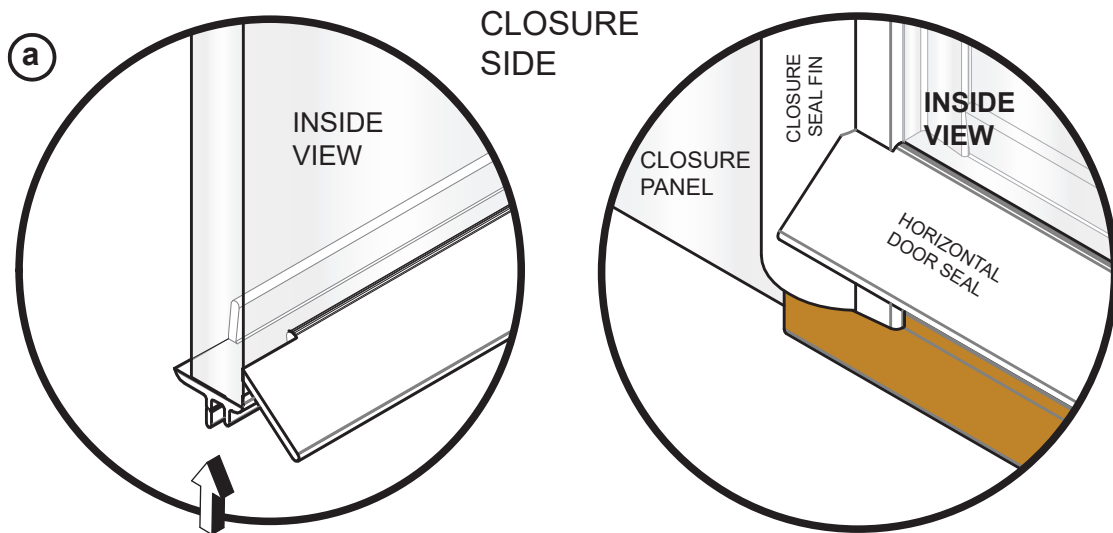

PARTS LIST

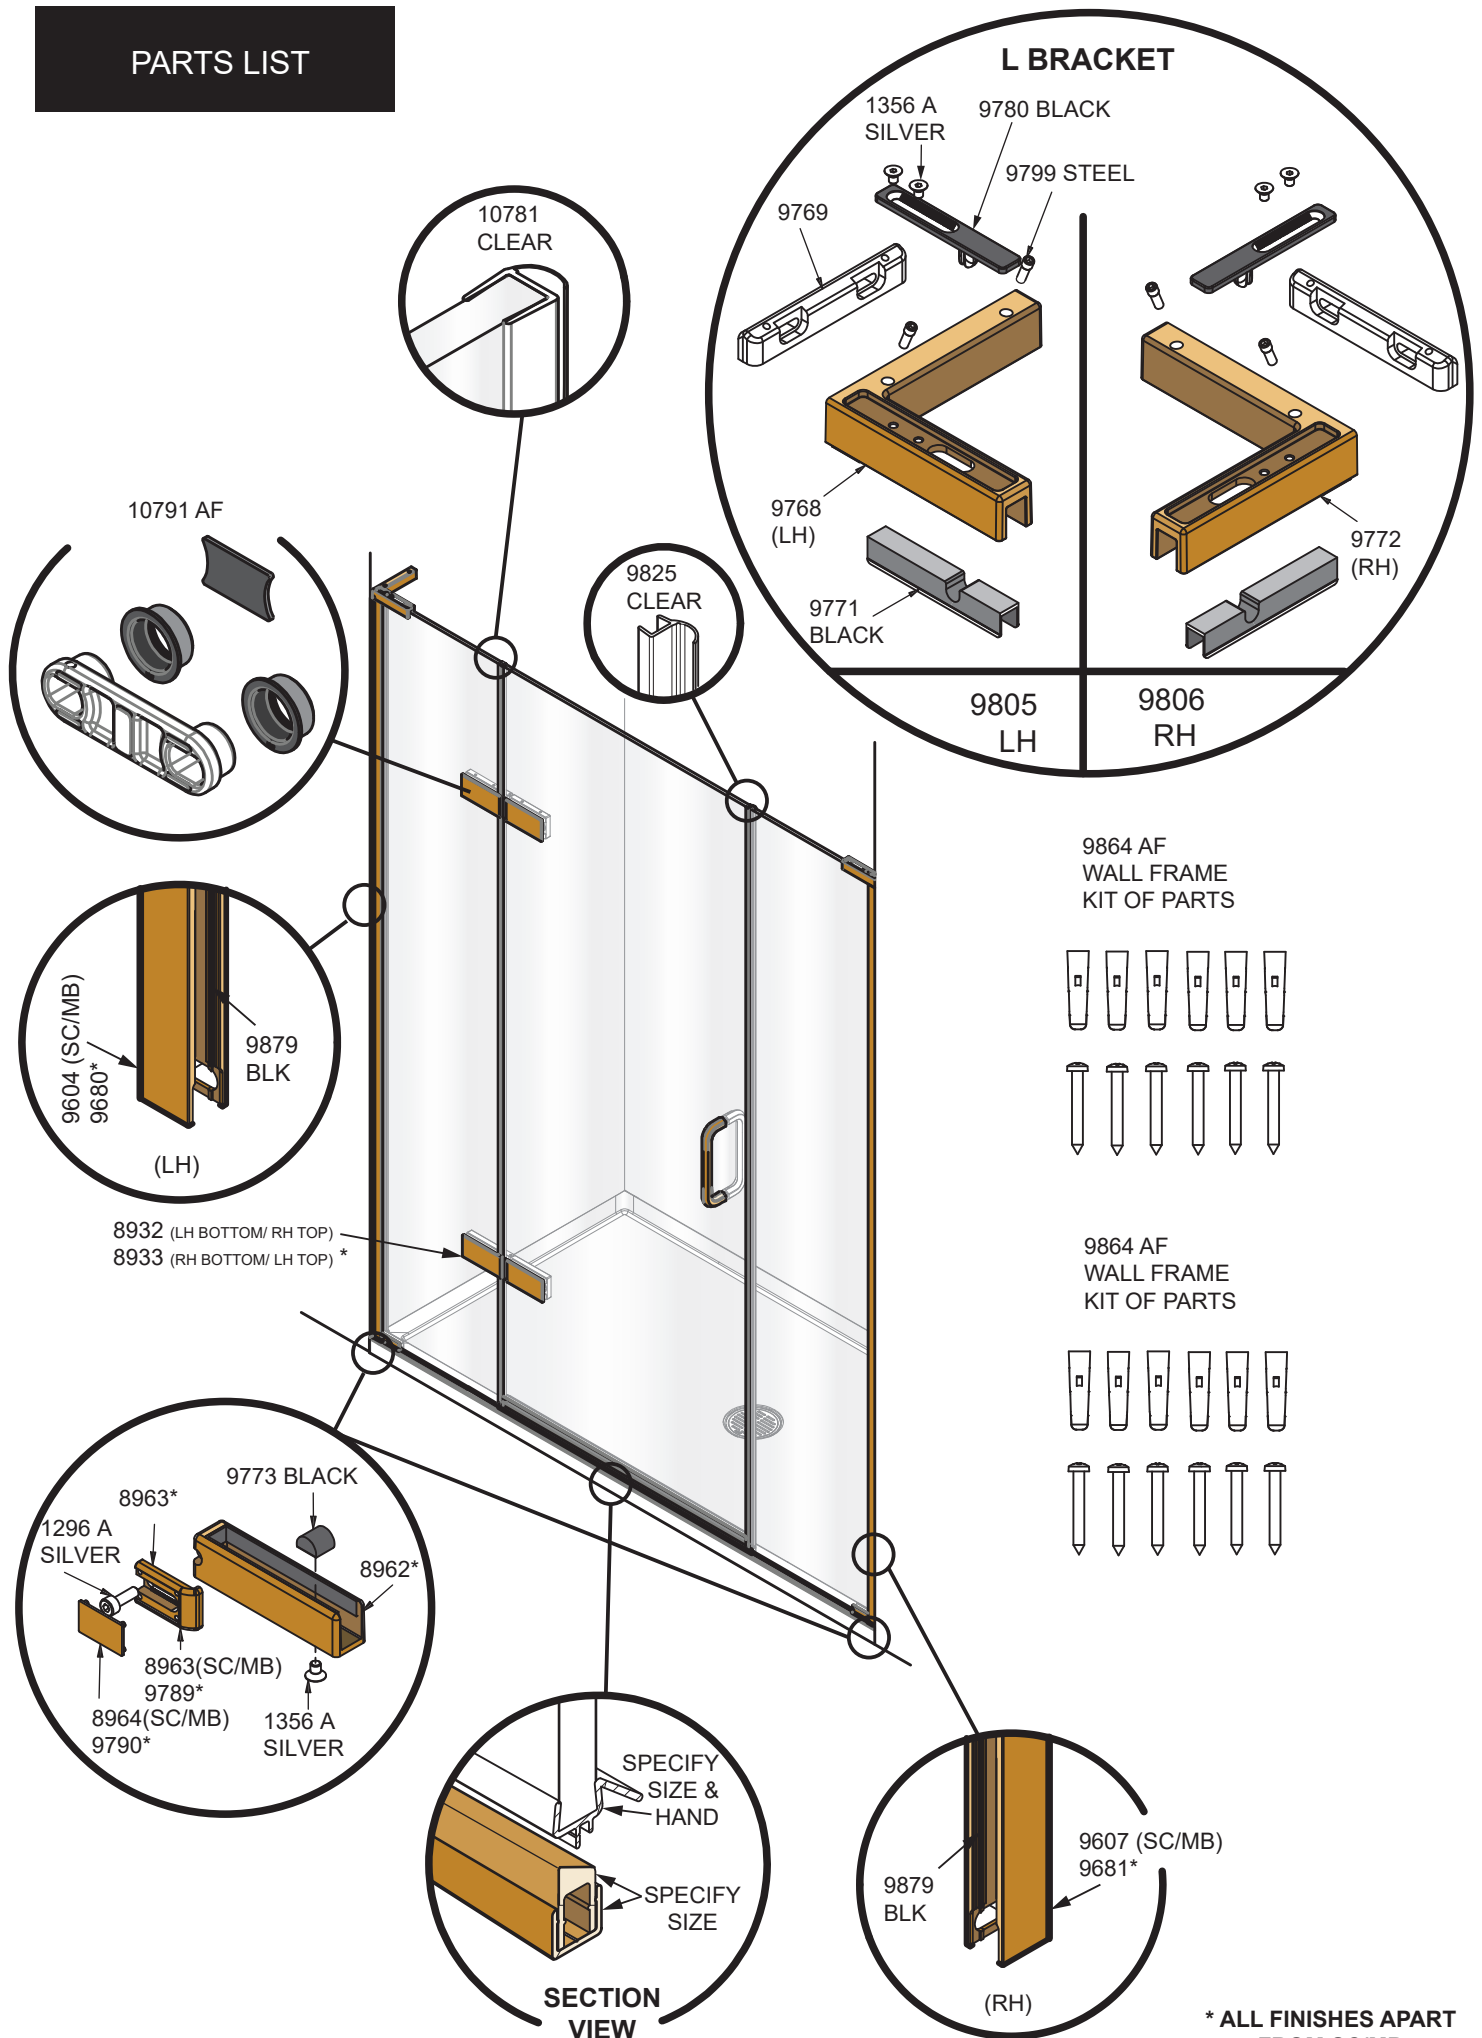

* ALL FINISHES APART
FROM SC/MB