


matki

EAUZONE

EPIC - INWARD OPENING HINGED DOOR WITH HINGE PANEL AND INLINE PANEL FOR CORNER

BRITISH PATENT NO:2470778

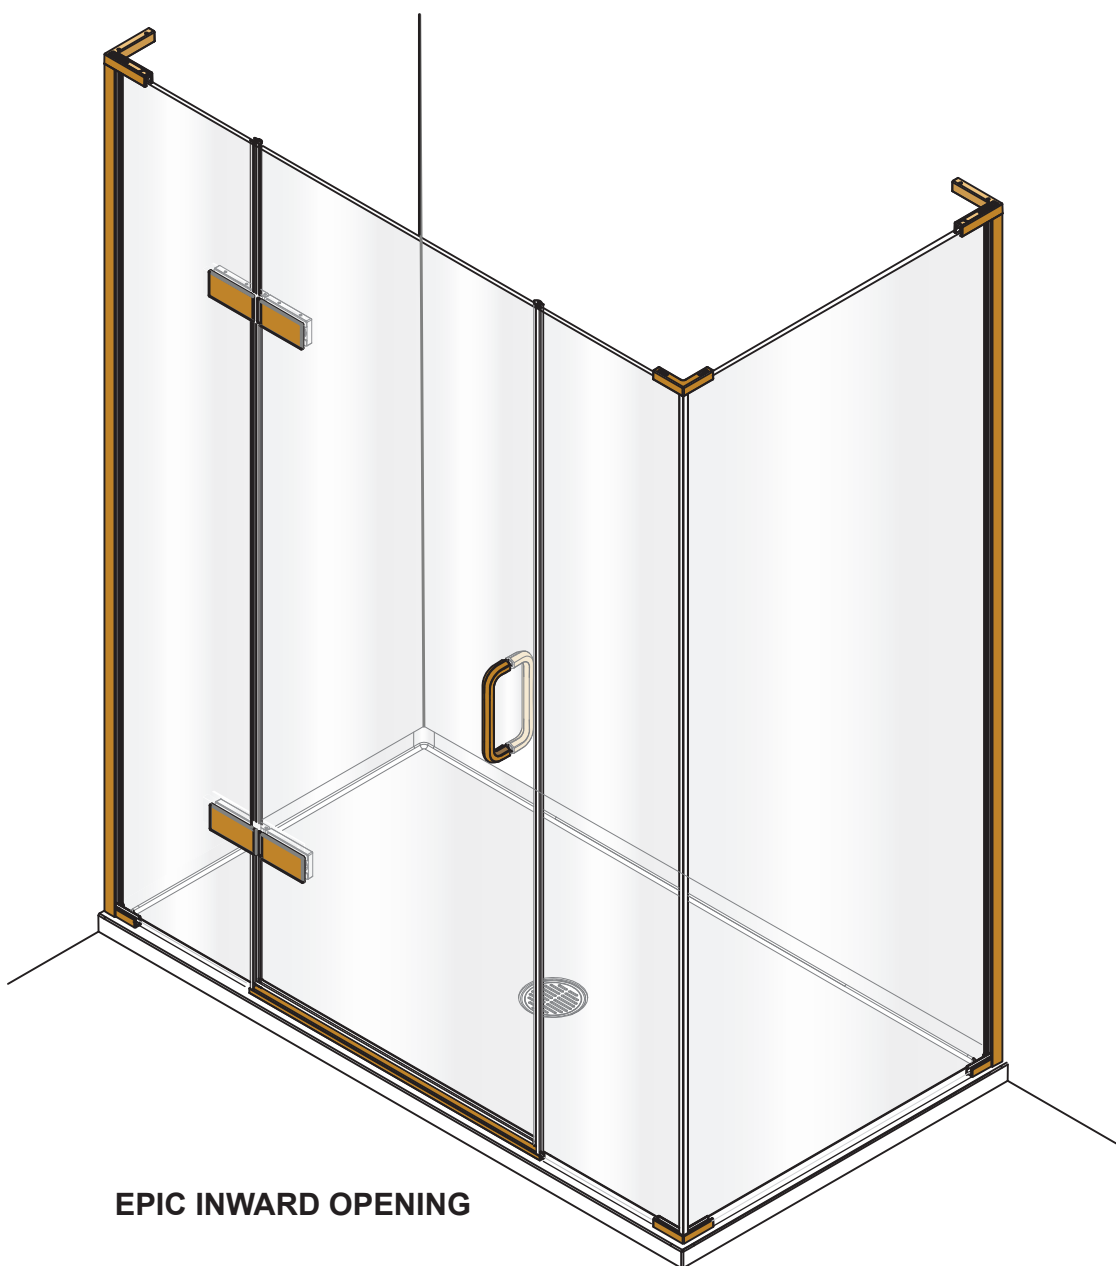

EPIC INWARD OPENING

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA



matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

9920 AF 03/25

Matki recommend that this product is fitted by professional installers

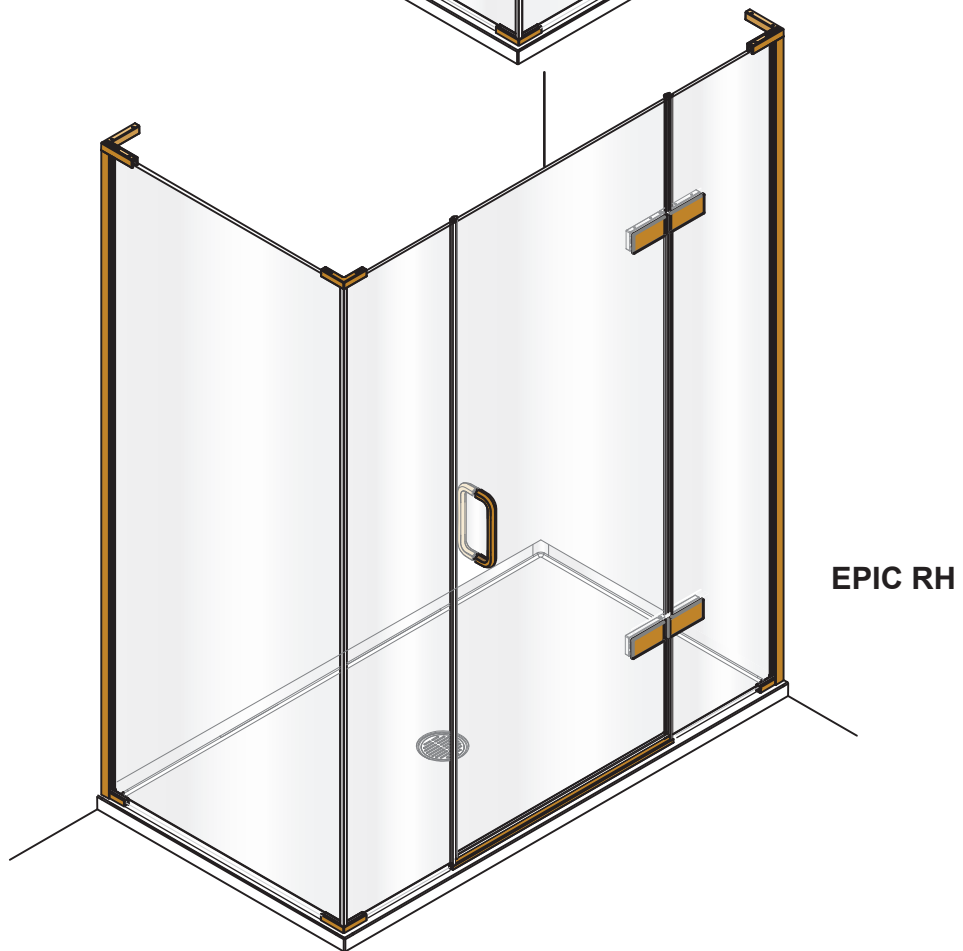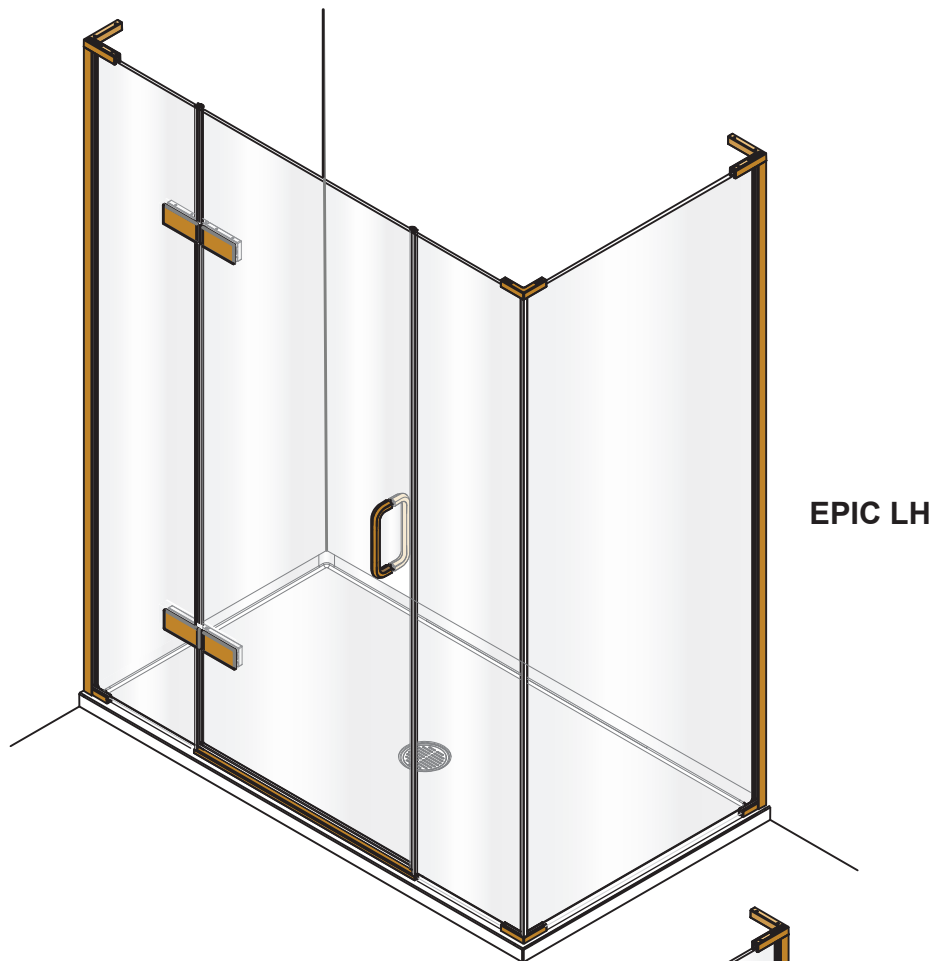

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED DOOR INSTALLATION, REVERSE FOR RH.

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door and Side panel, Stage 7 - 8. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

CORNER DOOR	TOTAL WIDTH (mm) A + B + C	DOOR A	HINGE PANEL B	INLINE PANEL C
EPIC1000	969 - 984	600	200	200
EPIC1050	1019 - 1034	600	250	200
EPIC1100	1069 - 1084	700	200	200
EPIC1150	1119 - 1134	700	250	200
EPIC1200	1169 - 1184	800	200	200
EPIC1250	1219 - 1234	800	250	200
EPIC1300	1269 - 1284	700	200	400
EPIC1350	1319 - 1334	800	300	250
EPIC1400	1369 - 1384	800	200	400
EPIC1450	1419 - 1434	800	300	350
EPIC1500	1469 - 1484	700	400	400
EPIC1550	1519 - 1534	800	350	400
EPIC1600	1569 - 1584	800	400	400
EPIC1650	1619 - 1634	800	400	450
EPIC1700	1669 - 1684	800	450	450
EPIC1750	1719 - 1734	800	500	450
EPIC1800	1769 - 1784	800	500	500
EPIC1850	1819 - 1834	800	500	550
EPIC1900	1869 - 1884	800	500	600

SIDE PANEL	D
EPIC760SP	725 - 740
EPIC800SP	765 - 780
EPIC900SP	865 - 880
EPIC1000SP	965 - 980



Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width e.g. See below other combinations for Model 1200 all have same total width.

	A + B + C	A	B	C
EPIC1200	1169 - 1184	800	200	200
EPIC1200	1169 - 1184	600	400	200

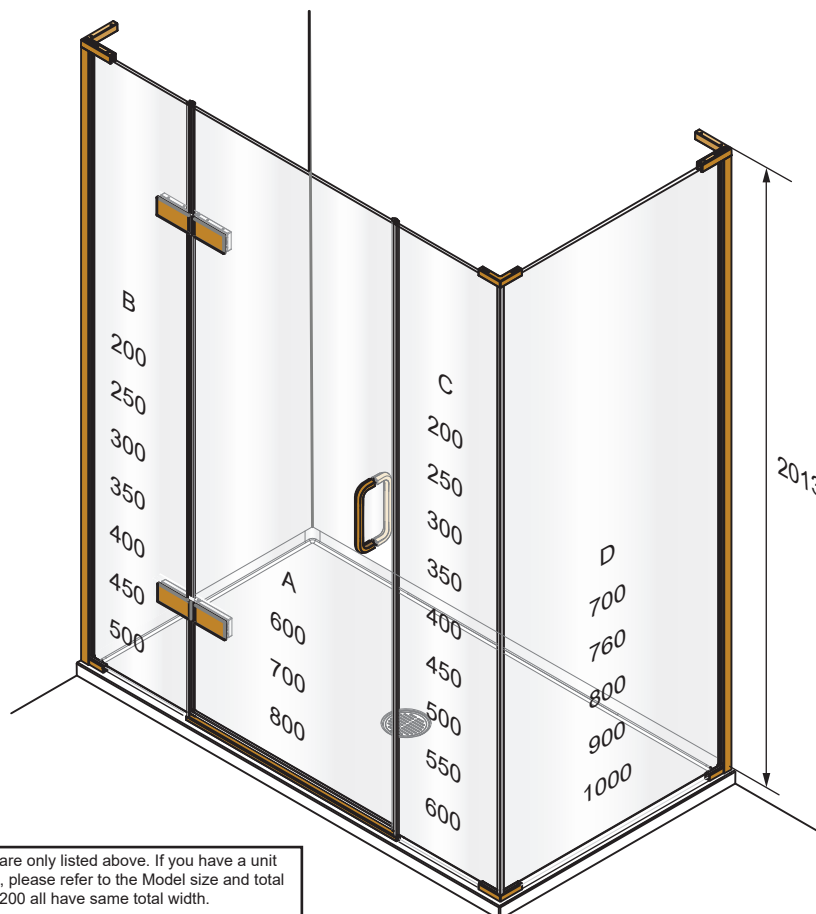


Dimensions are approximate

SETTING OUT



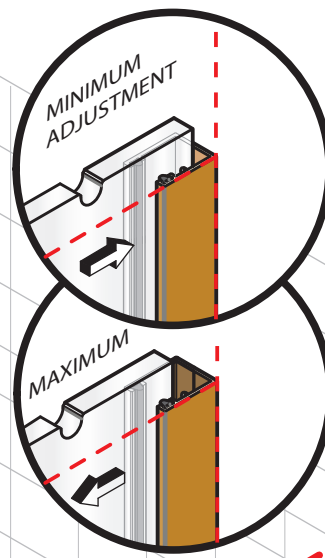
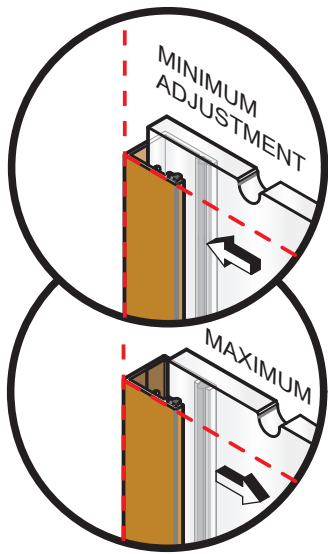


CORNER DOOR	TOTAL WIDTH (mm) A + B + C
EPIC1000	969 - 984
EPIC1050	1019 - 1034
EPIC1100	1069 - 1084
EPIC1150	1119 - 1134
EPIC1200	1169 - 1184
EPIC1250	1219 - 1234
EPIC1300	1269 - 1284
EPIC1350	1319 - 1334
EPIC1400	1369 - 1384
EPIC1450	1419 - 1434
EPIC1500	1469 - 1484
EPIC1550	1519 - 1534
EPIC1600	1569 - 1584
EPIC1650	1619 - 1634
EPIC1700	1669 - 1684
EPIC1750	1719 - 1734
EPIC1800	1769 - 1784
EPIC1850	1819 - 1834
EPIC1900	1869 - 1884
SIDE PANEL	D
EPIC760SP	725 - 740
EPIC800SP	765 - 780
EPIC900SP	865 - 880
EPIC1000SP	965 - 980

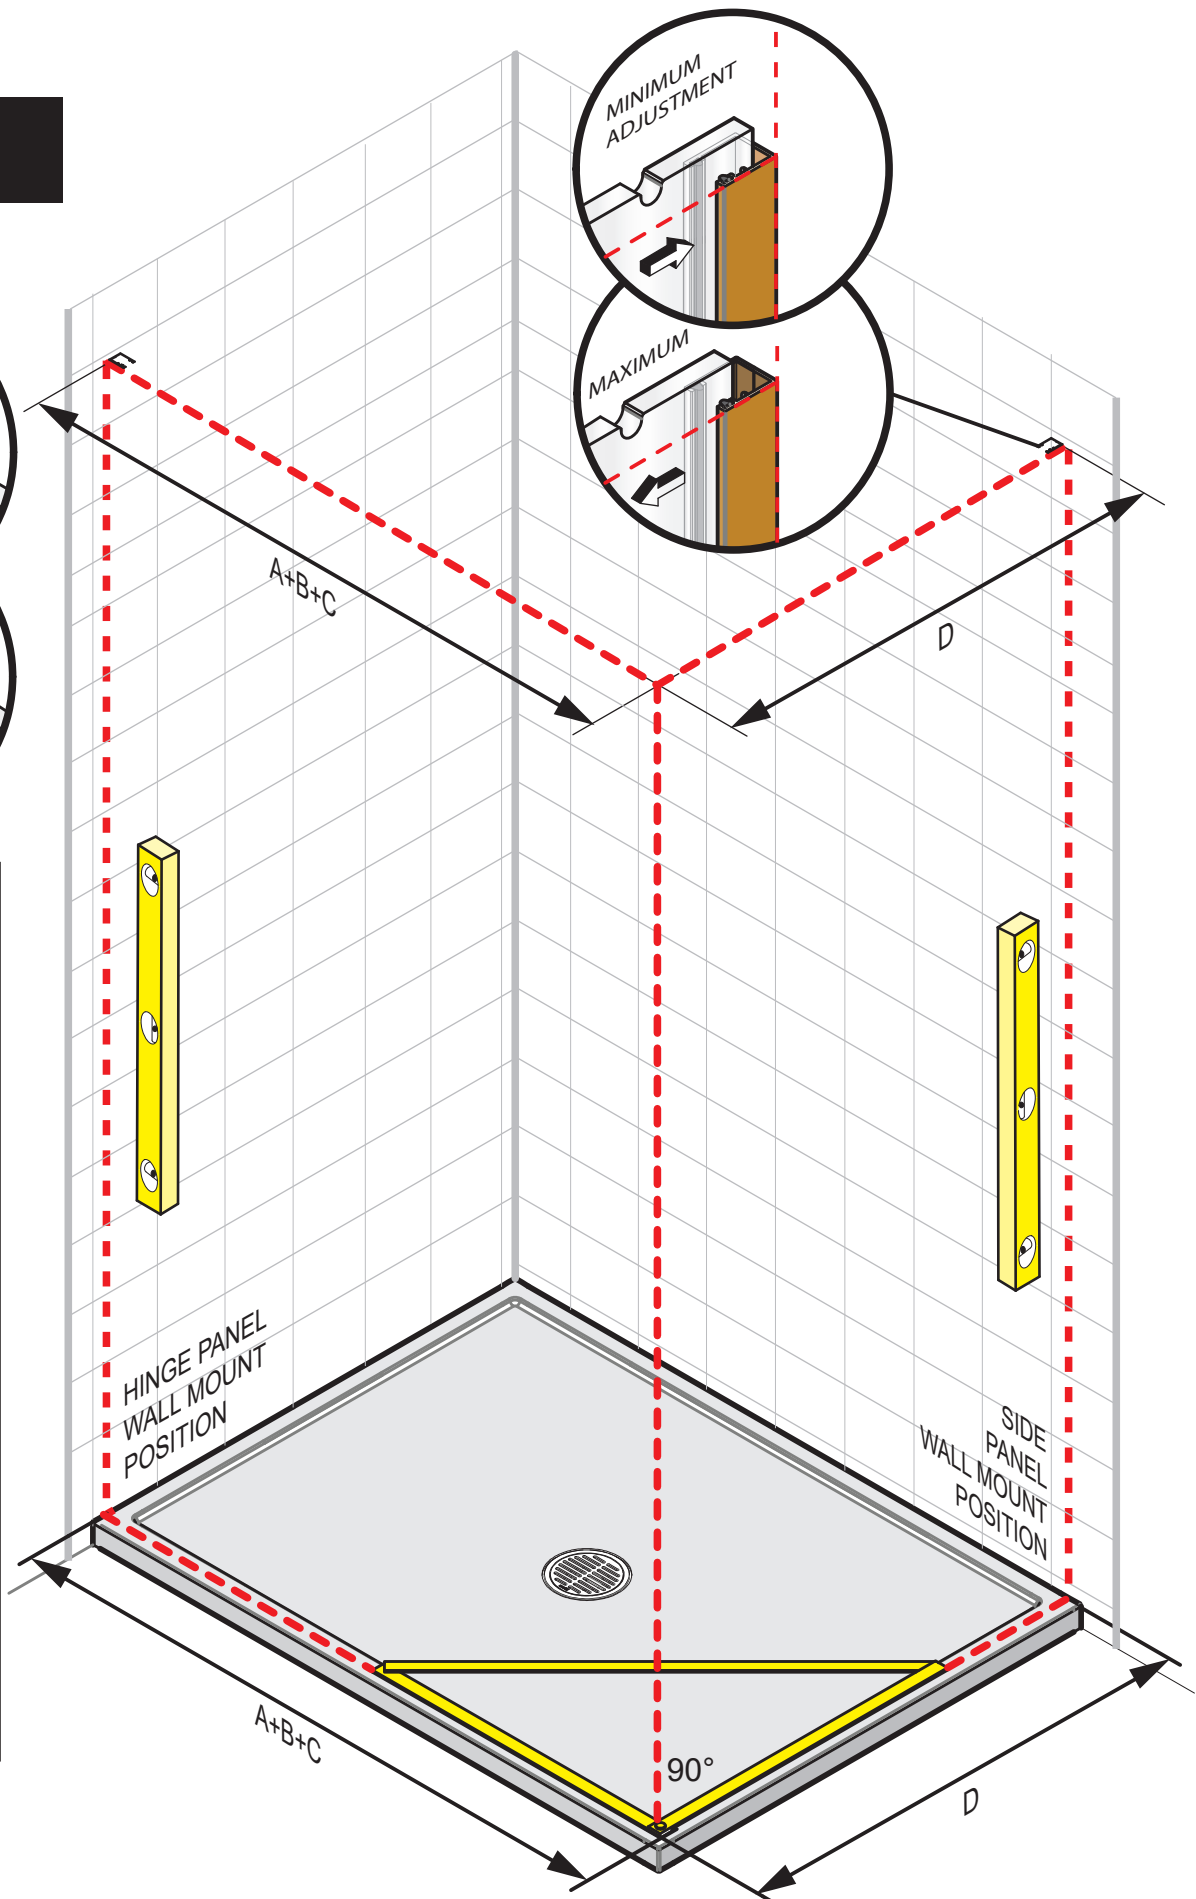


Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1





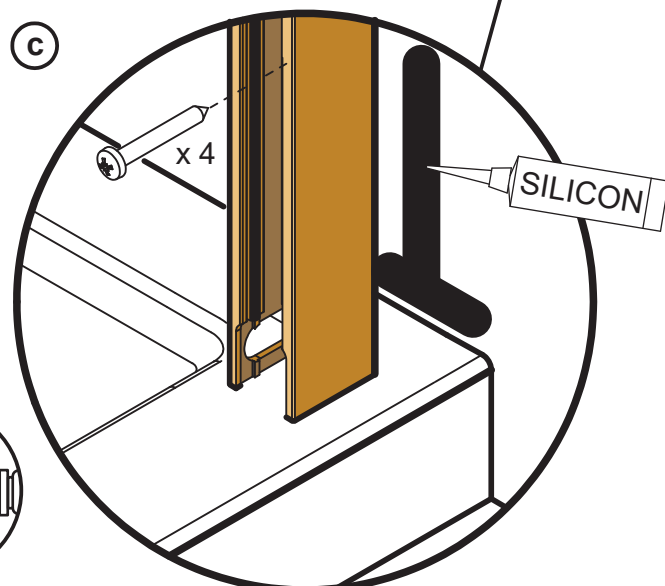
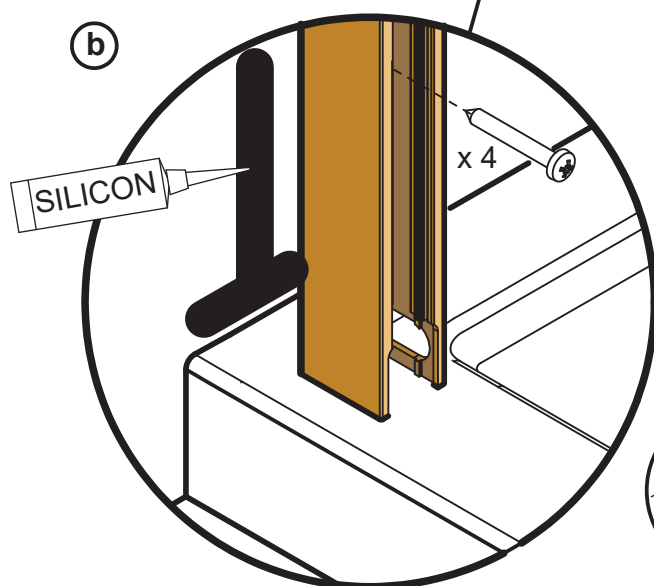
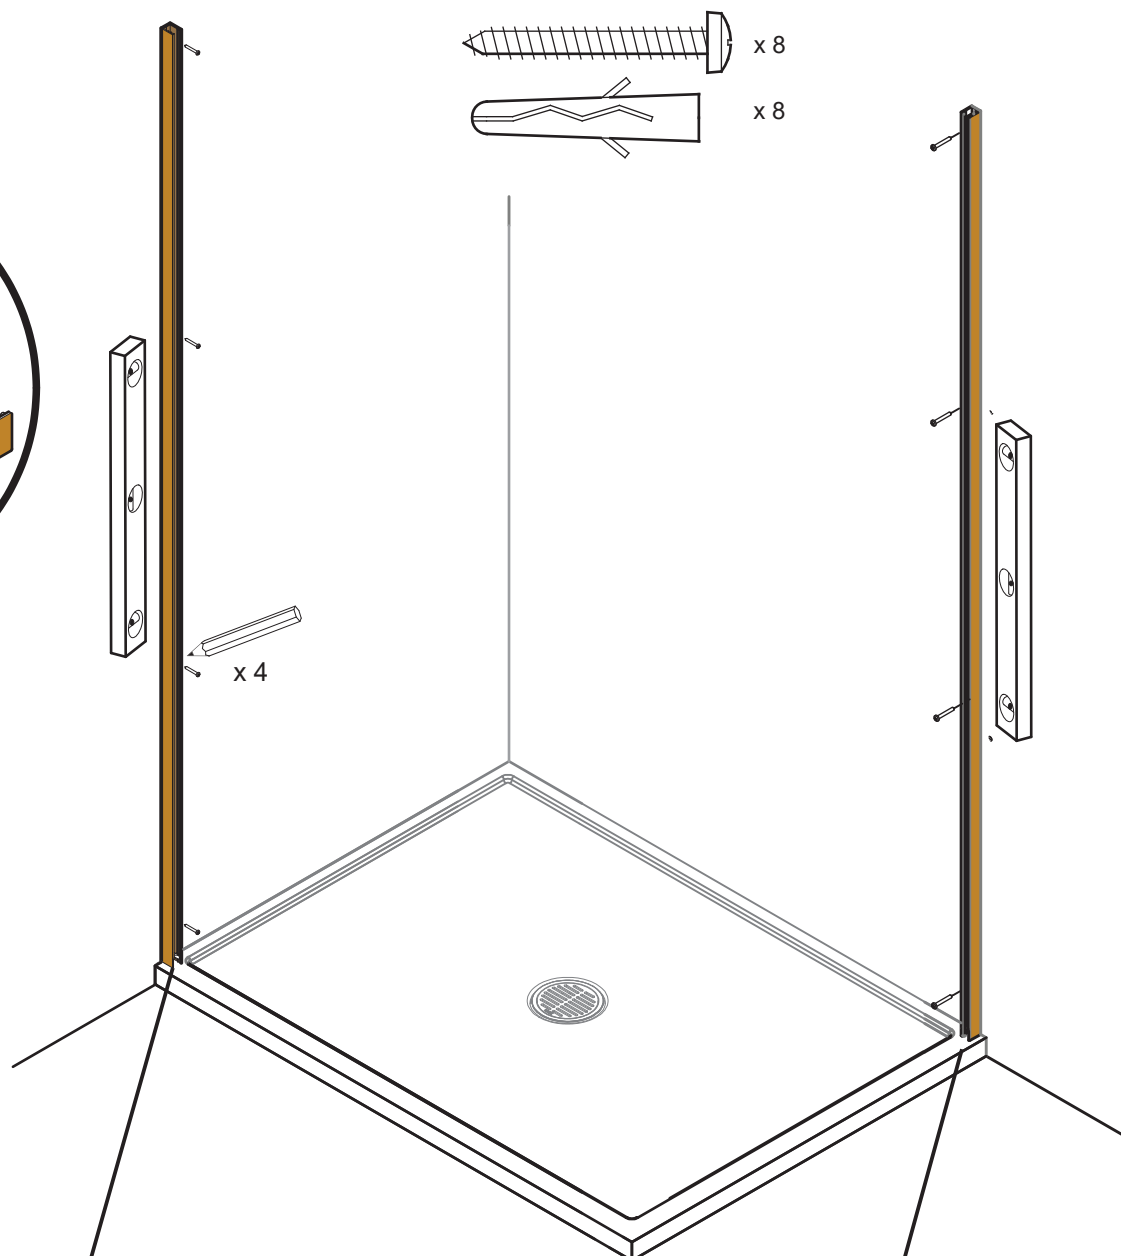
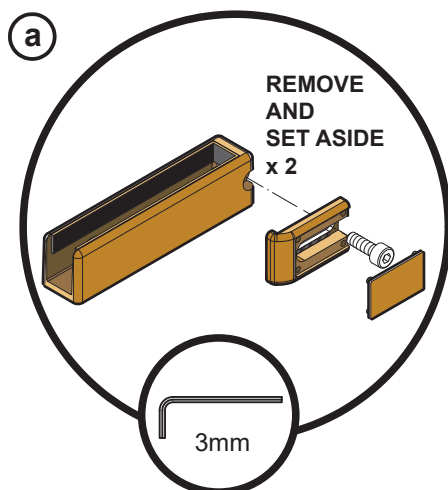


IMAGES SHOW LH PANEL HINGED DOOR INSTALLATION REVERSE FOR RH.

STAGE 2

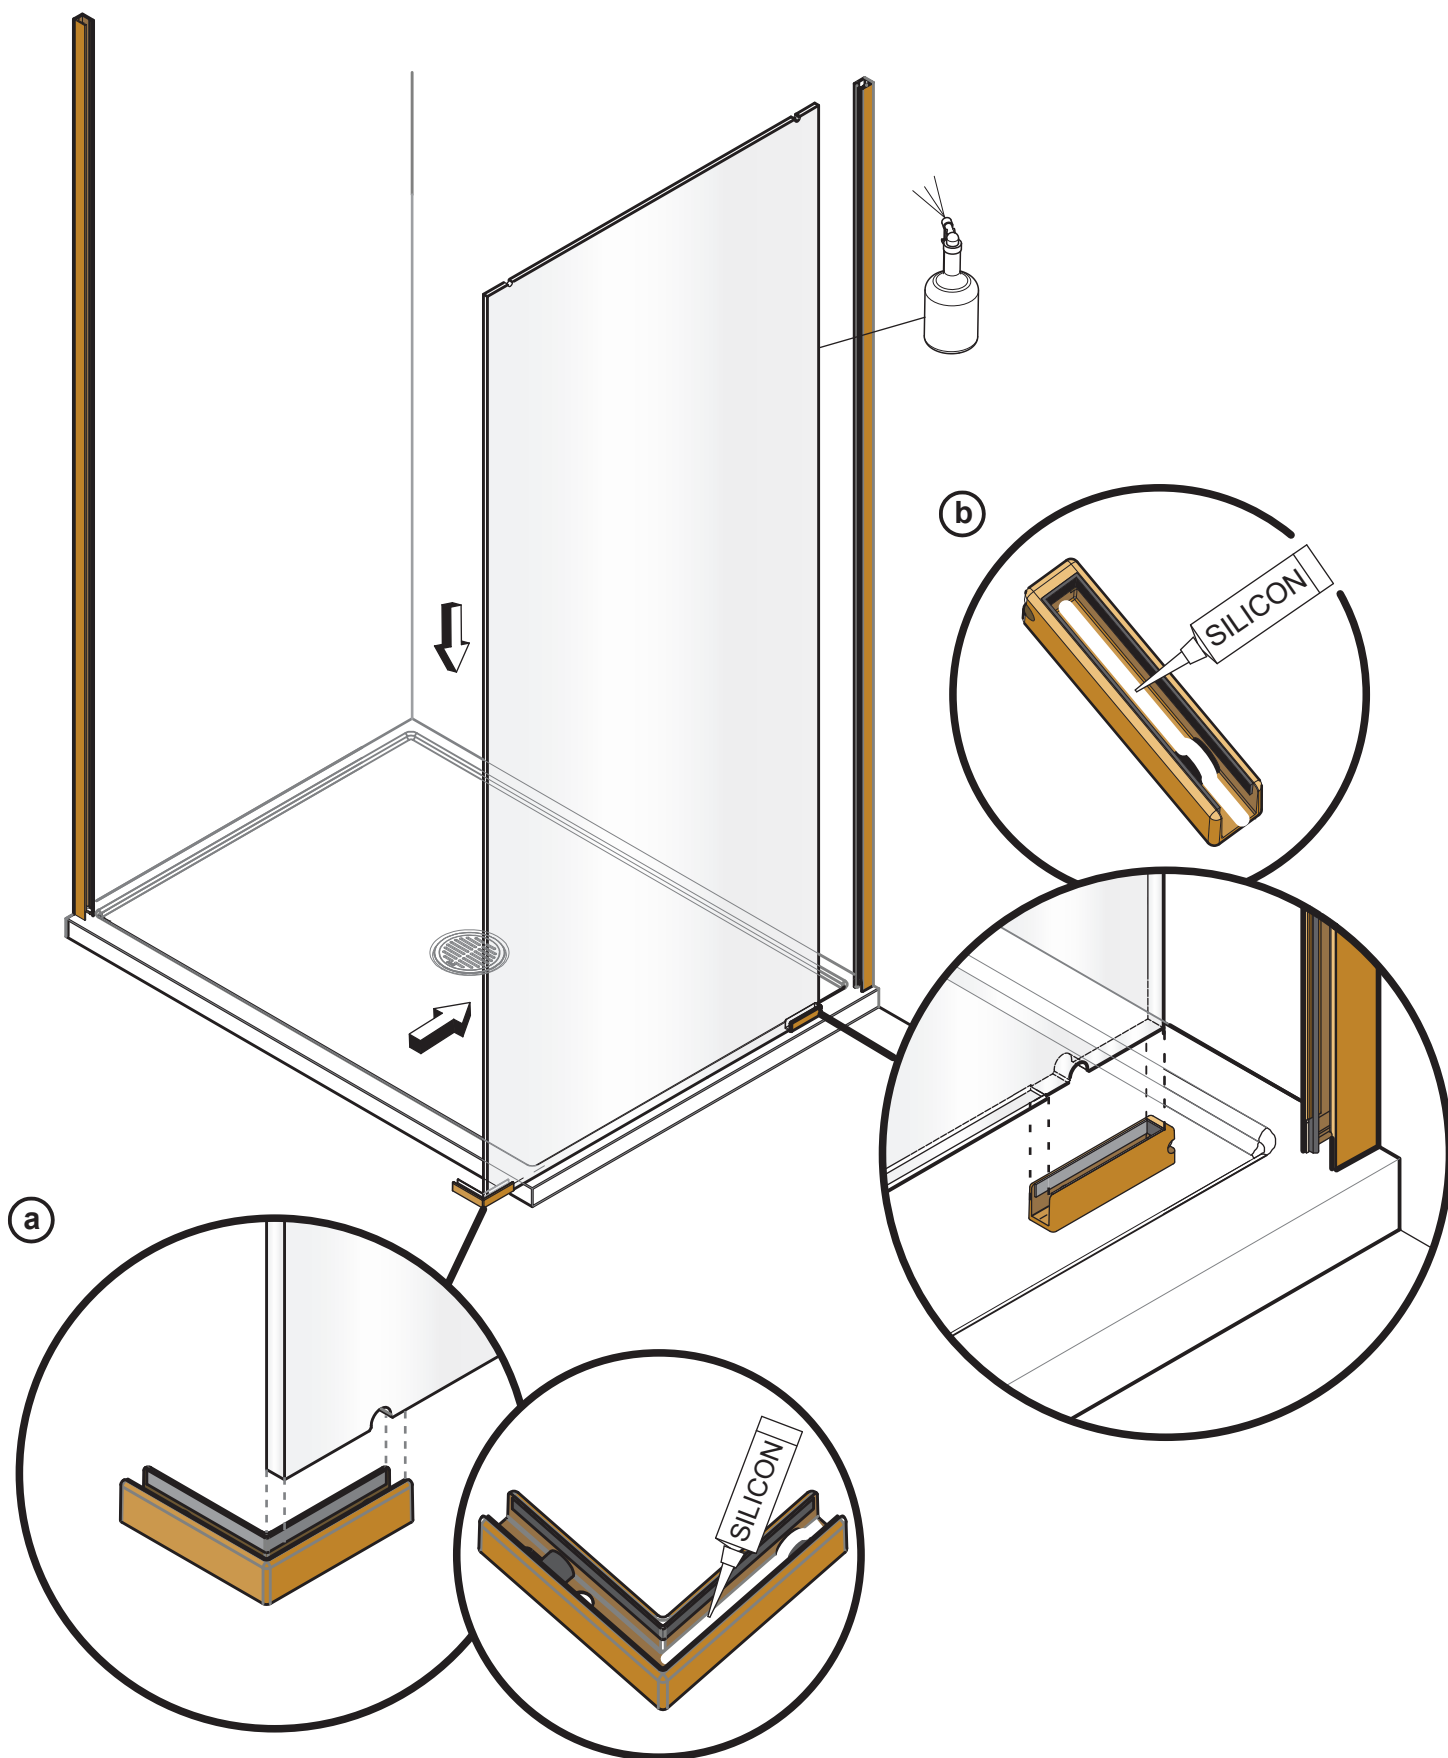


STAGE 3

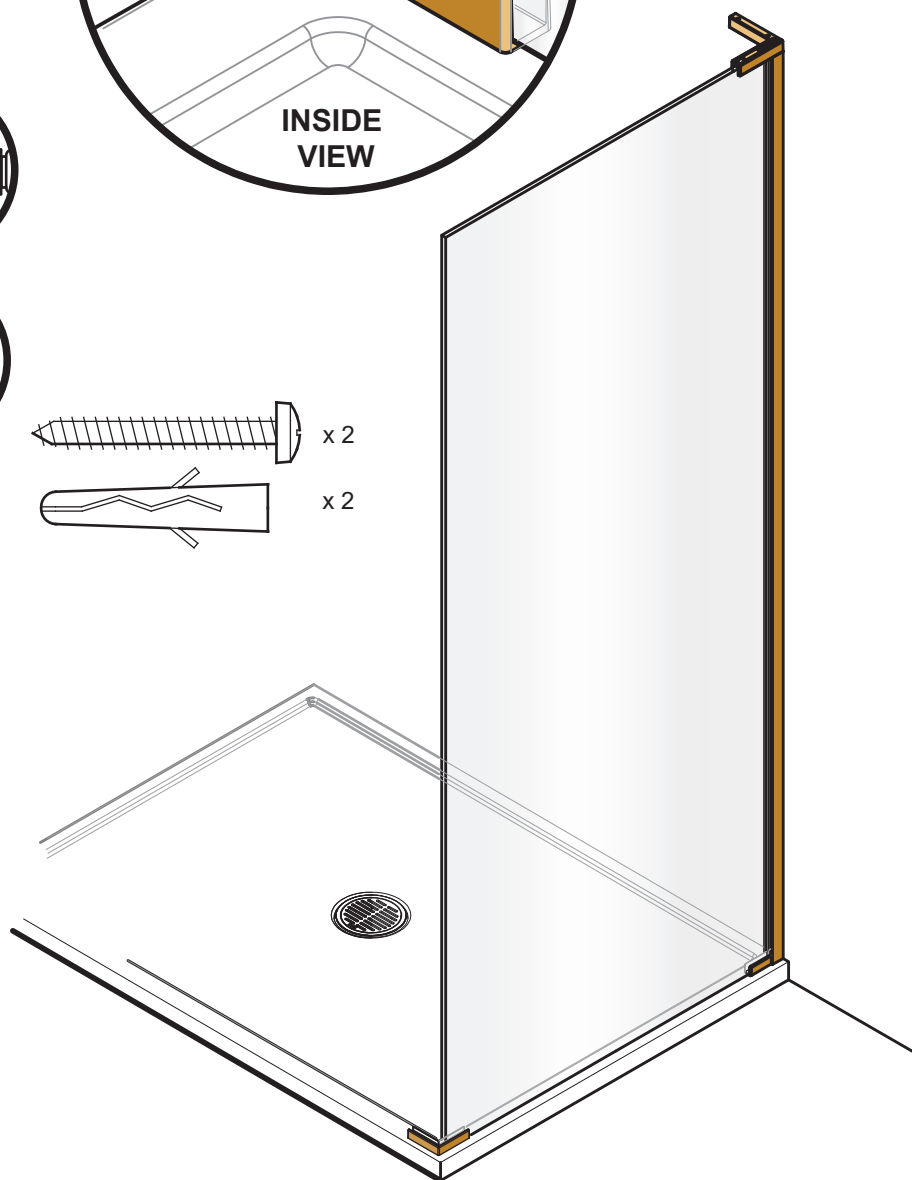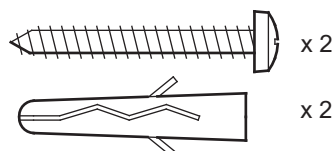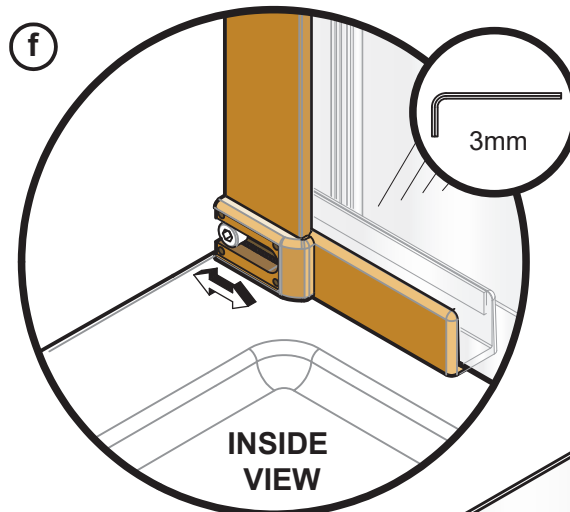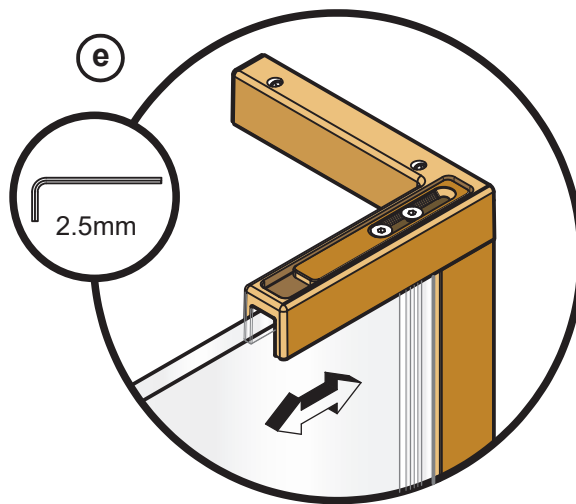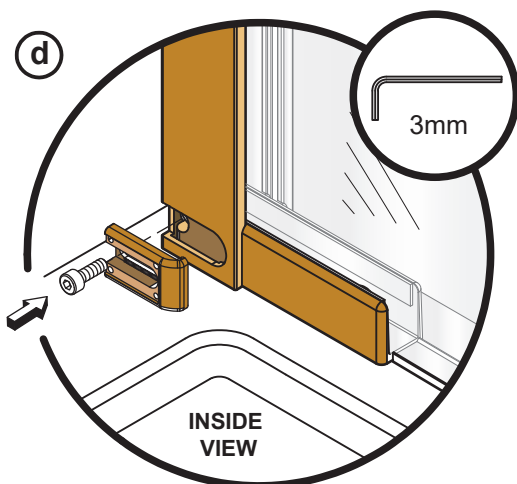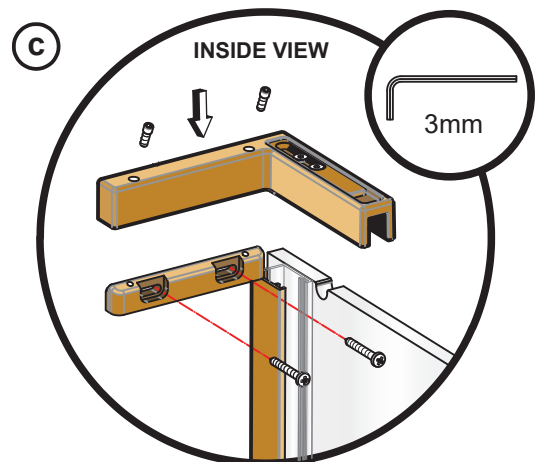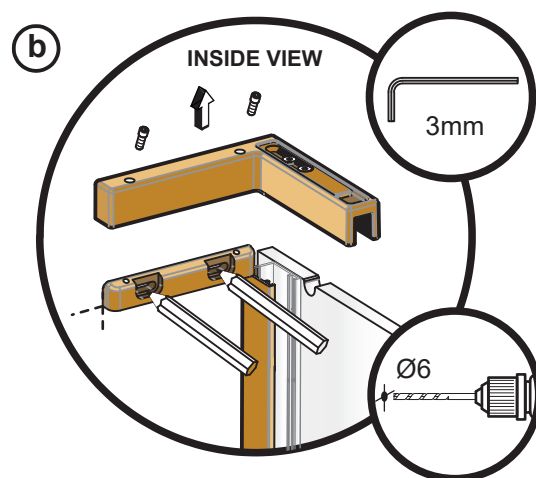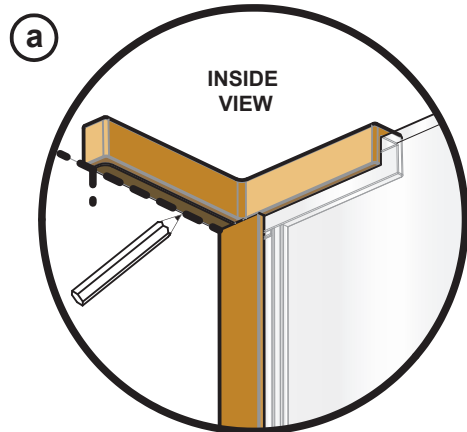


STAGE 4

PREPARING THE INLINE PANEL

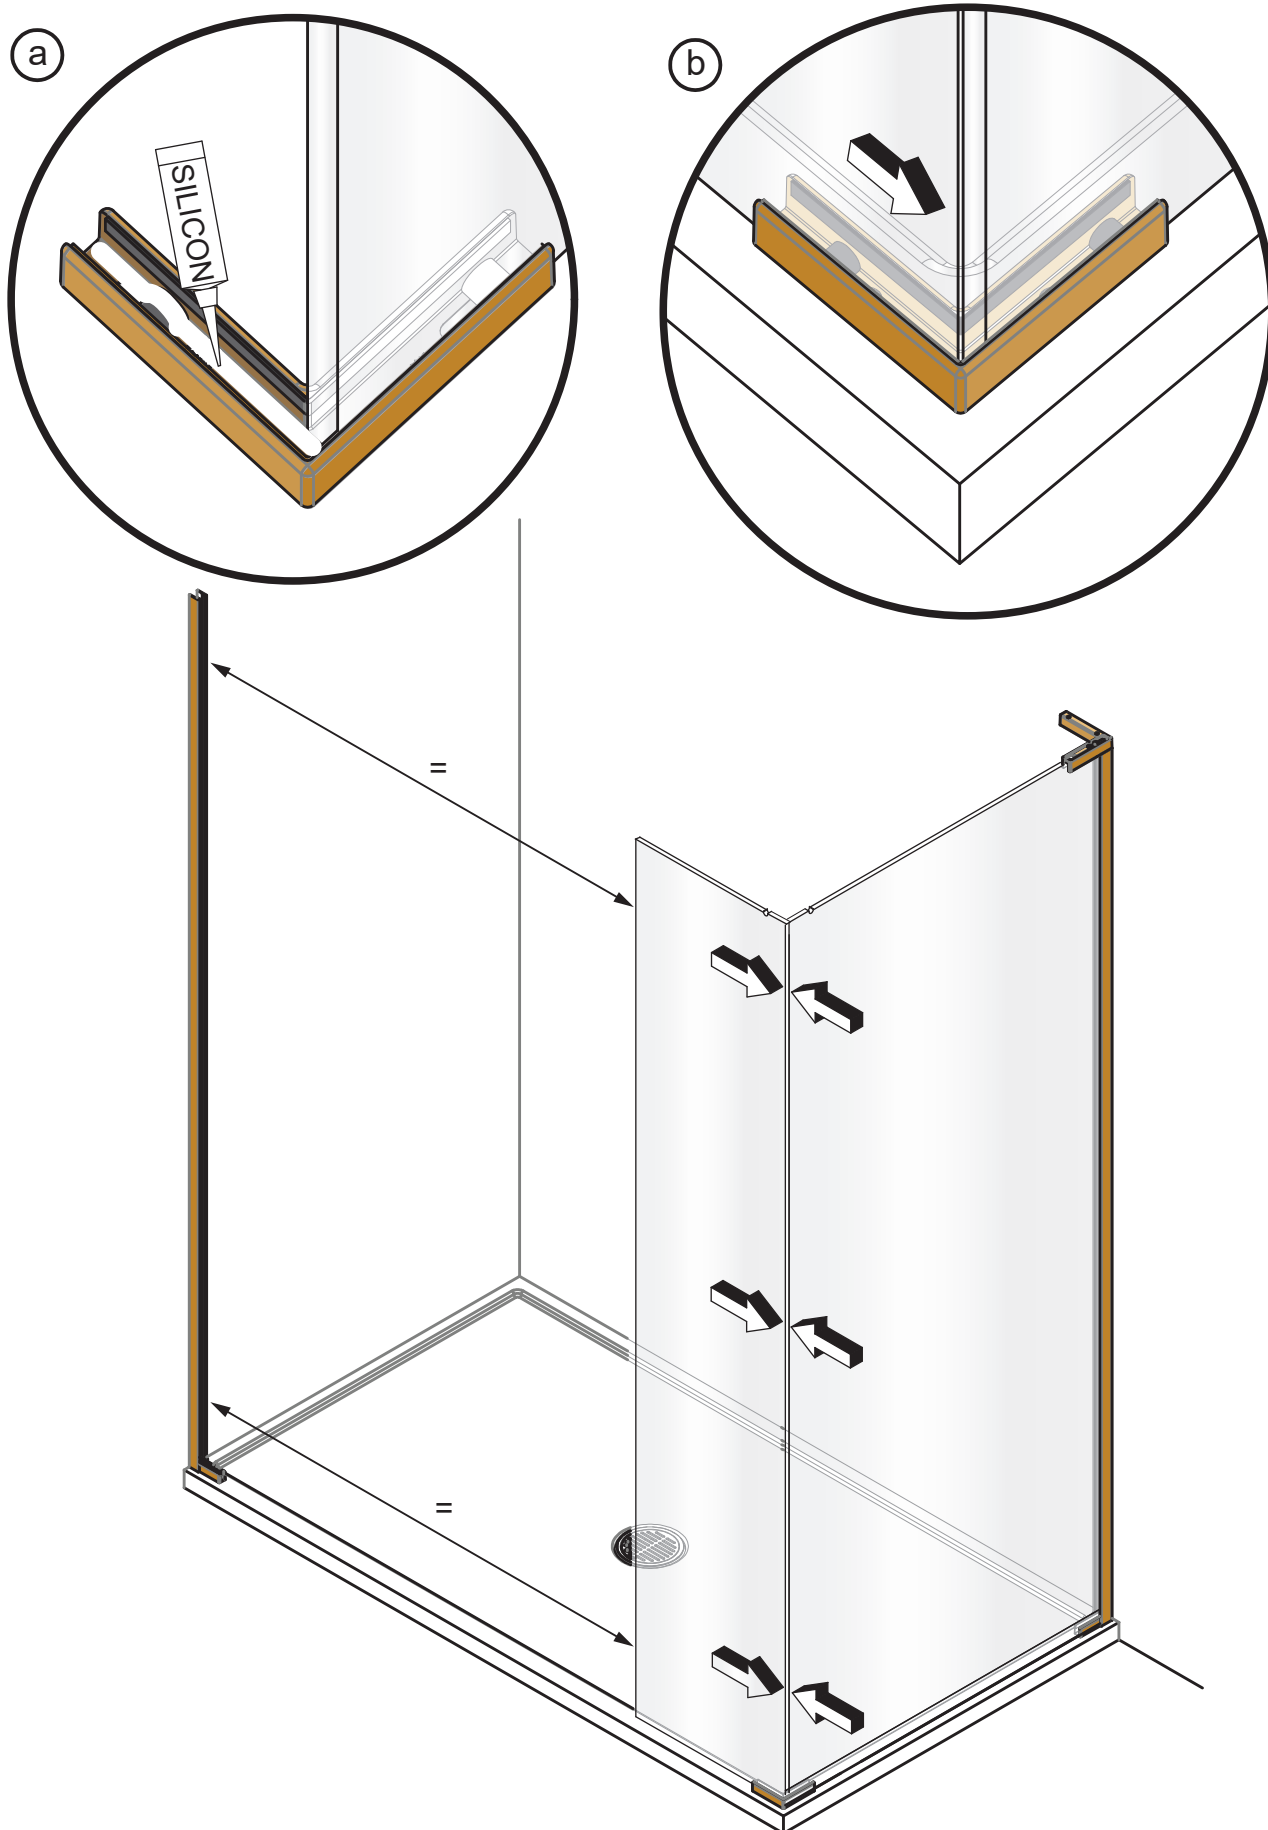


STAGE 5





FITTING THE INLINE PANEL

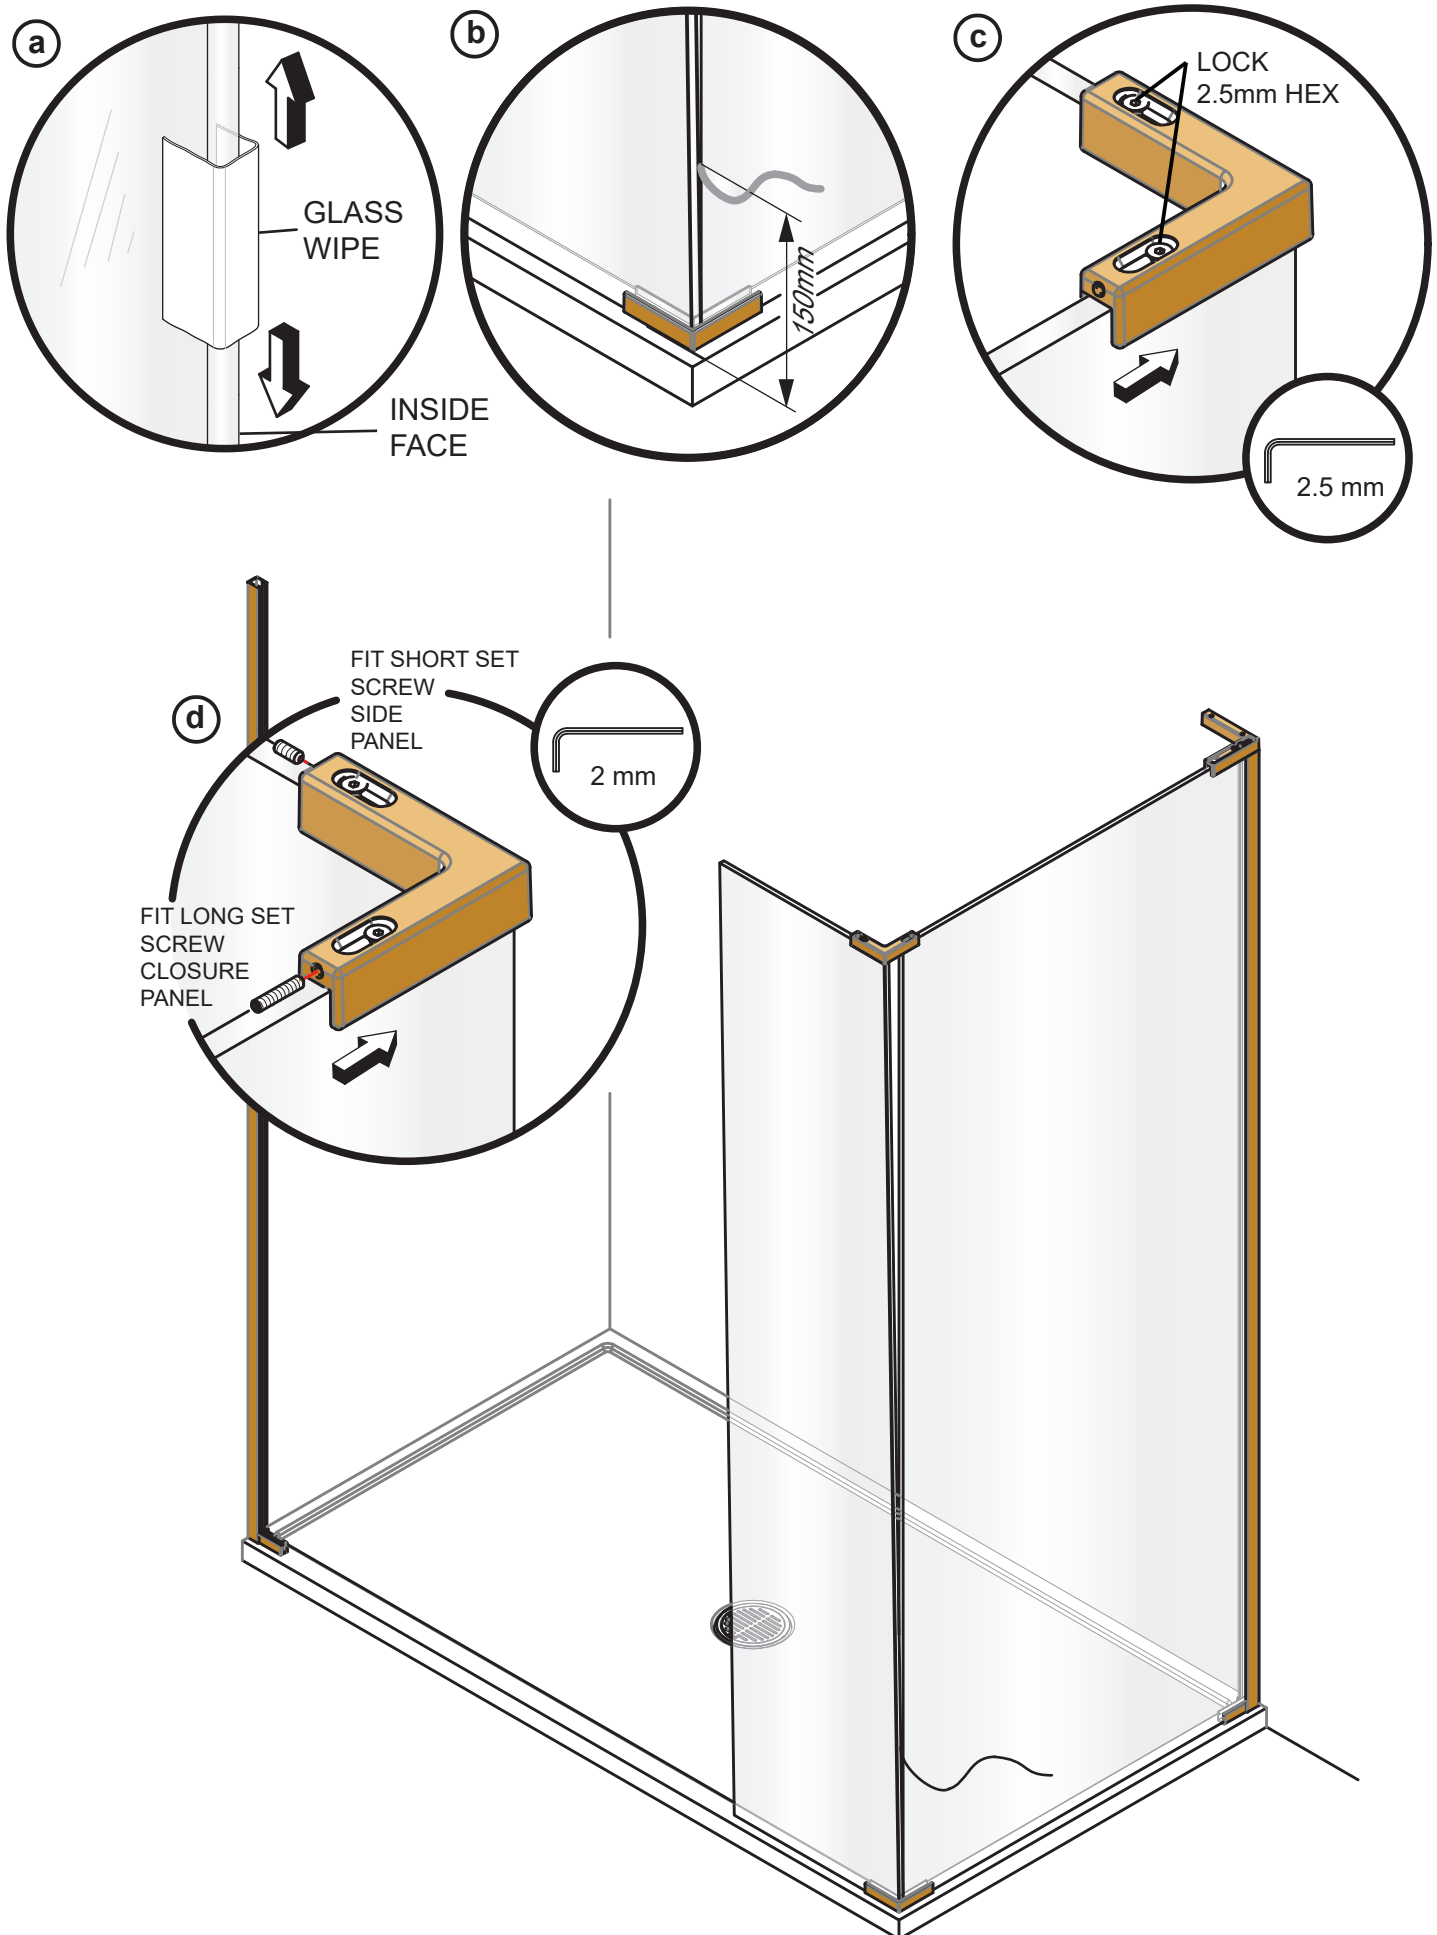





STAGE 6

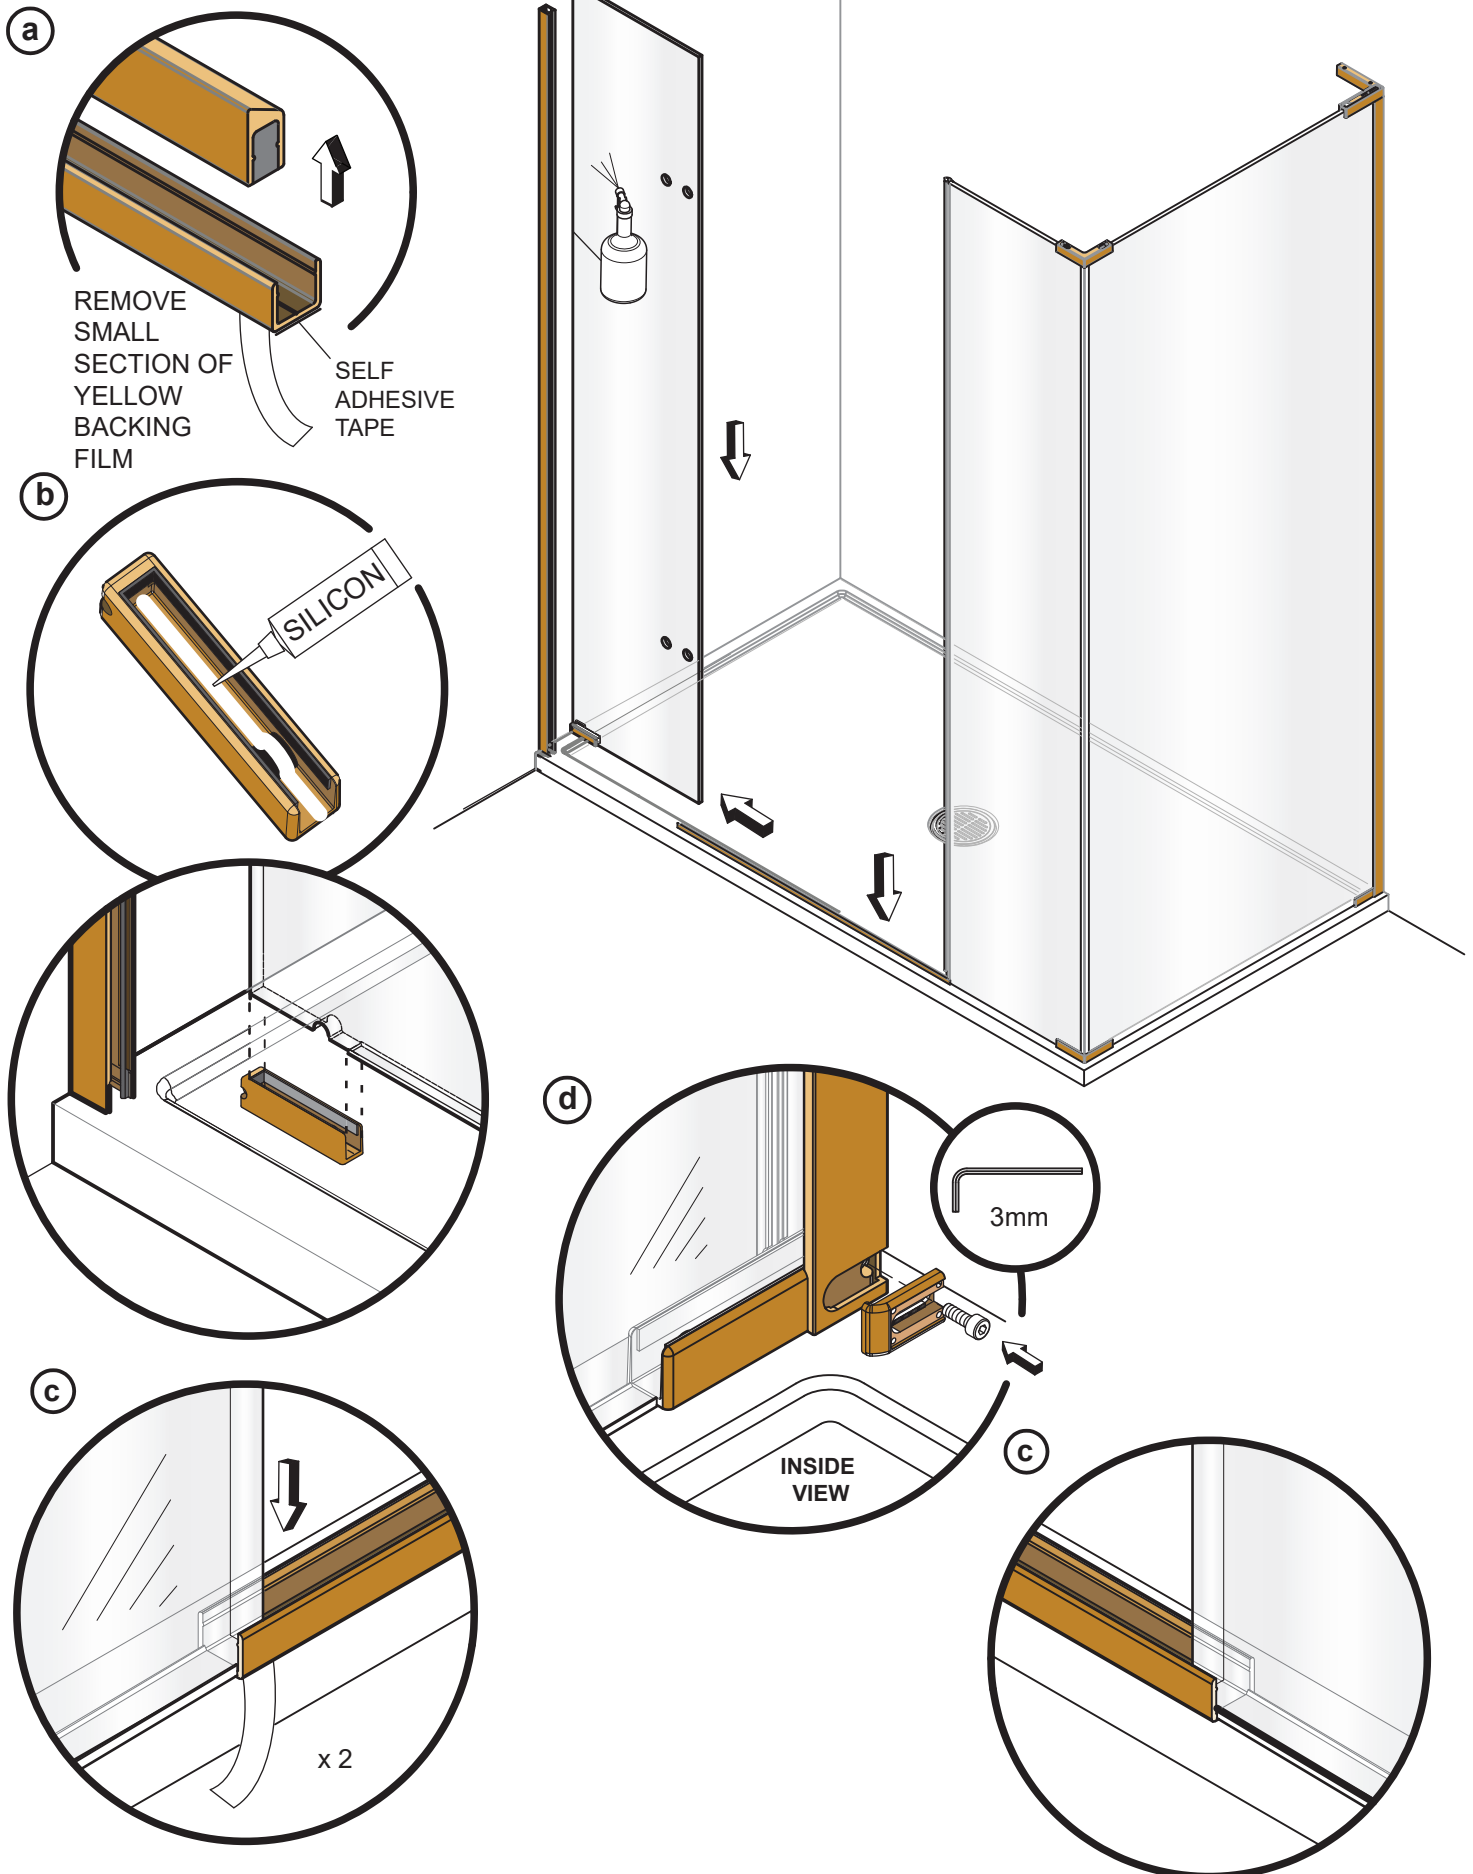

STAGE 7

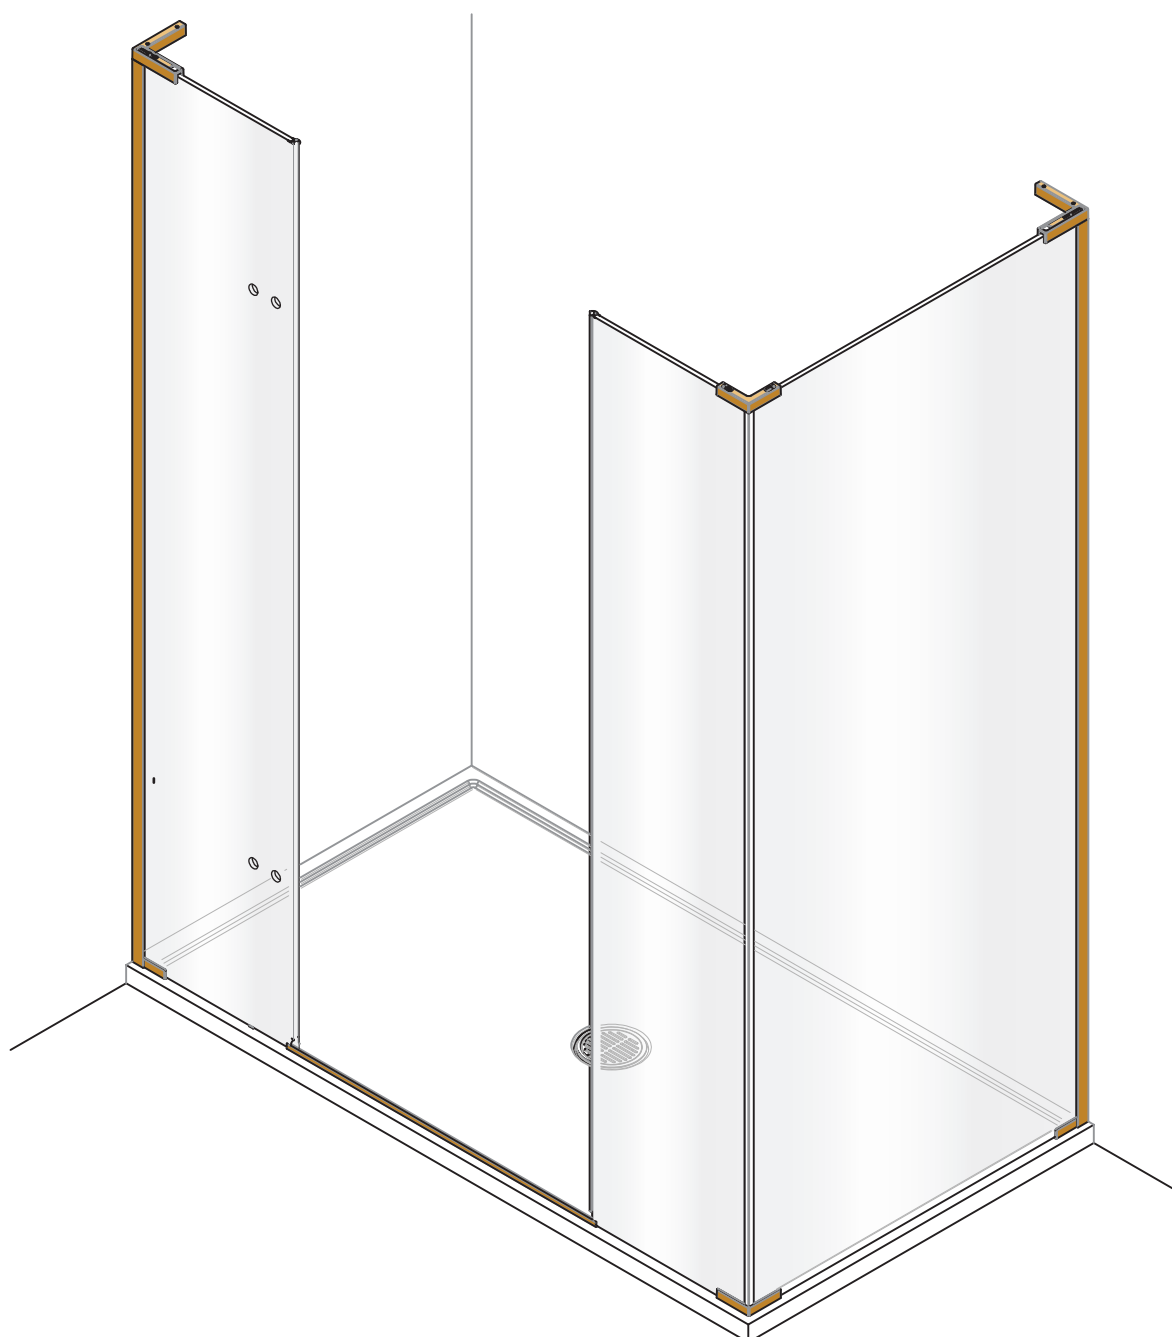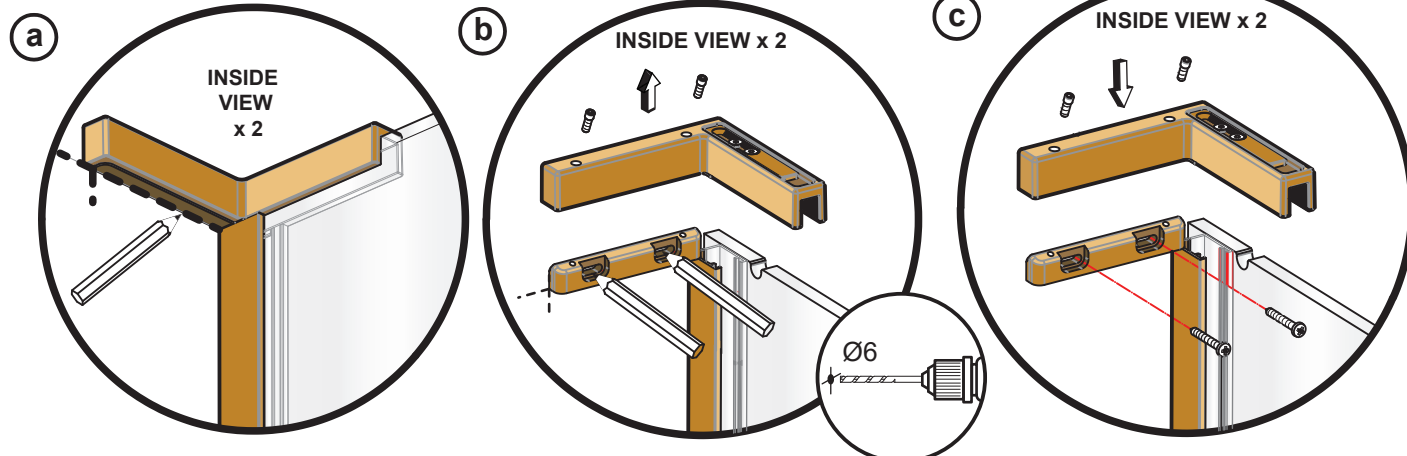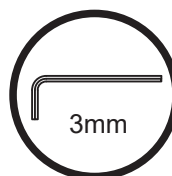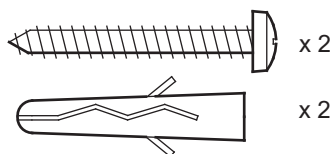

STAGE 8

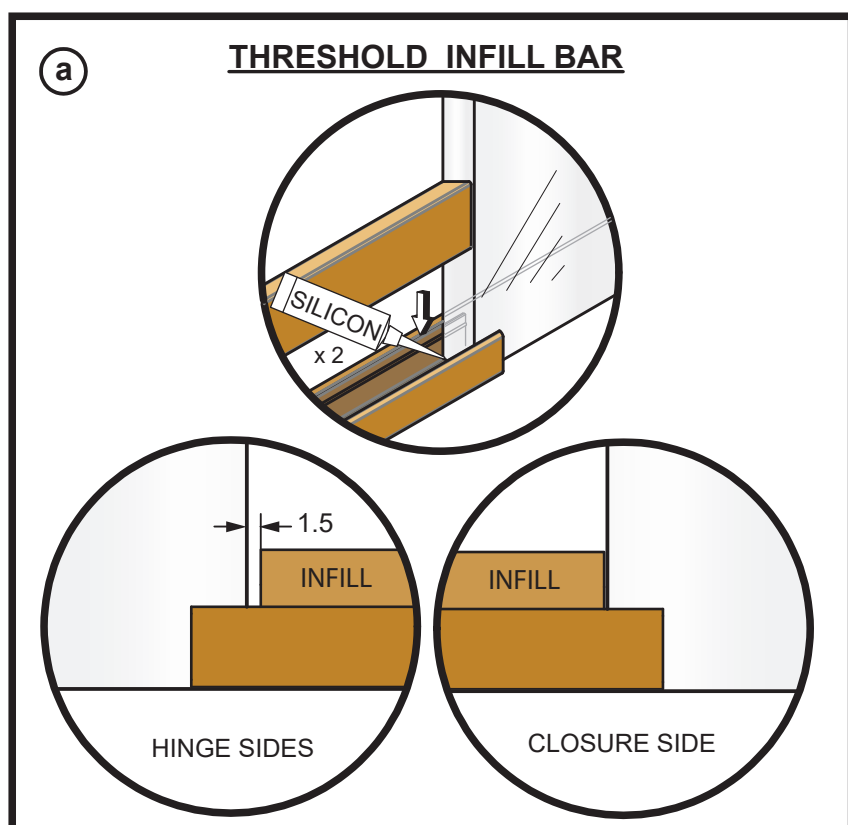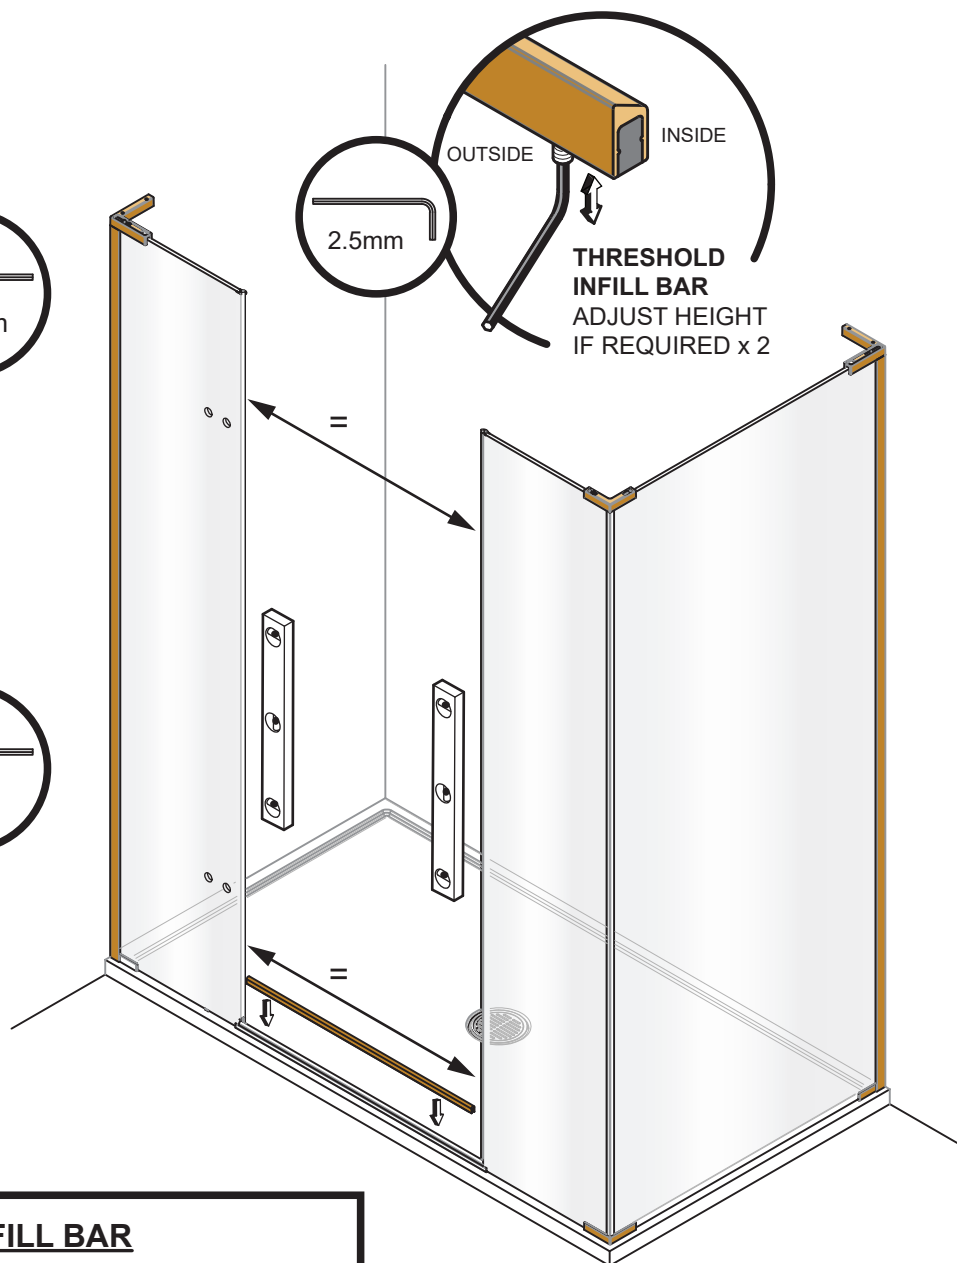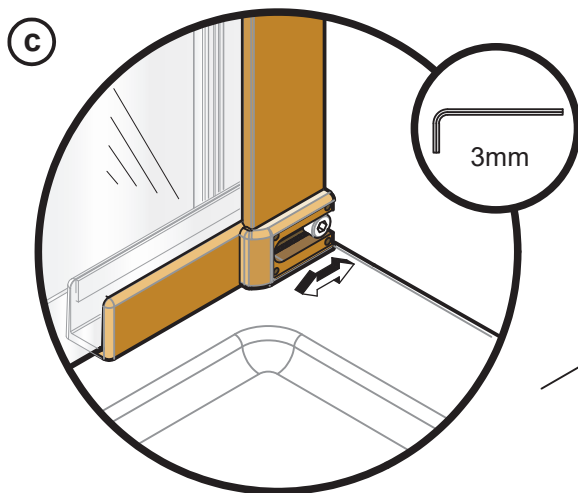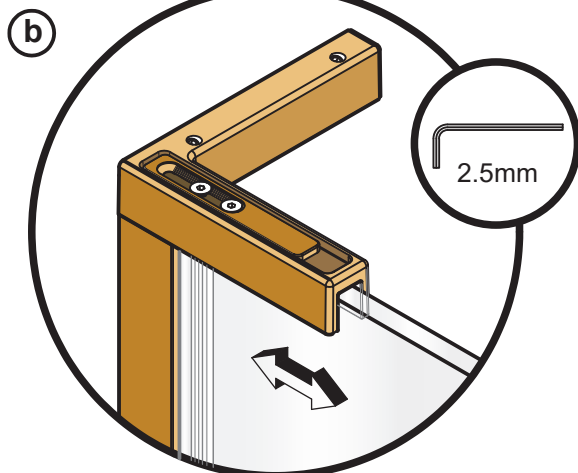


STAGE 9





IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND

LH HINGE PANEL ADJUSTMENT BLOCK POSITION

RH HINGE PANEL ADJUSTMENT BLOCK POSITION

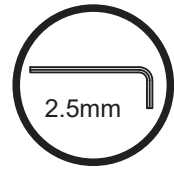

INSIDE VIEW!

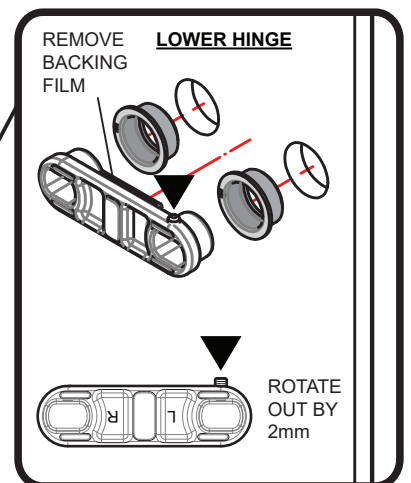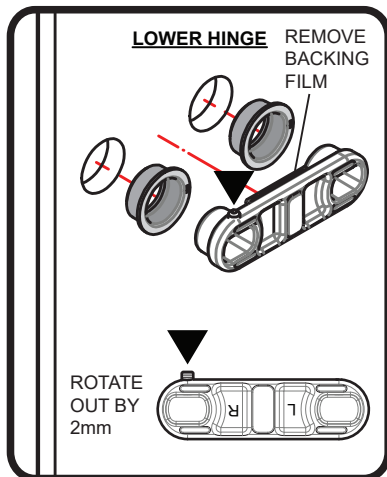
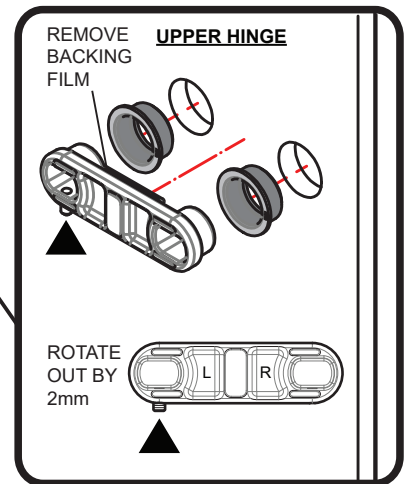
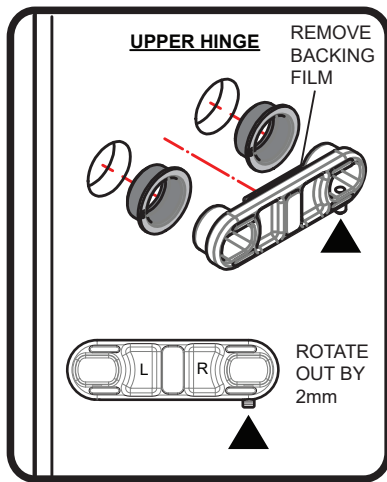


STAGE 10



IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH MOVING PANEL ADJUSTMENT BLOCK POSITION


RH MOVING PANEL ADJUSTMENT BLOCK POSITION

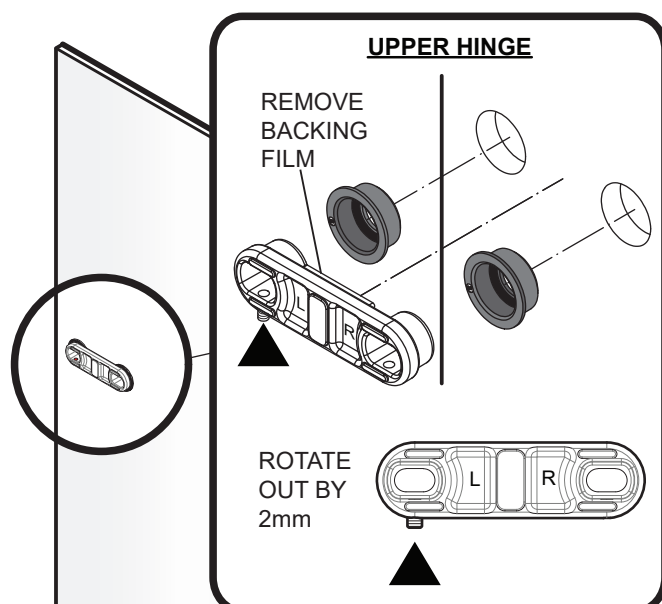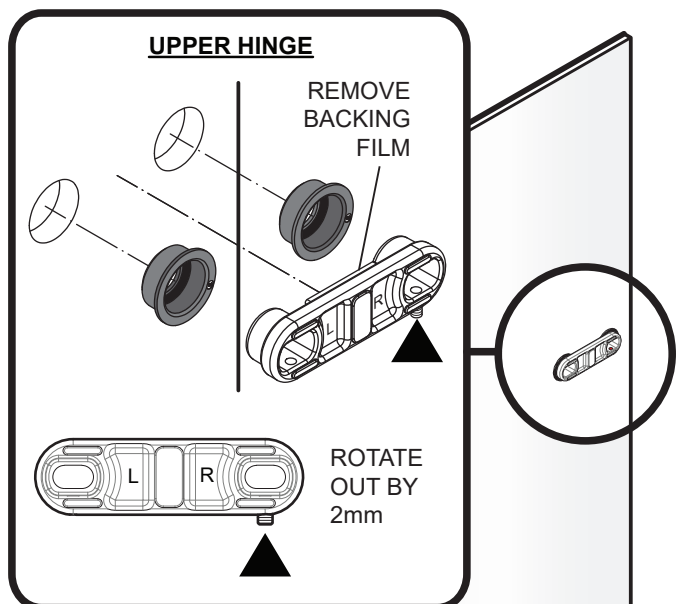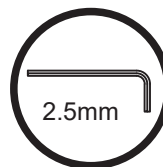

INSIDE VIEW!

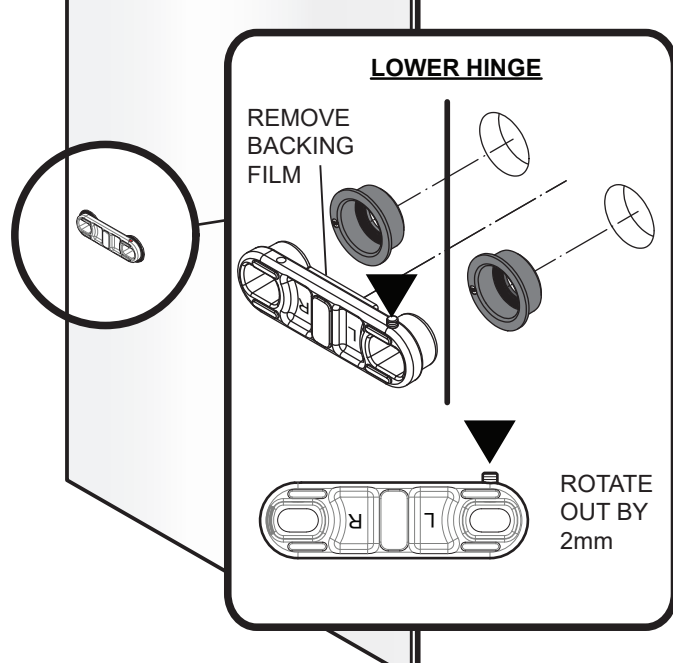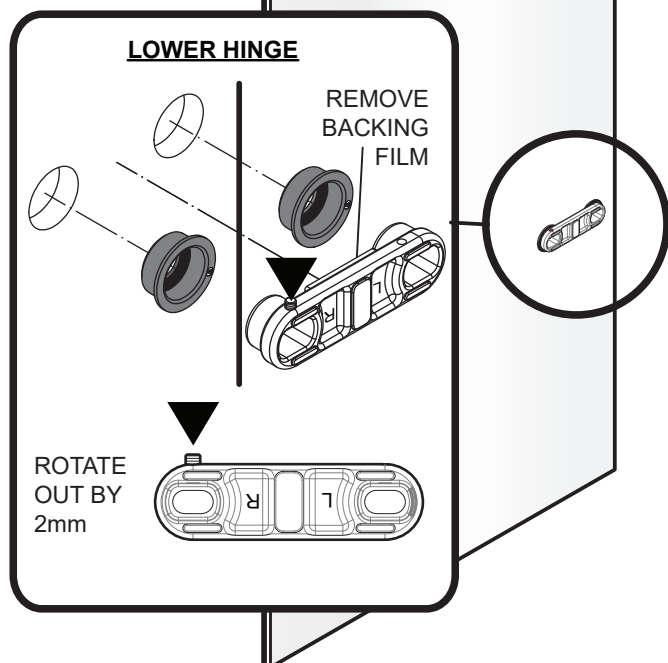


STAGE 11

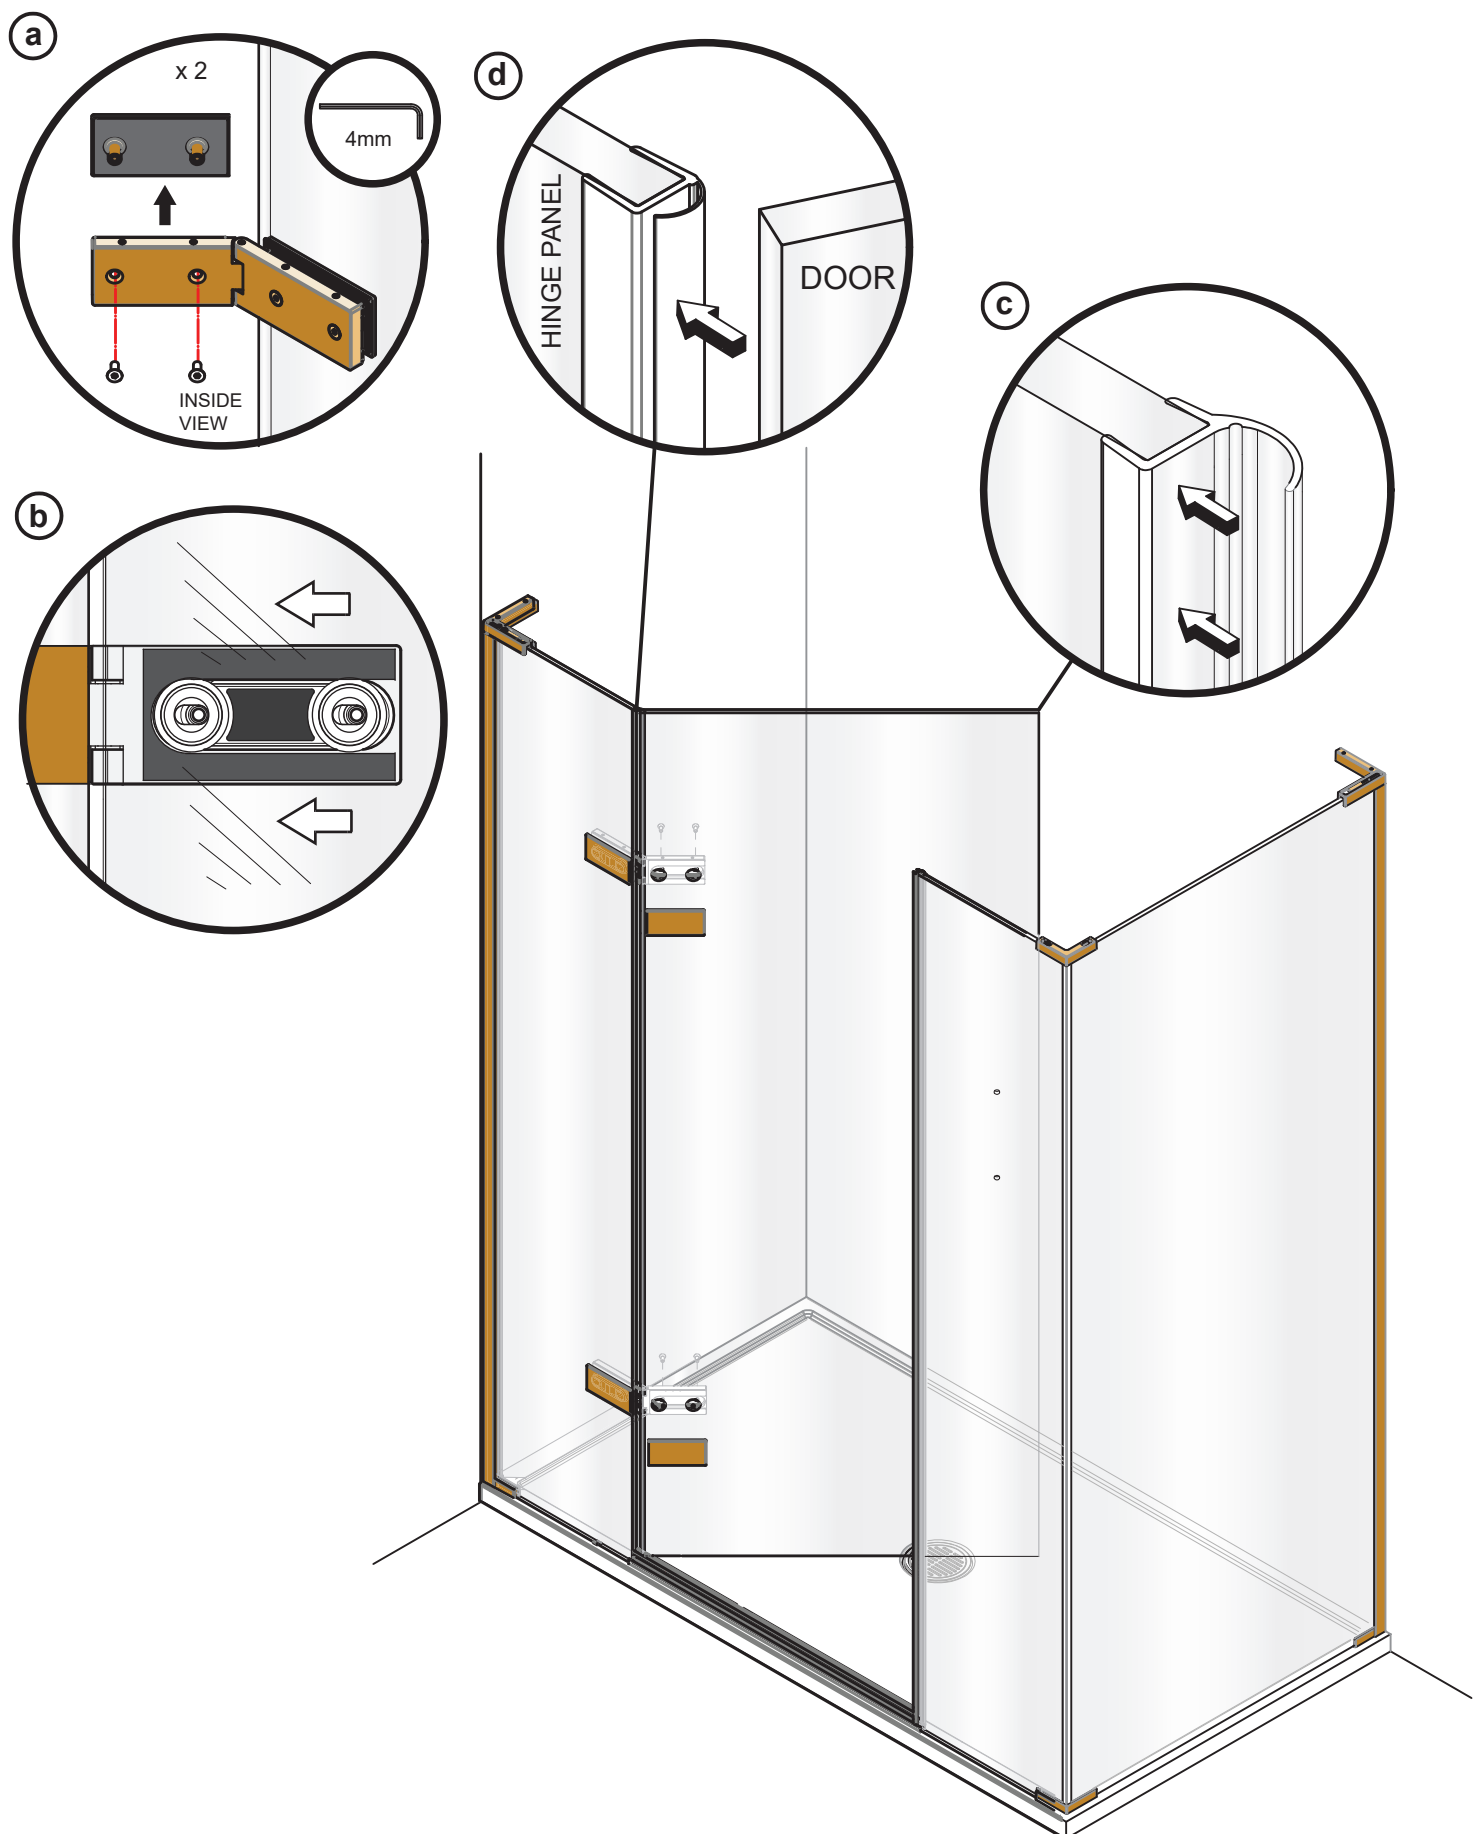


STAGE 12

HANDLE VARIANTS


ILLUSTRIOUS

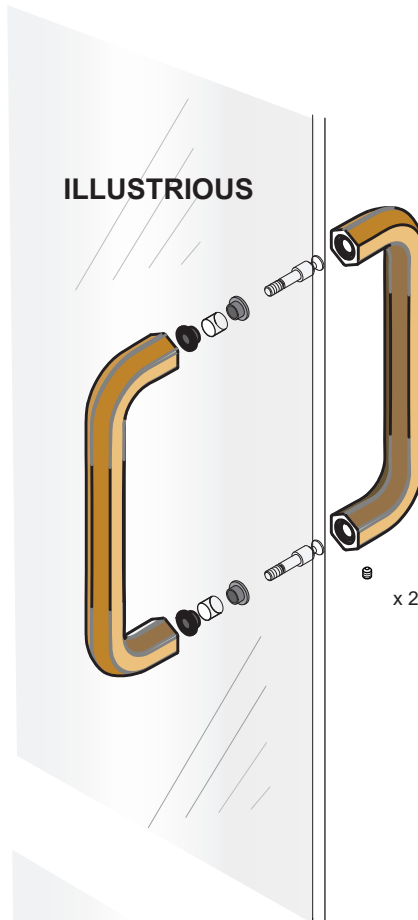


LINEAR

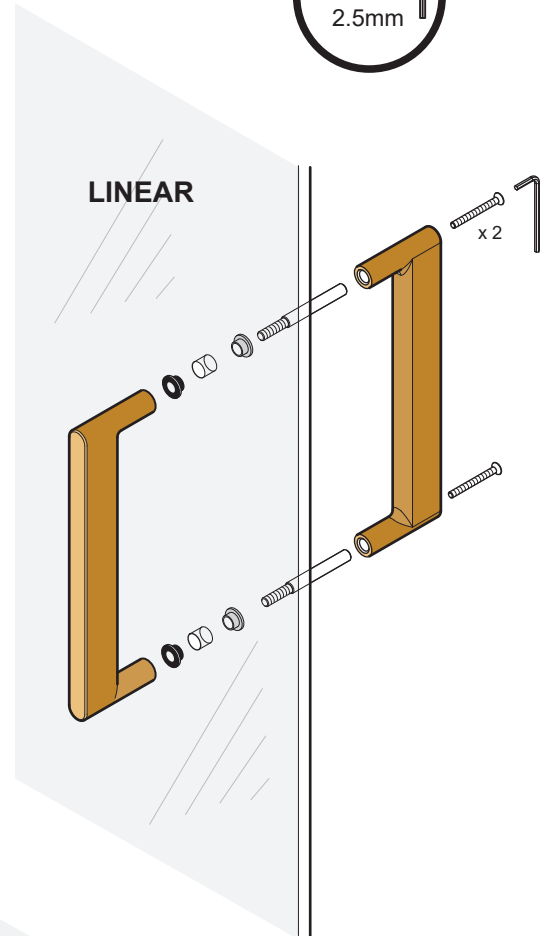

TRADITIONAL

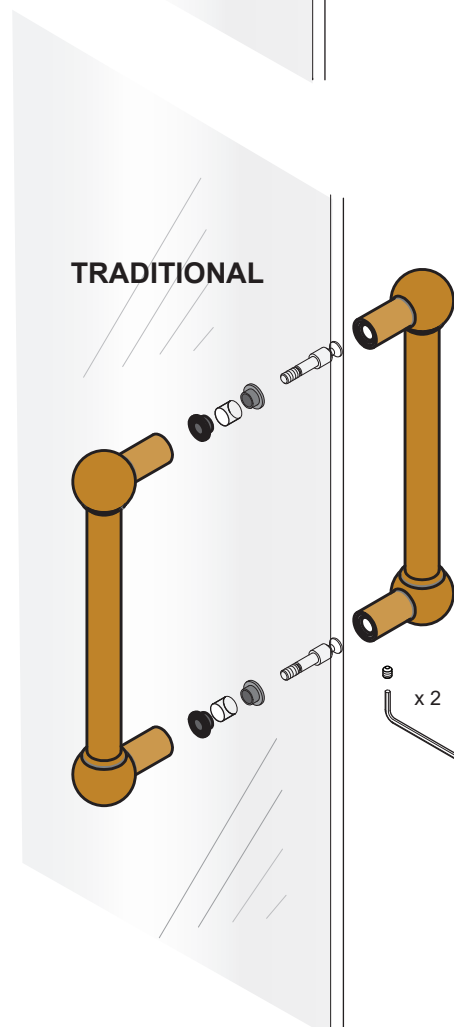


ENGINEER


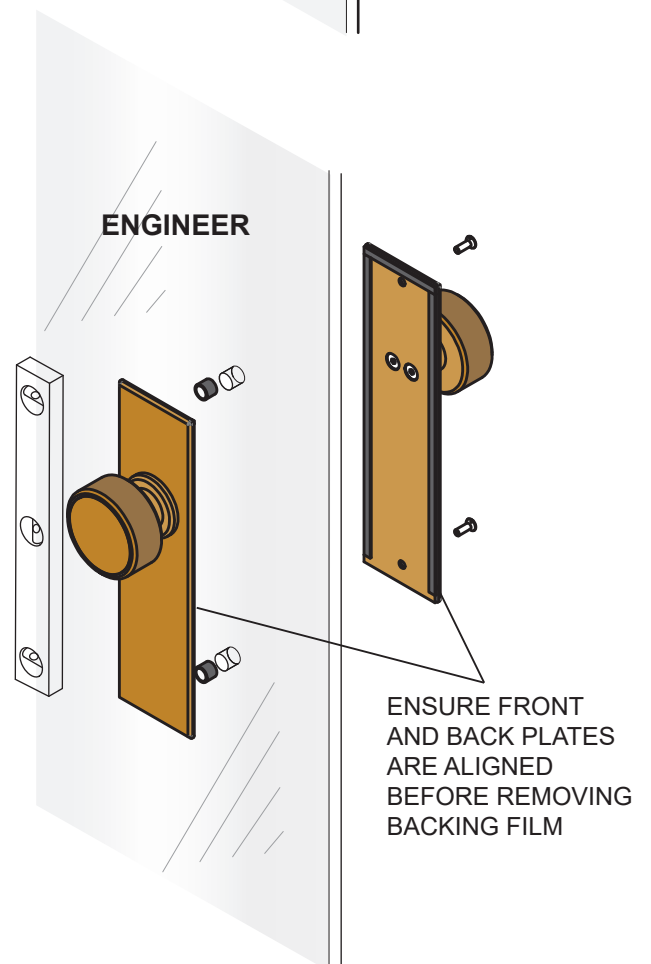


STAGE 13


(a)

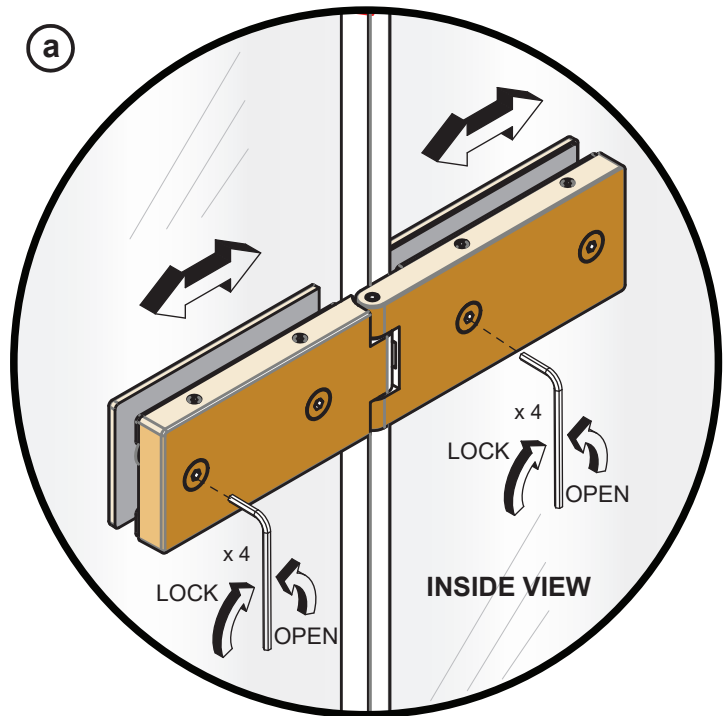






(b)

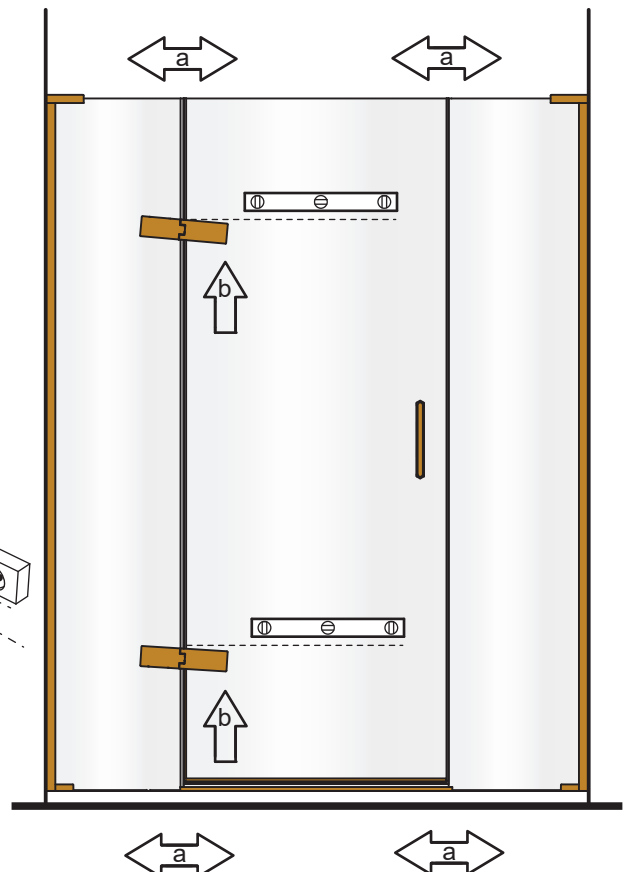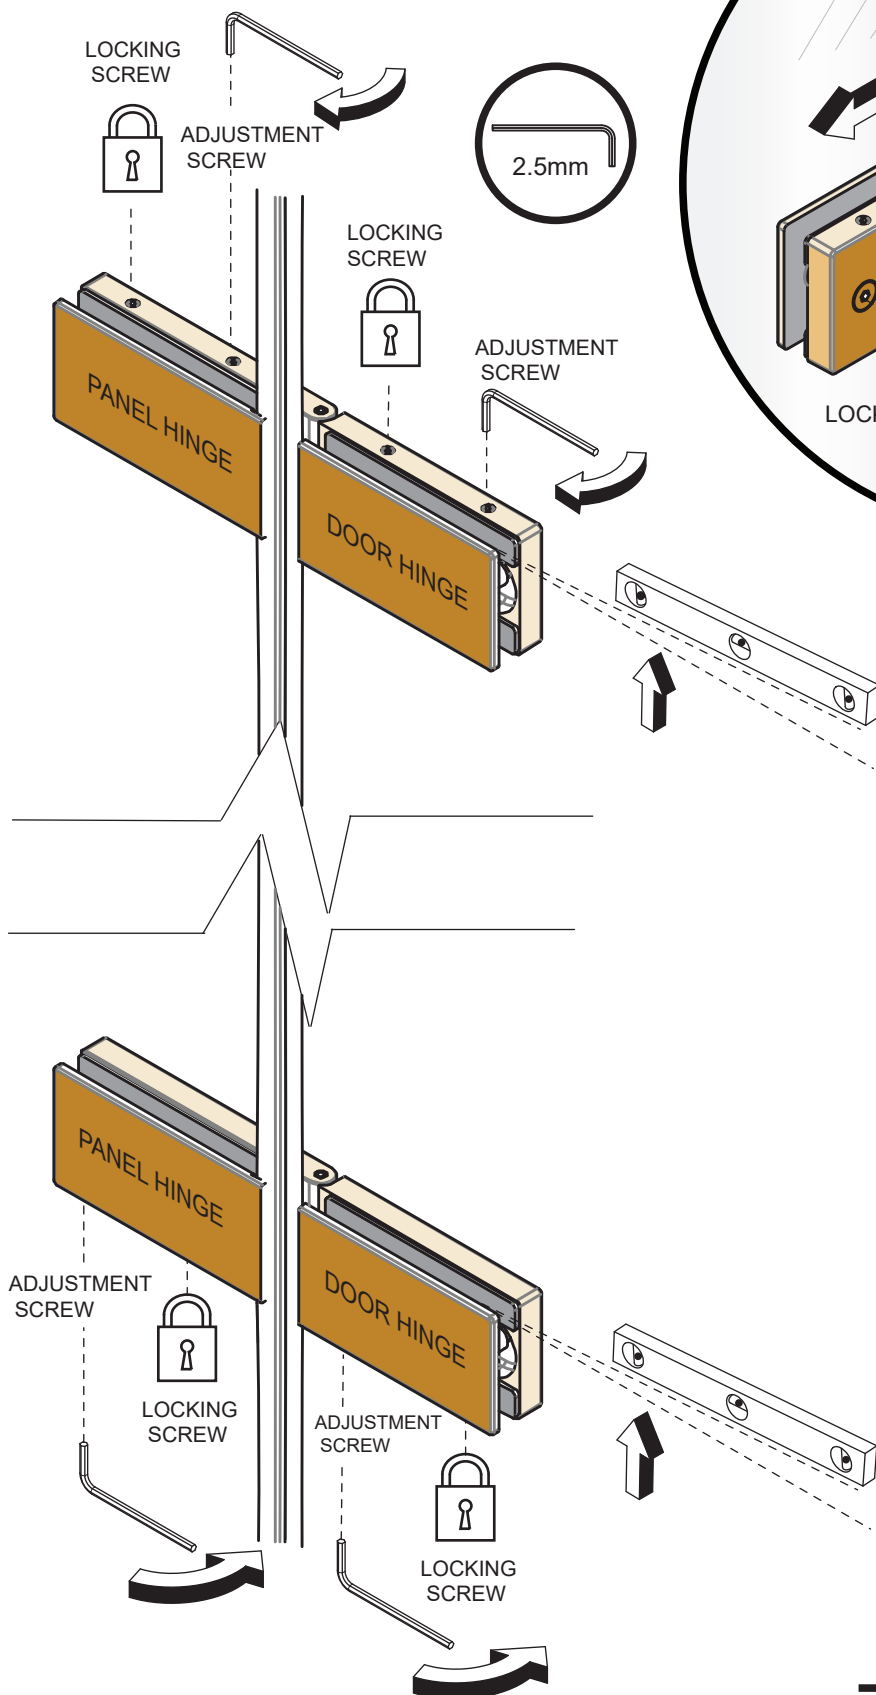


STAGE 14

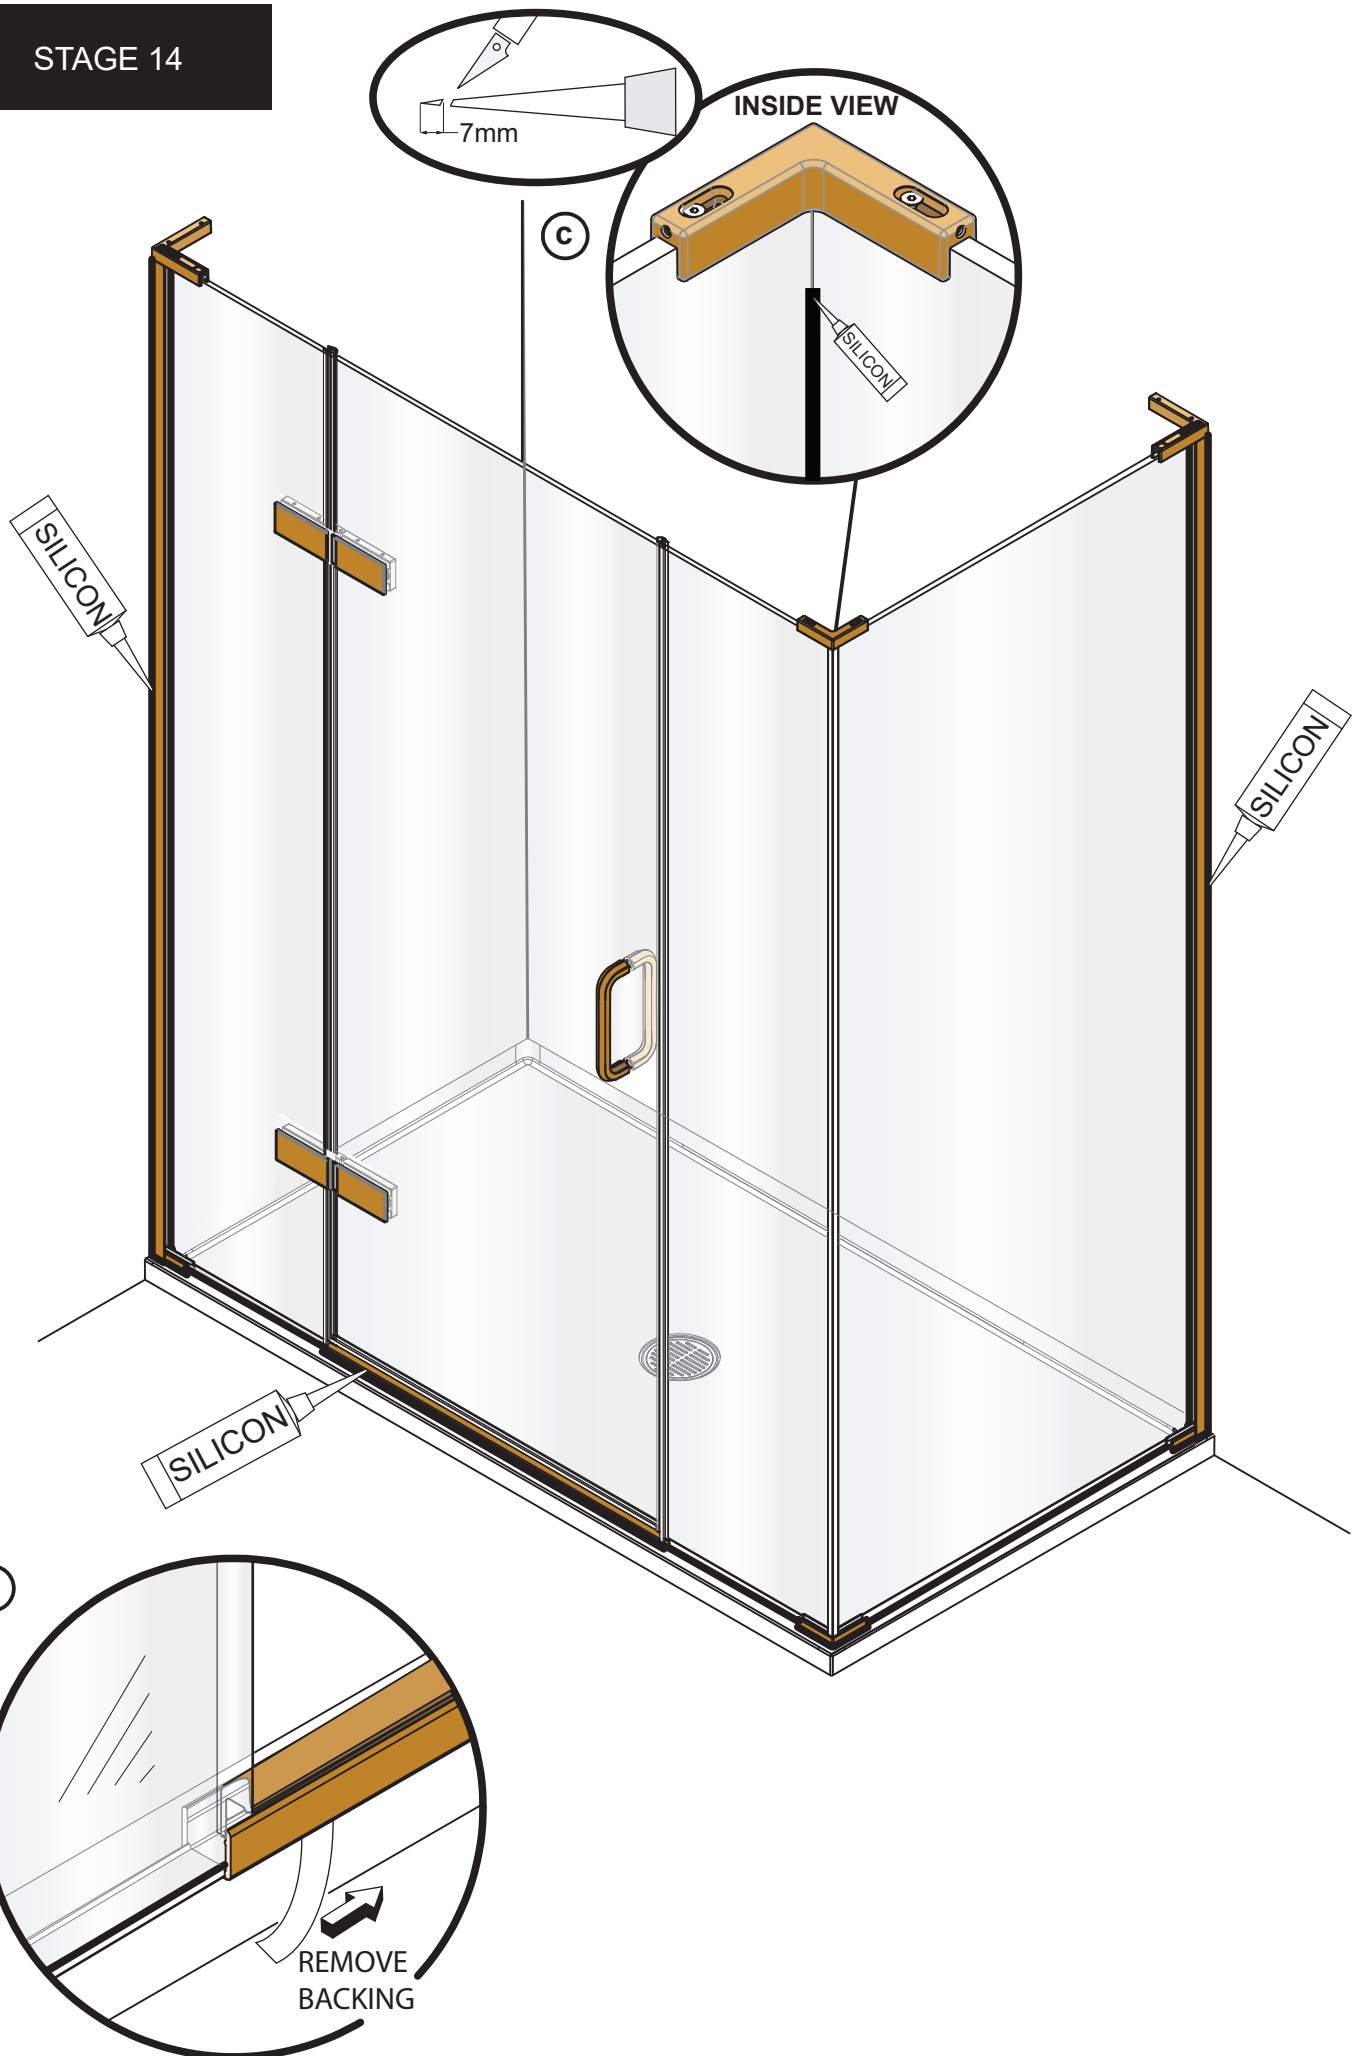


STAGE 14 - CONT

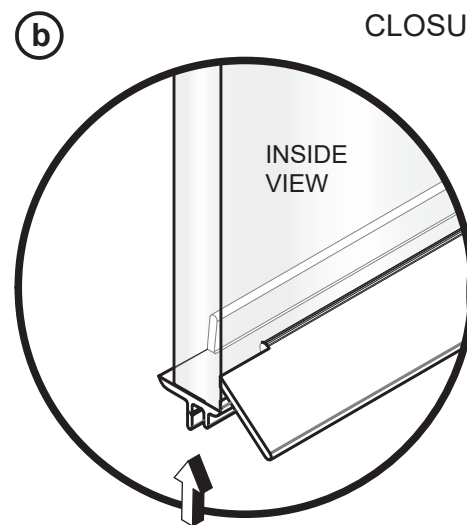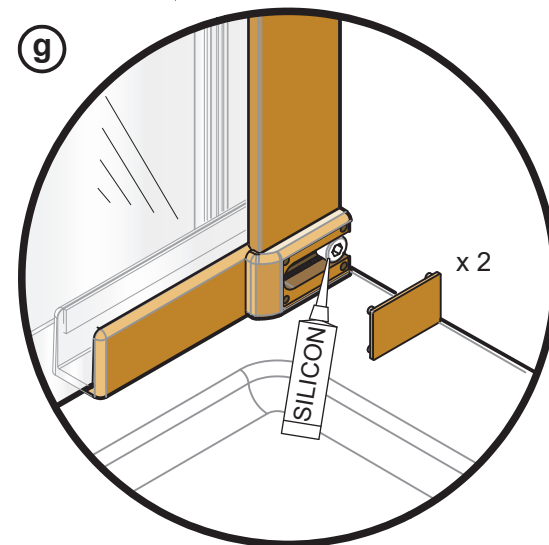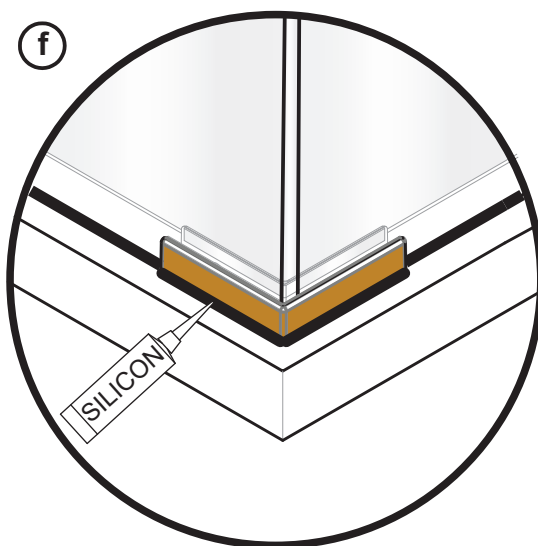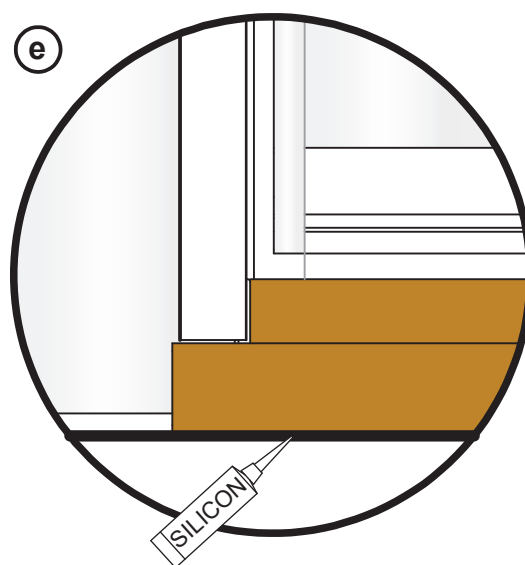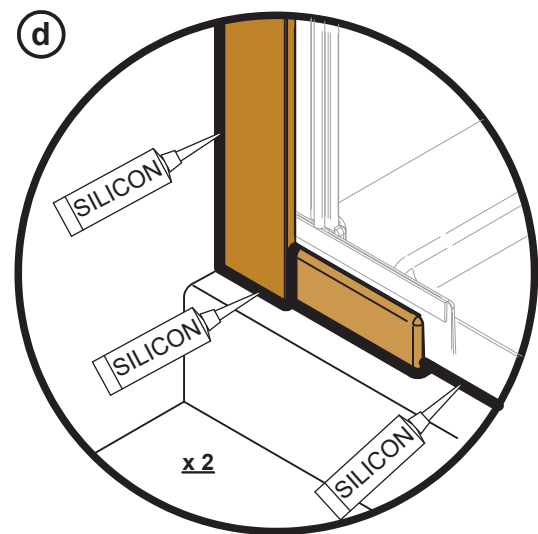

CLOSURE SIDE



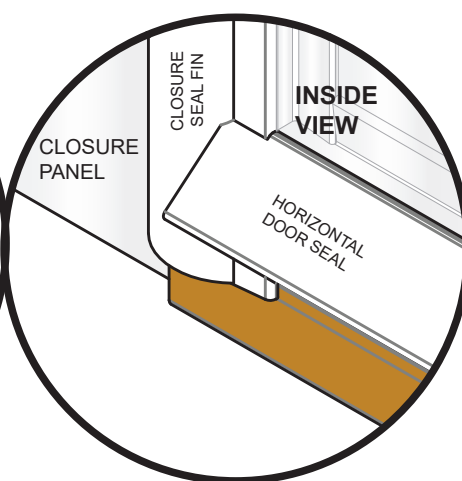


HINGE SIDE






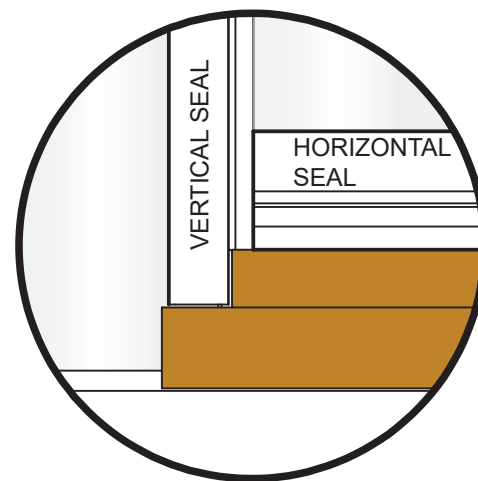


PARTS LIST

9864 AF
WALL FRAME
KIT OF PARTS (x 2)

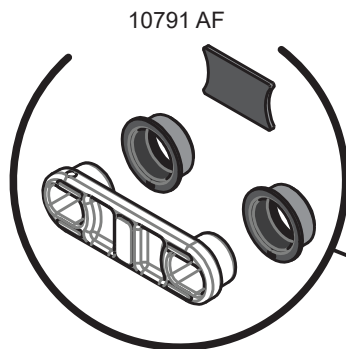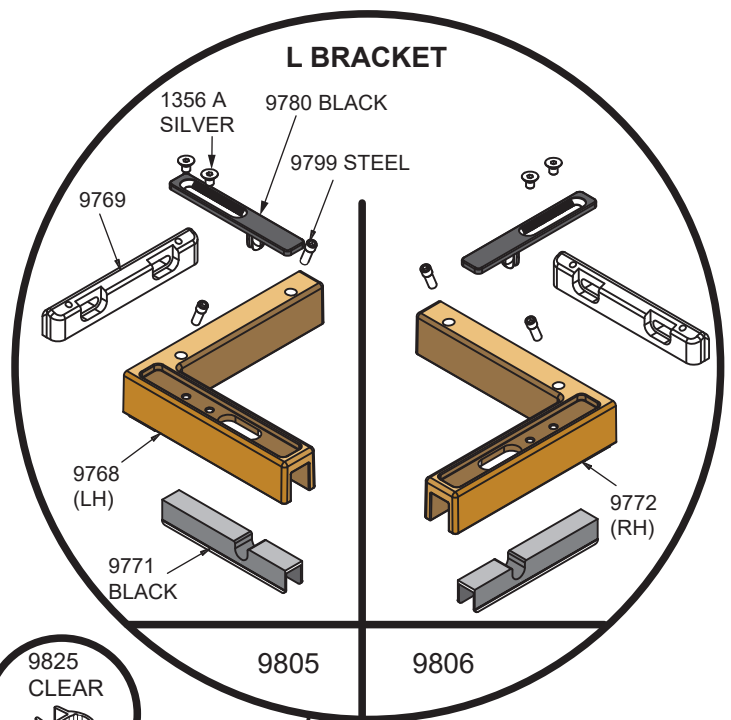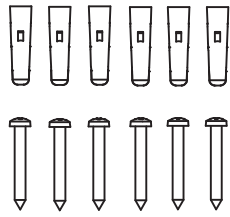

8932 (LH BOTTOM/ RH TOP)
8933 (RH BOTTOM/ LH TOP) *

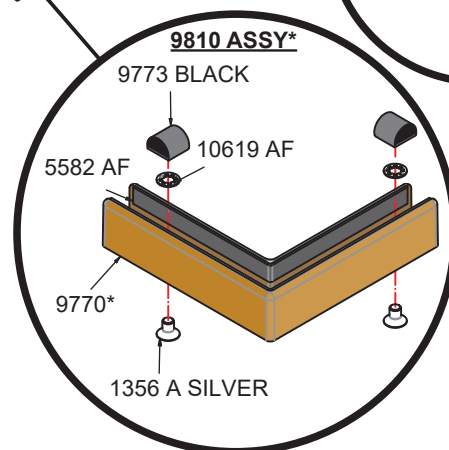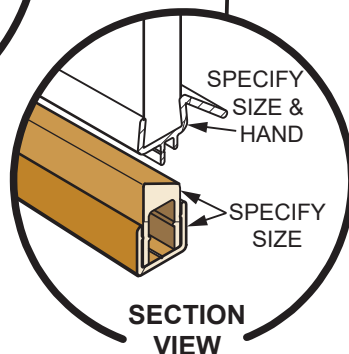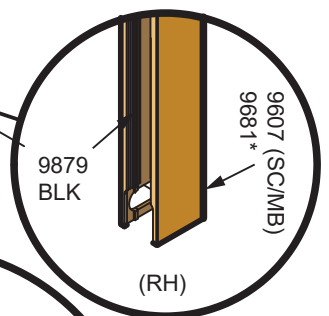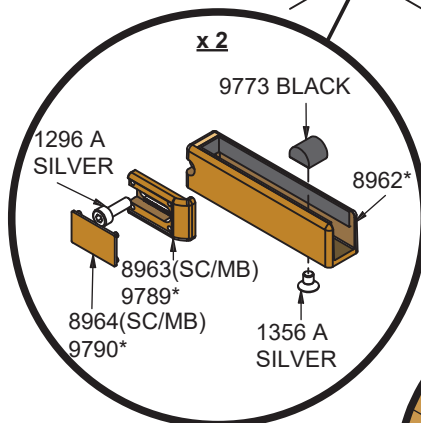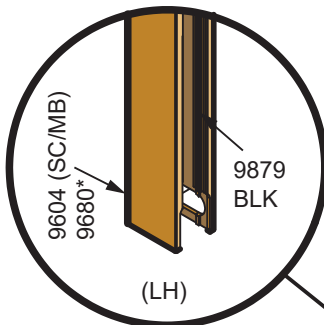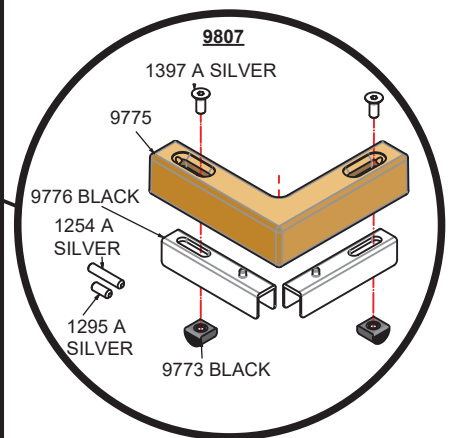

* ALL FINISHES APART
FROM SC/MB