


matki

EAUZONE

EPR - INWARD OPENING HINGED DOOR FROM WALL

BRITISH PATENT NO. 2470778

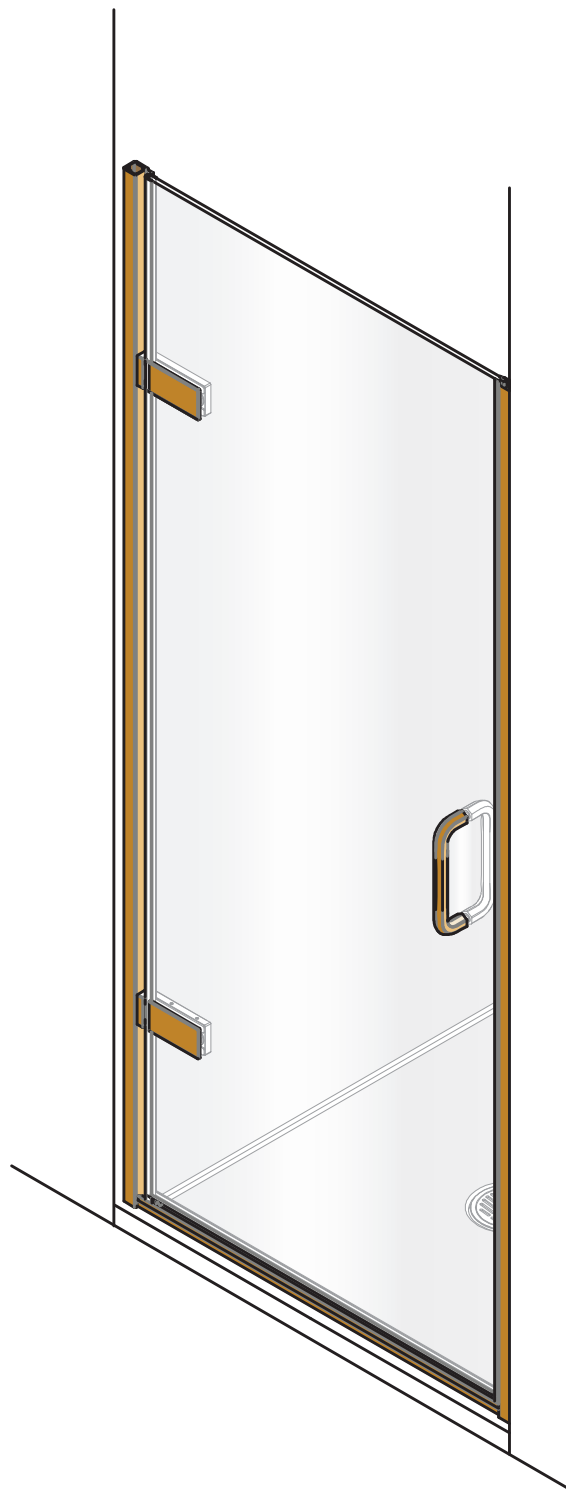

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10733 AF 03/25

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT


1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door, stage 5. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.


CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS


Dimensions are approximate

MODEL RECESS	A
EPR 700	670 – 700
EPR 760	730 - 760
EPR 800	770 – 800
EPR 900	870 – 900

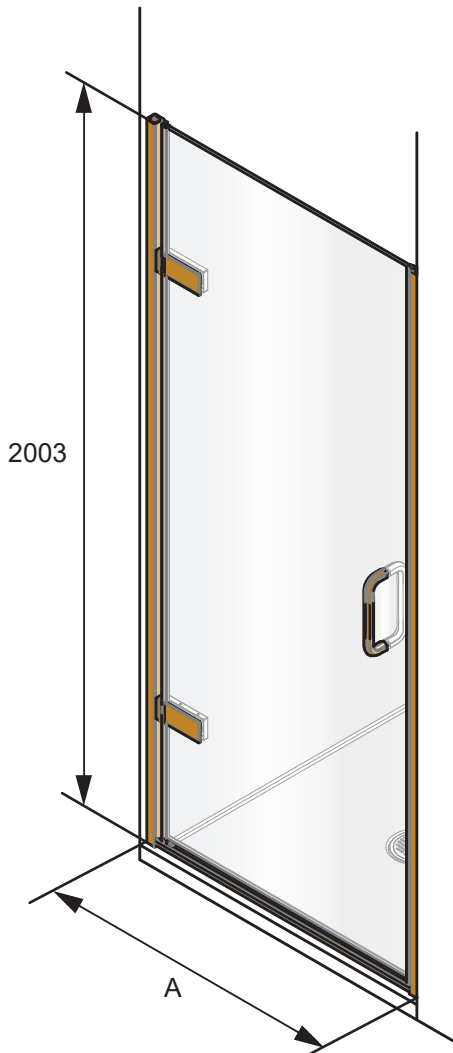

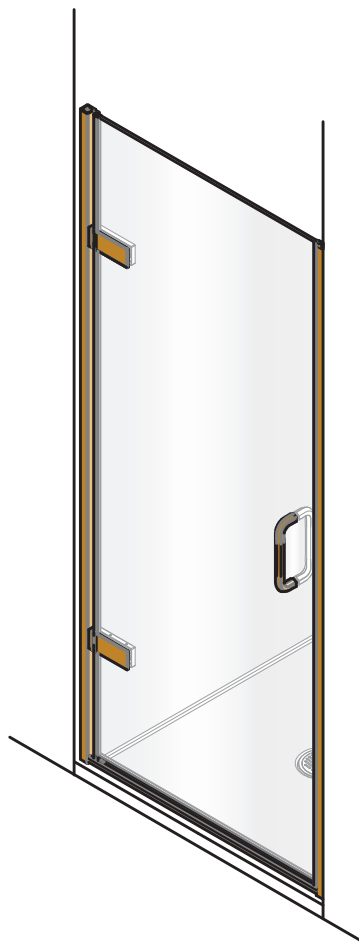

EPR INWARD LH

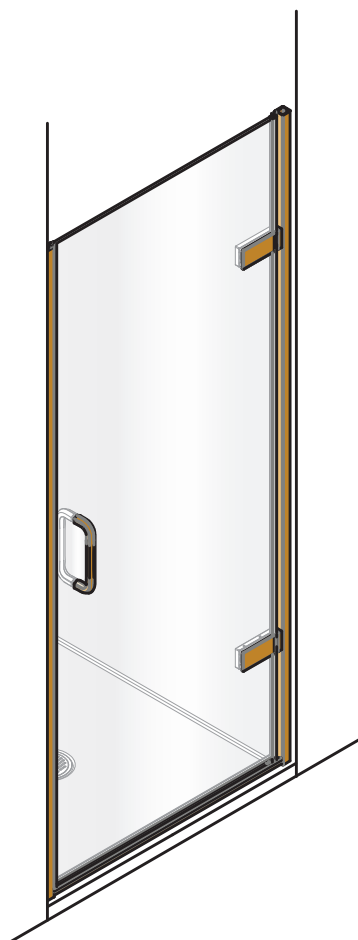


EPR INWARD RH




THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED DOOR INSTALLATION, REVERSE FOR RH.

SETTING OUT

DIAGRAMS SHOW EPR LH HINGED DOOR, REVERSE FOR RH



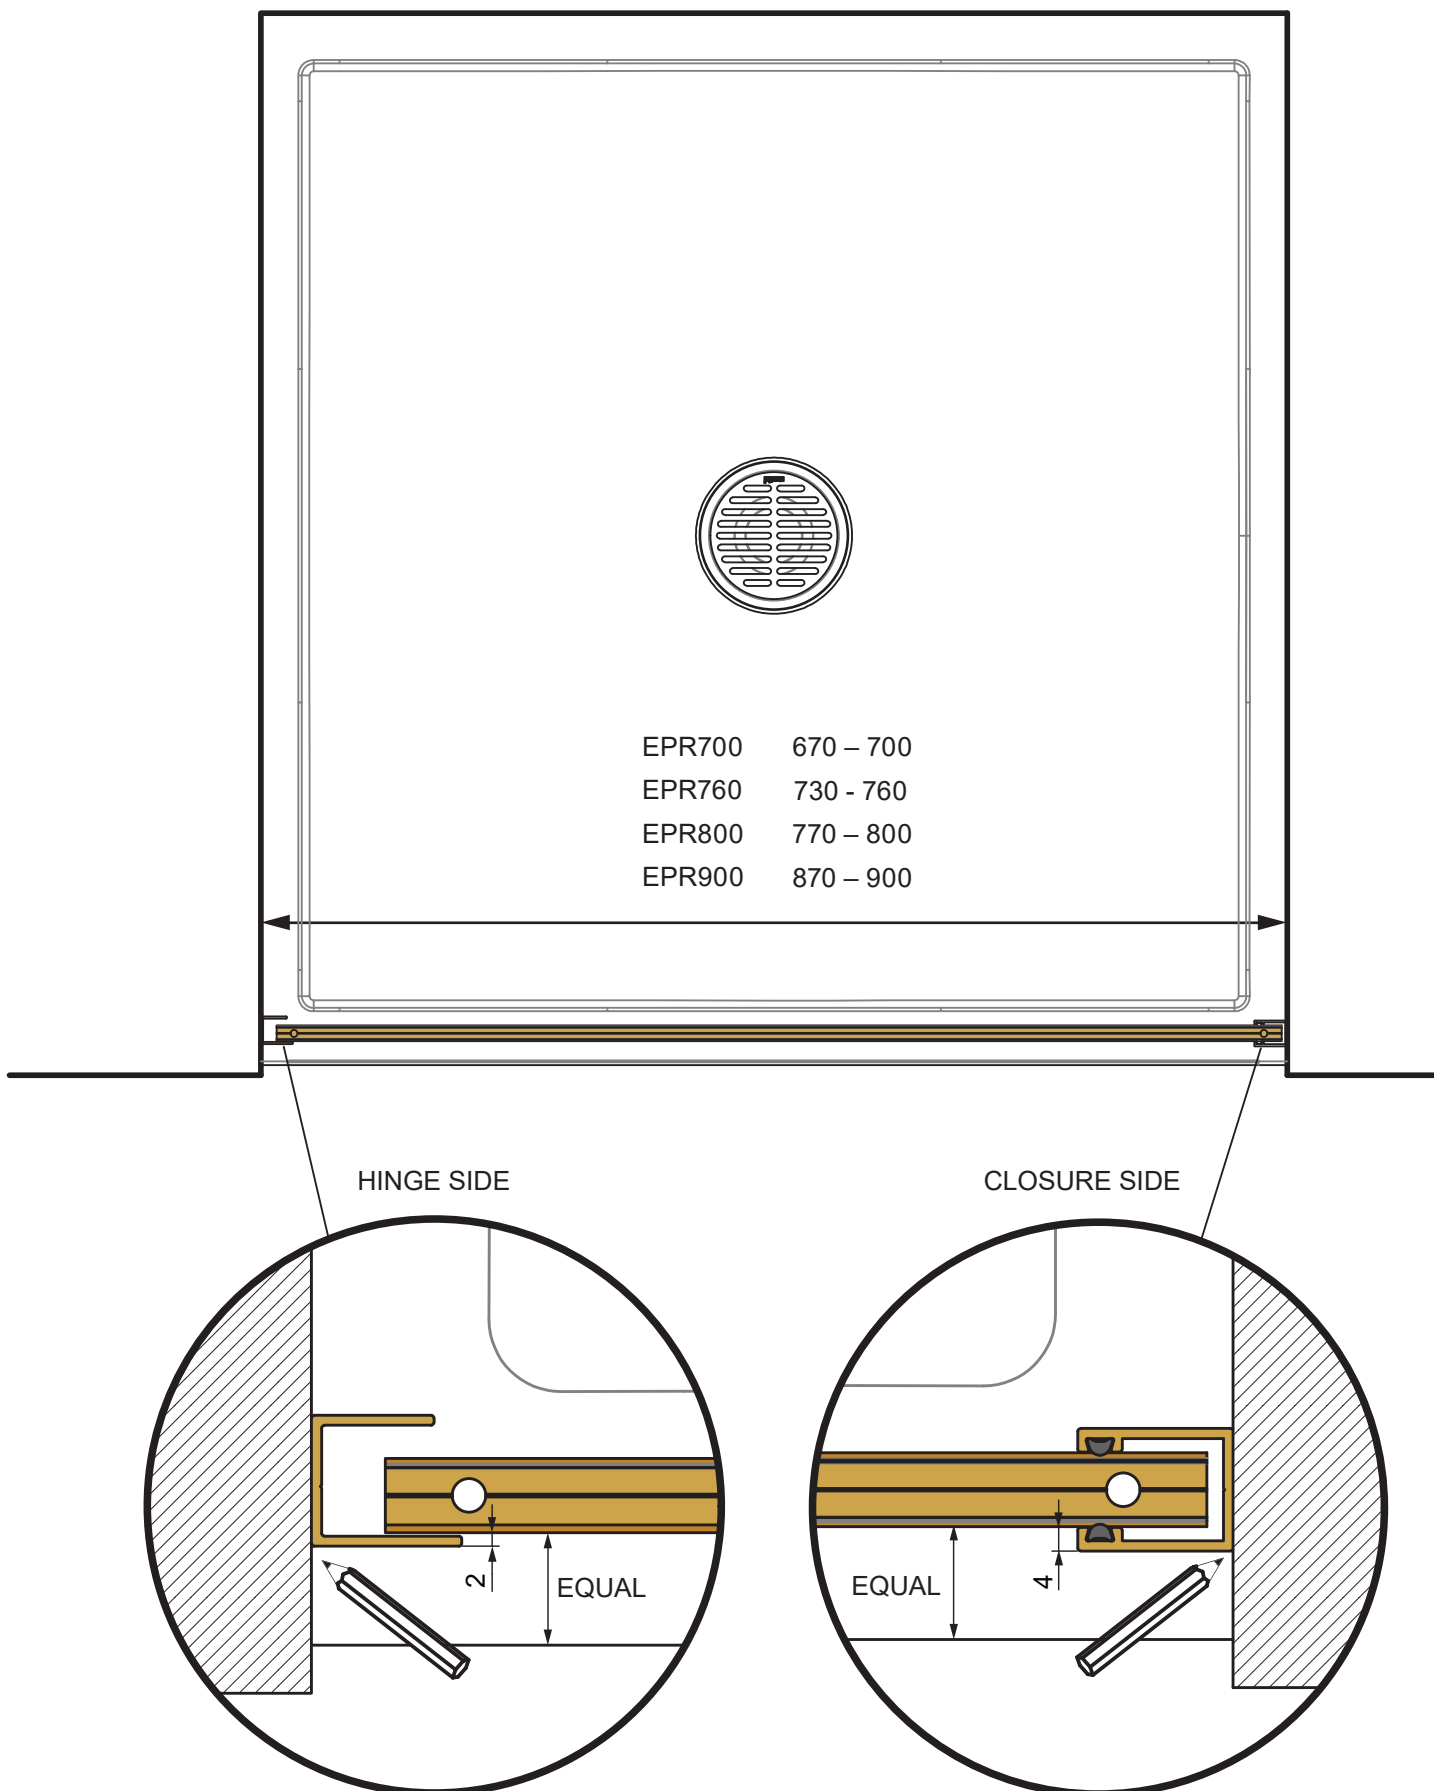


STAGE 1



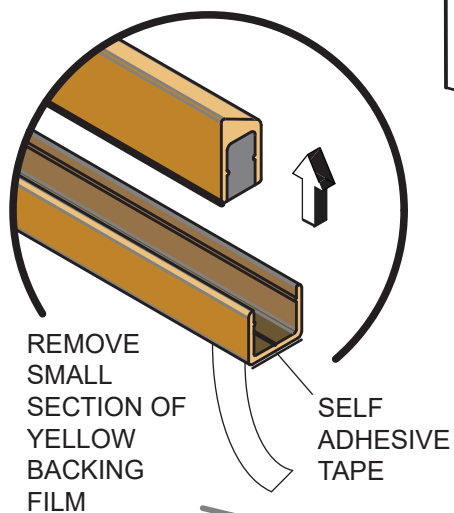
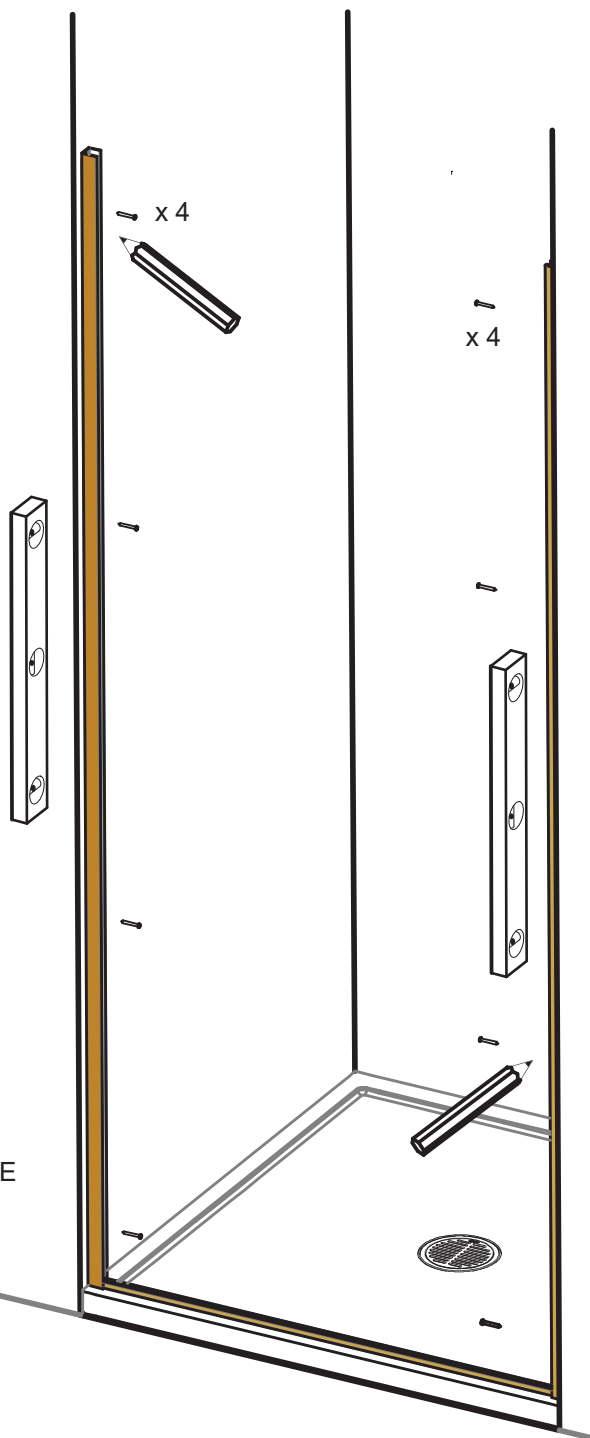
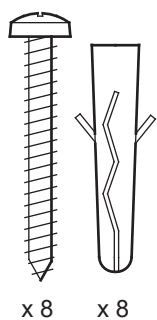


HINGE SIDE

CLOSURE SIDE

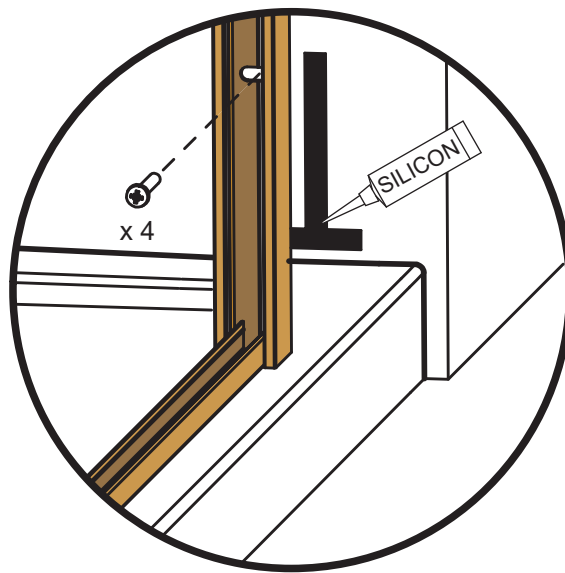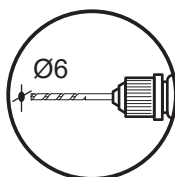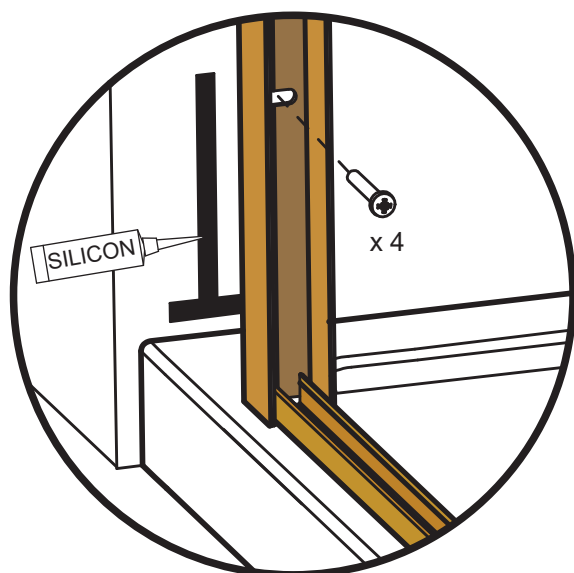

STAGE 2

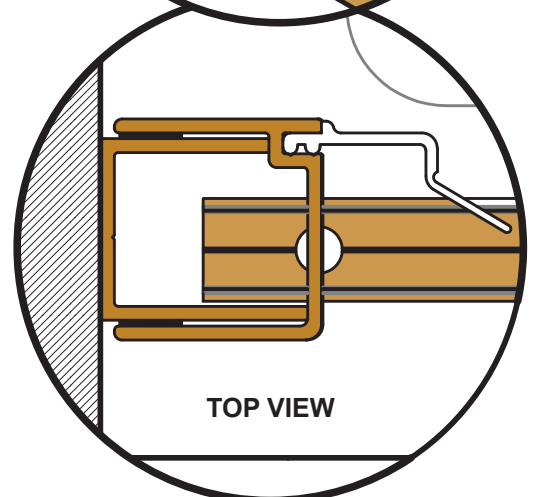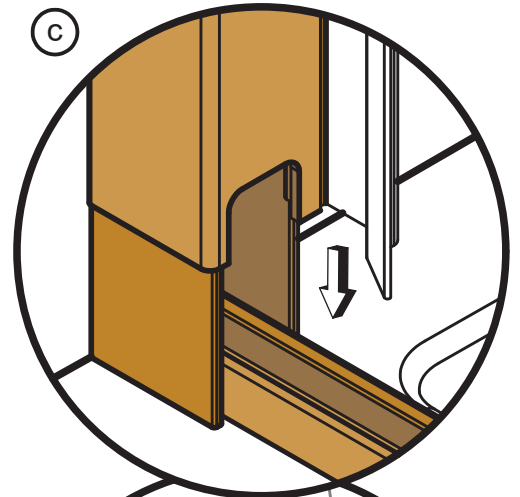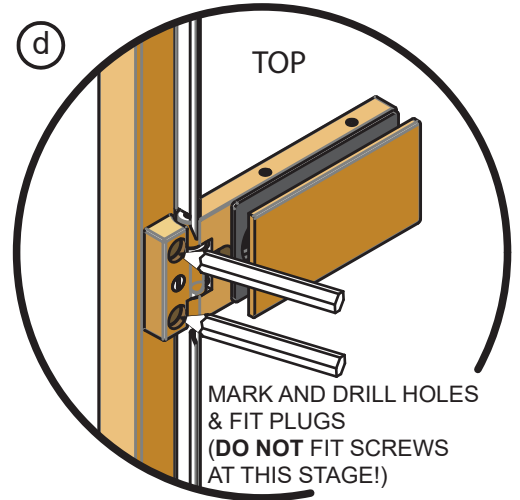
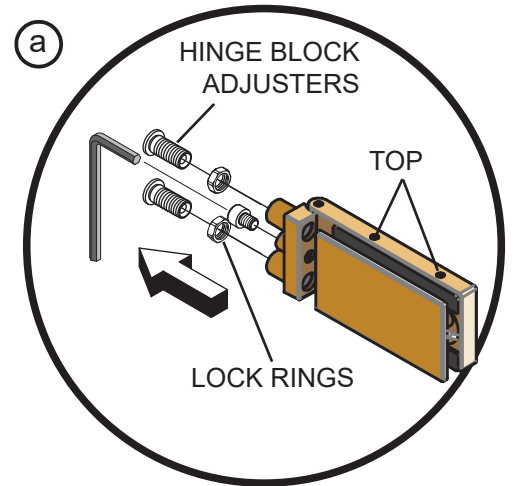
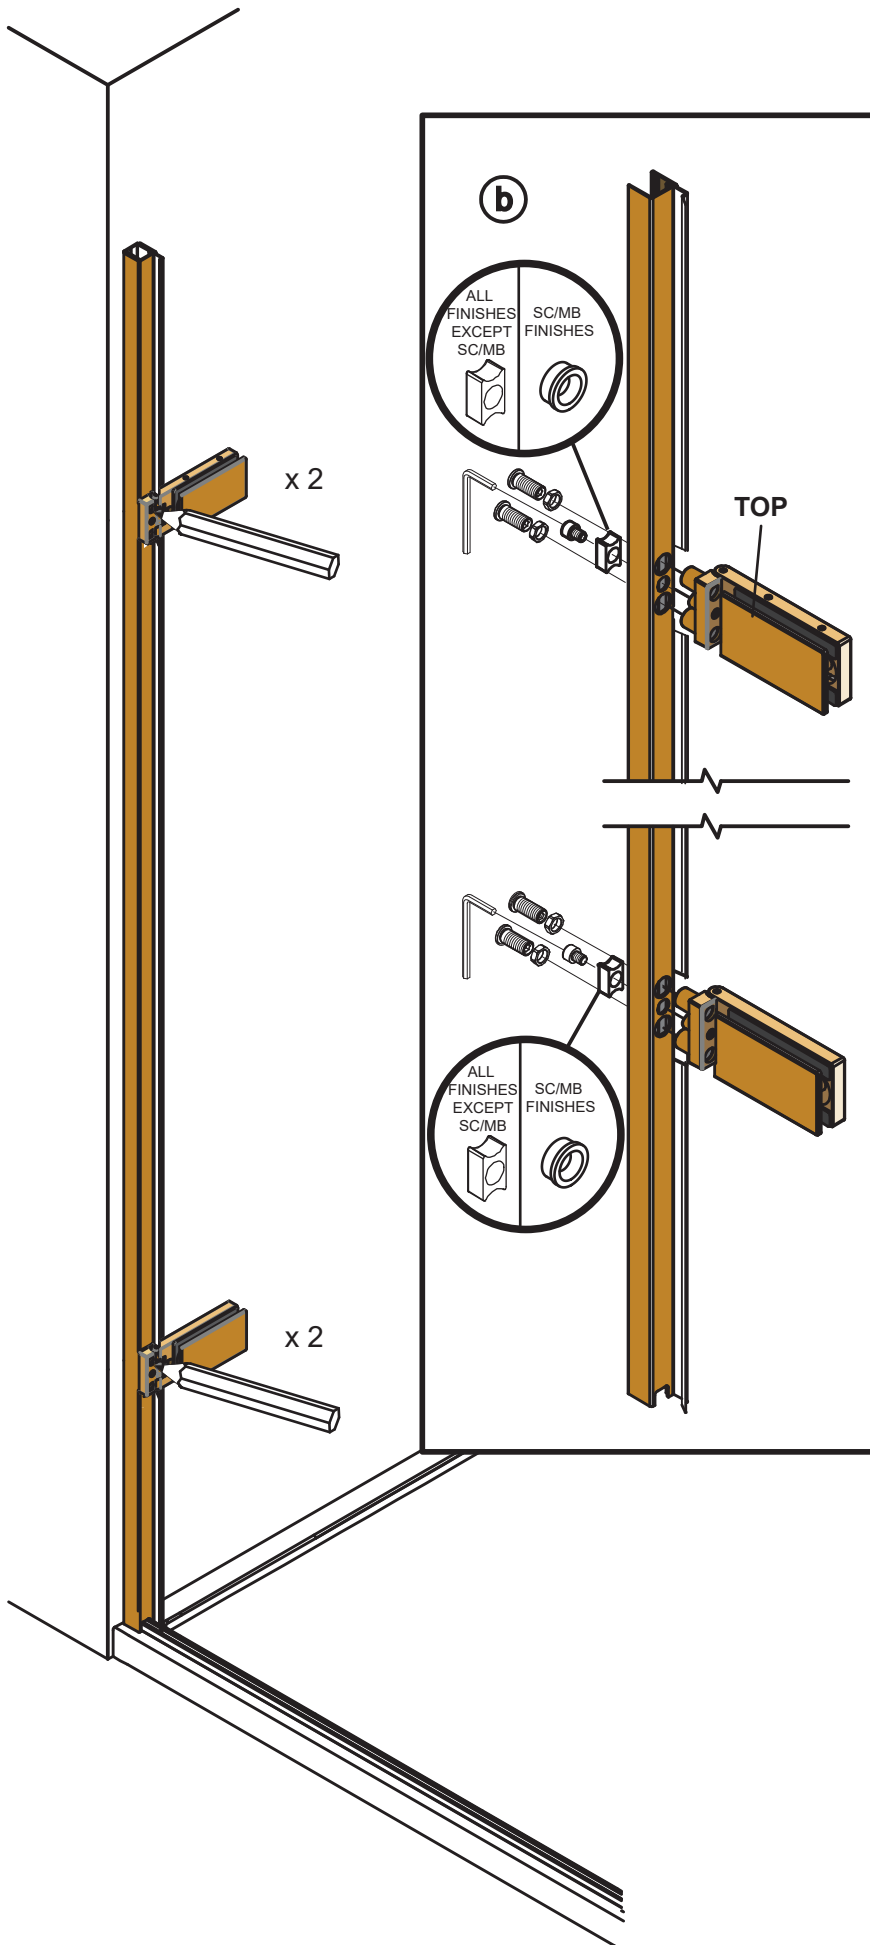


STAGE 3



IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH MOVING PANEL ADJUSTMENT BLOCK POSITION






RH MOVING PANEL ADJUSTMENT BLOCK POSITION

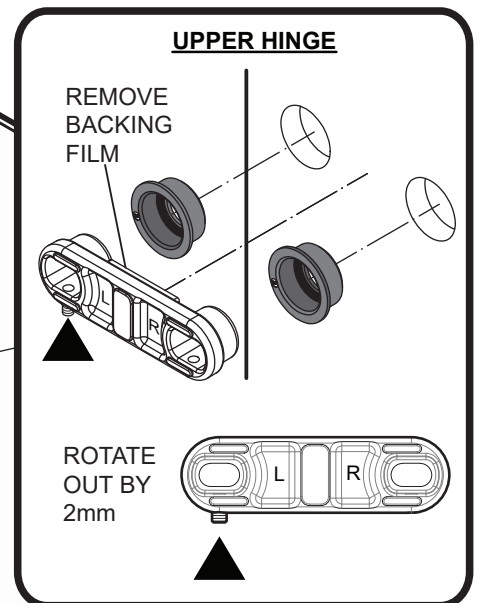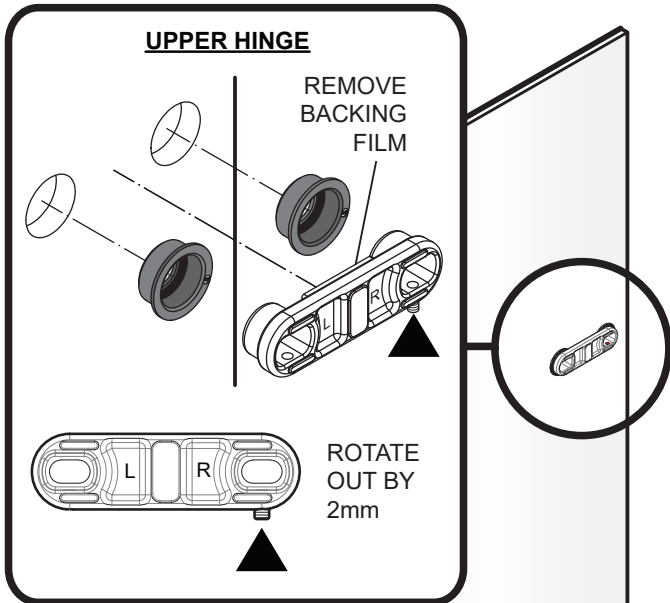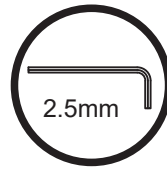





INSIDE VIEW!

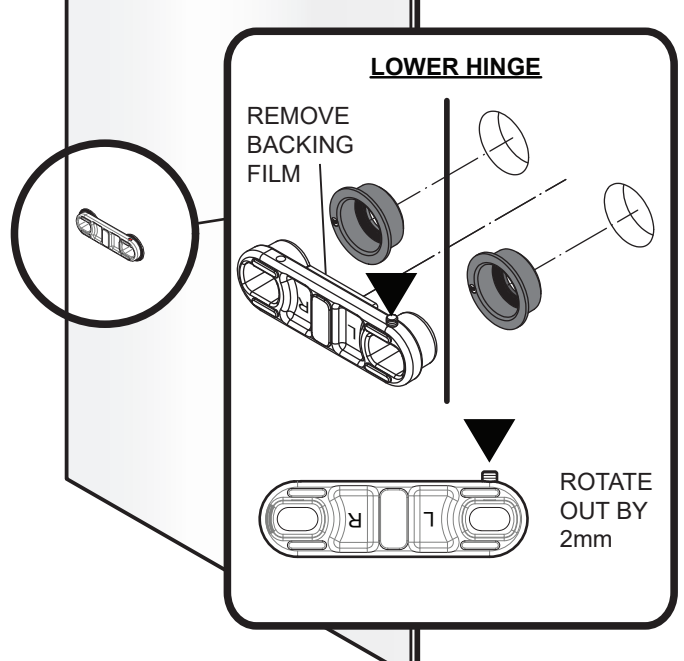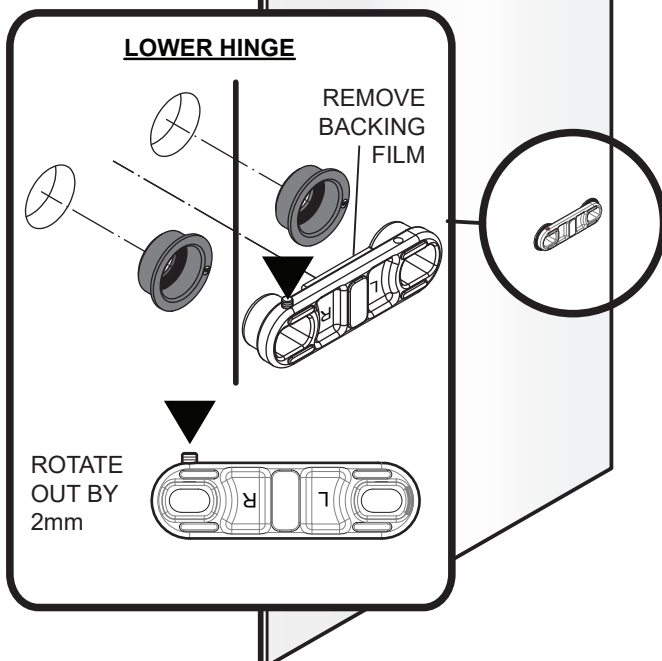



STAGE 4

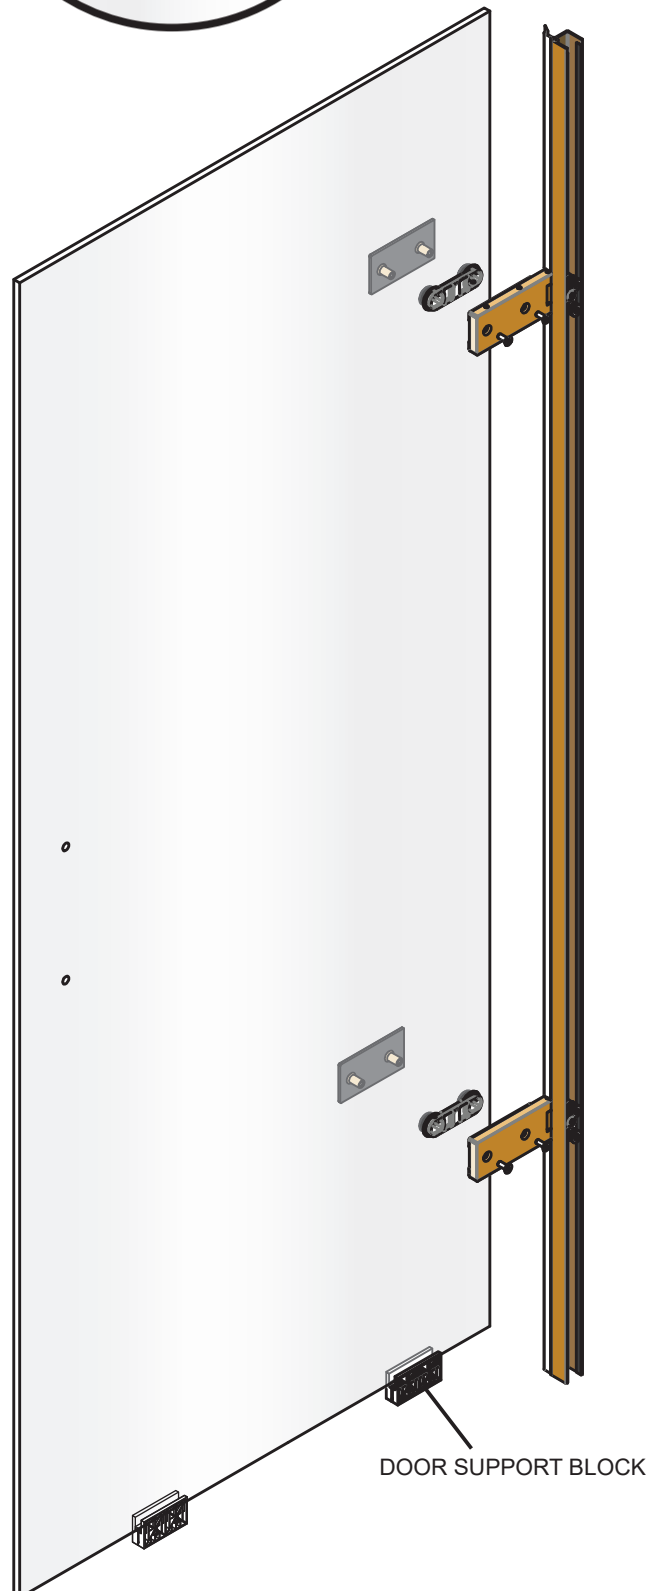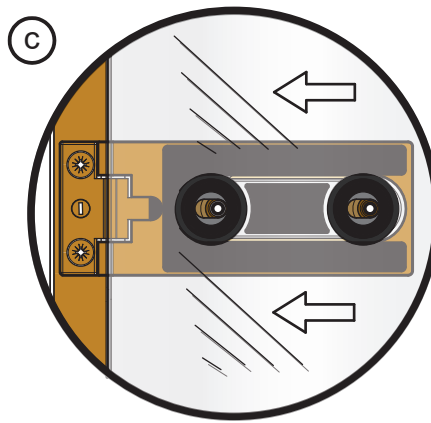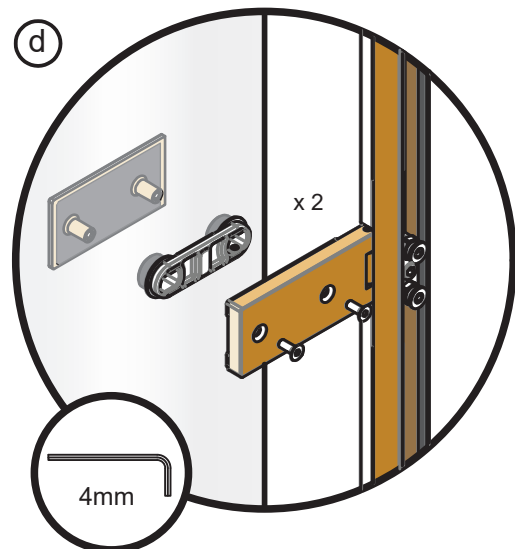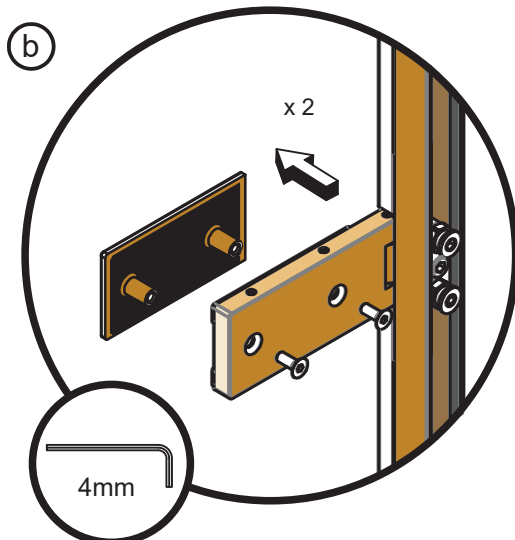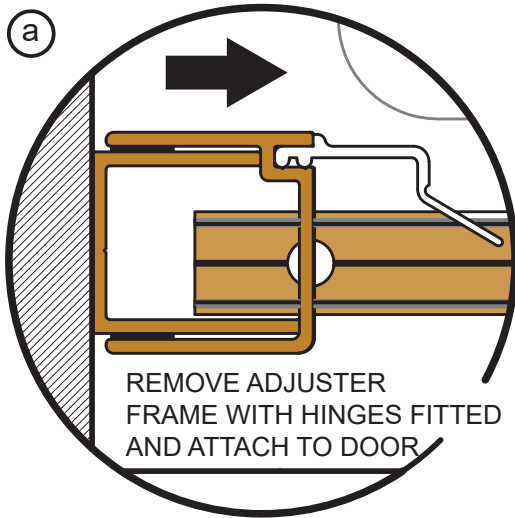








STAGE 5

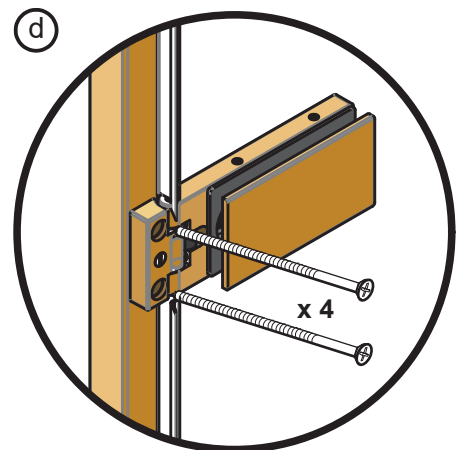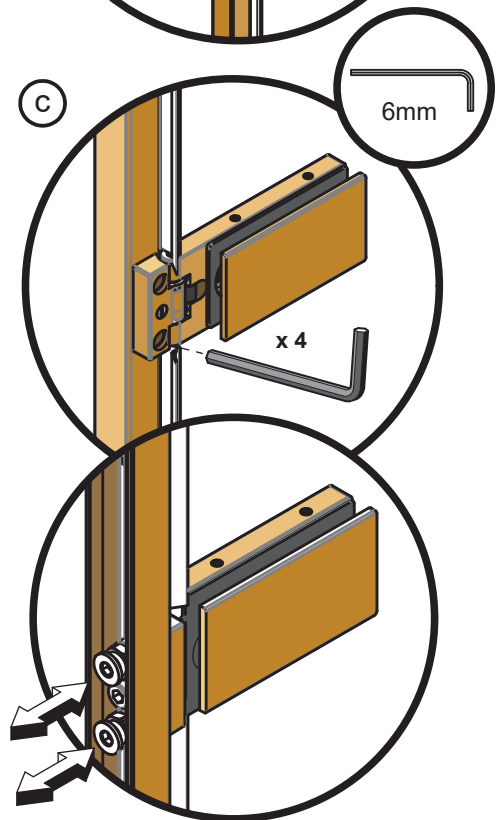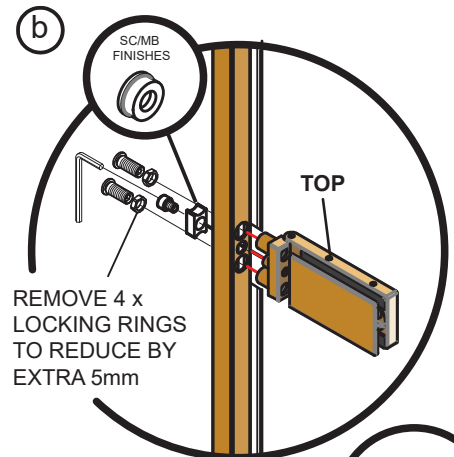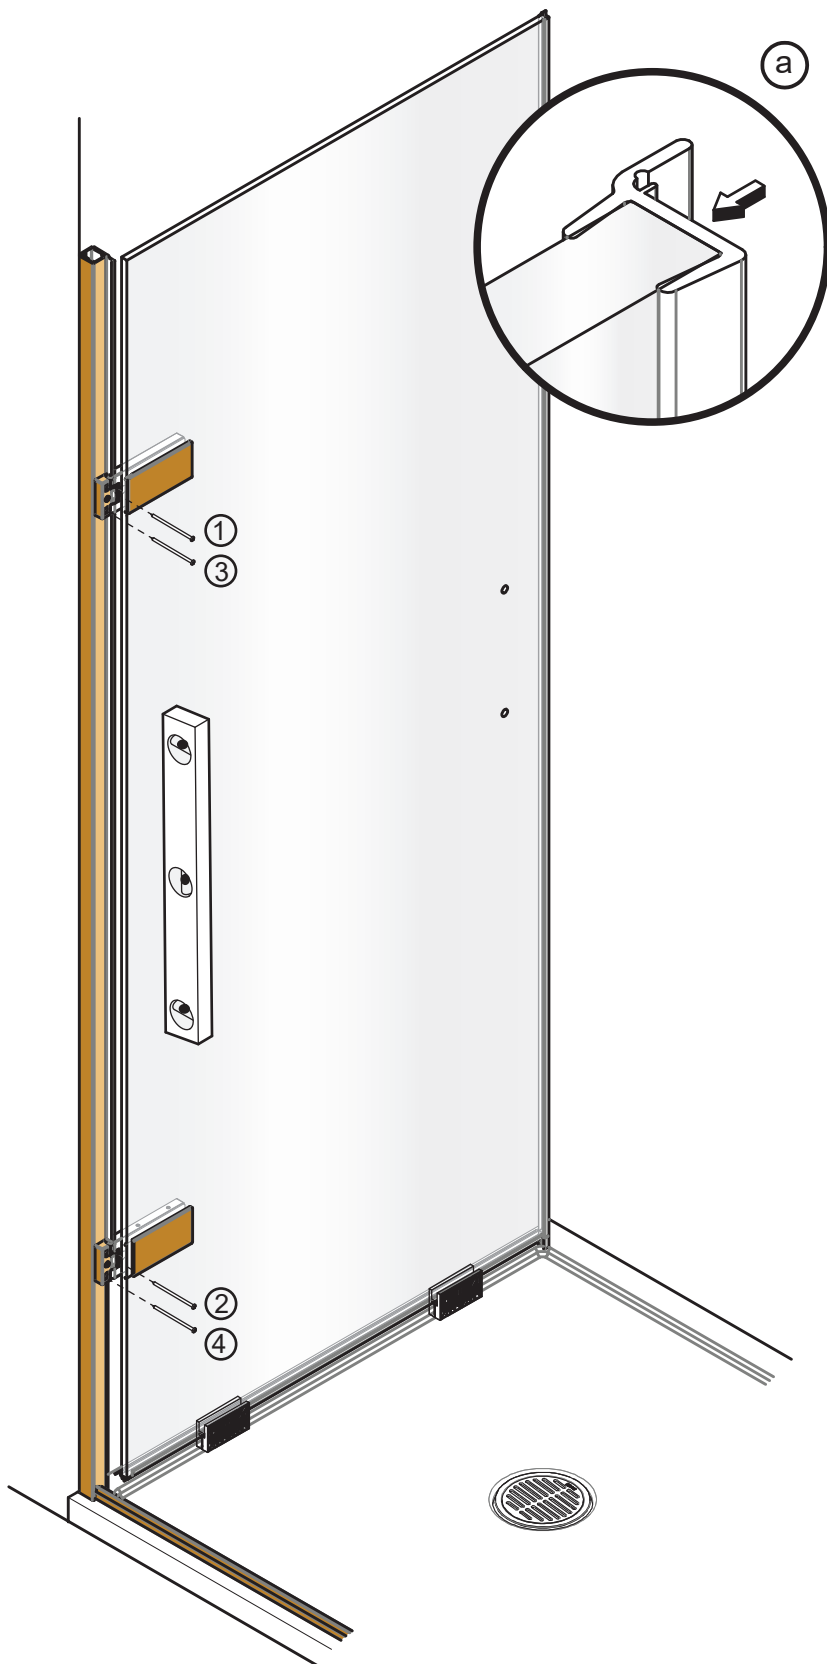

STAGE 6

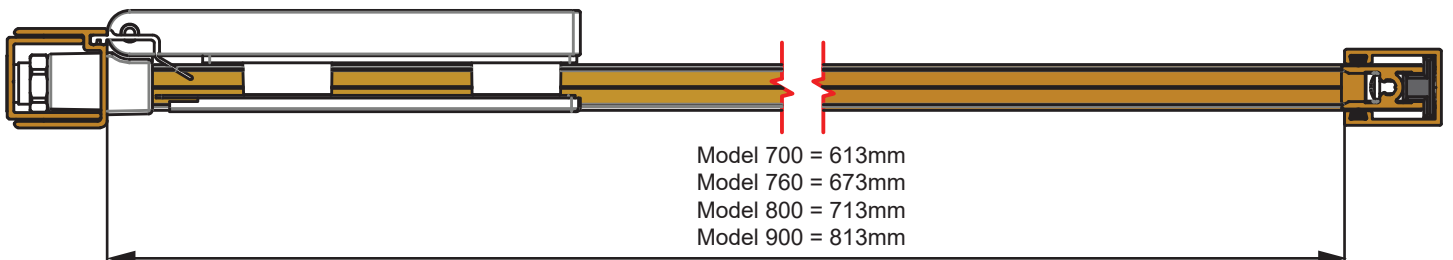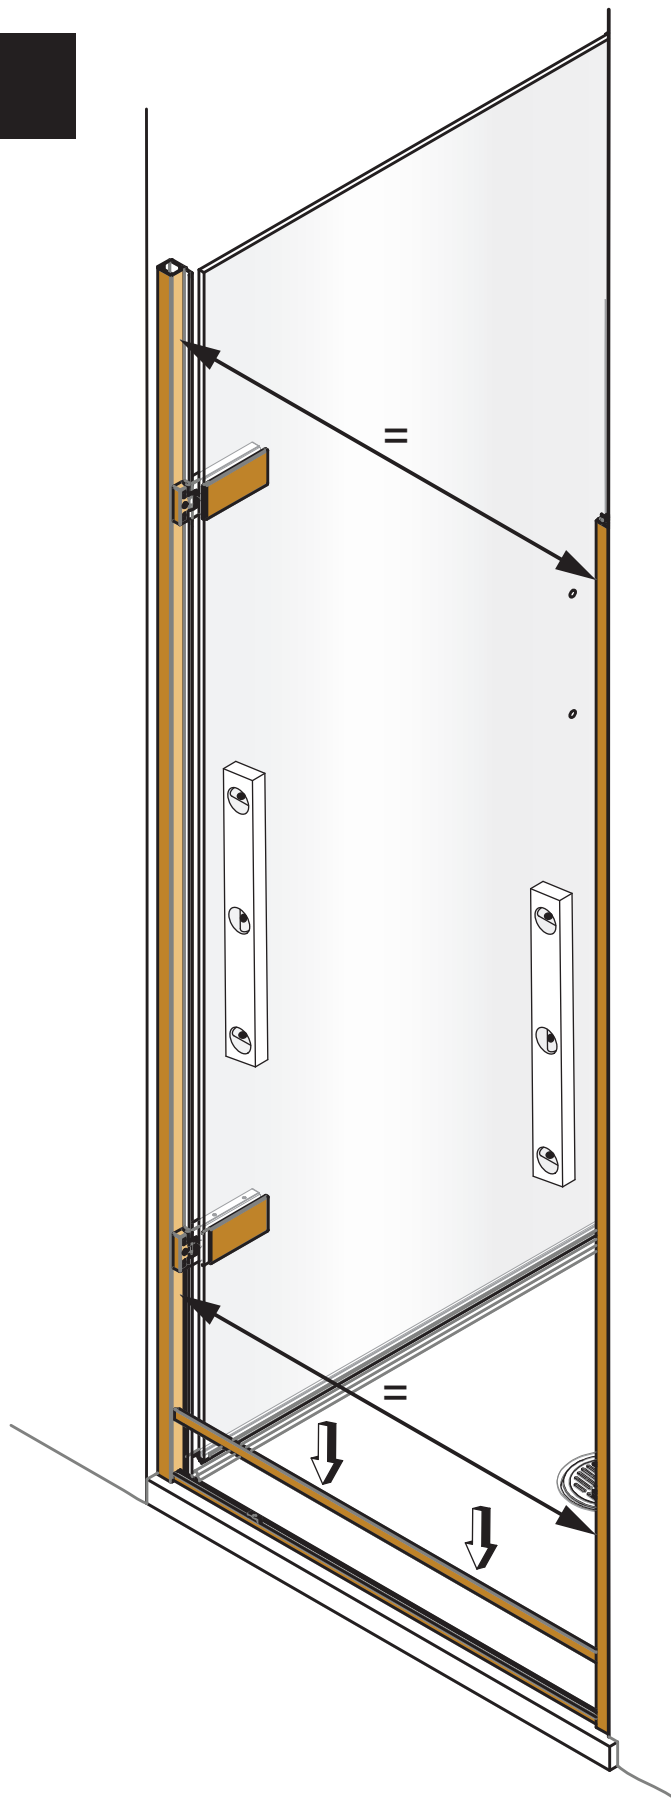

STAGE 6- CONT

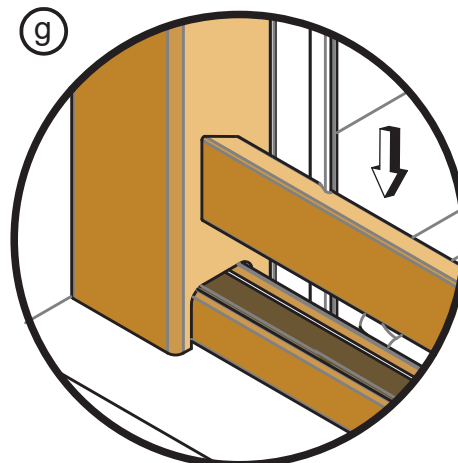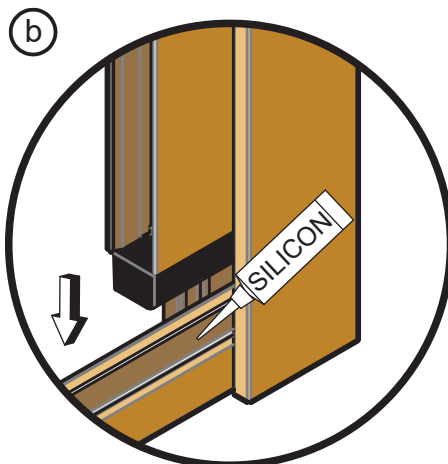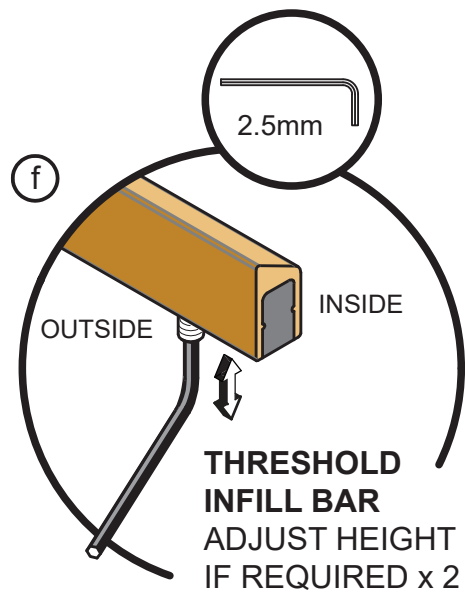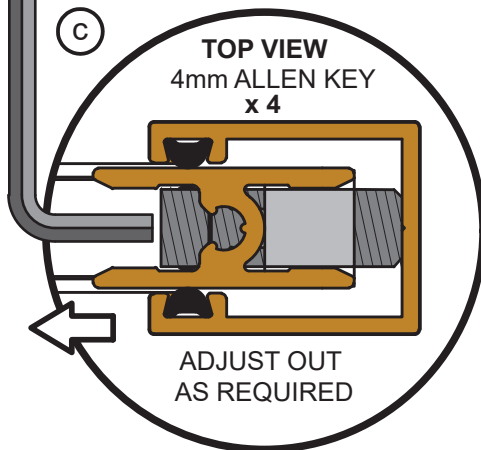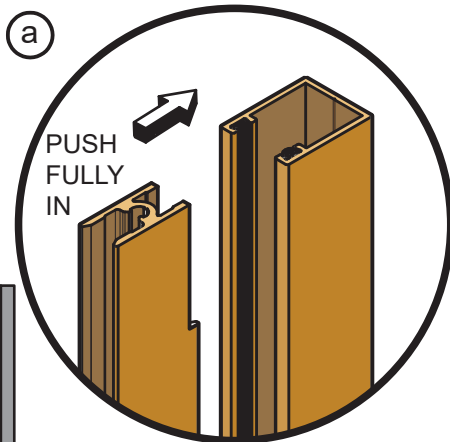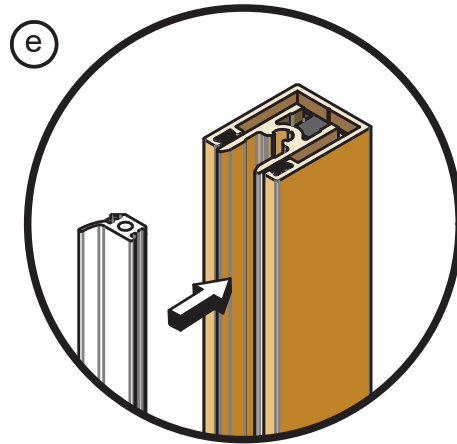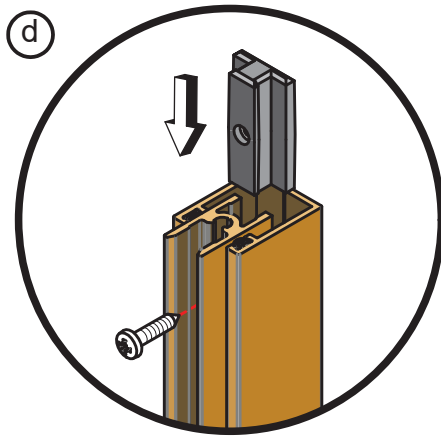


STAGE 7

HANDLE VARIANTS


ILLUSTRIOUS

9808*

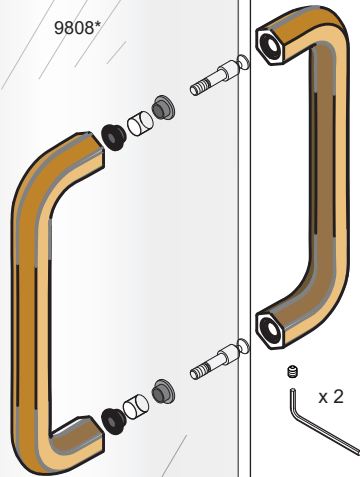


LINEAR

6185*

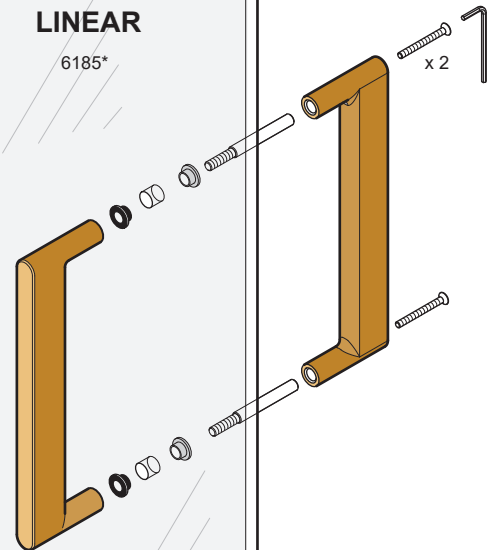


TRADITIONAL

8632*

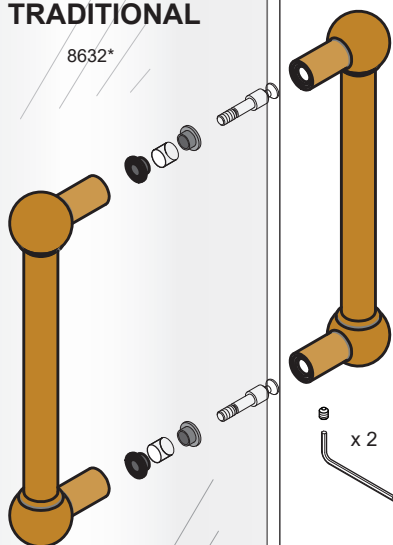


ENGINEER

9809ASSY*

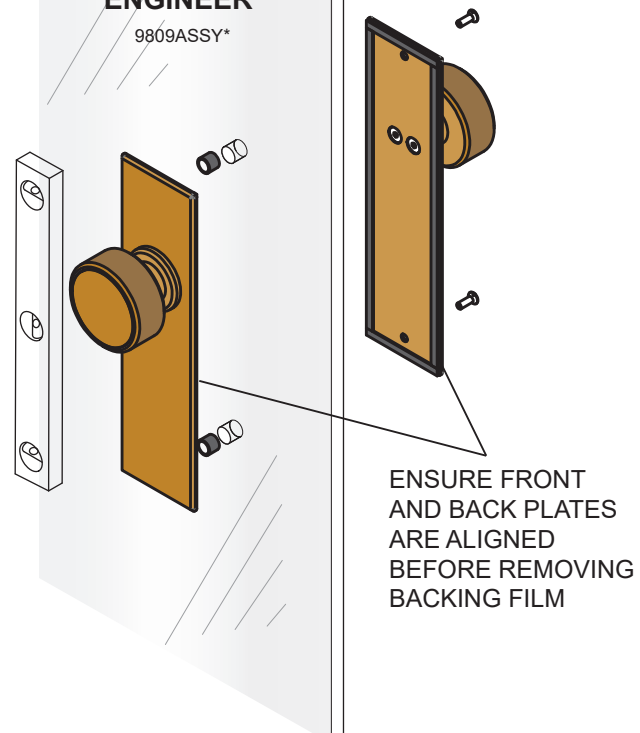


FIT DOOR STOP PROVIDED

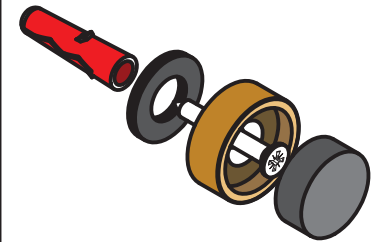


WHERE THE DOOR HANDLE
OPENS INTO THE INTERNAL WALL

ENSURE FRONT
AND BACK PLATES
ARE ALIGNED
BEFORE REMOVING
BACKING FILM









STAGE 8

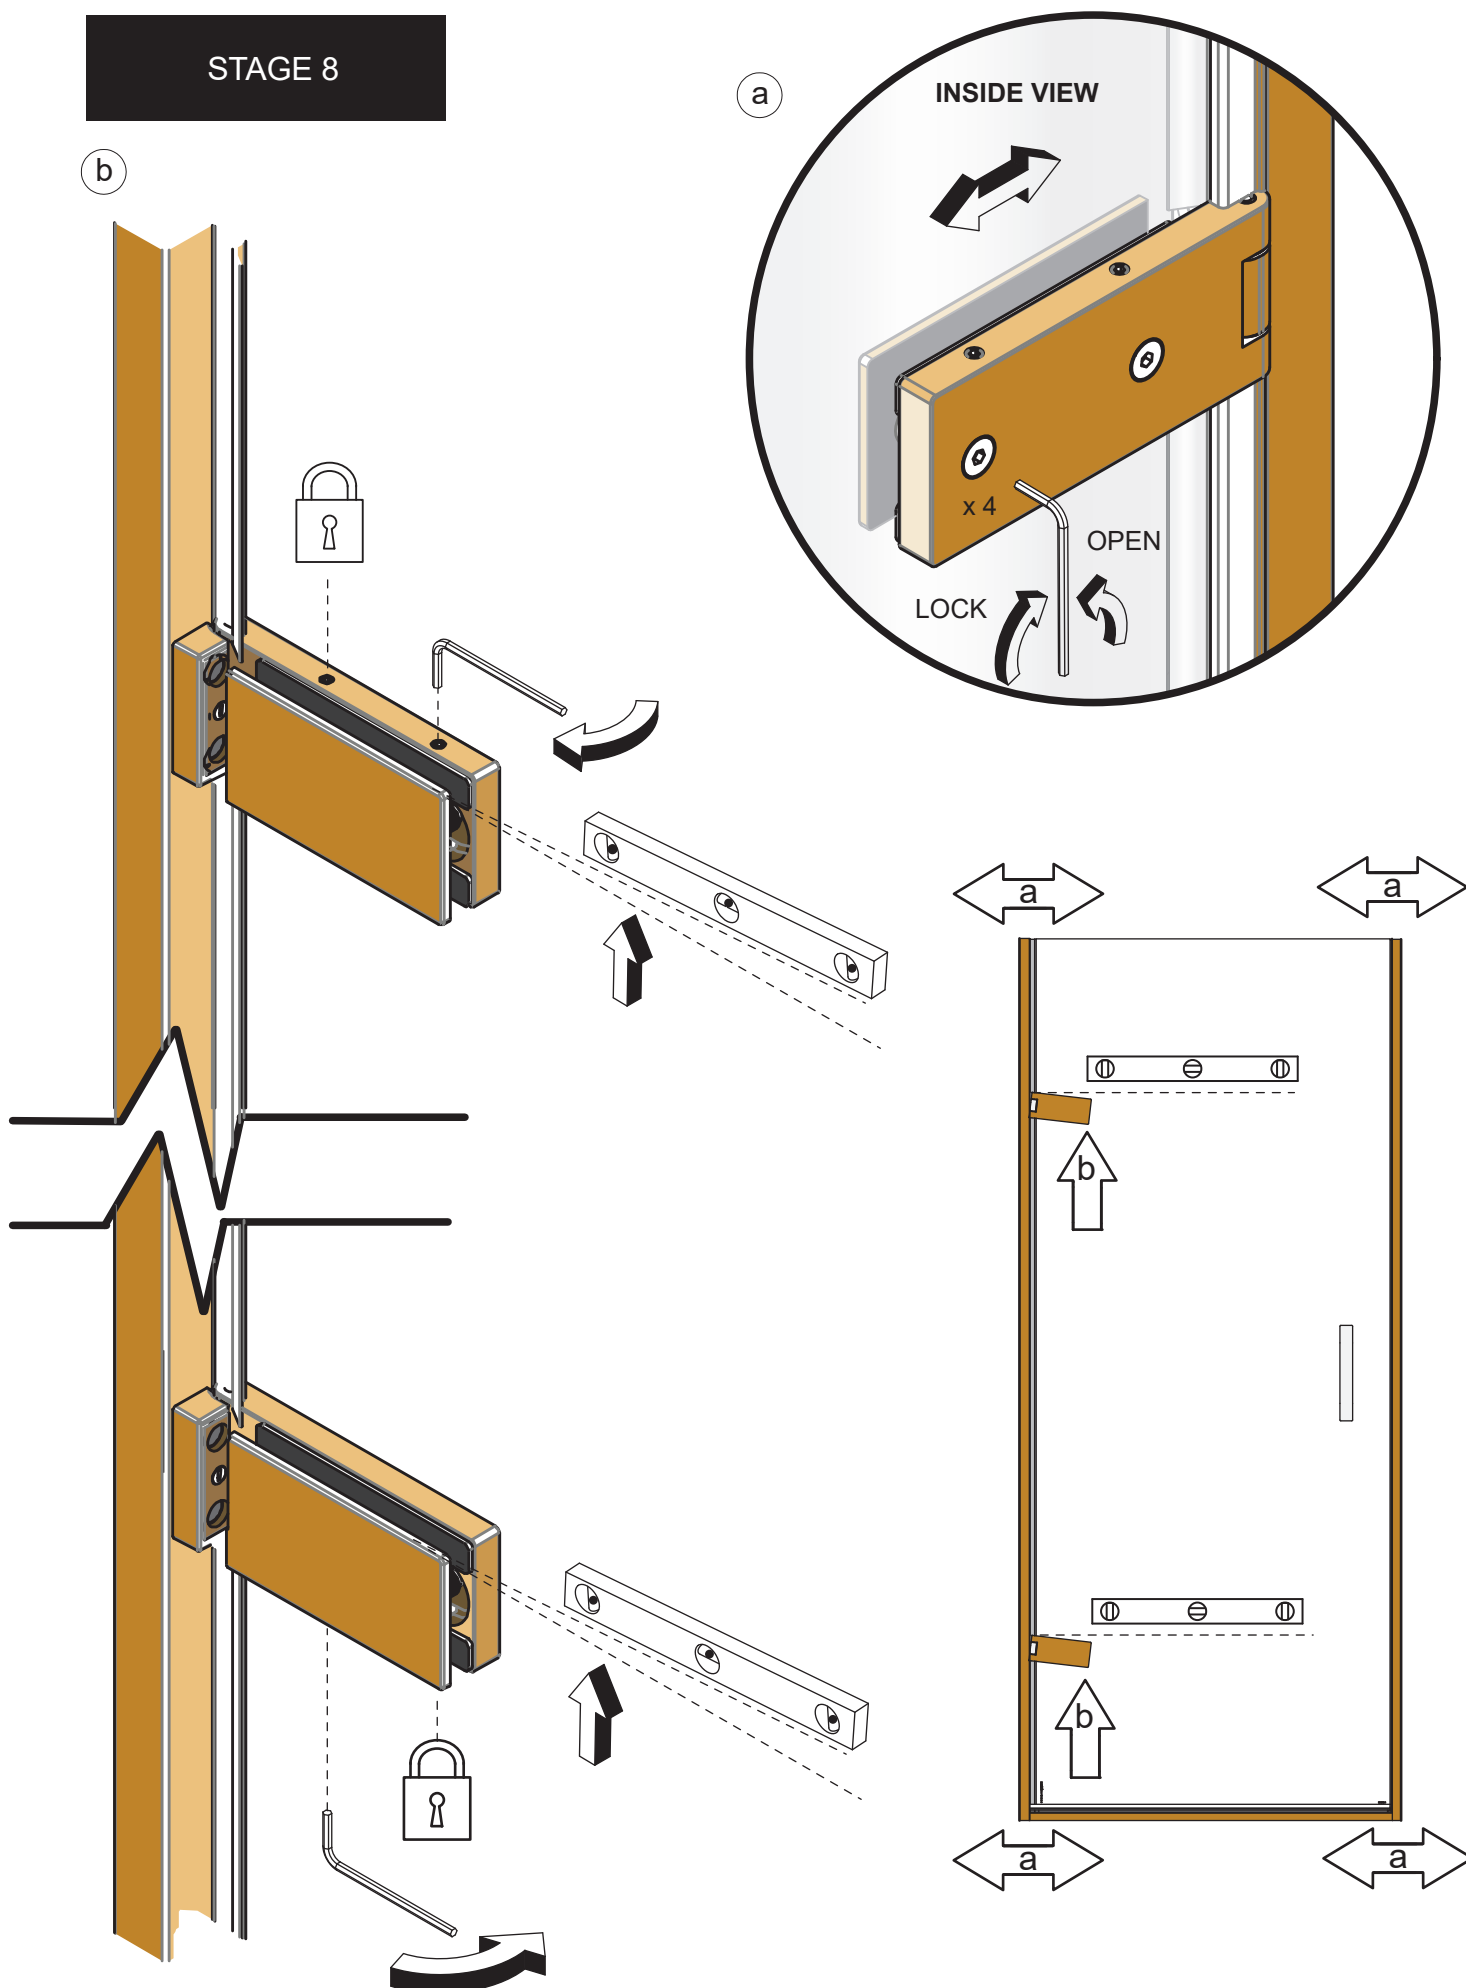


STAGE 9

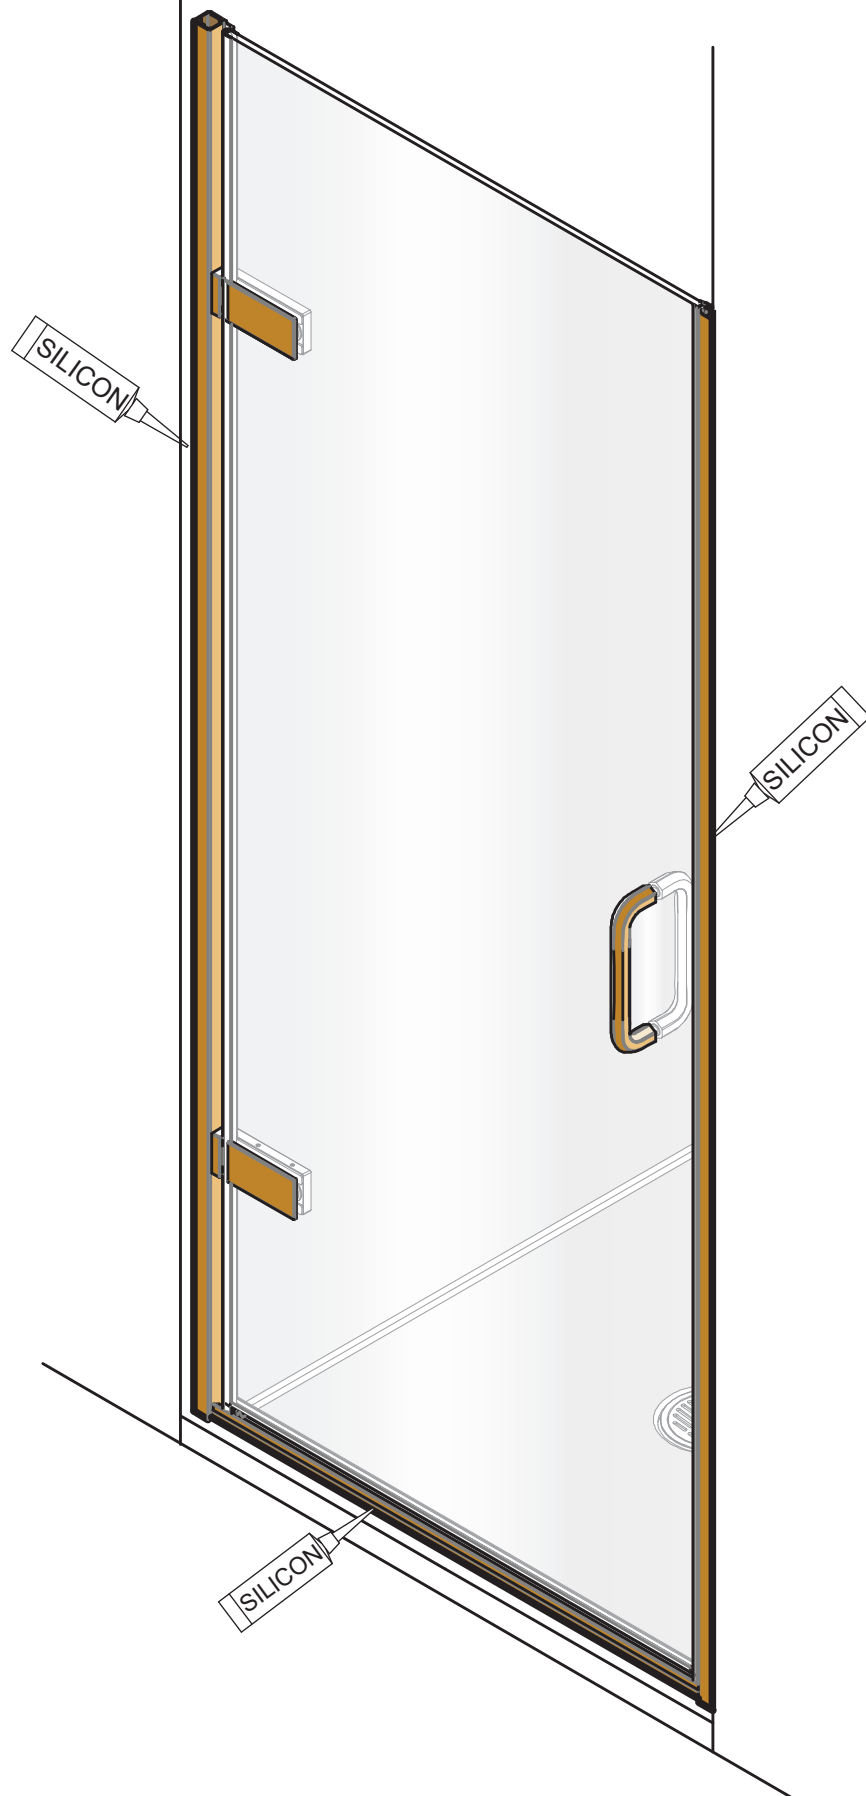

STAGE 9 -CONT

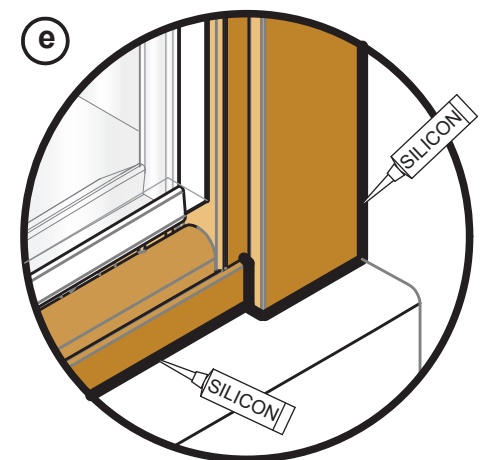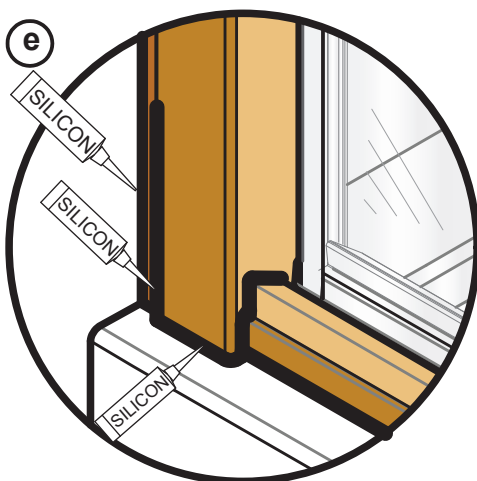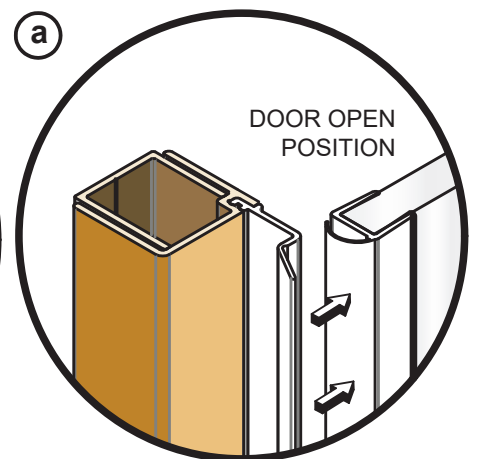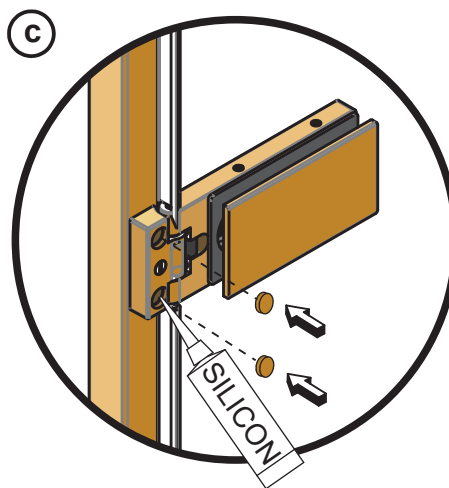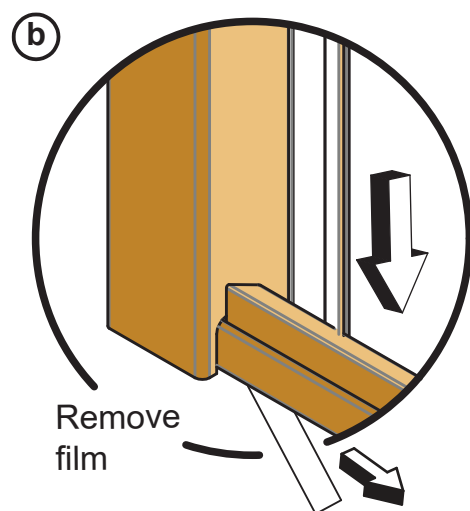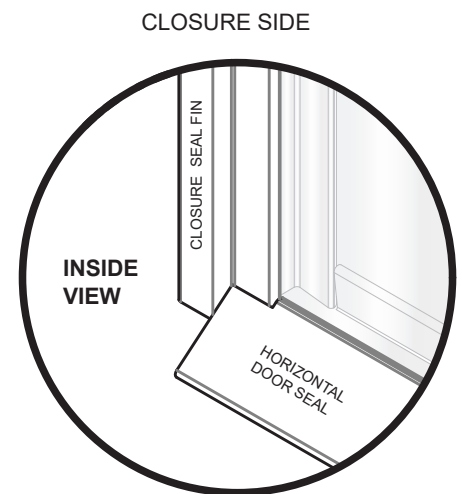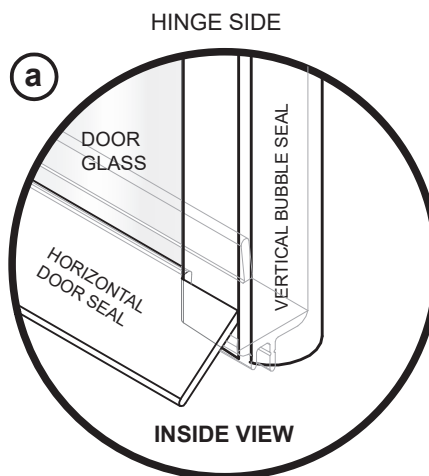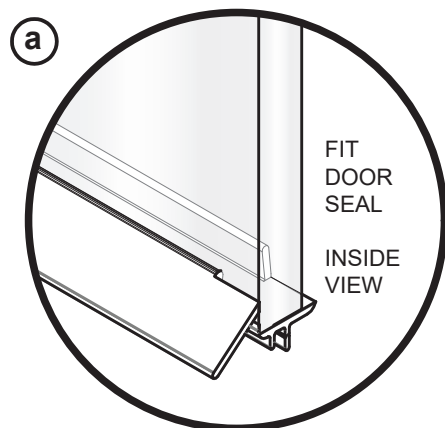

PARTS LIST

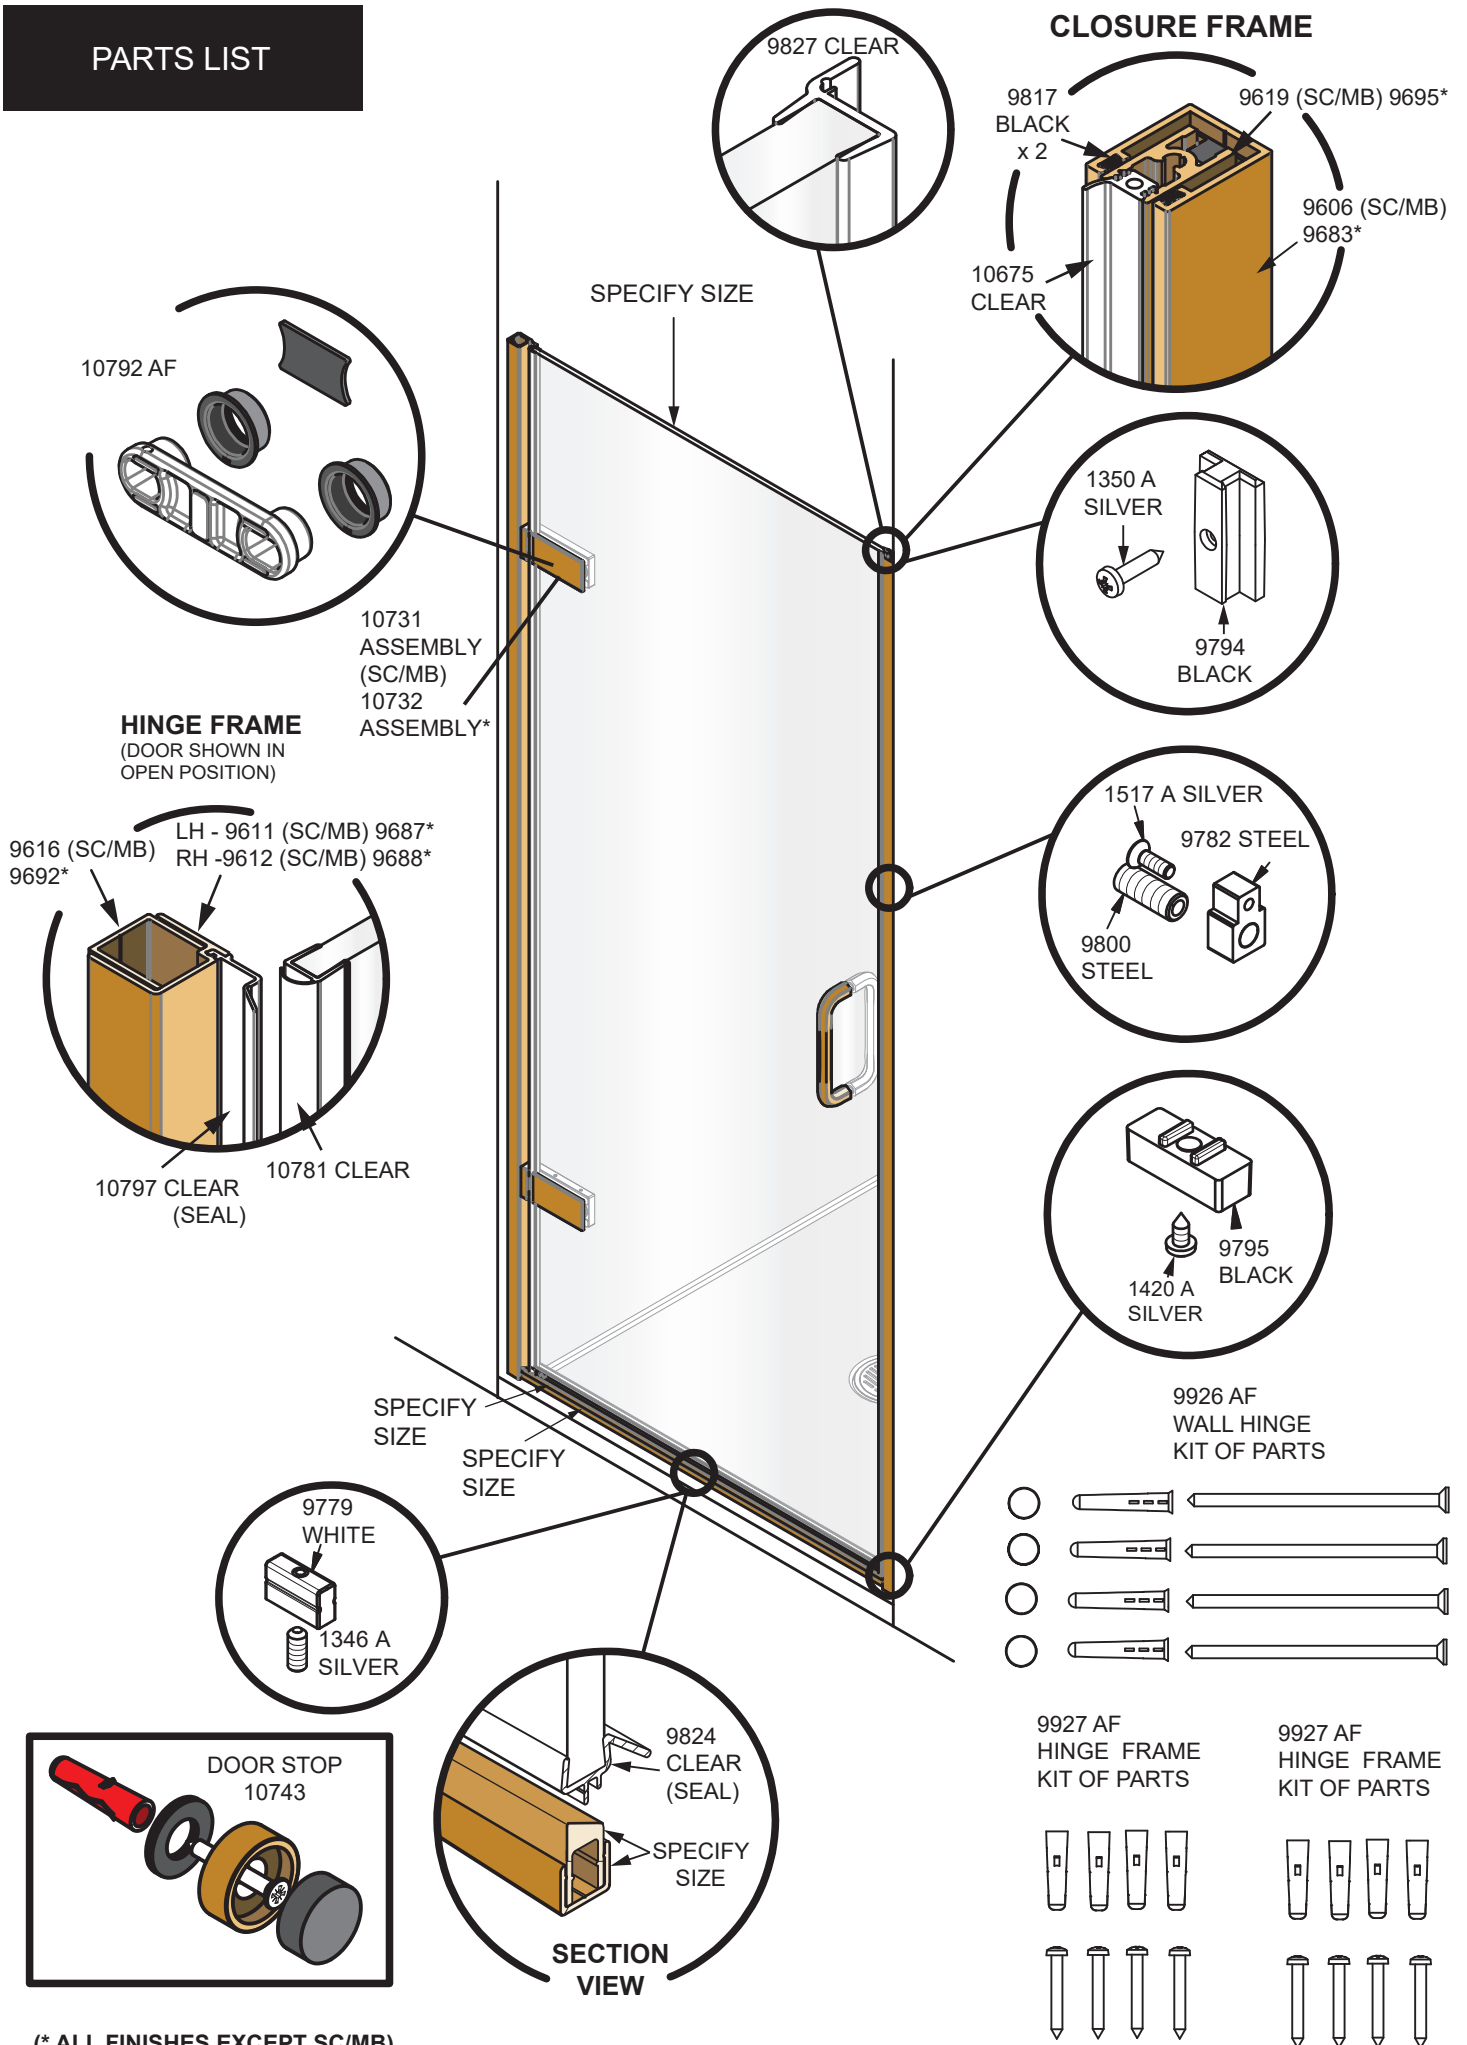

(* ALL FINISHES EXCEPT SC/MB)