


matki

EAUZONE

EPW - HINGED DOOR FROM WALL
AND INLINE PANEL FOR RECESS
INWARD OPENING

BRITISH PATENT NO:2470778

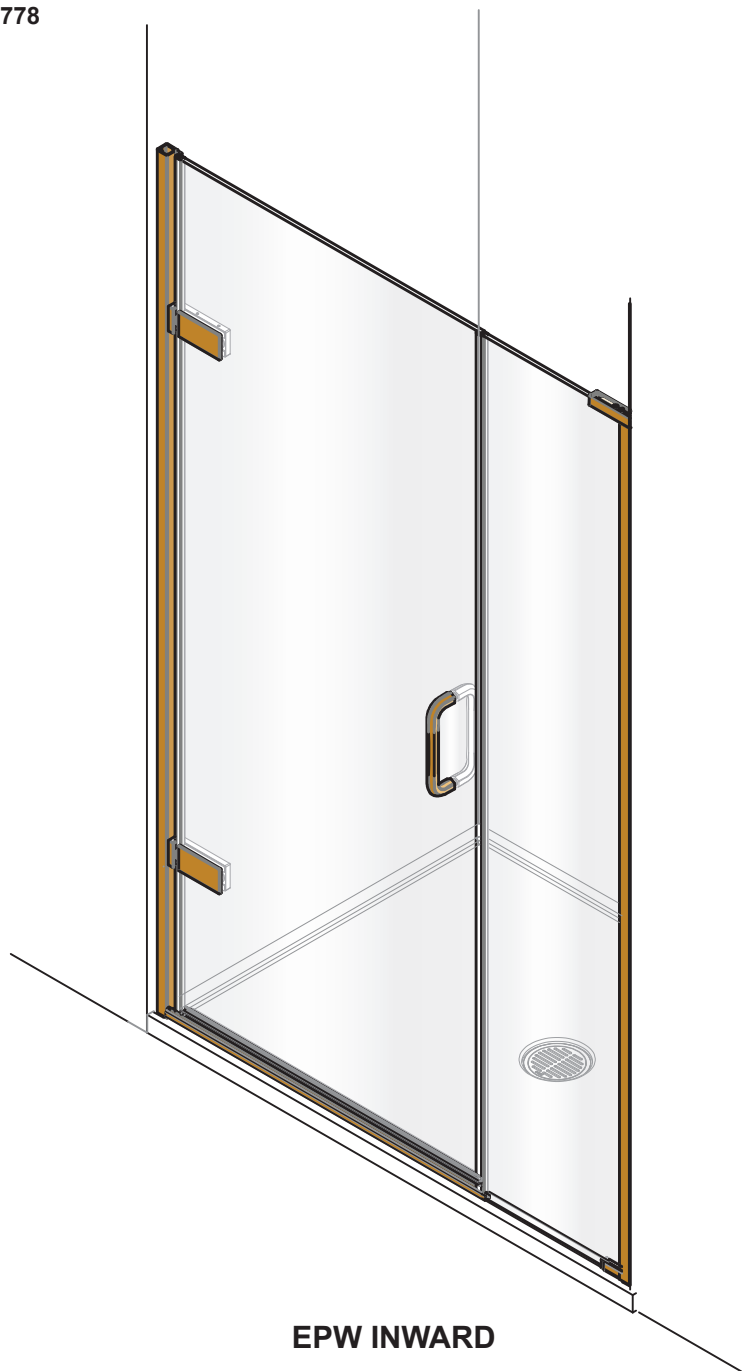

EPW INWARD

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA


matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL


BS EN 14428:2015+A1:2018

10735 AF 03/25

Matki recommend that this product is fitted by professional installers

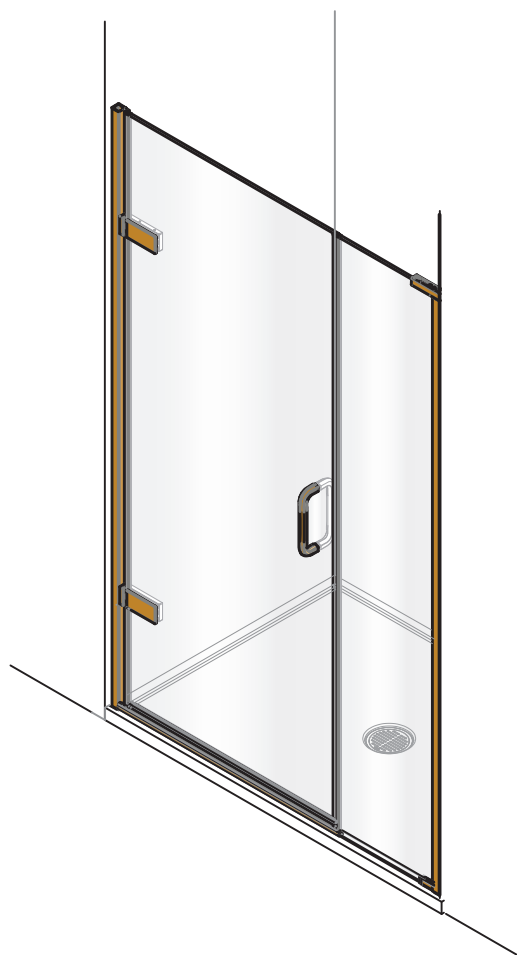

EPW INWARD LH

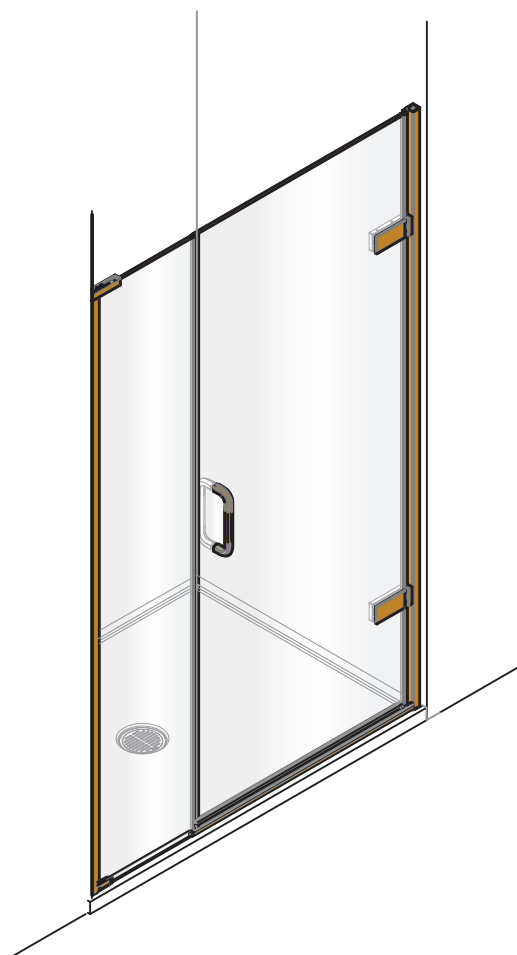

EPW INWARD RH

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED DOOR INSTALLATION, REVERSE FOR RH.

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT


1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door, Stage 6. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS

Dimensions are approximate

MODEL RECESS	A + B	A	B
EPW800	770 – 800	600	200
EPW850	820 – 850	600	250
EPW900	870 – 900	700	200
EPW950	920 - 950	700	250
EPW1000	970 – 1000	800	200
EPW1050	1020 - 1050	800	250
EPW1100	1070 – 1100	900	200
EPW1150	1120 - 1150	900	250
EPW1200	1170 – 1200	700	500
EPW1250	1220 - 1250	800	450
EPW1300	1270 – 1300	900	400
EPW1350	1320 - 1350	900	450
EPW1400	1370 – 1400	900	500
EPW1450	1420 - 1450	900	550
EPW1500	1470 – 1500	900	600

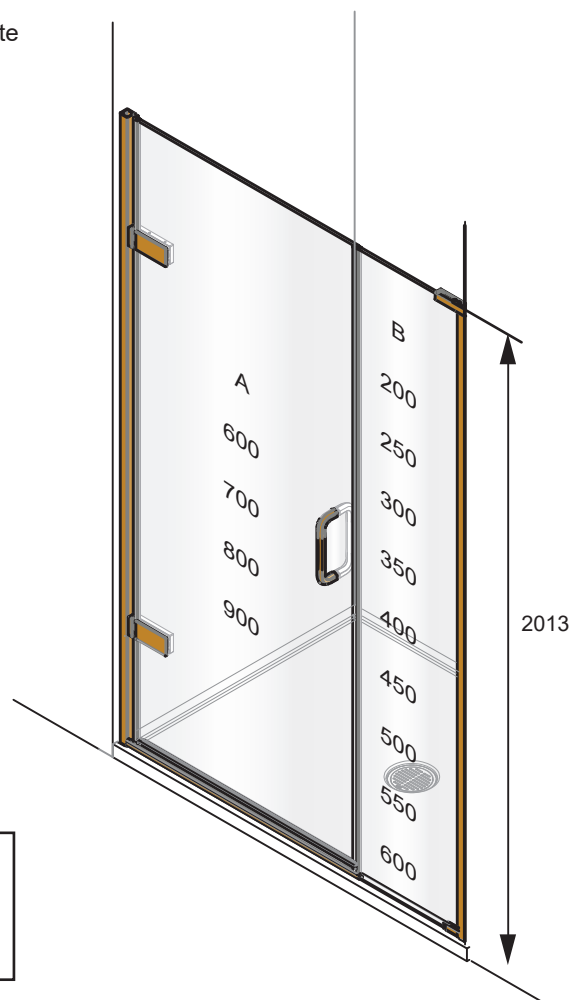


Please note: The Standard Panel and Door options are only listed above. If you have a unit with a different mix and match combination of panels, please refer to the Model size and total width e.g. See below other combinations for Model 1100 all have same total width.


	A + B	A	B
EPW1100	1070 – 1100	800	300
EPW1100	1070 – 1100	600	500

SETTING OUT


IMAGES SHOW LH HINGED DOOR INSTALLATION REVERSE FOR RH.

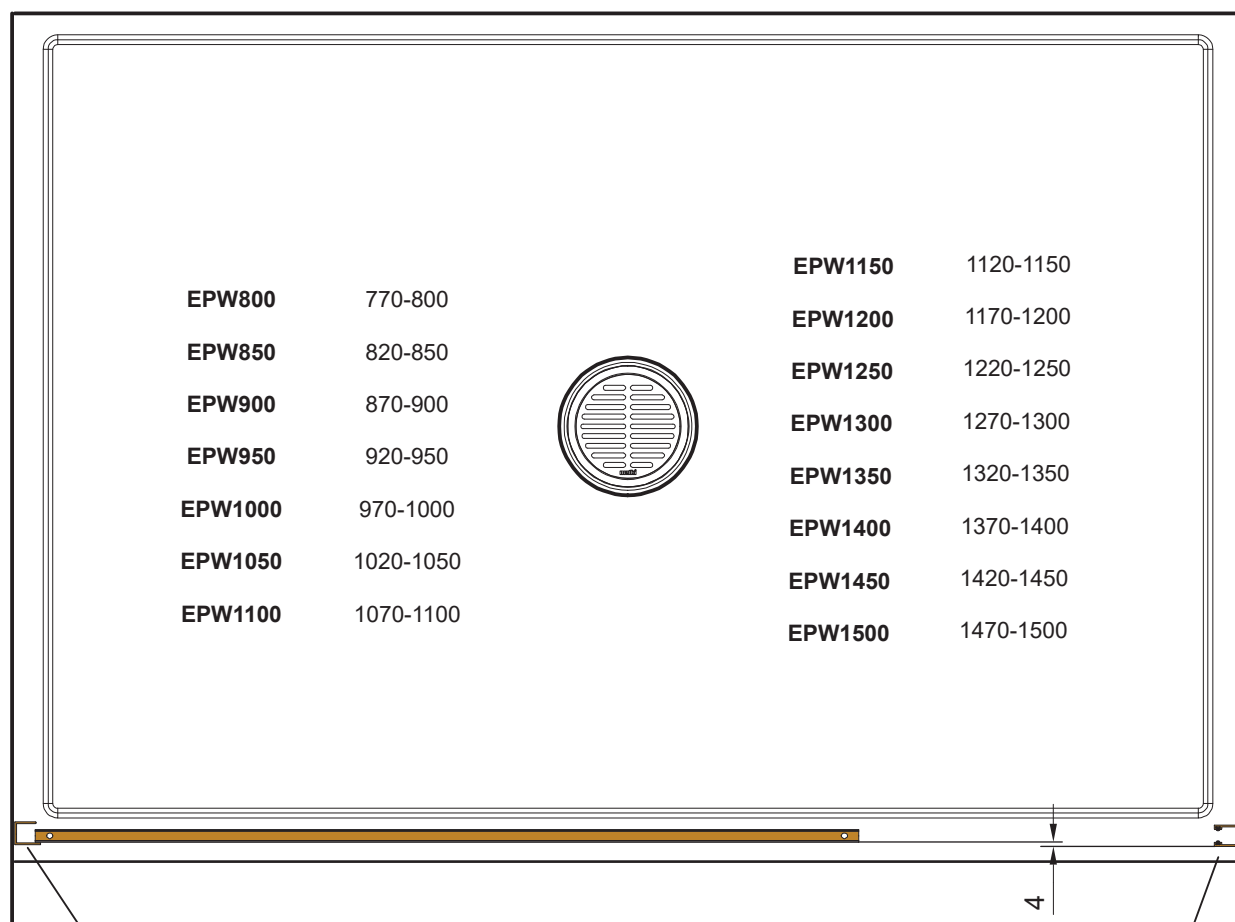




HINGE SIDE

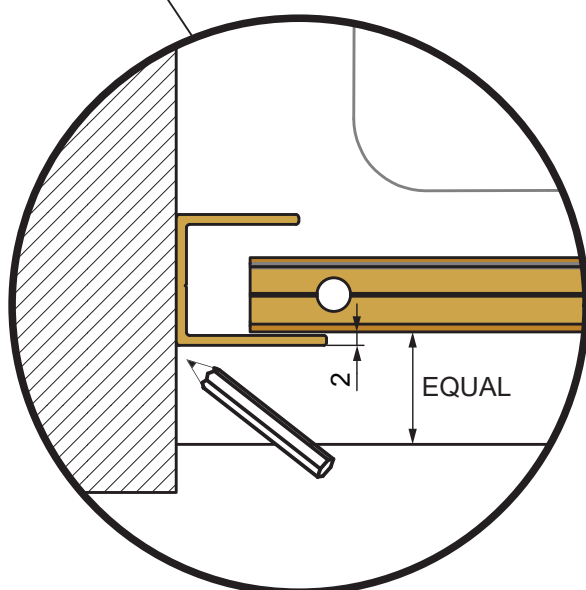


CLOSURE SIDE

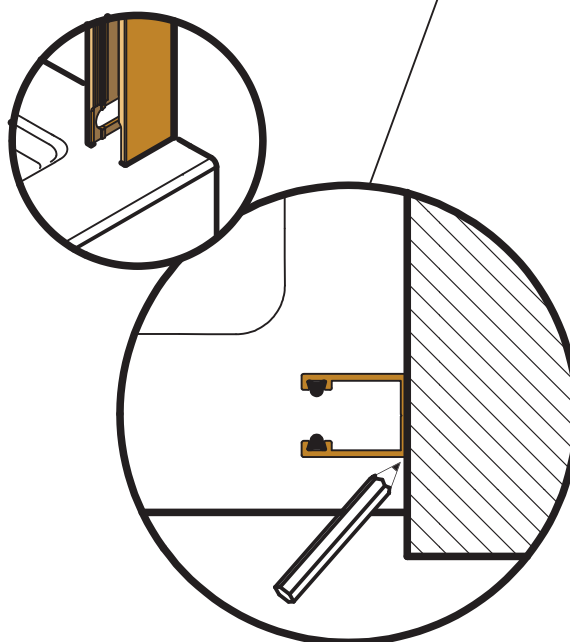



STAGE 1

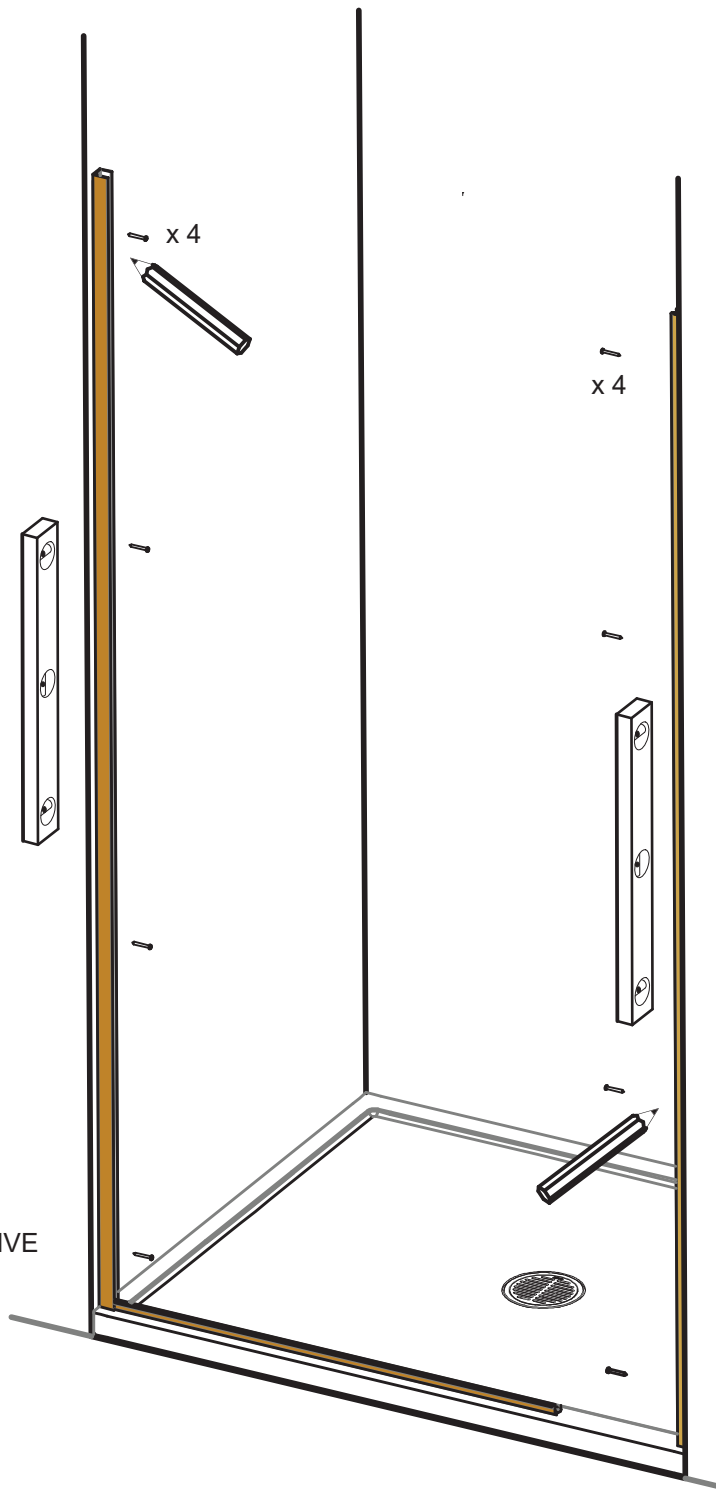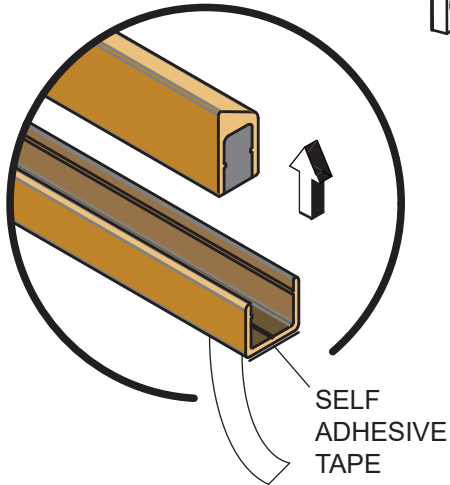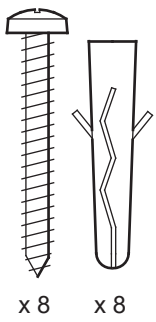


HINGE SIDE

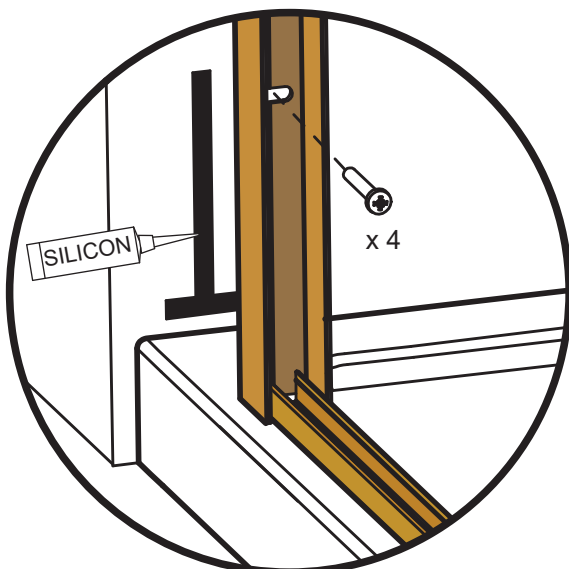






CLOSURE SIDE

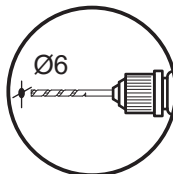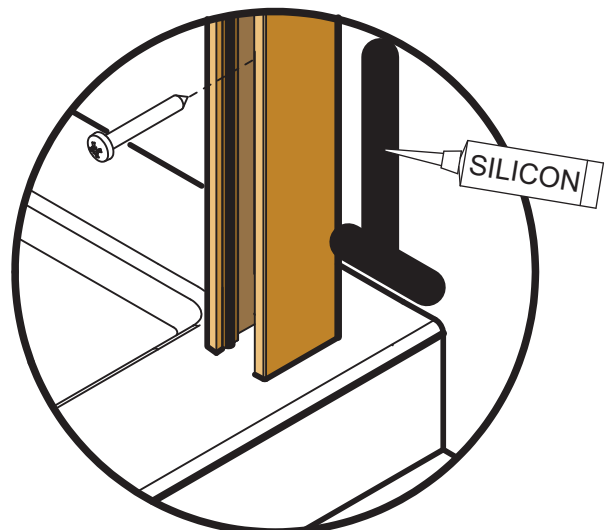

STAGE 2

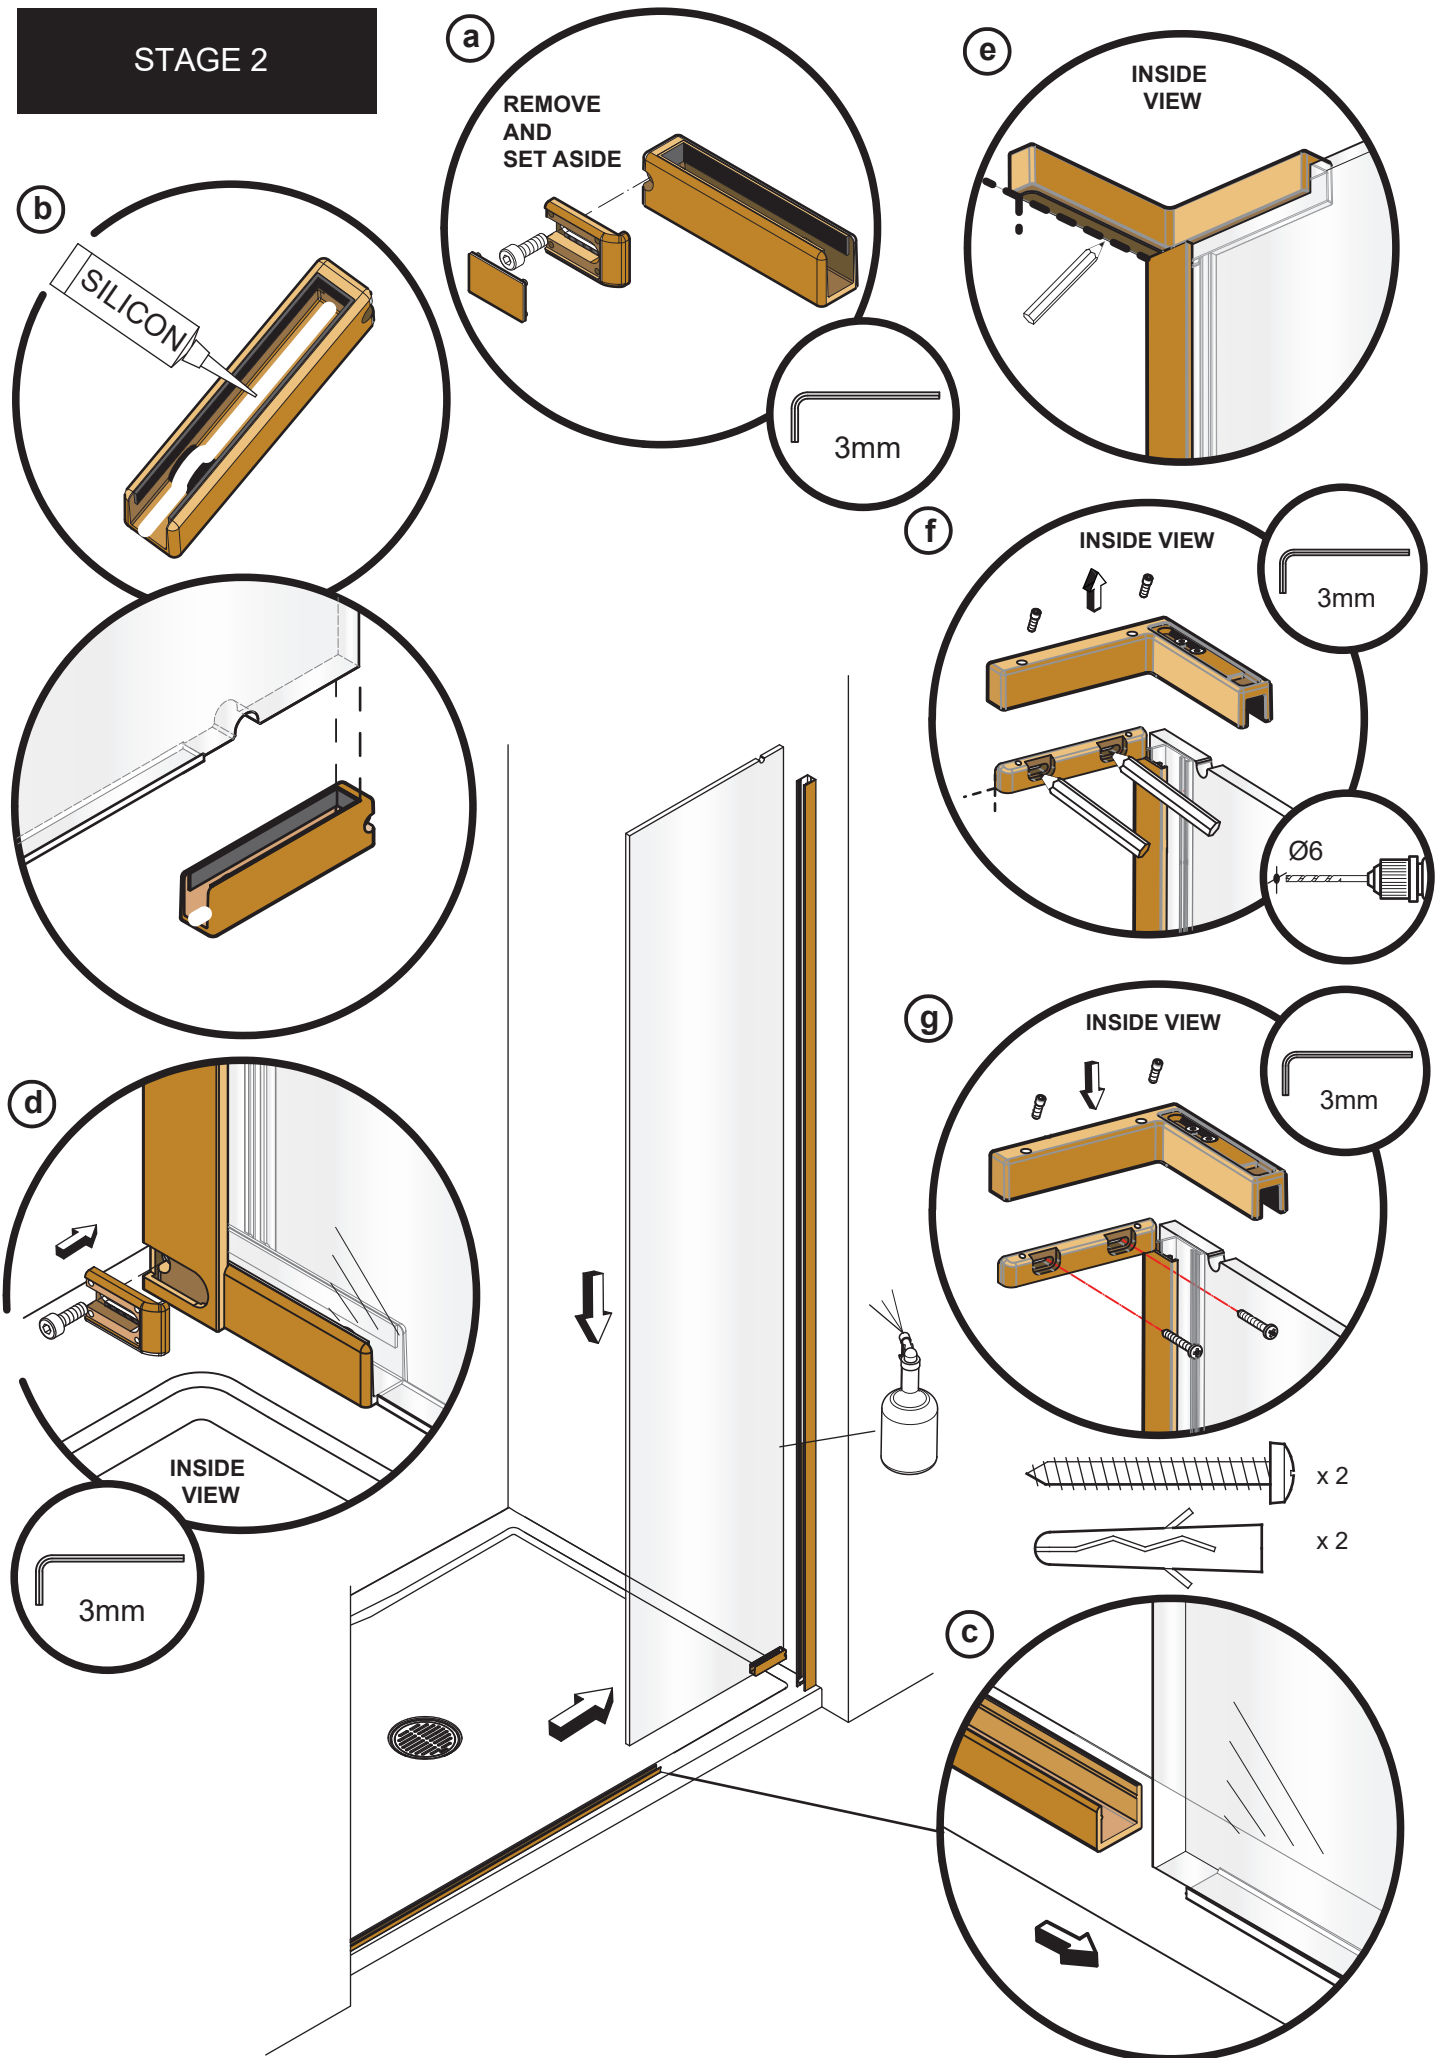

STAGE 3

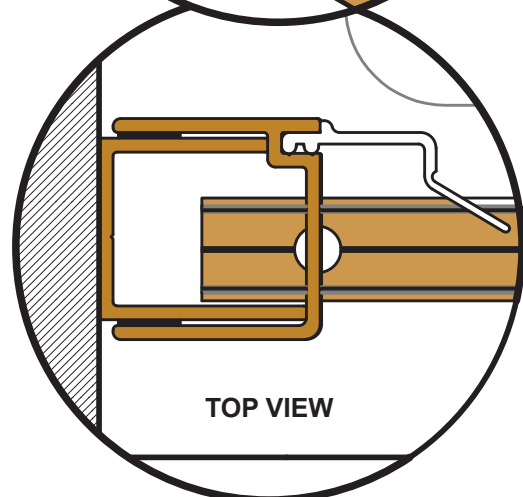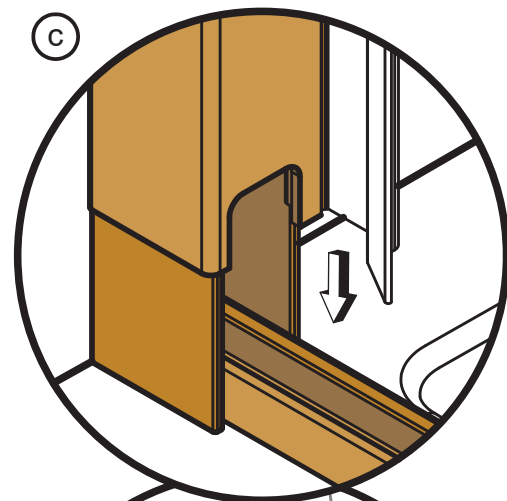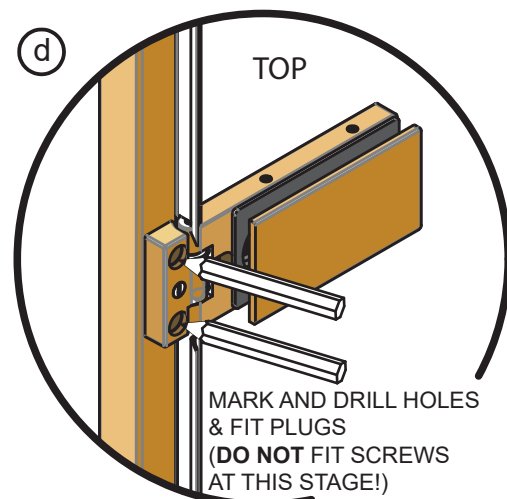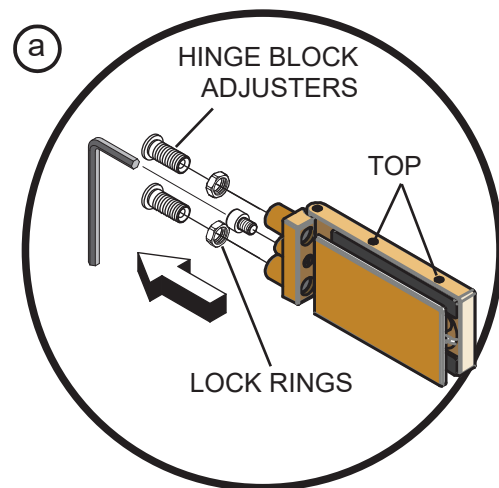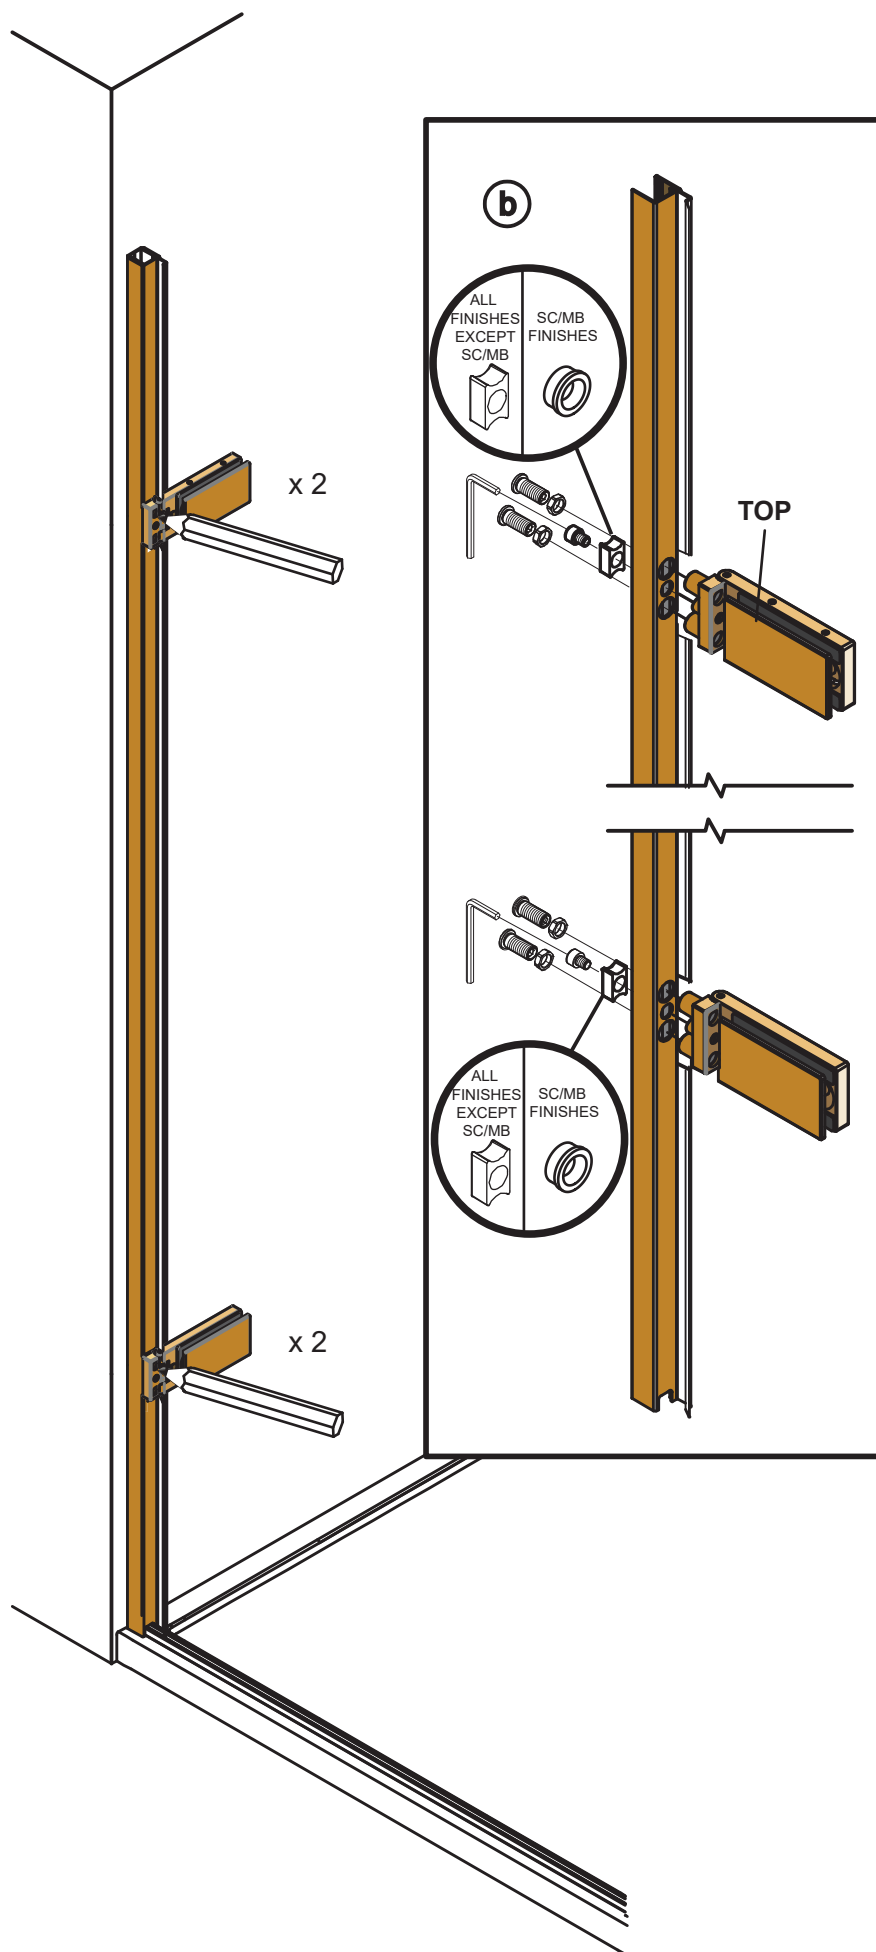

STAGE 4

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND


LH MOVING PANEL ADJUSTMENT BLOCK POSITION

RH MOVING PANEL ADJUSTMENT BLOCK POSITION

2.5mm

UPPER HINGE


REMOVE
BACKING
FILM

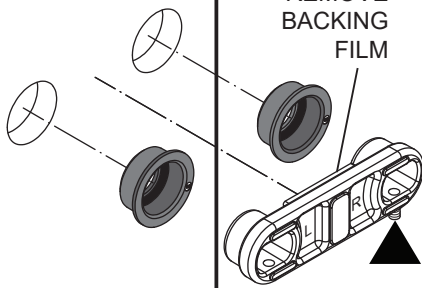

ROTATE
OUT BY
2mm

UPPER HINGE

REMOVE
BACKING
FILM

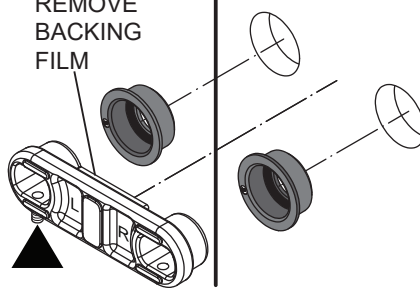

ROTATE
OUT BY
2mm


INSIDE VIEW!

LH DOOR (OUTER SIDE)

RH DOOR (OUTER SIDE)

LOWER HINGE


REMOVE
BACKING
FILM

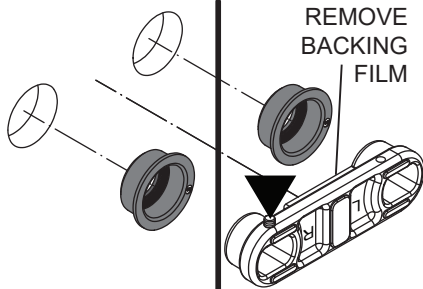

ROTATE
OUT BY
2mm






LOWER HINGE

REMOVE
BACKING
FILM

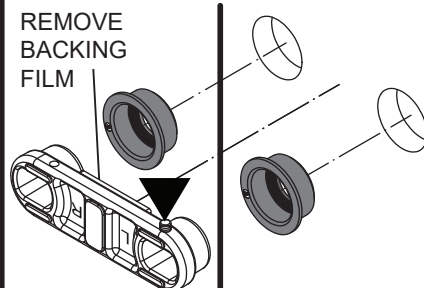


ROTATE
OUT BY
2mm



STAGE 5

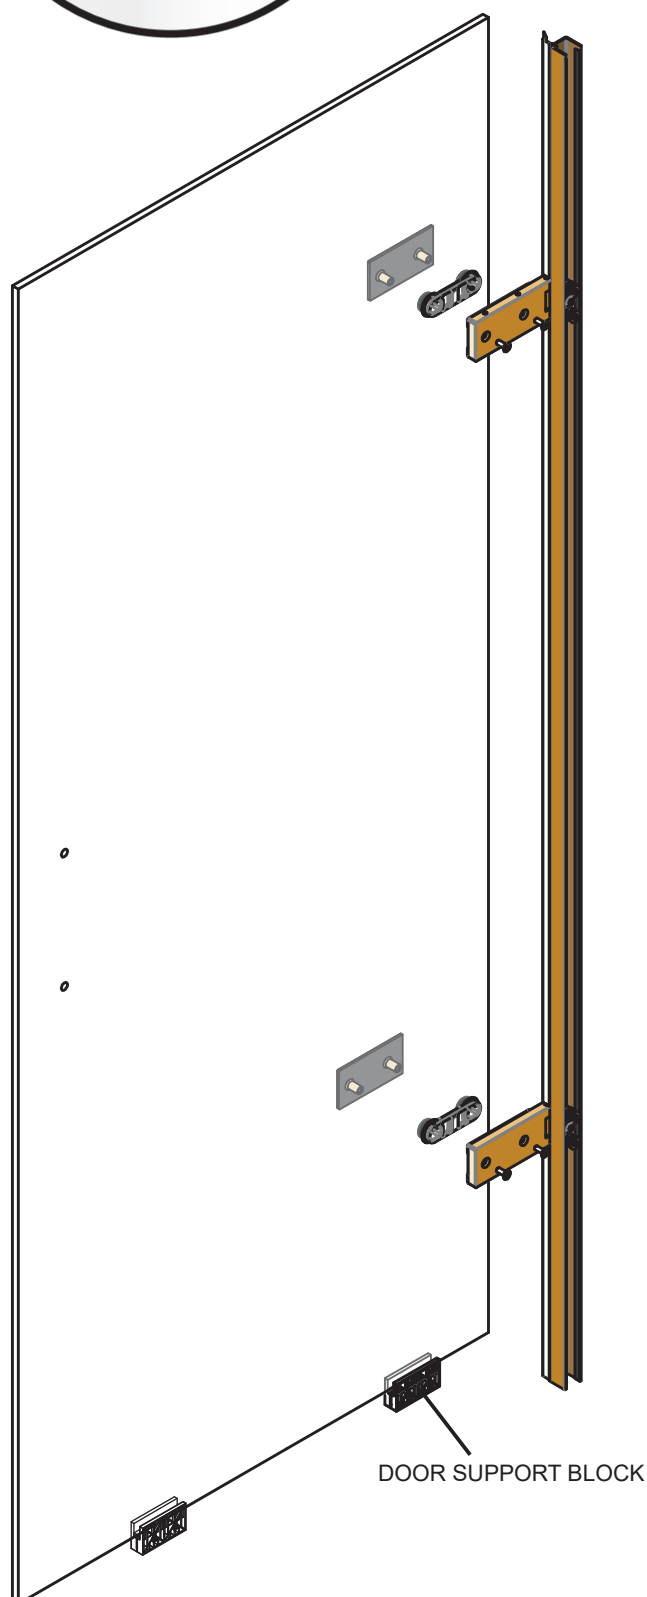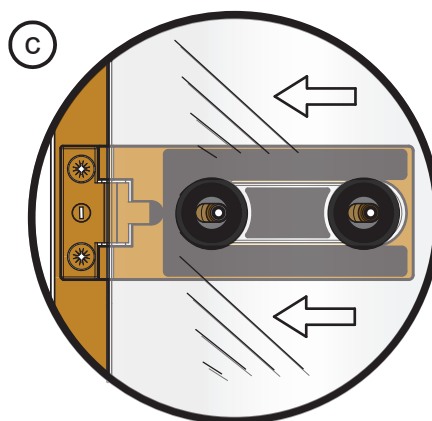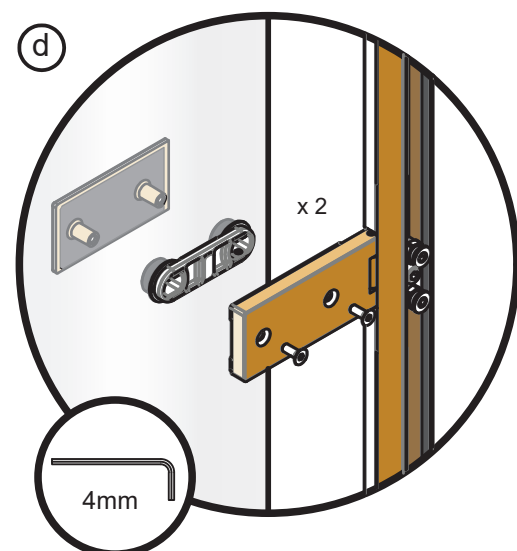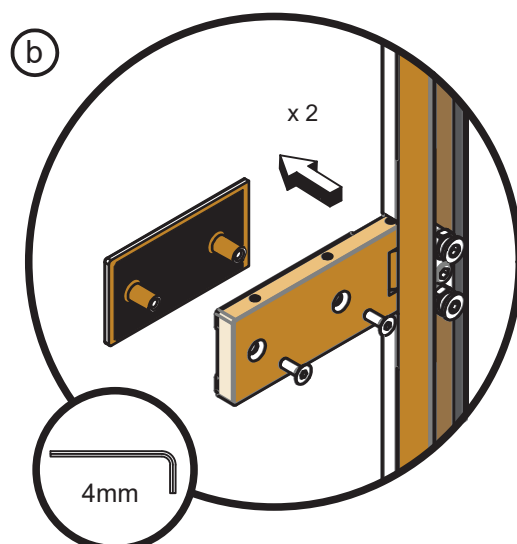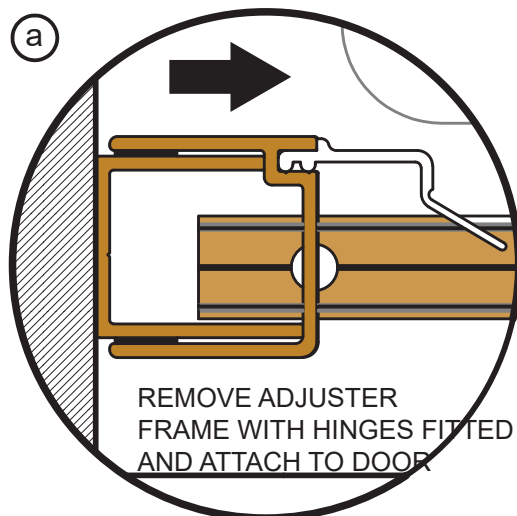

STAGE 6

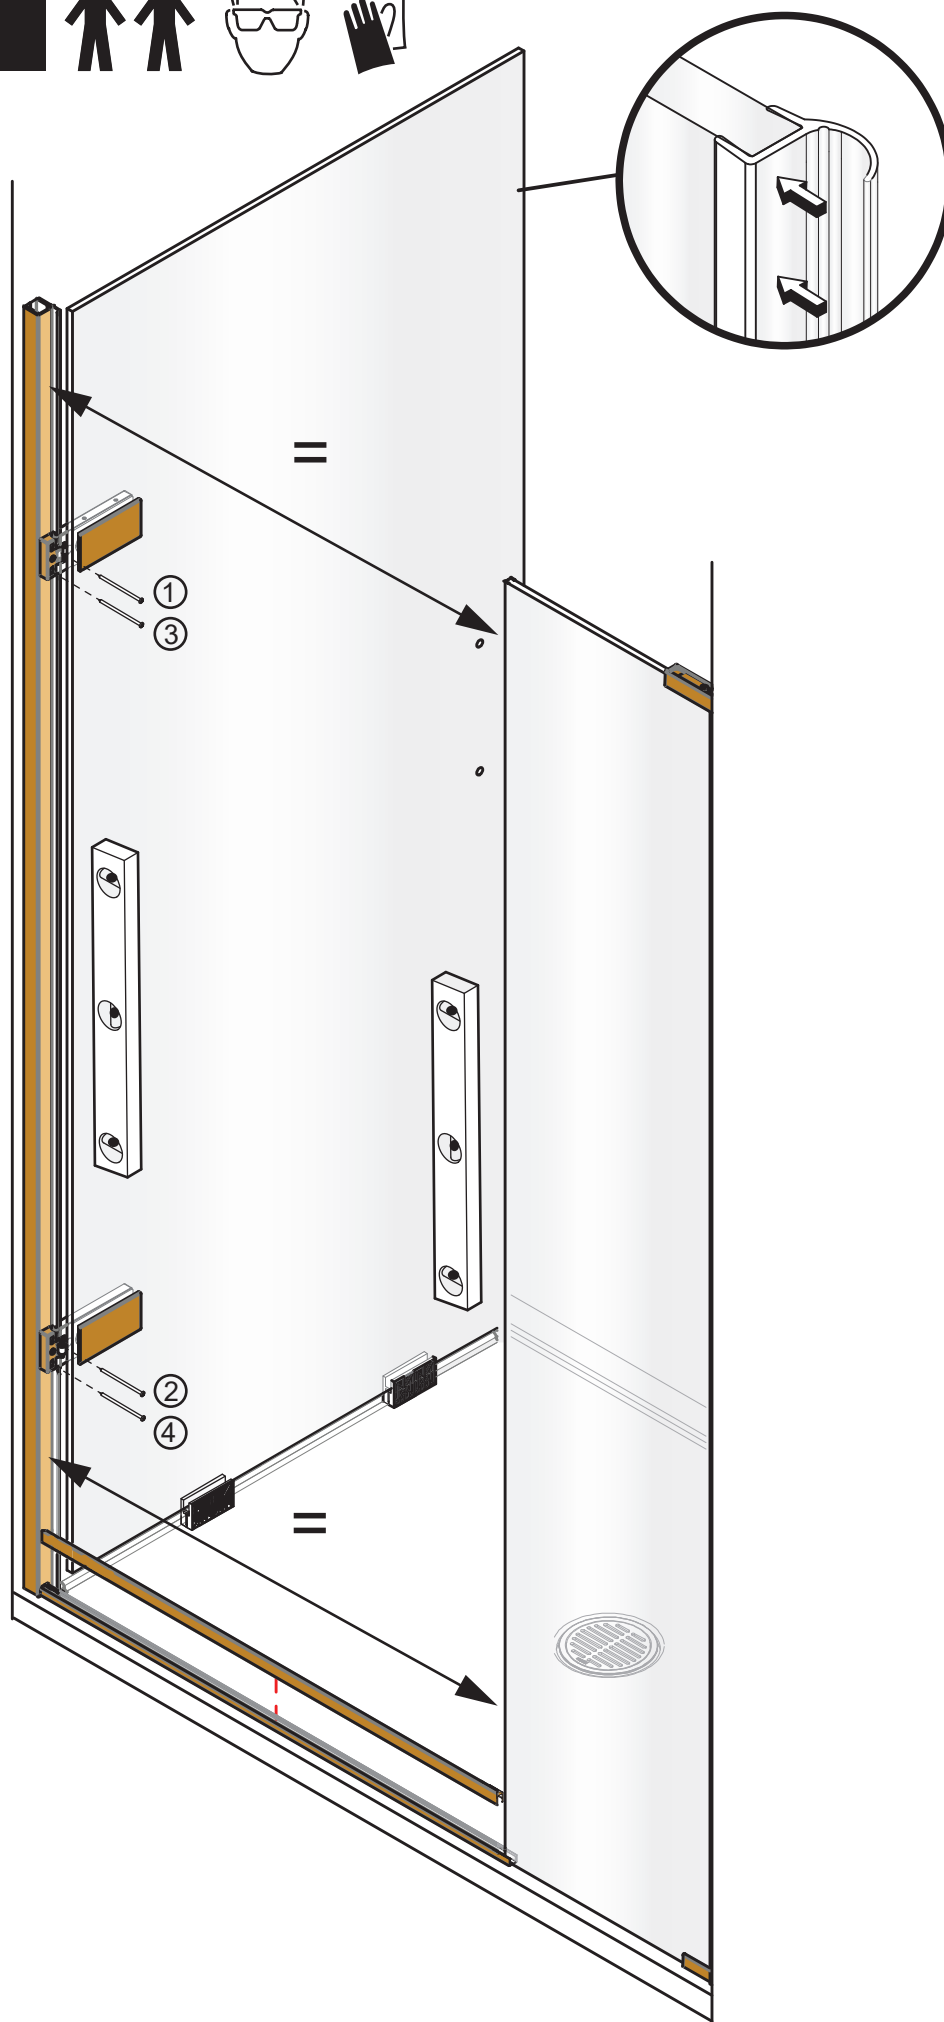

STAGE 6 - ADJUSTMENT

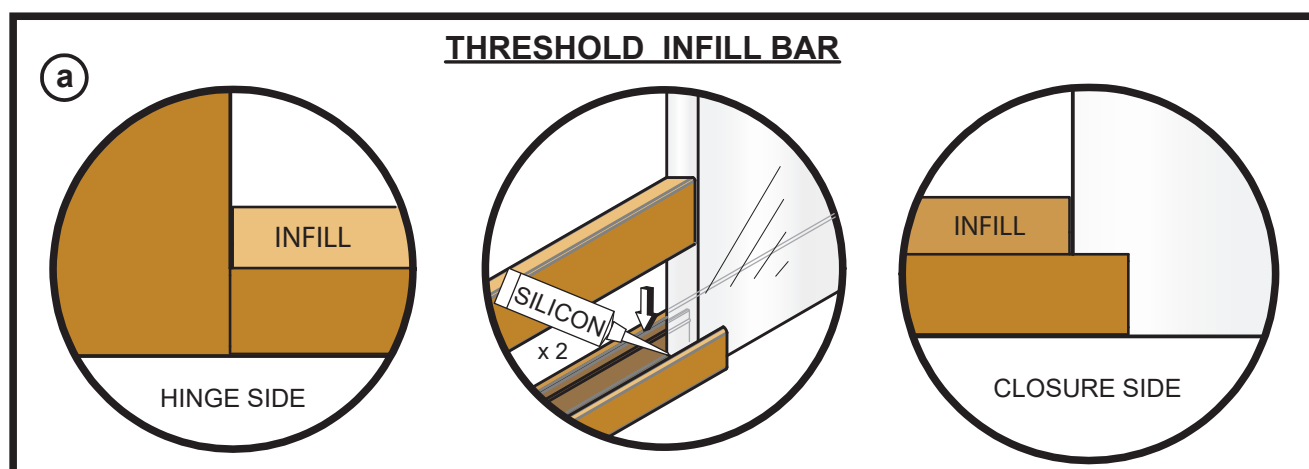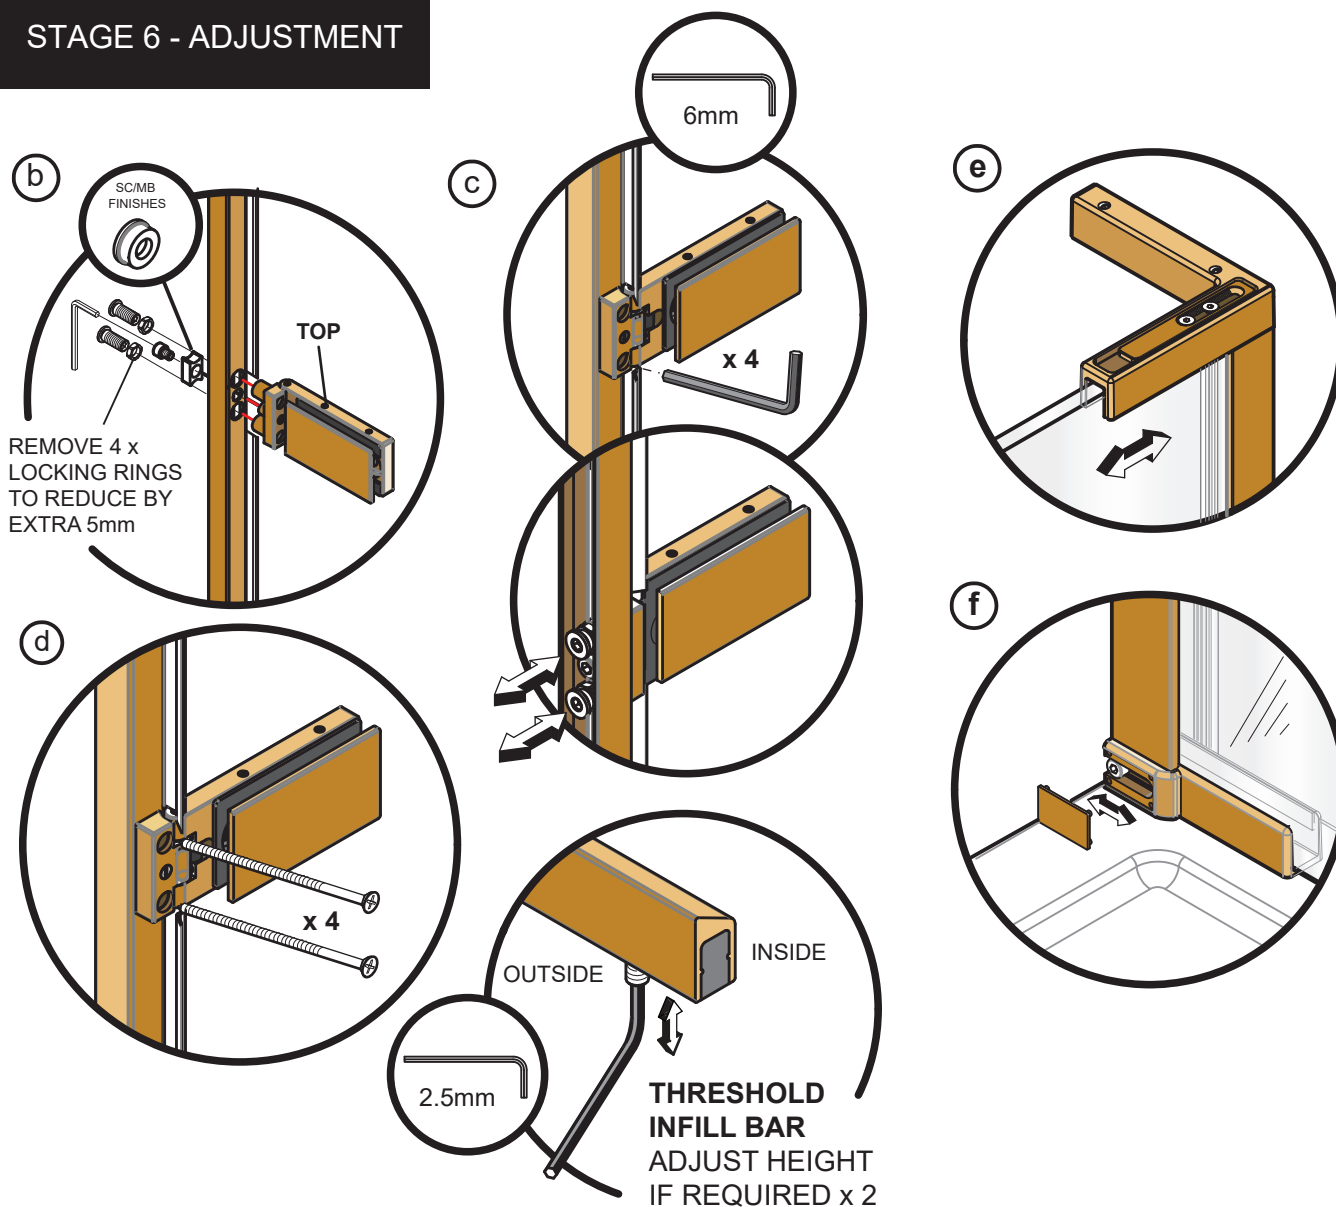


STAGE 7

HANDLE VARIANTS


ILLUSTRIOUS

9808*

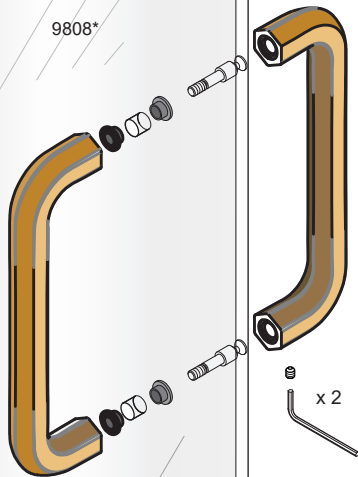


LINEAR

6185*

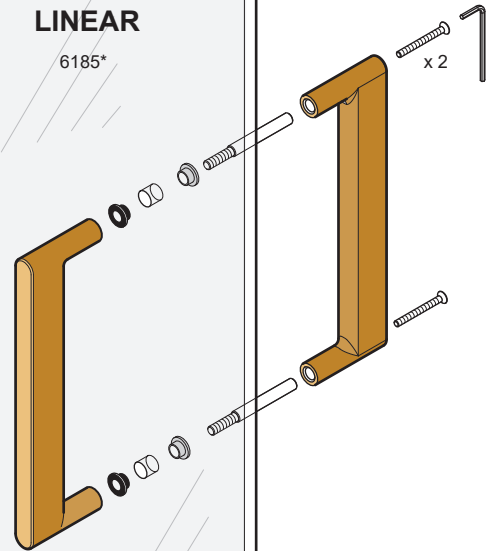


TRADITIONAL

8632*

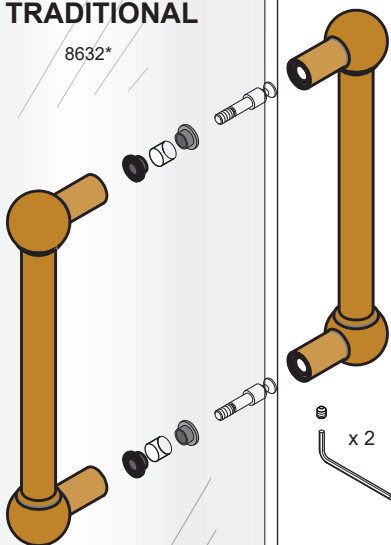


ENGINEER

9809ASSY*

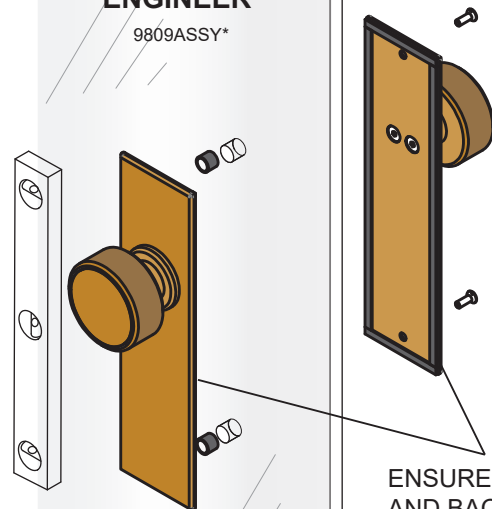

FIT DOOR STOP PROVIDED

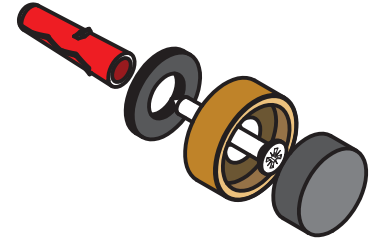


WHERE THE DOOR HANDLE
OPENS INTO THE INTERNAL WALL

ENSURE FRONT
AND BACK PLATES
ARE ALIGNED
BEFORE REMOVING
BACKING FILM


STAGE 8

a

INSIDE VIEW

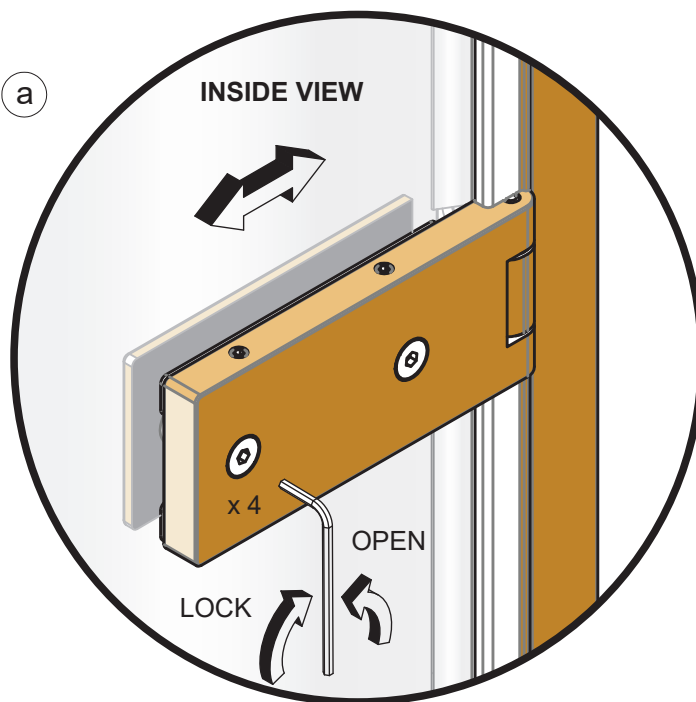


b

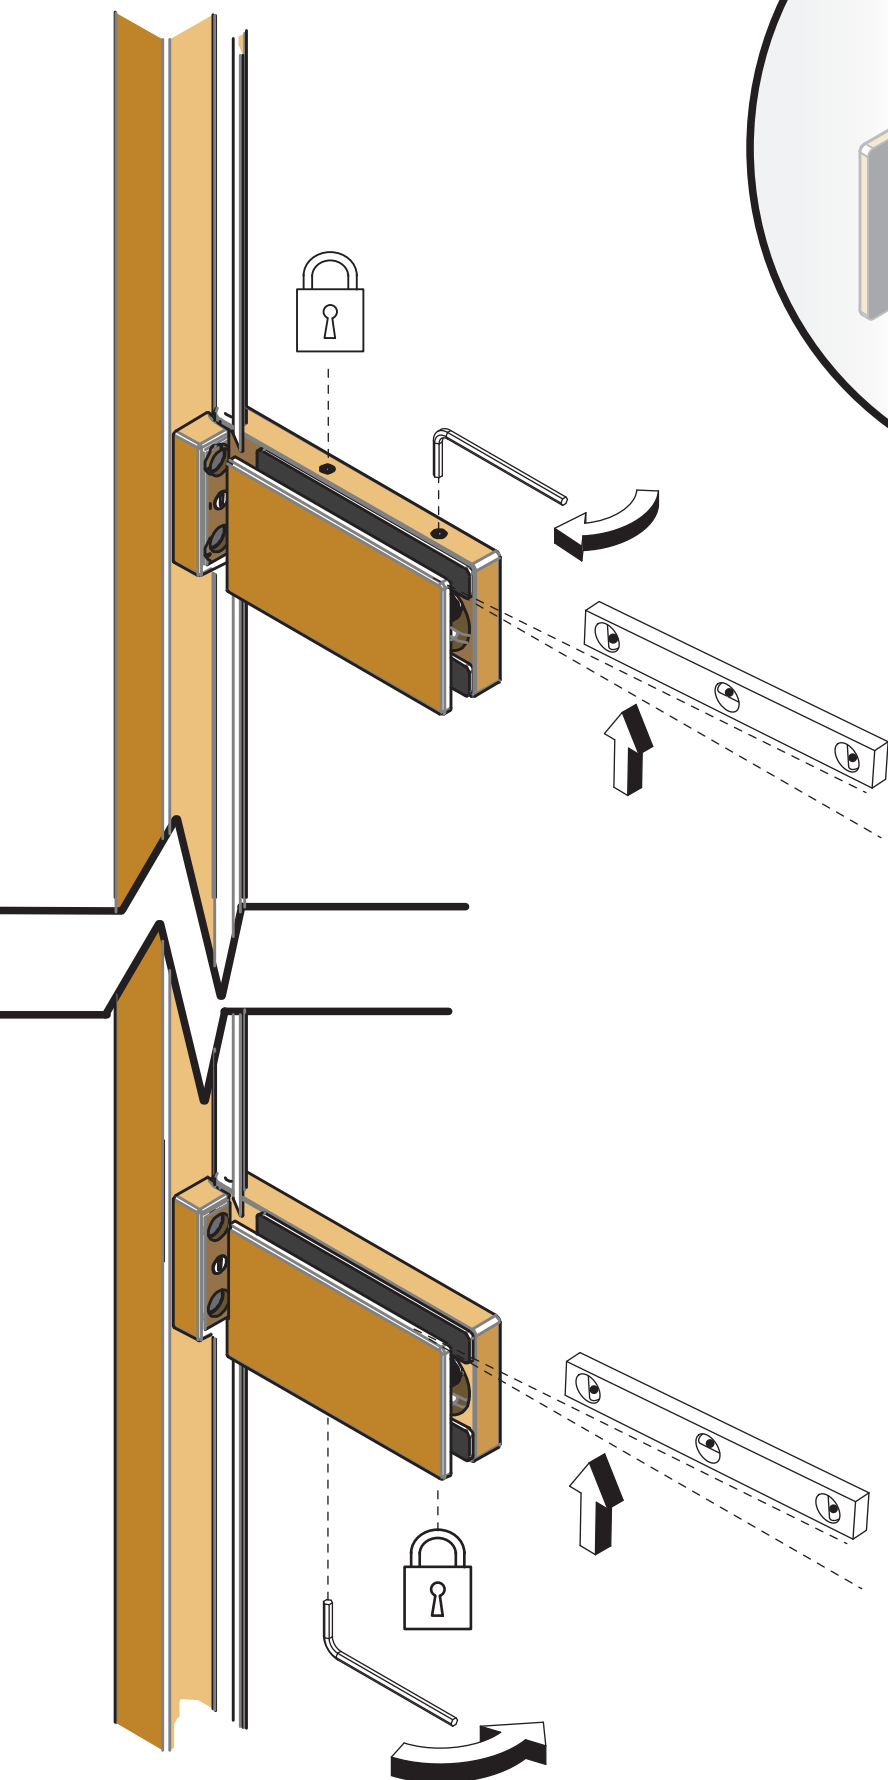


a










a

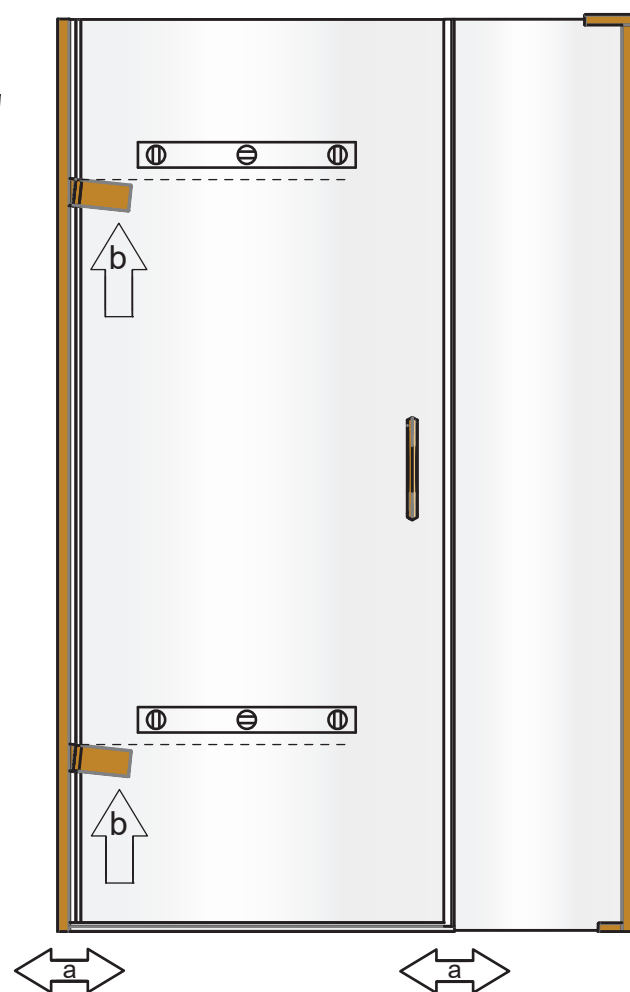

STAGE 9

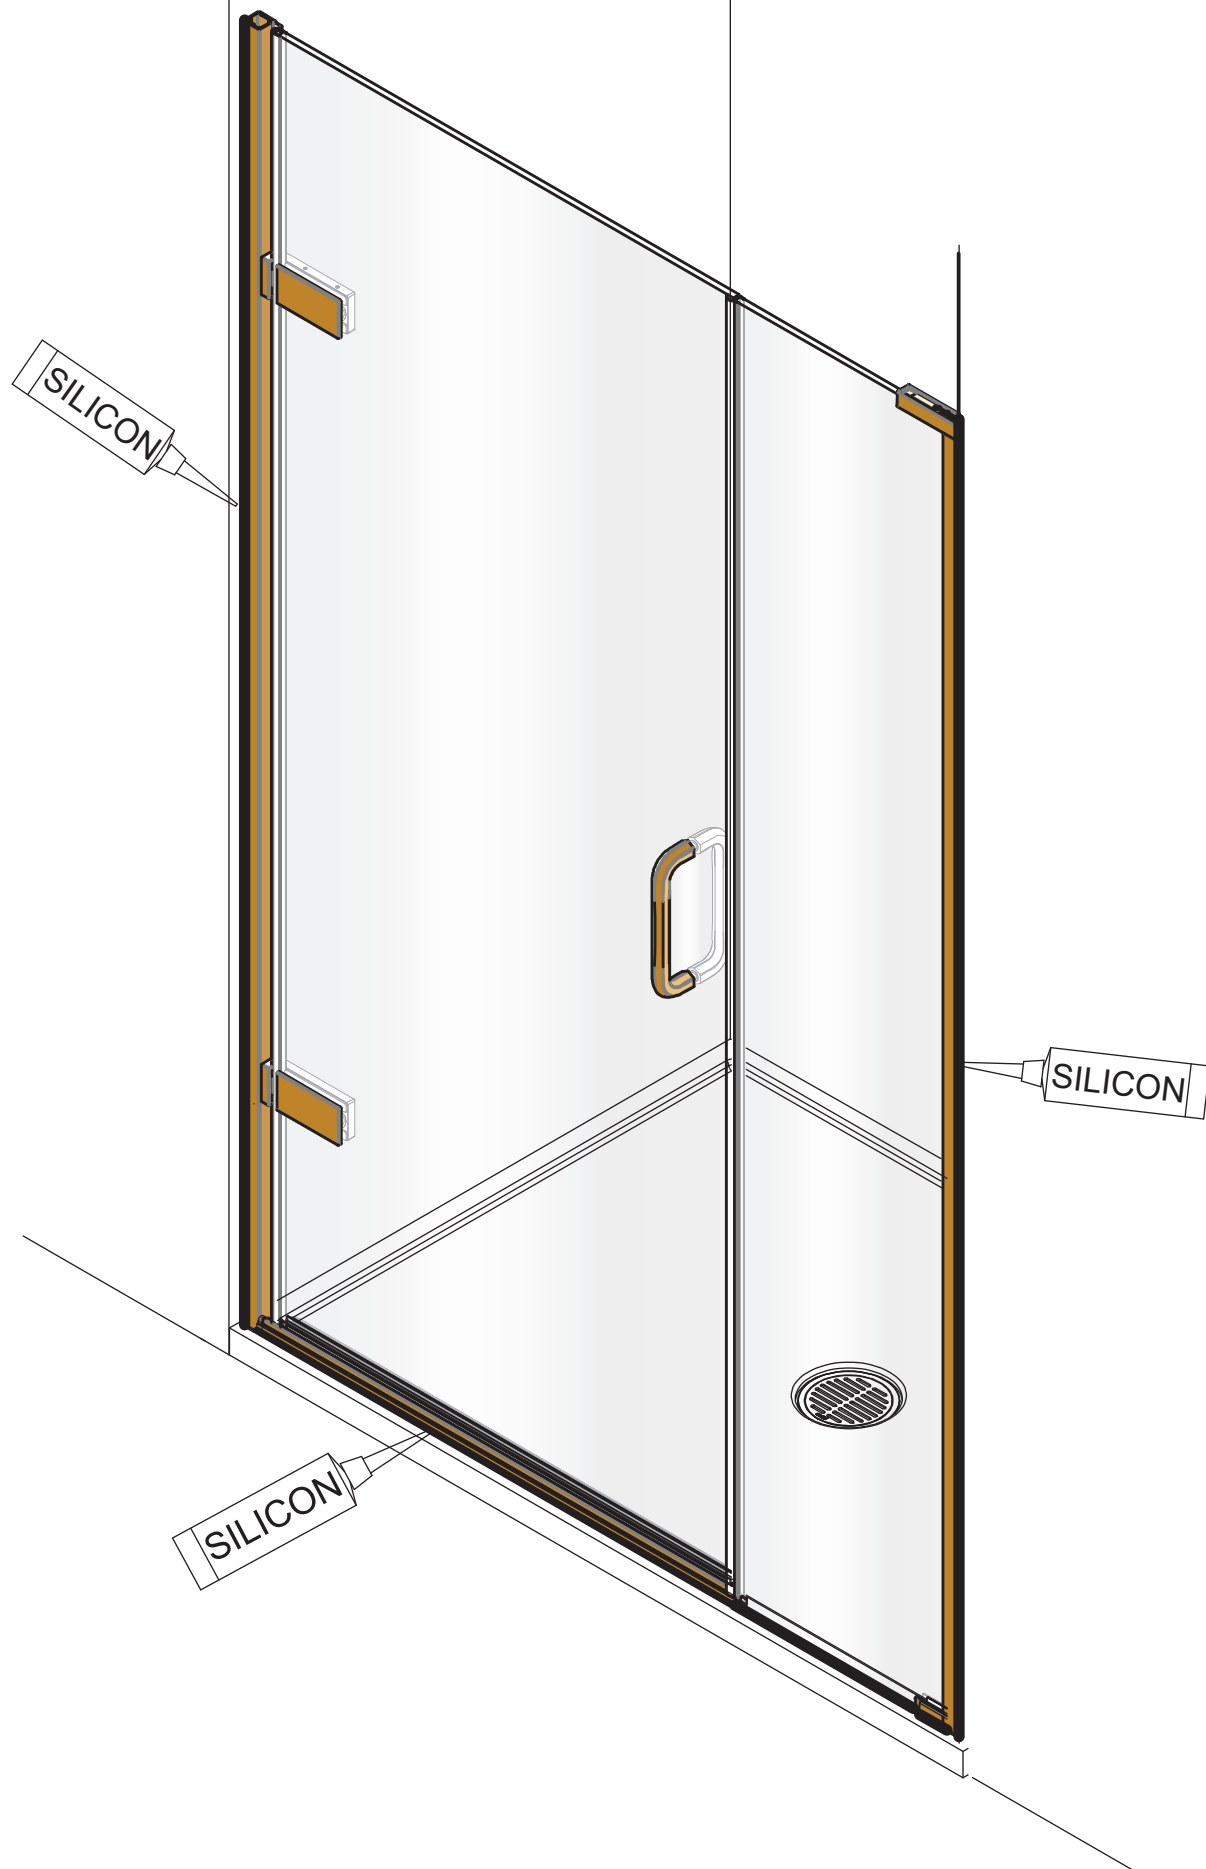


STAGE 9 - CONT

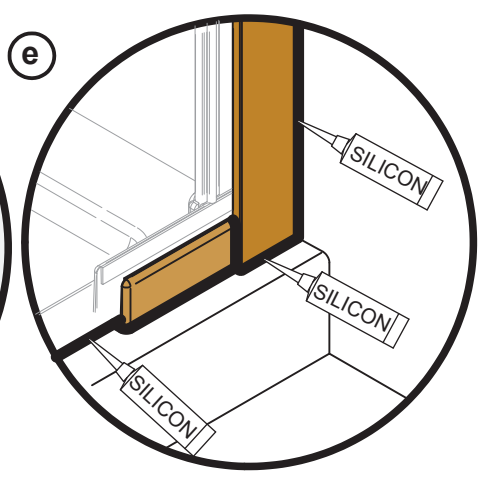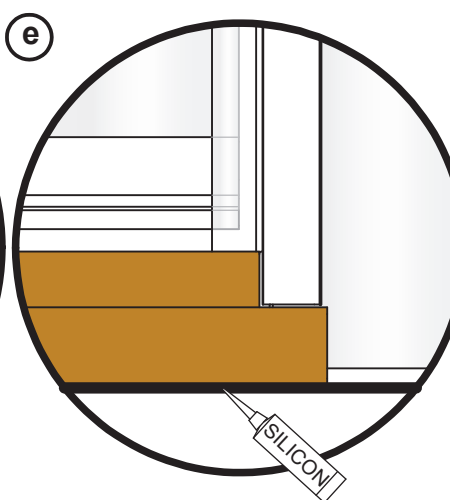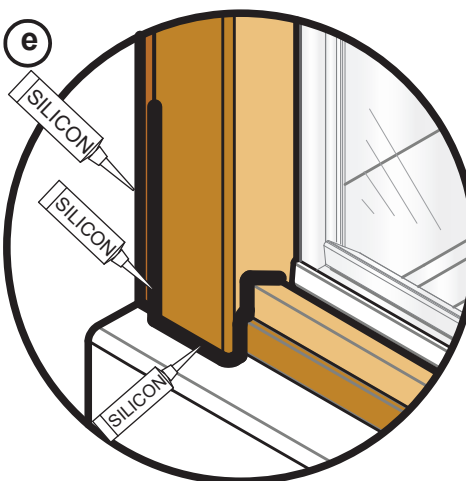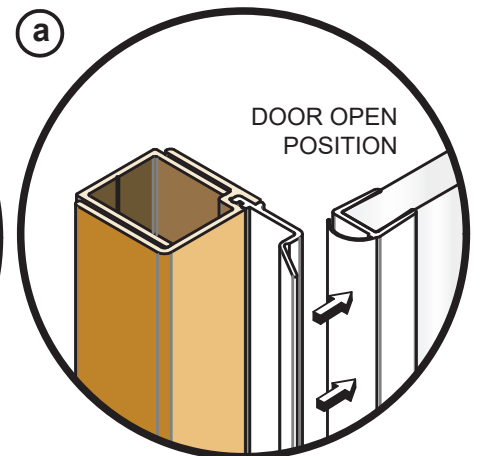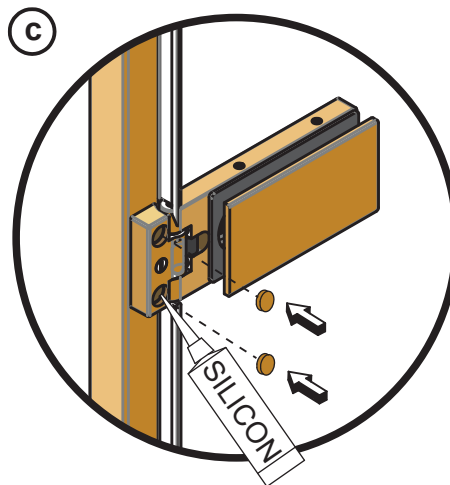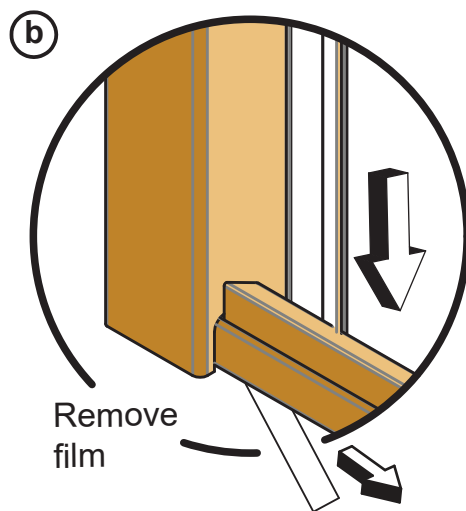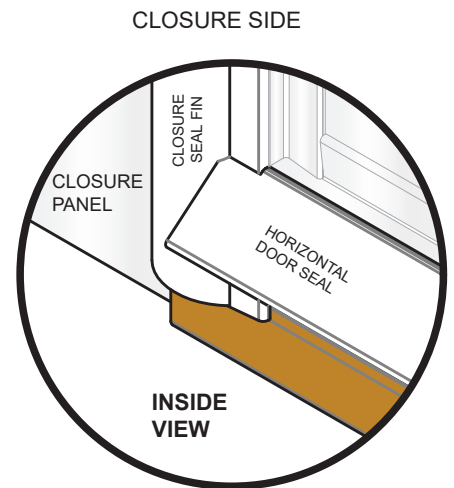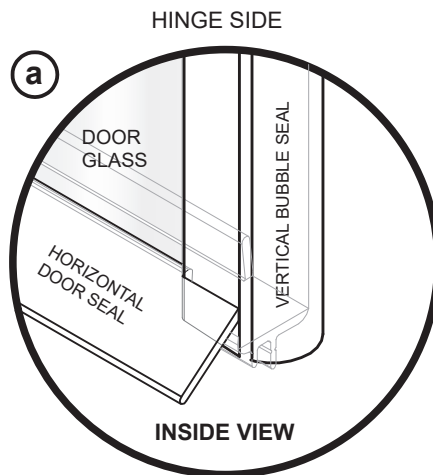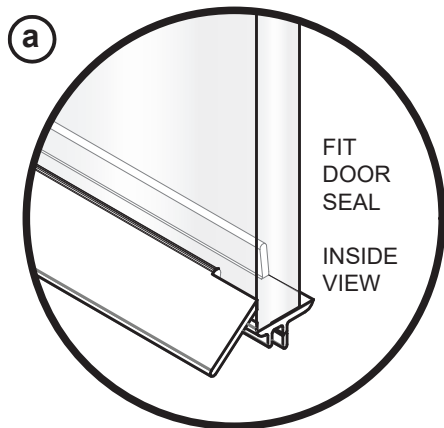


PARTS LIST


9927 AF HINGE FRAME KIT OF PARTS

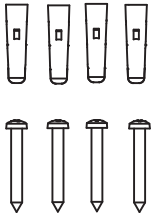


9926 AF WALL HINGE KIT OF PARTS

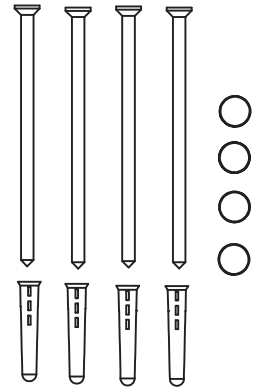


9864 AF CLOSURE FRAME KIT OF PARTS

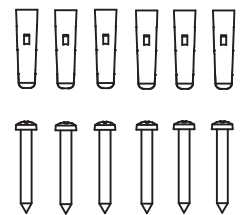


10792 AF

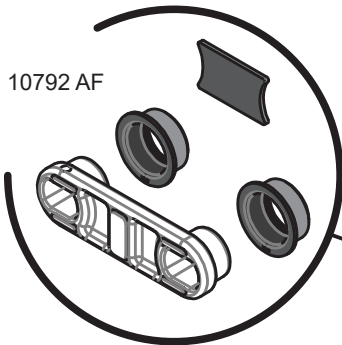

HINGE FRAME (DOOR SHOWN IN OPEN POSITION)

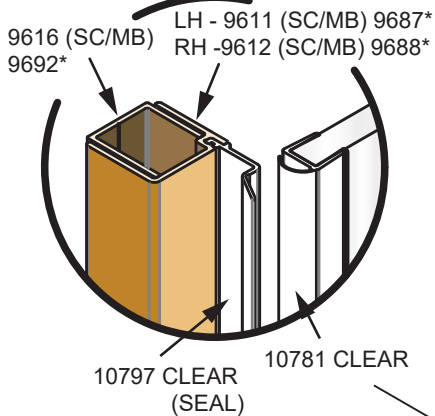


L BRACKET

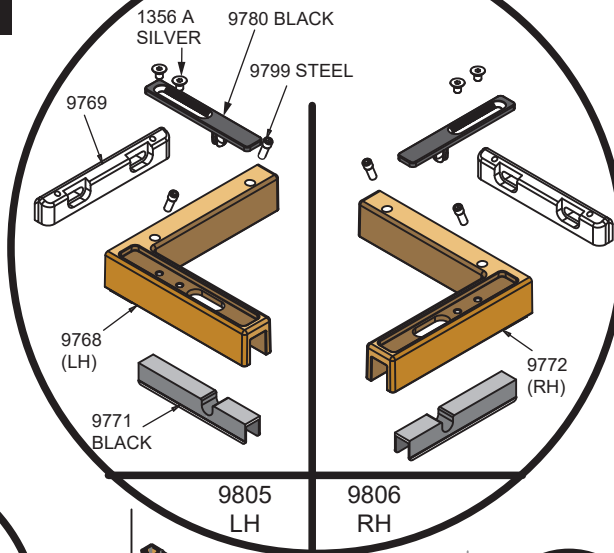





9825 CLEAR



10731 ASSEMBLY (SC/MB) 10732 ASSEMBLY*

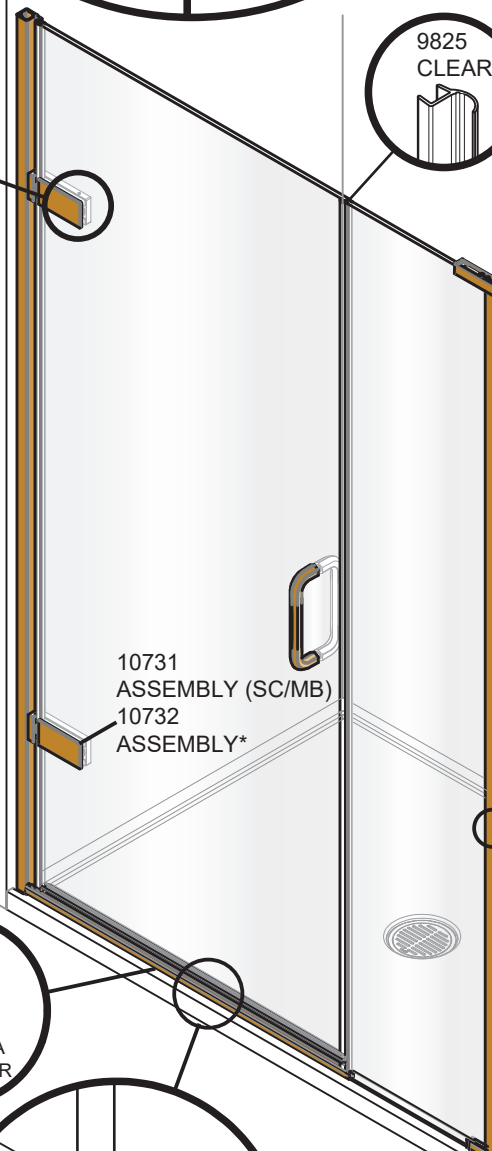

9604 (SC/MB)

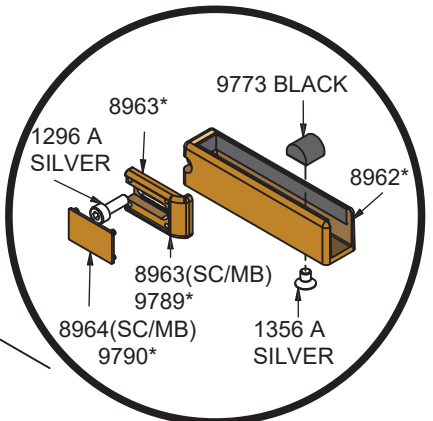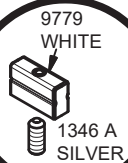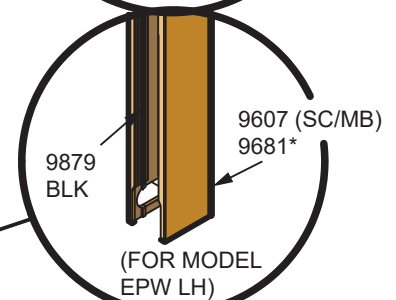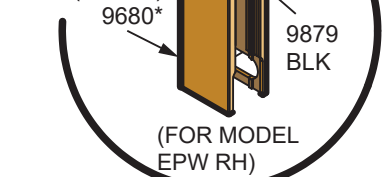

DOOR STOP 10743



SPECIFY
SIZE &
HAND

SPECIFY
SIZE

SECTION VIEW

* ALL FINISHES EXCEPT SC/MB