

matki

EAUZONE

EWPH - WETROOM PANEL WITH HINGE PANEL


INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON TO
THE CUSTOMER



TWO PEOPLE
RECOMMENDED TO FIT
1200 PANEL AND LARGER

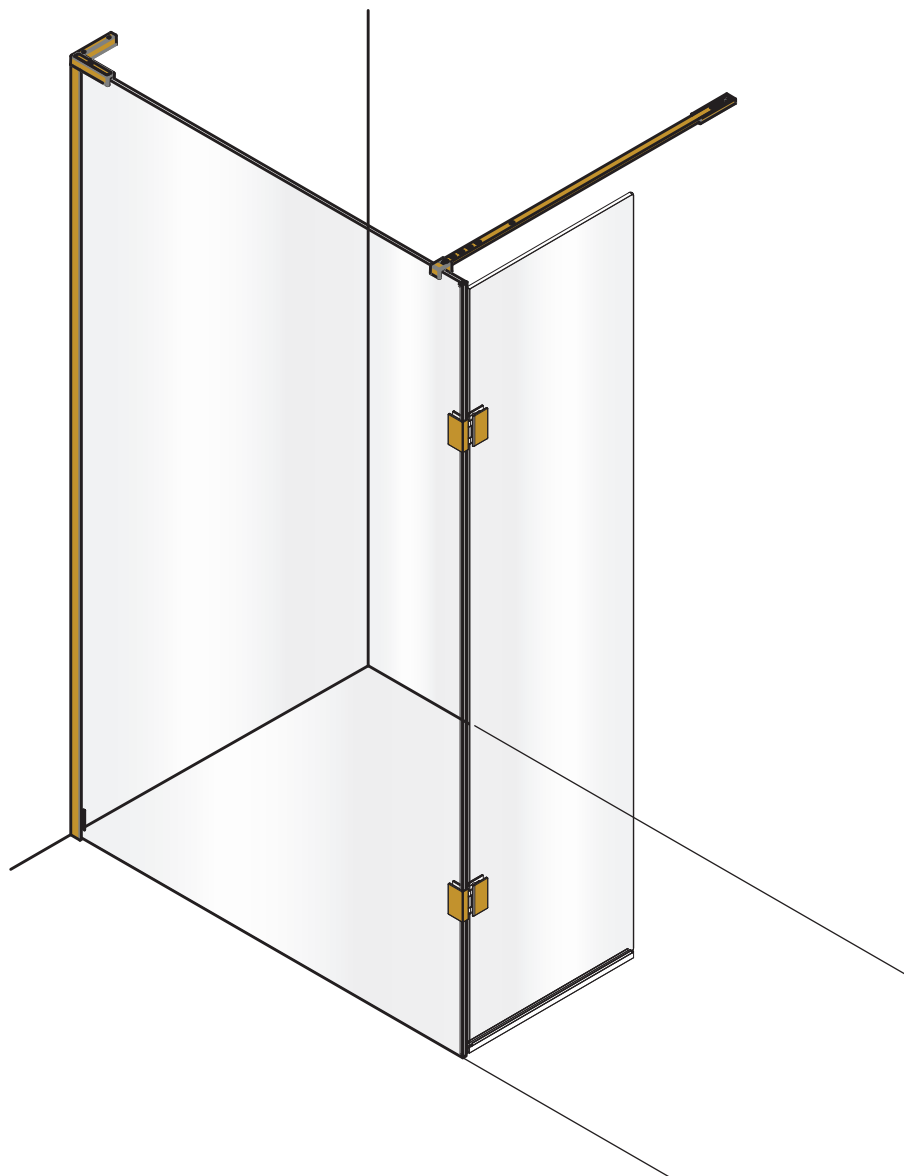

EWPH LH ENTRANCE

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

9907 AF 03/25

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Wetroom Panel, Stage 2. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.


CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS


EAUZONE PLUS WET ROOM PANEL

MODEL	A
EWPH725FP	687-702
EWPH950FP	907-922
EWPH1100FP	1057-1077
EWPH440HP	440
EWPH490HP	490




Dimensions are approximate

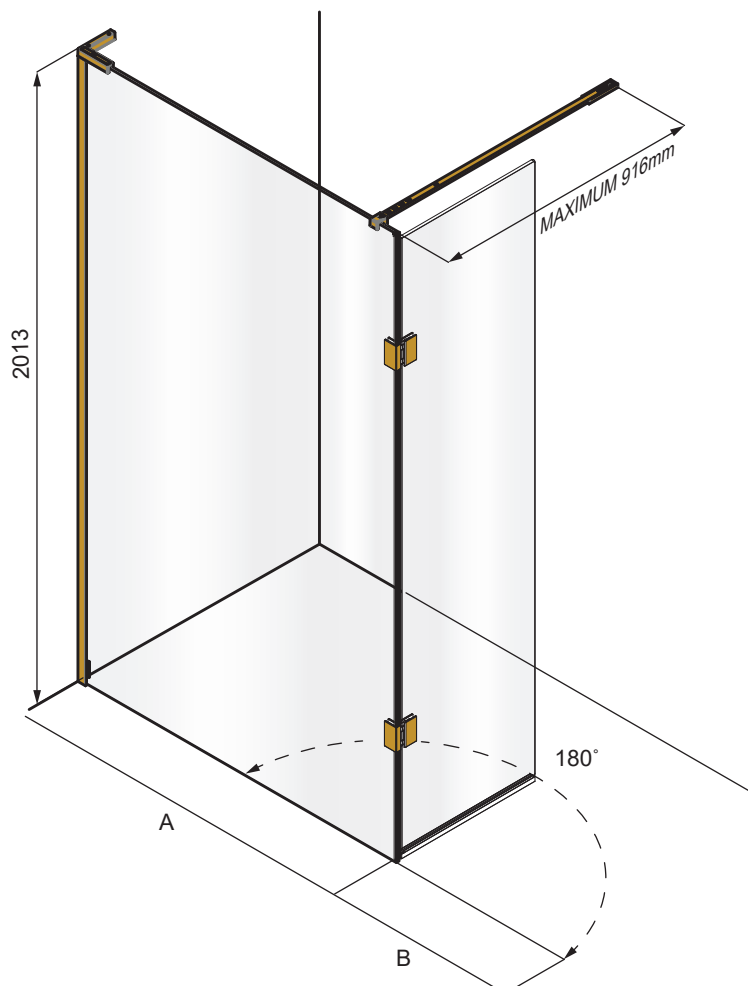

STAGE 1 - FITTING WALL MOUNT

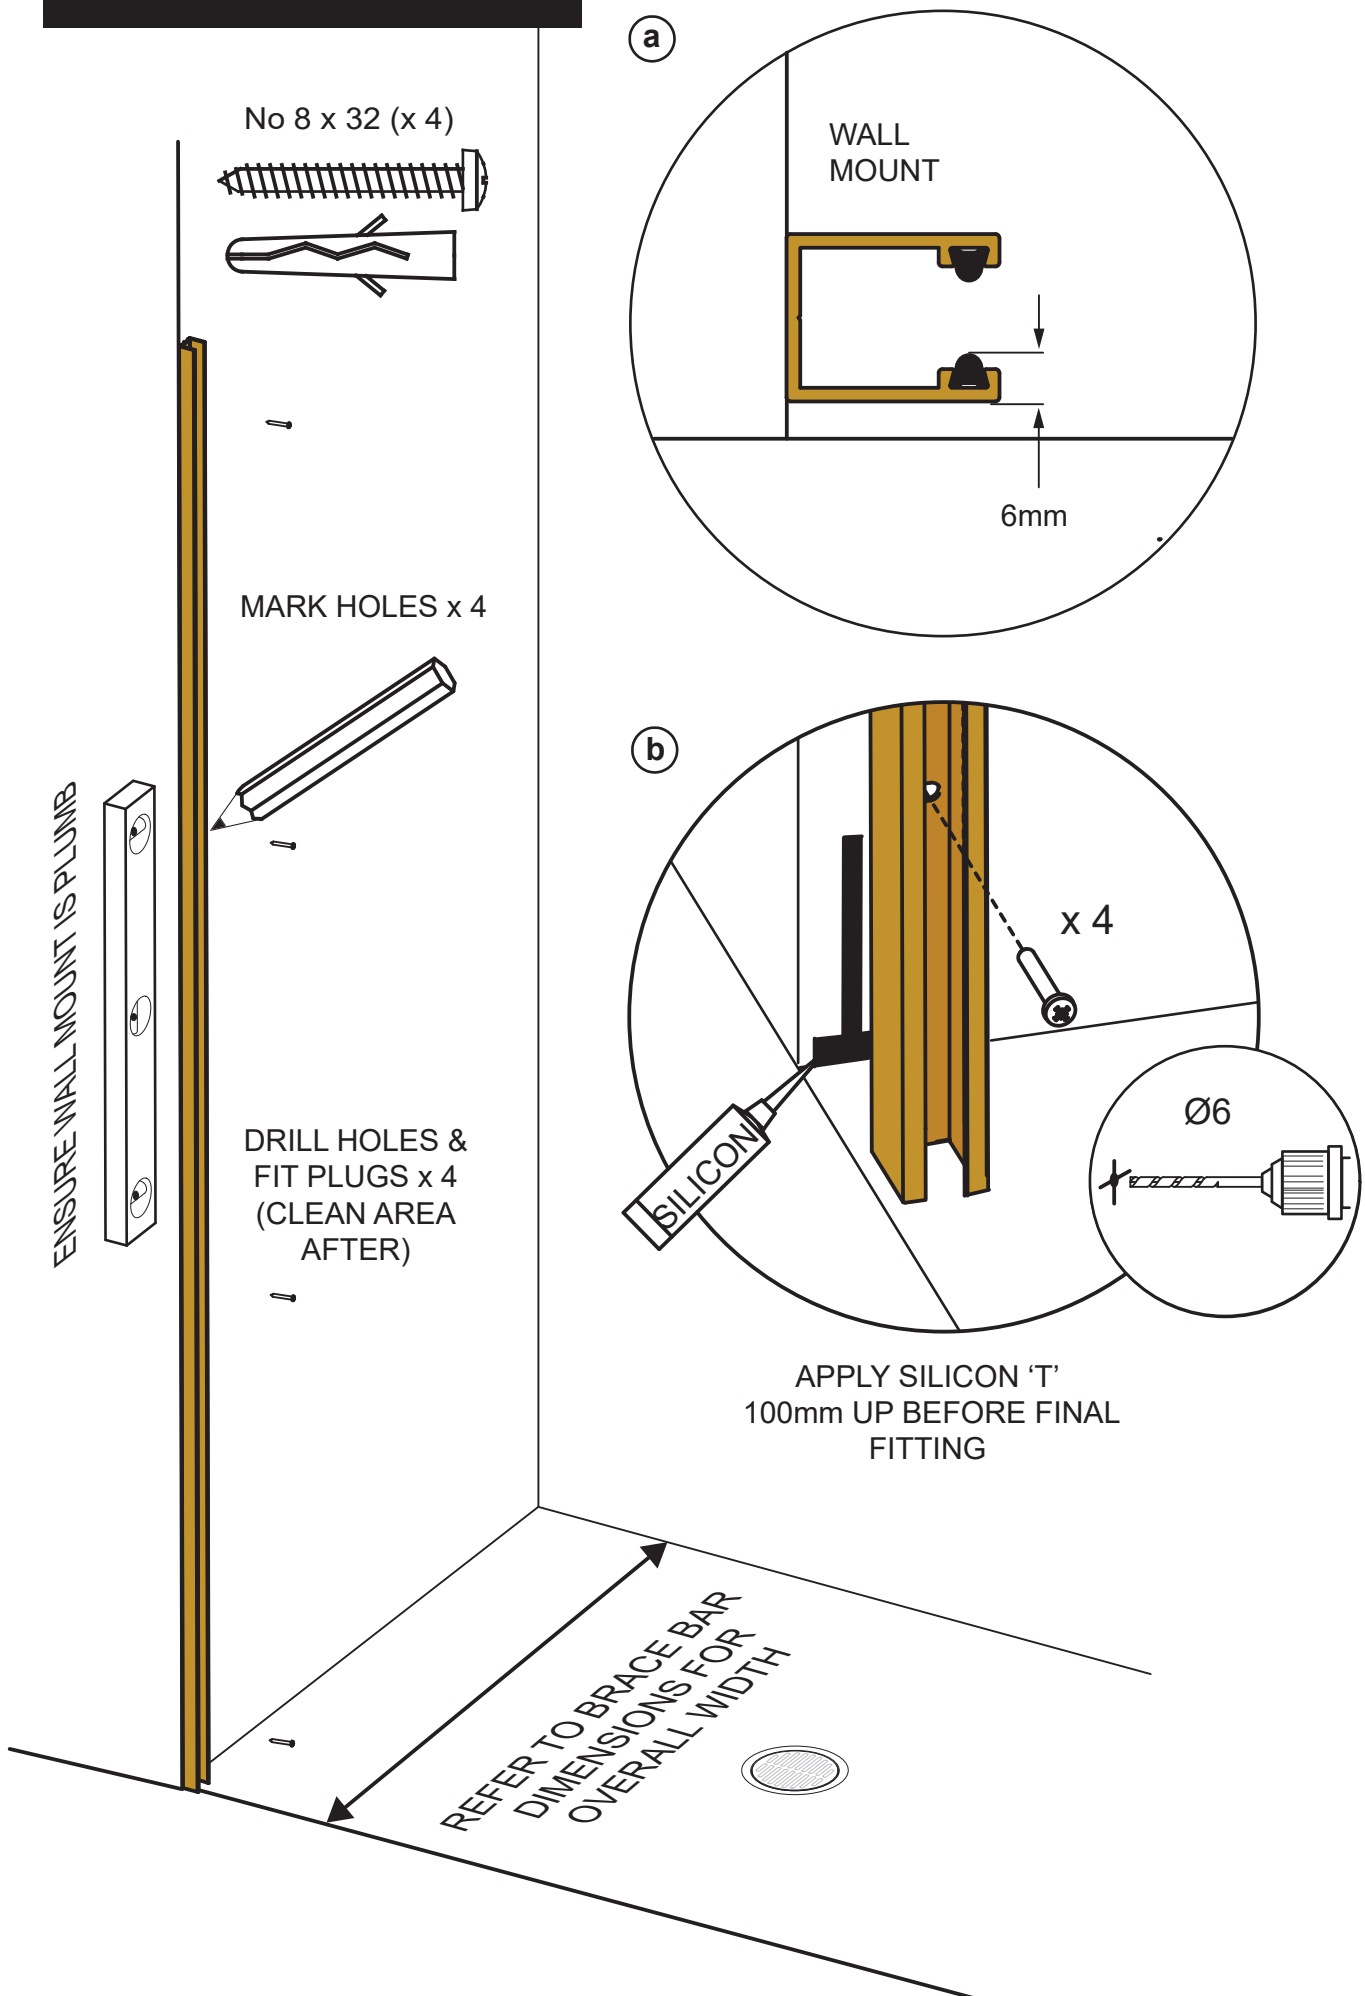

STAGE 2 - FITTING GLASS


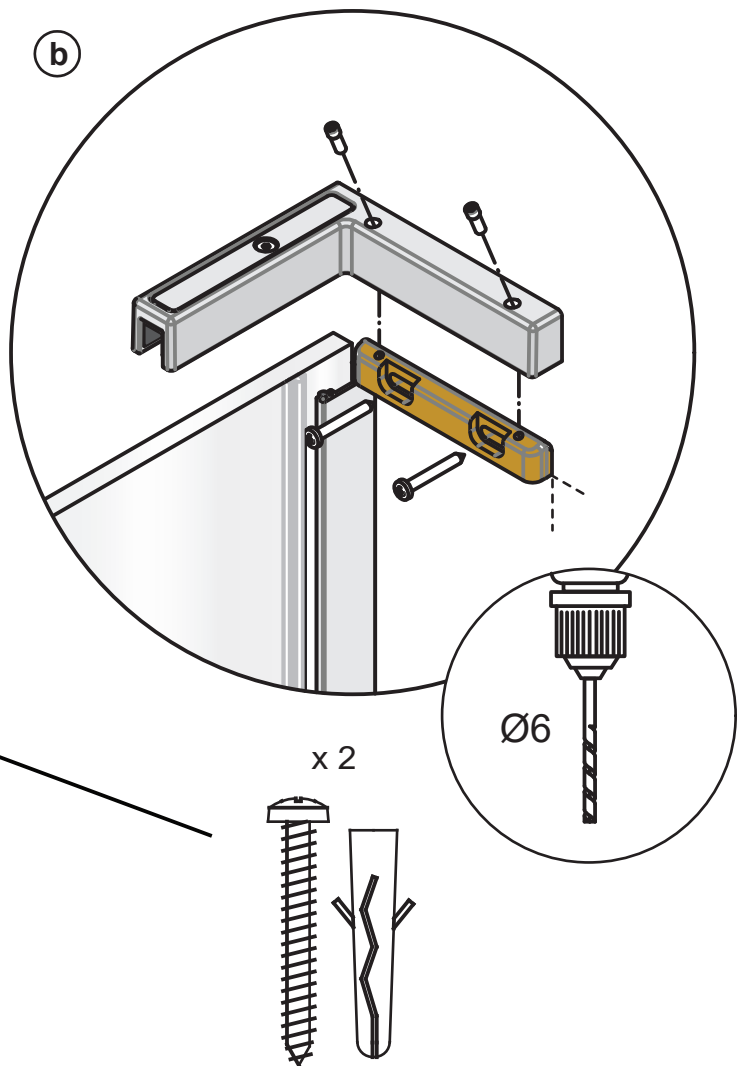
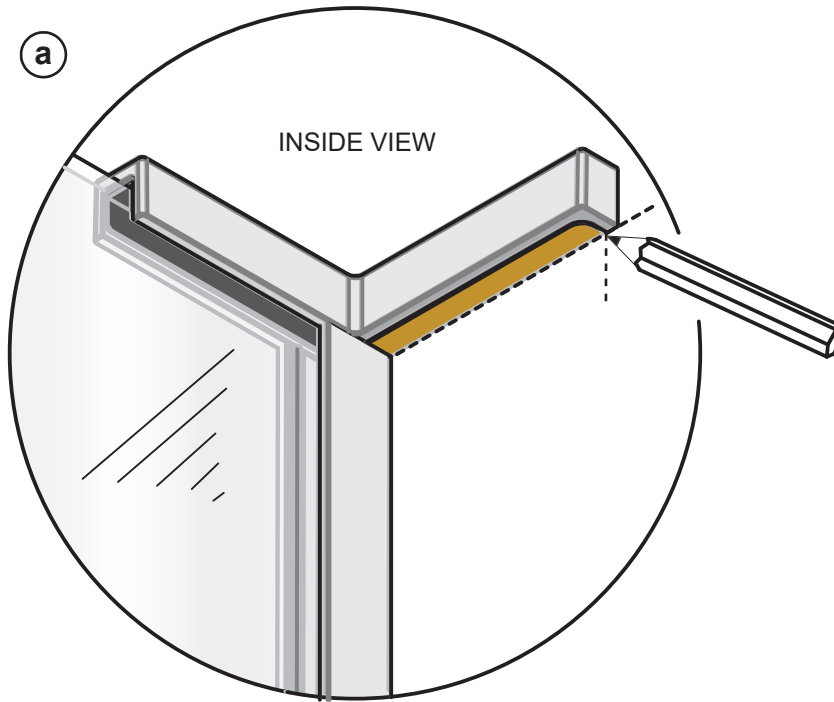
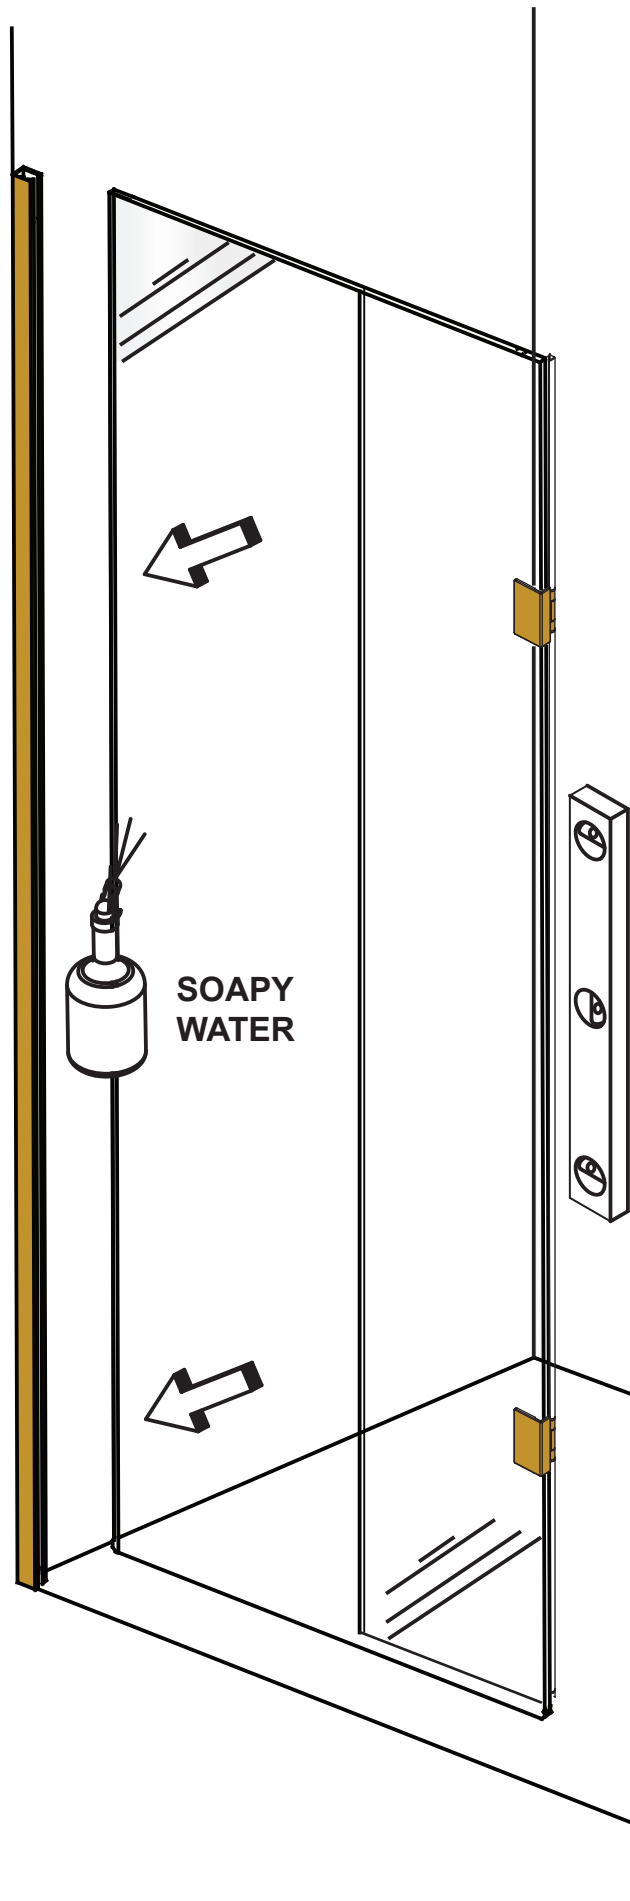


STAGE 3: SEALING

24hrs

BRACE FITTING
INSTRUCTIONS
ARE PACKED WITH
BRACE

Open position for
the silicon sealant to cure.

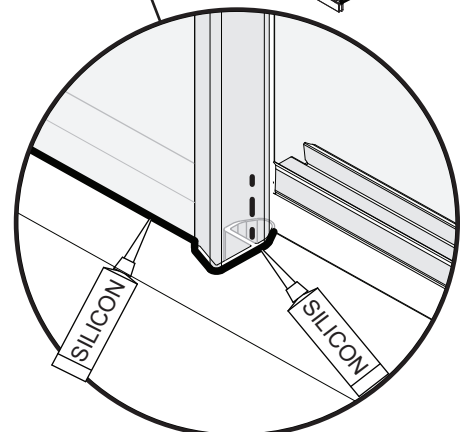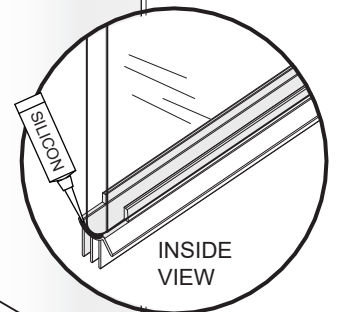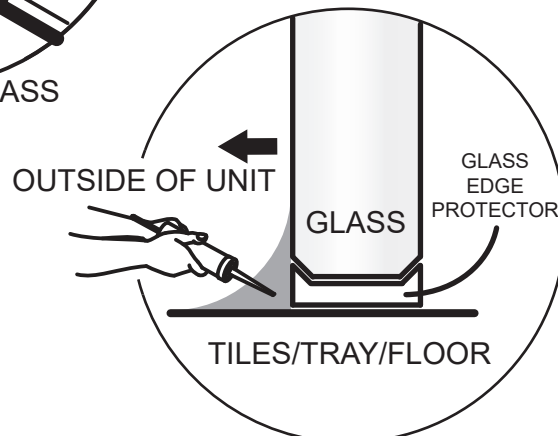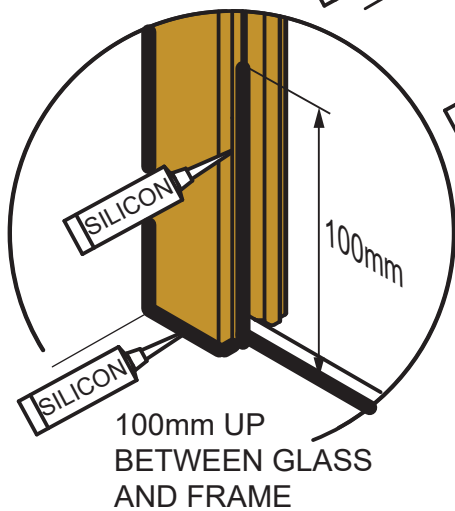

NOTES

NOTES

PARTS LIST

121 WALL SCREWS PARTS KIT	9864 AF	QTY
No.8 x 32 PAN HEAD SELF TAP SCREW	1471 A SILVER	6
WALL PLUG	1818 AF	6
