

matki

ECLIPSE

LPSC - CORNER 900/800/760

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER



MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10625 AF 11/22

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.



PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS

CORNER
900/800/760 X 900/800/760

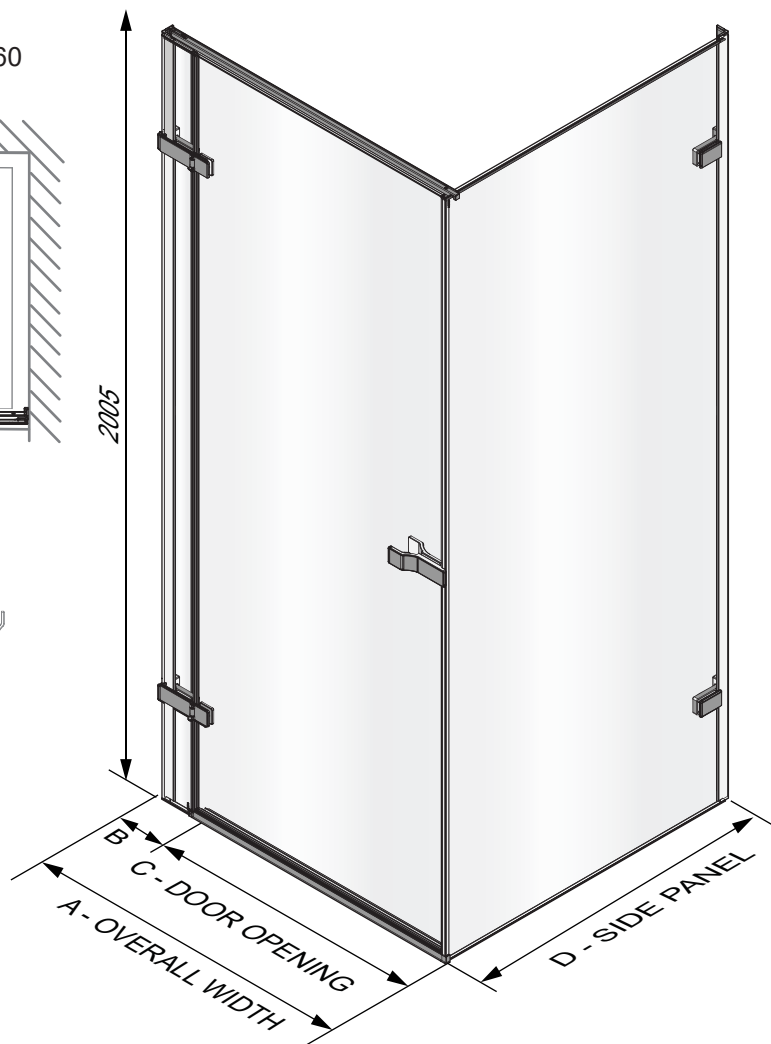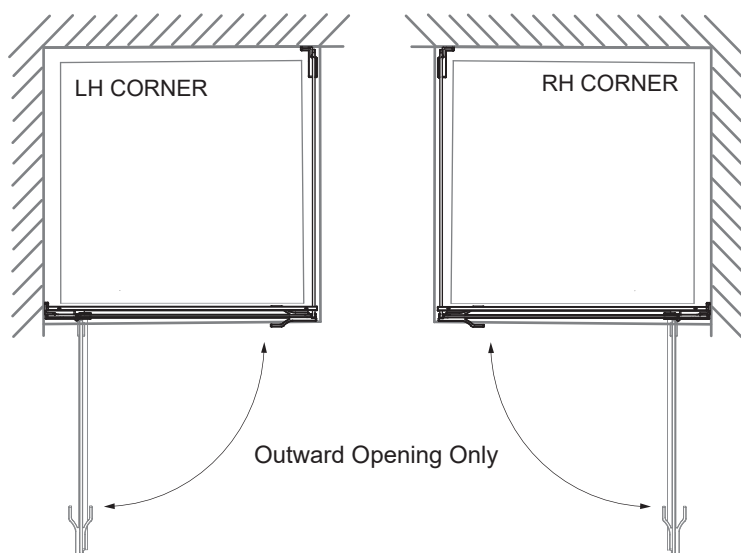

MODEL	A	B	C
LPSC760	740-760	97-117	630
LPSC800	780-800	97-117	670
LPSC900	880-900	97-117	770

SIDE PANEL	D
LPSCSP760	740-760
LPSCSP800	780-800
LPSCSP900	880-900

Dimensions are approximate

HANDING OF UNIT





LH CORNER



RH CORNER

SETTING OUT


INSTRUCTIONS SHOW LH INSTALLATION

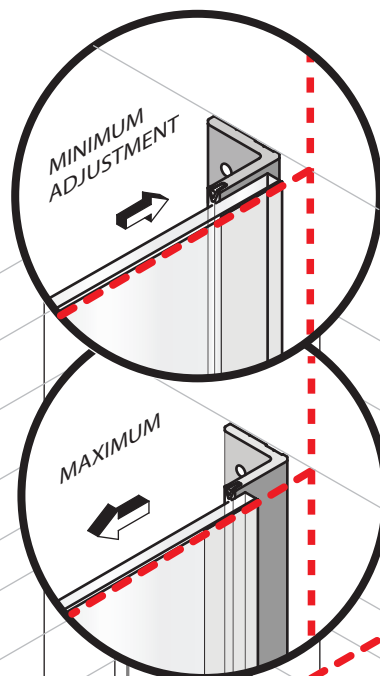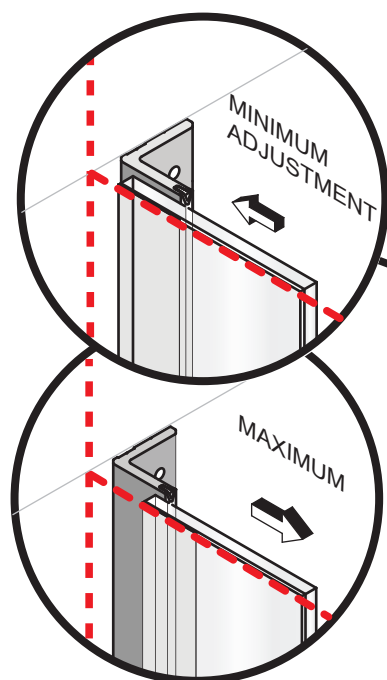

IMPORTANT!
ALLOW FOR
8mm GLASS
THICKNESS IN
FRONT OF WALL
MOUNT WHEN
SETTING OUT


HINGED DOOR FOR CORNER MODEL	DOOR WIDTH (A) MIN - MAX
LPSC760	740-760
LPSC800	780-800
LPSC900	880-900

SIDE PANEL	PANEL WIDTH (B)
LPSCSP760	740-760
LPSCSP800	780-800
LPSCSP900	880-900

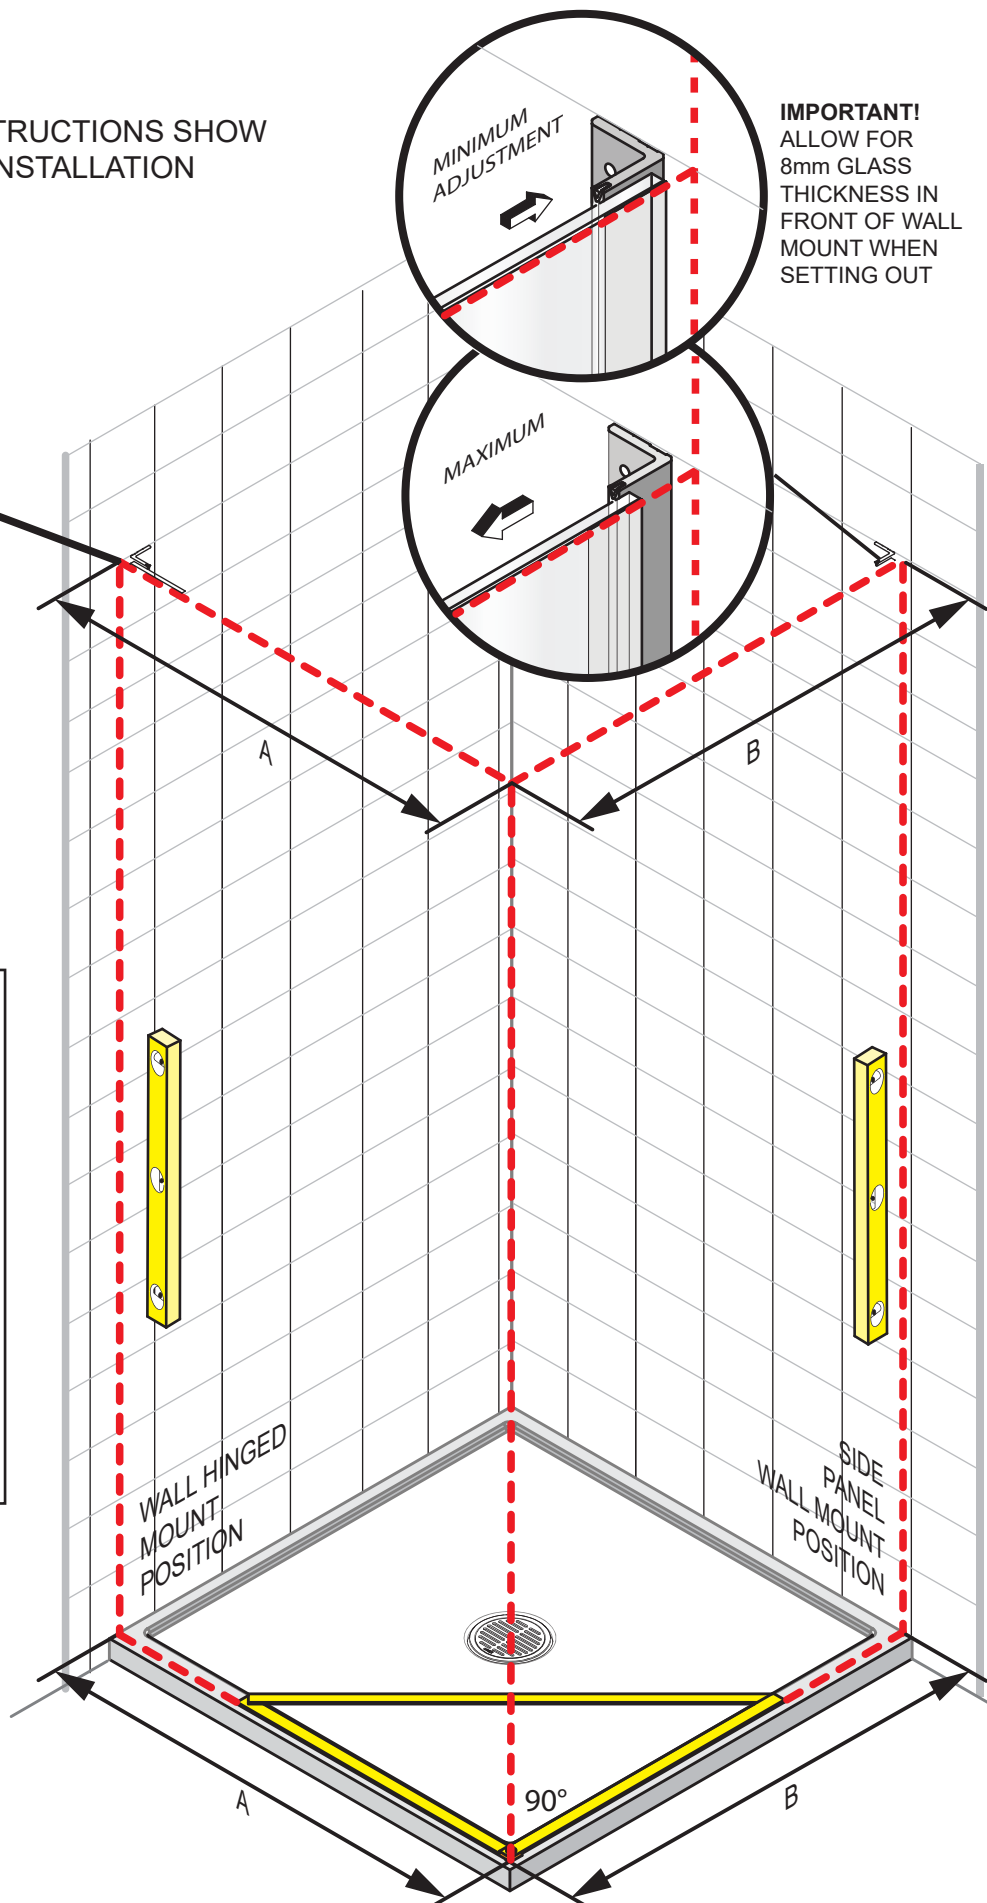

Attention! Both lower and upper dimensions must fall with-in the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.



STAGE 1



HINGE ASSEMBLY





SIDE PANEL BRACKET ASSEMBLY

TOP VIEW

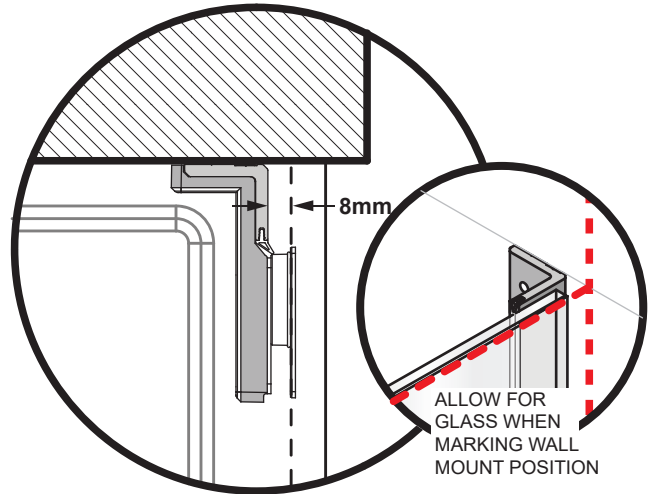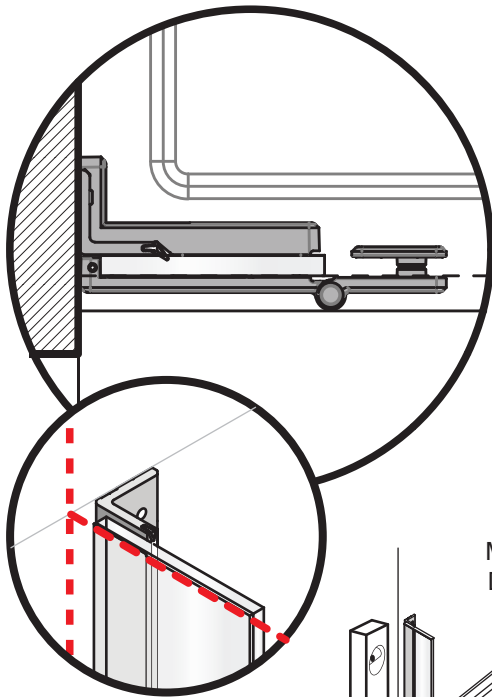


MARK
HINGE PANEL
BRACKETS x2
INSIDE VIEW


MARK PANEL
BRACKETS x 2
INSIDE VIEW

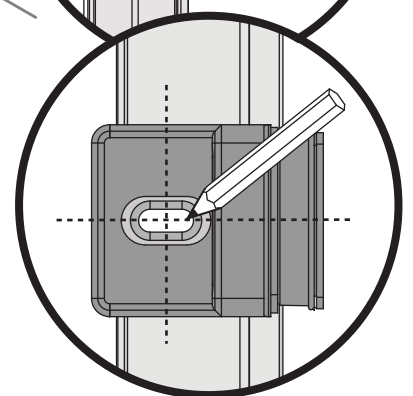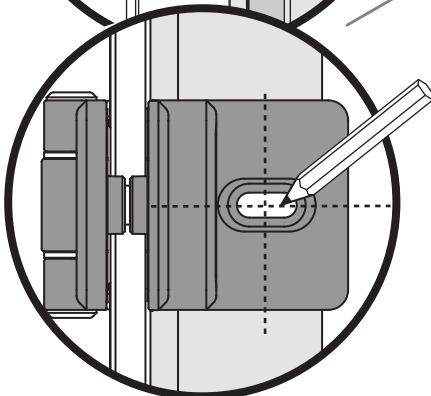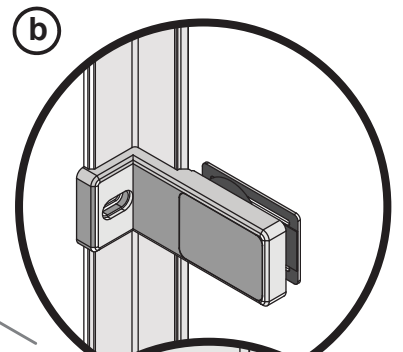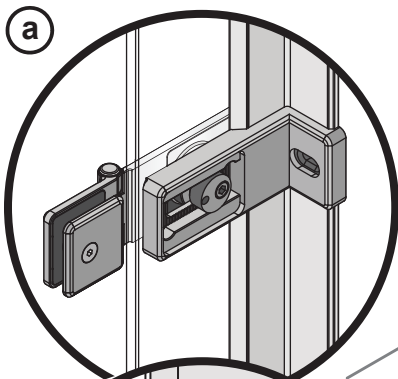

STAGE 2




**IMPORTANT! BEFORE FITTING
HINGE PANEL REMOVE
PROTECTIVE TAPE**

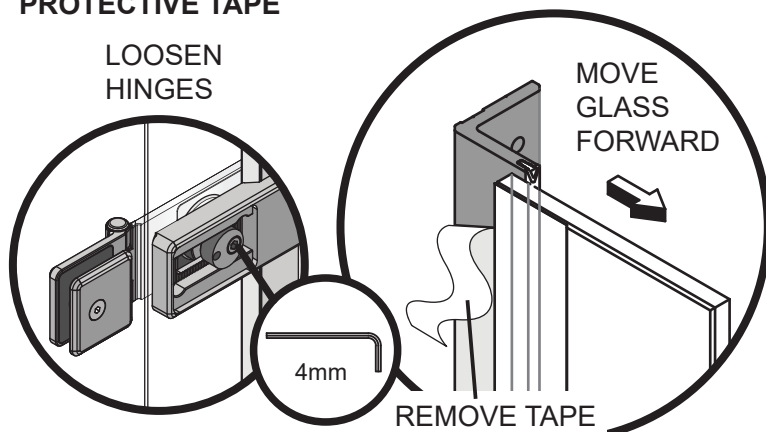


RE-TIGHTEN HINGES AFTER TAPE REMOVAL!


**HINGE PANEL x 2
INSIDE VIEW**

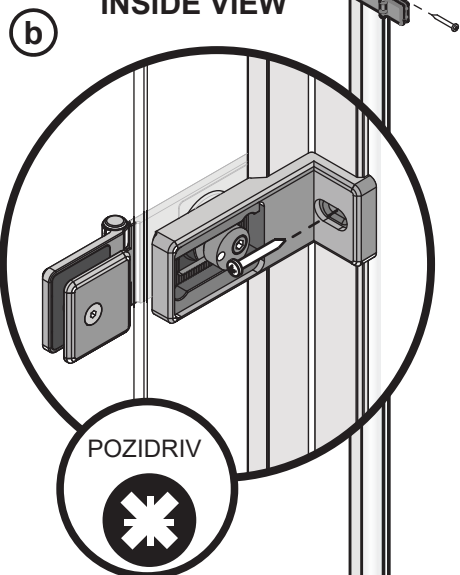


**PANEL BRACKET x 2
INSIDE VIEW**

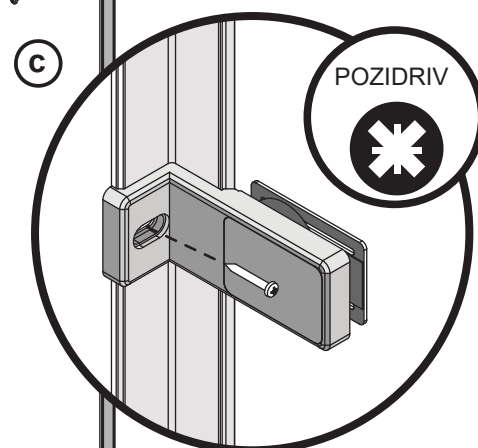

a

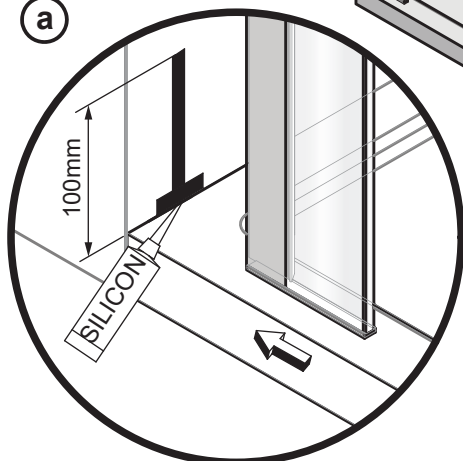


a

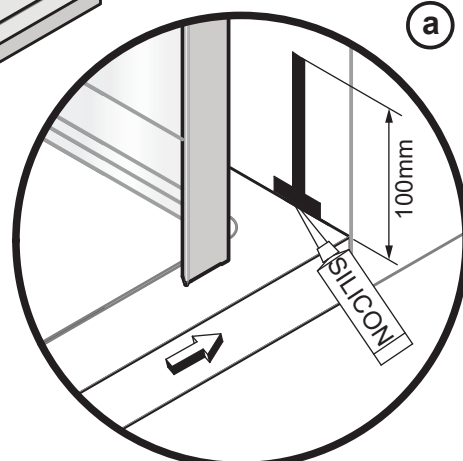

STAGE 3


LH CORNER UNIT

ENSURE HINGE SEAL SITS
FLAT AGAINST FACE OF GLASS

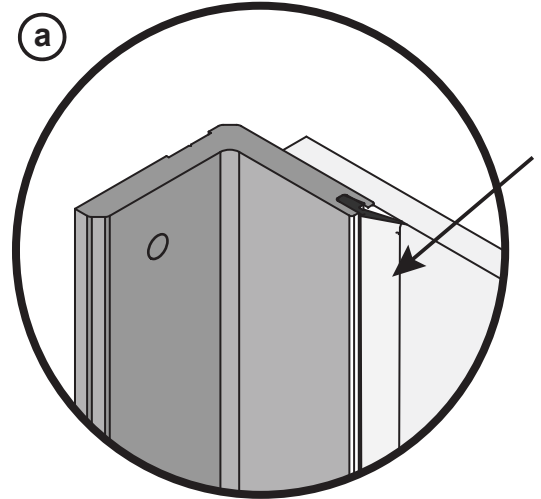

INSIDE VIEW

PANEL BRACKETS x 2

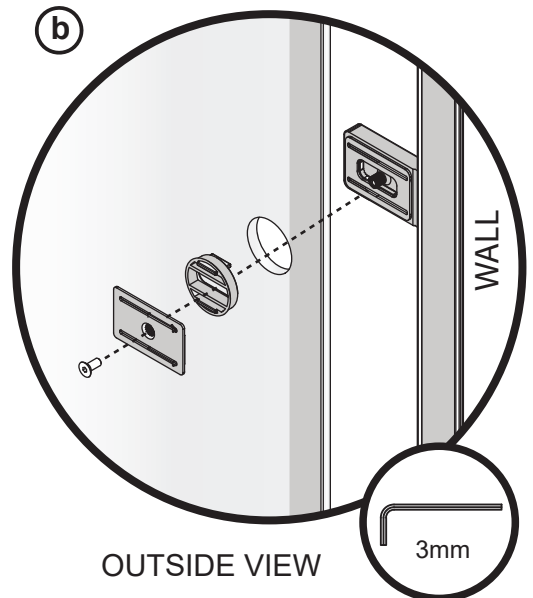

OUTSIDE VIEW

LOAD PANEL
FROM OUTSIDE
OF UNIT

FROSTED FACE
IS ON **OUTSIDE**
OF UNIT

STAGE 4


CONVERT THRESHOLD
TO CORNER

POZIDRIV




LH CORNER
UNIT


REMOVE

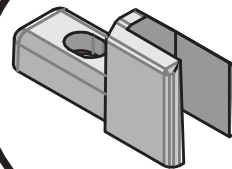

REPLACE

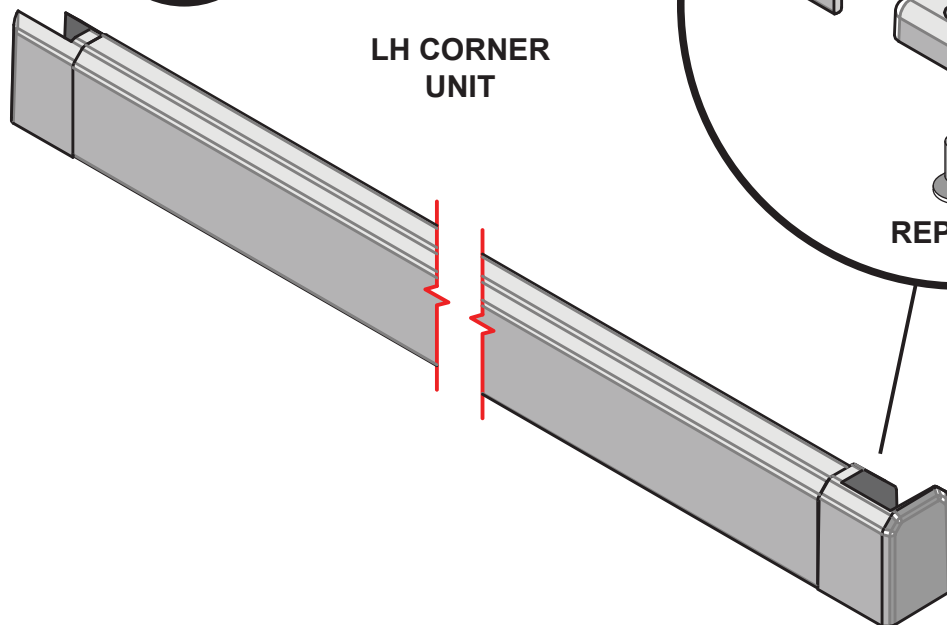


REMOVE

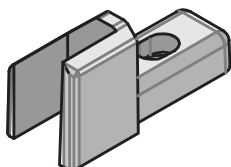


REPLACE




RH CORNER
UNIT

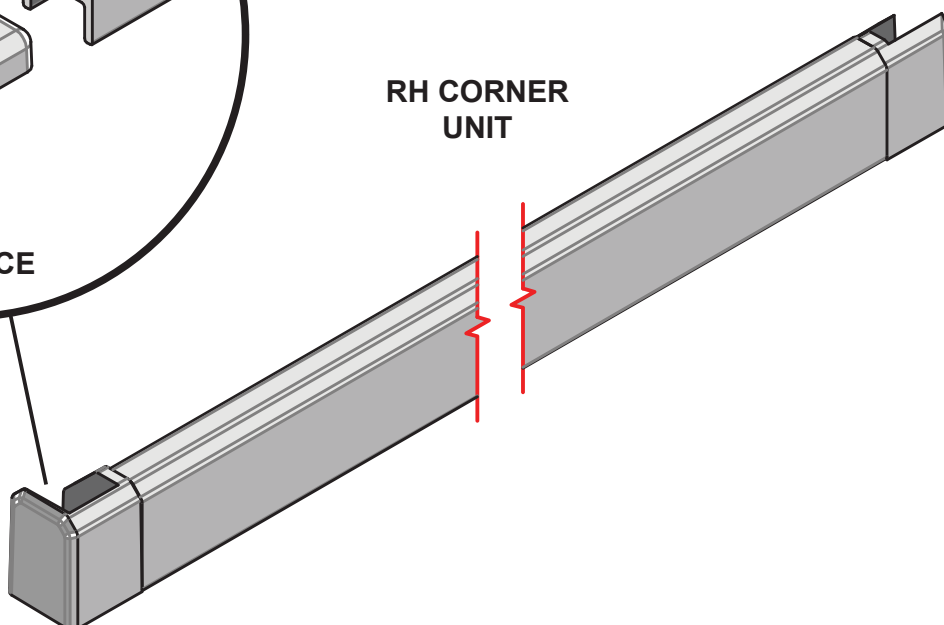

STAGE 5

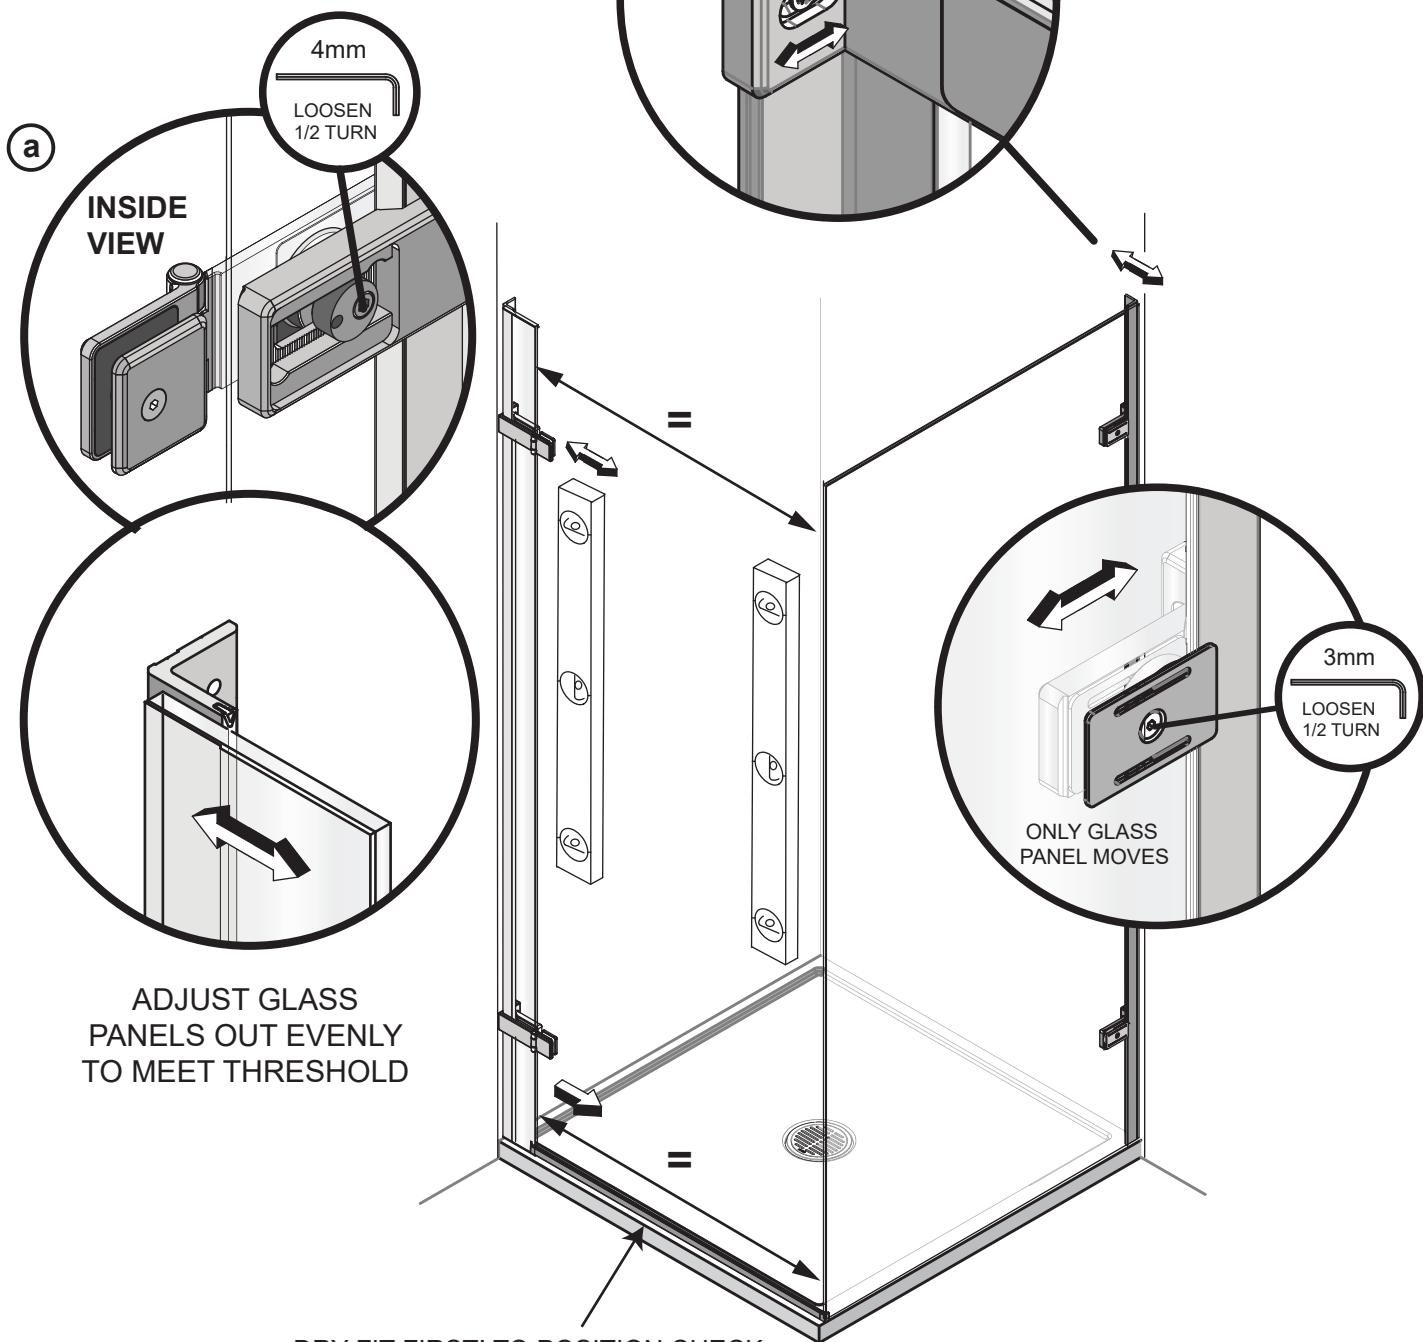


DRY FIT FIRST! TO POSITION CHECK.
APPLY SILICON AT END CAPS
PEEL OFF TAPE FILM AND PRESS IN PLACE

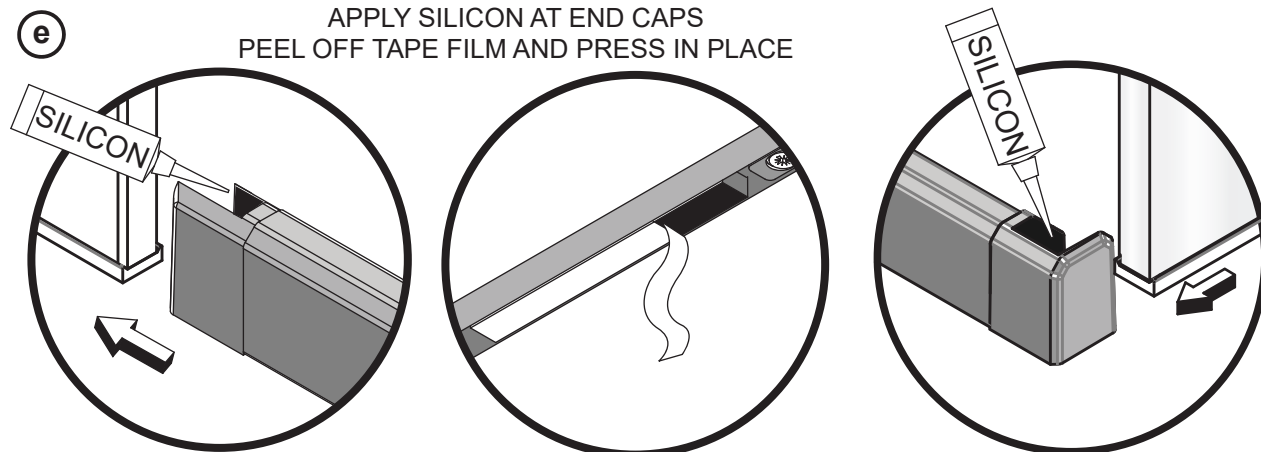


STAGE 6


BEFORE FITTING DOOR

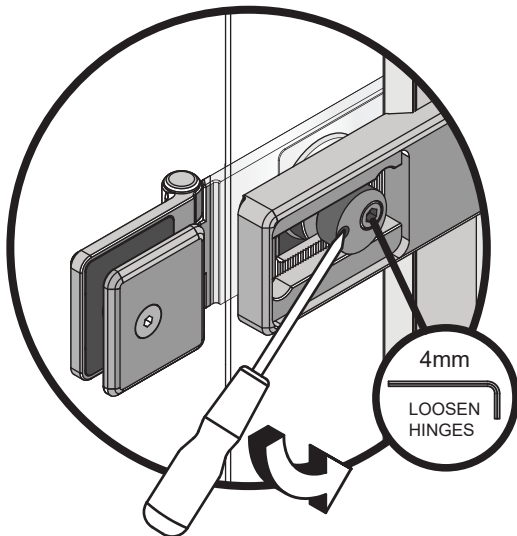


SET BOTH UPPER AND LOWER
DOOR CAMS TO RAISED
POSITION

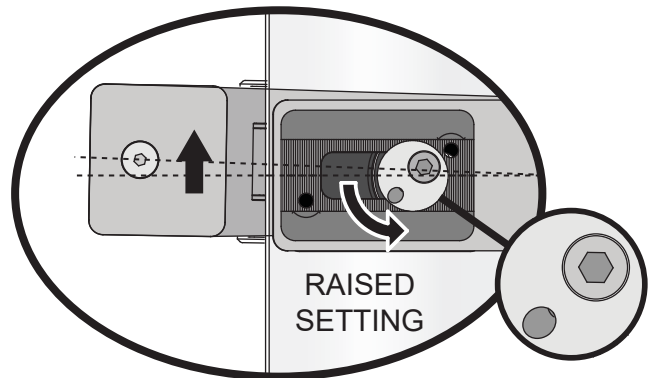


LH HINGE DOOR SUPPORT x 2

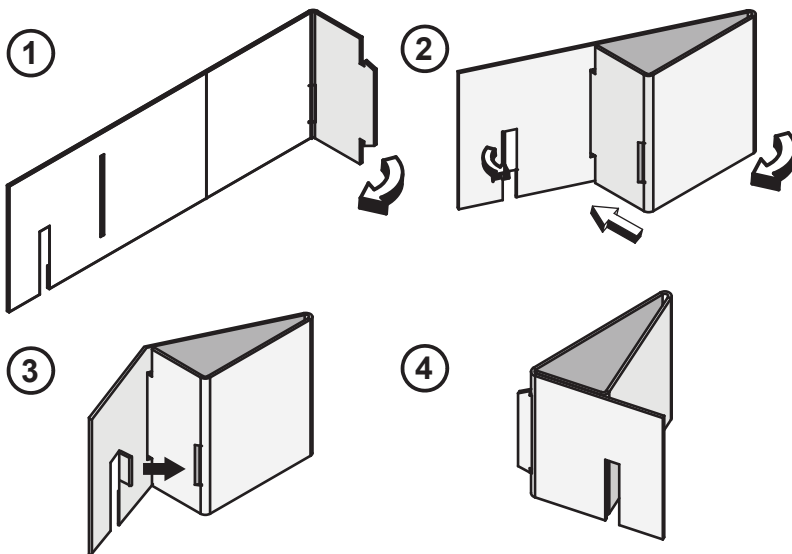


USE HINGE SUPPORTS x 2
FOR DOOR FITTING

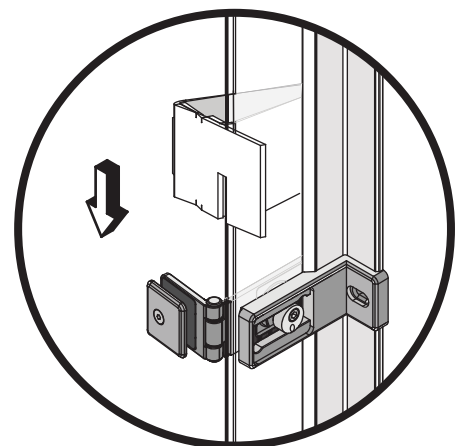

RH HINGE DOOR SUPPORT X2

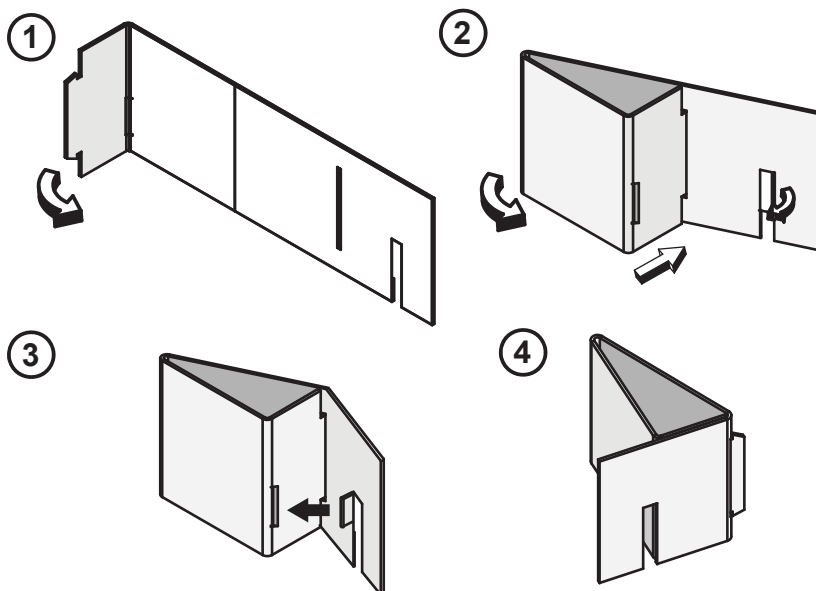

USE HINGE SUPPORTS x 2
FOR DOOR FITTING

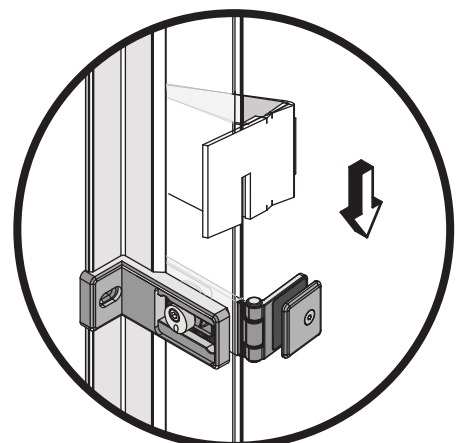




STAGE 7



2 PERSON
INSTALLATION

FIT DOOR TO
HINGE x 2
WITH BACK
HINGE PLATES


ALIGN BACK
HINGE PLATES
WITH FRONT
AND TIGHTEN

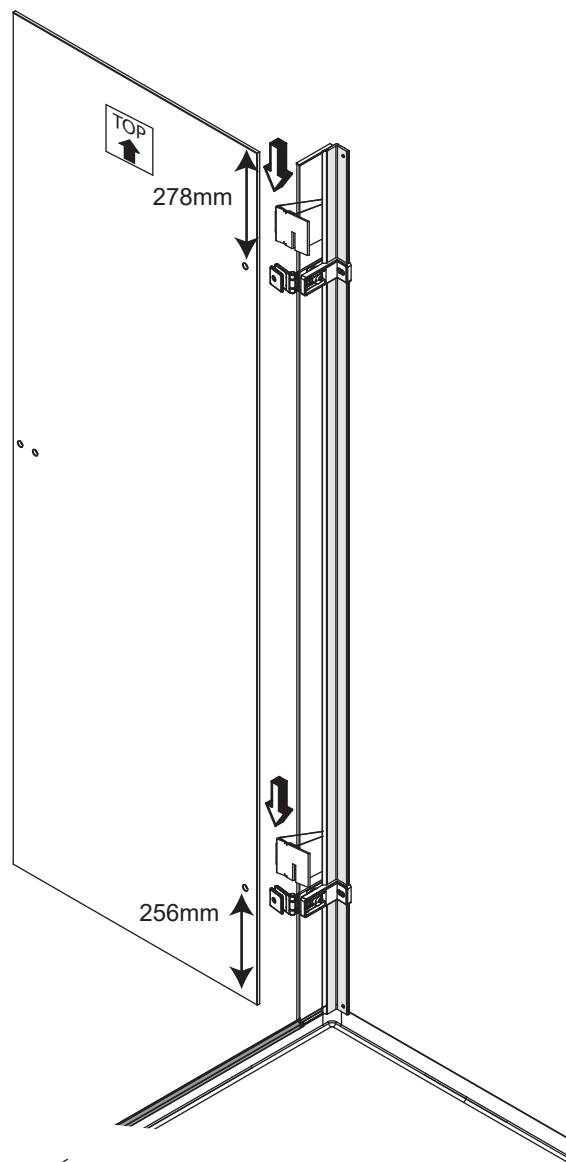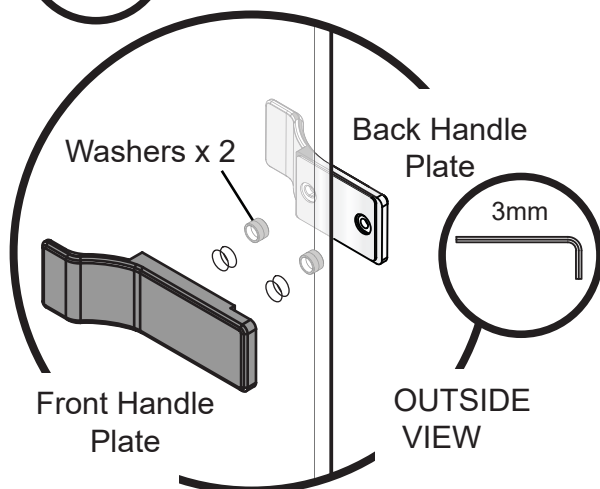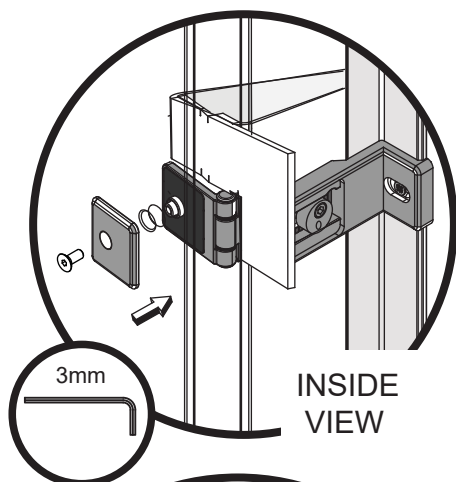


DOOR ADJUSTMENT

WHEN ADJUSTING DOOR, OPEN AT 90°

ADJUST DOOR LEFT-RIGHT

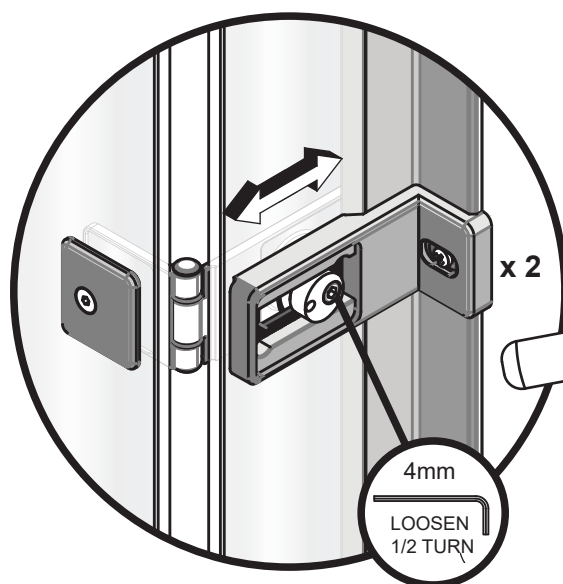


ADJUST DOOR UP-DOWN

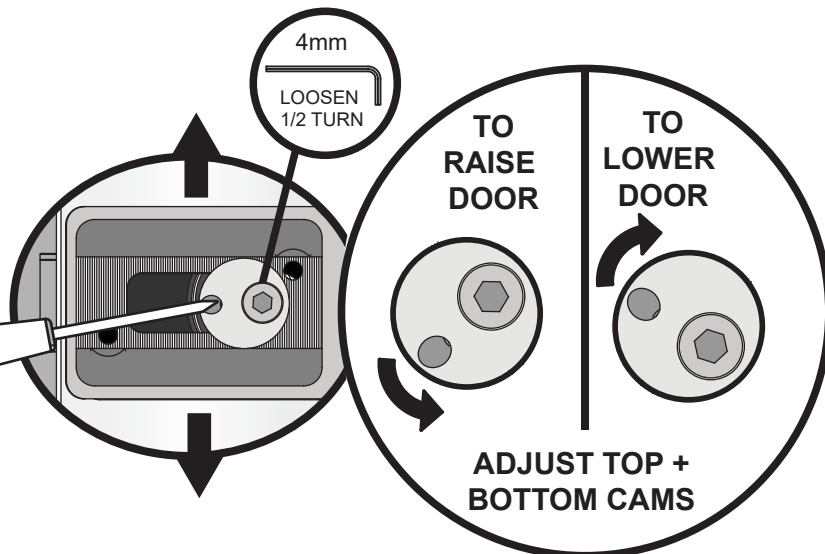


STAGE 8

BRACE BAR IS
UNHANDED

(a)




REMOVE TOP
EDGE PROTECTORS
NOT REQUIRED

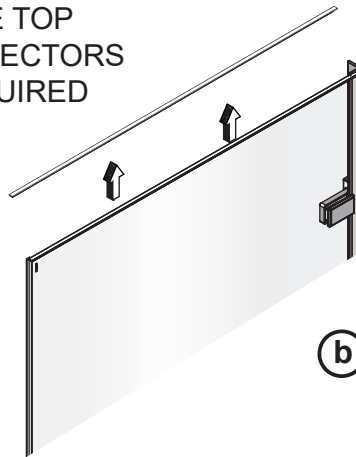


PUSH FIT
END OF
BRACE OVER
SIDE PANEL

(b)

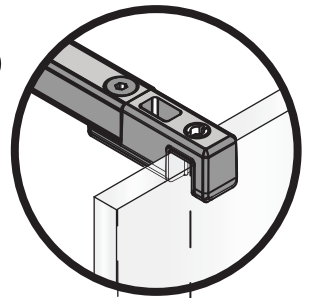


CONNECT BRACE
BRACKET TO WALL
MOUNT x 2

(c)

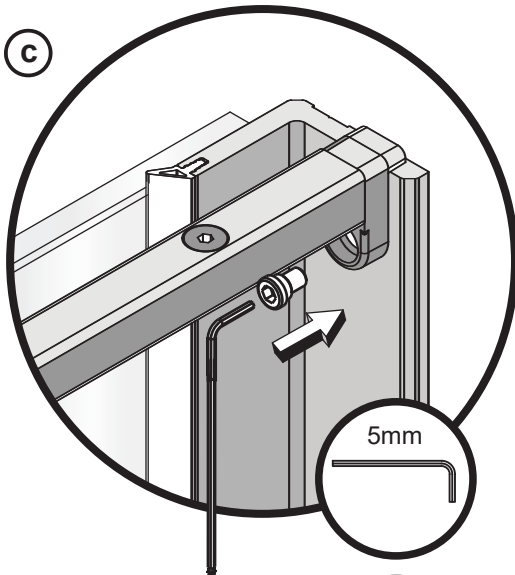

5mm

(d)

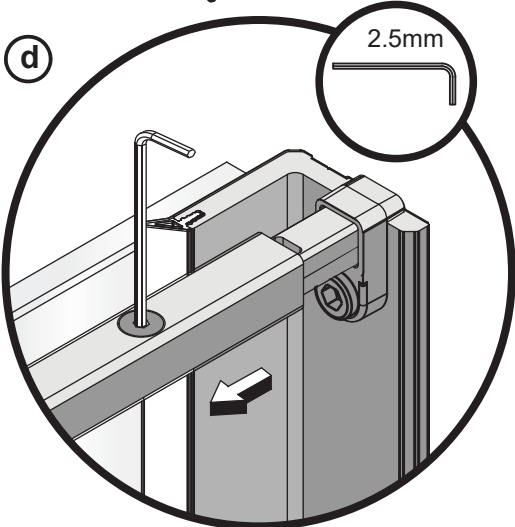


2.5mm

ADJUST ENDS
OUT AS
REQUIRED



STAGE 9

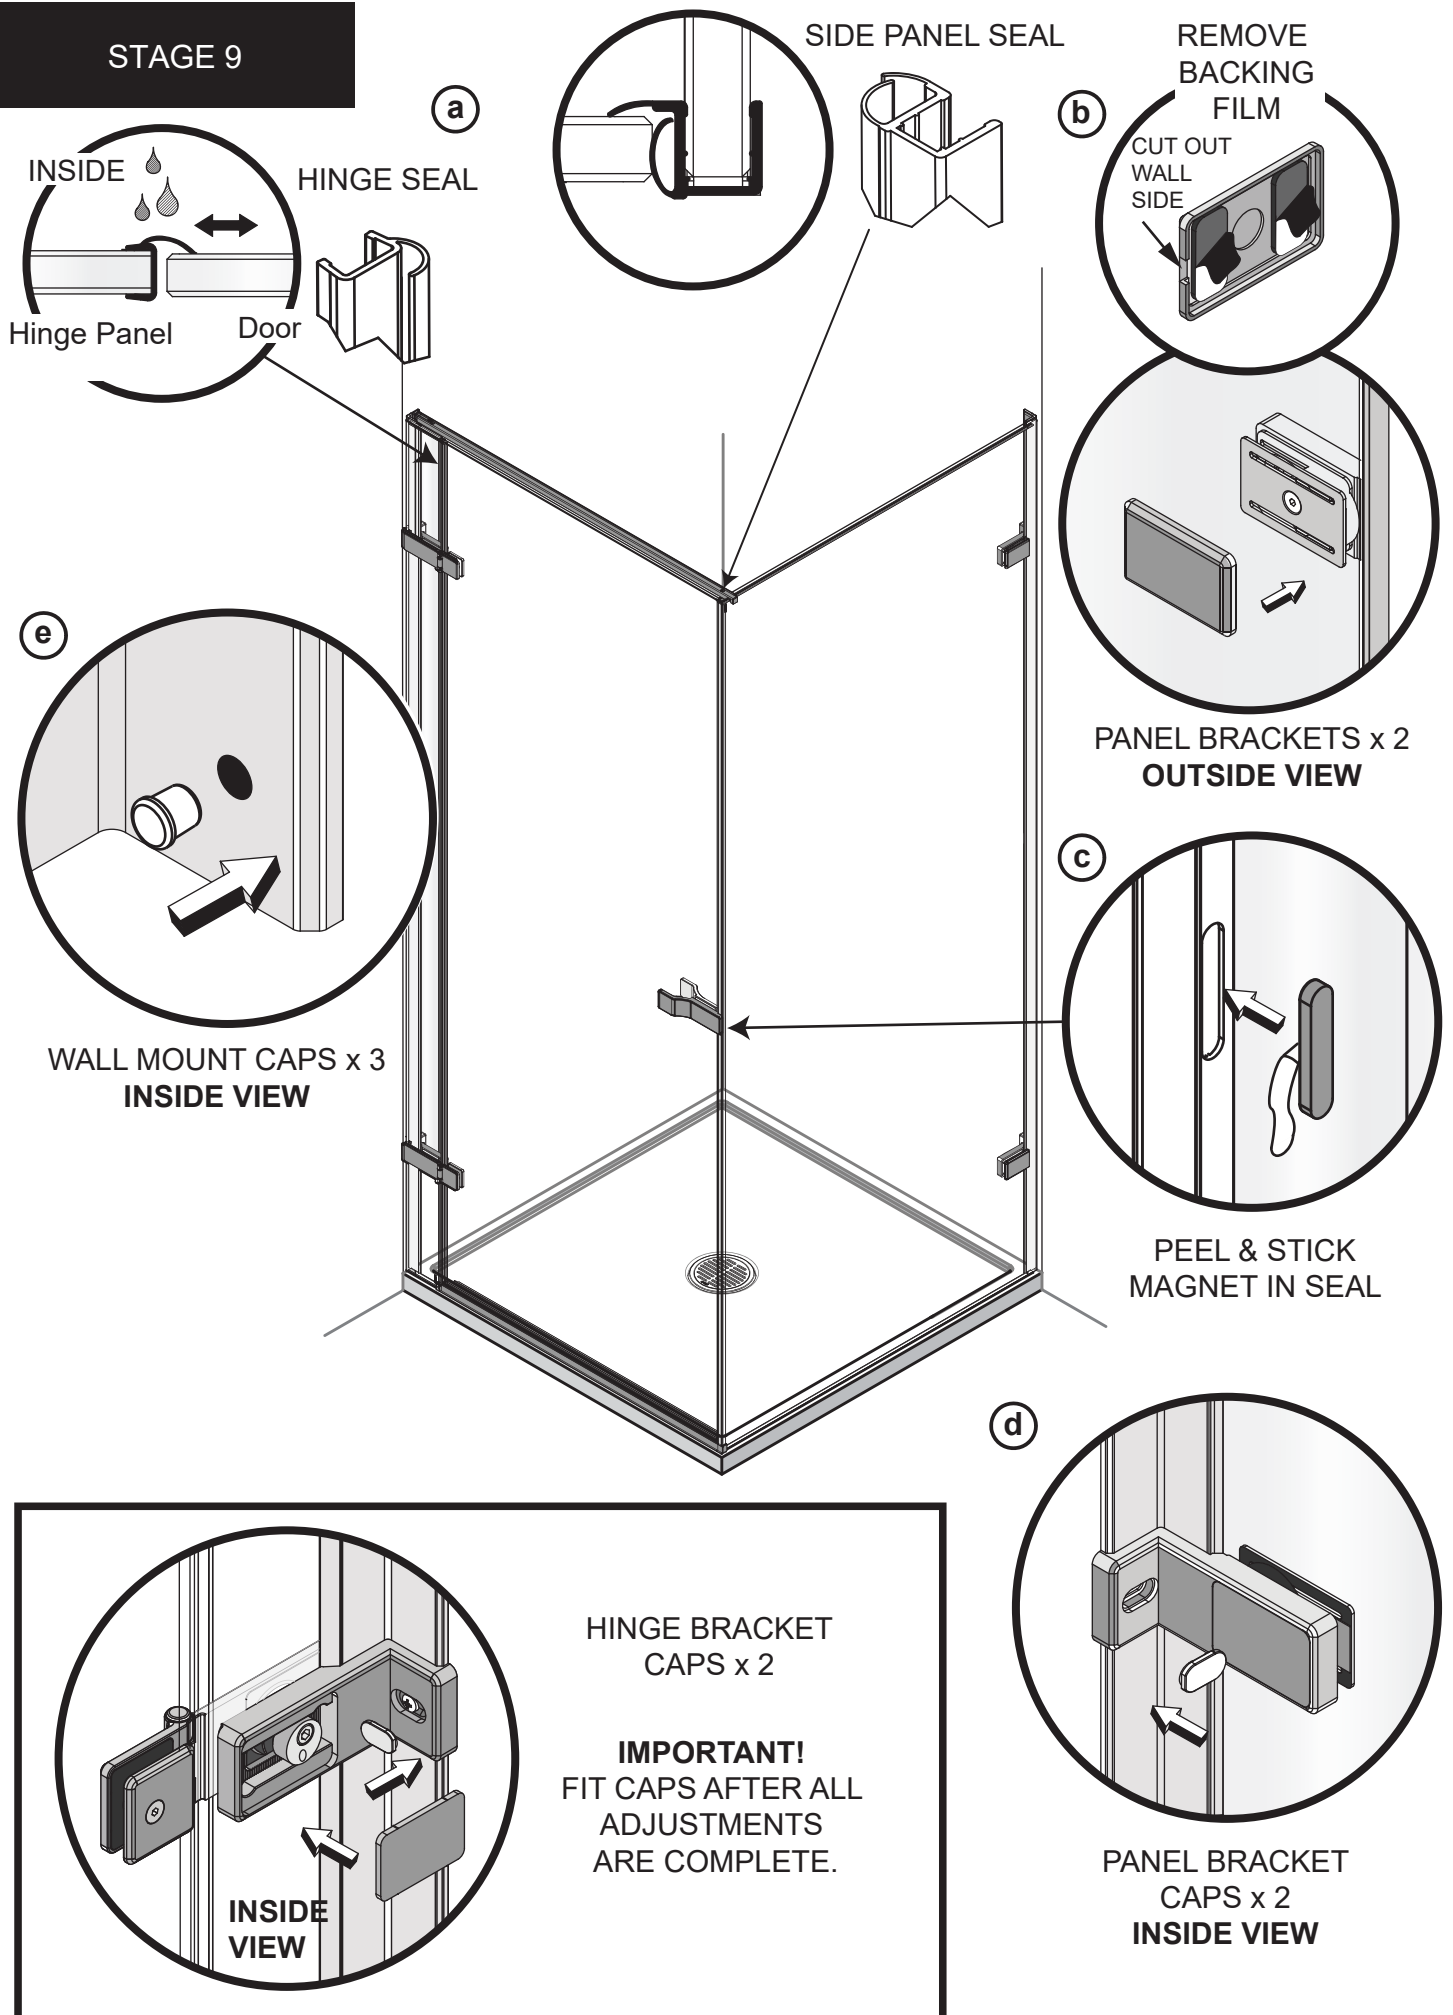

STAGE 10

(a)

INSIDE VIEW

SILICON FULL
HEIGHT OF
WALL MOUNT
ON INSIDE

ENSURE HINGE
SEAL SITS FLAT
ALONG FACE OF
GLASS

SILICON


SILICON

INSIDE VIEW

(b)




HINGE SEAL

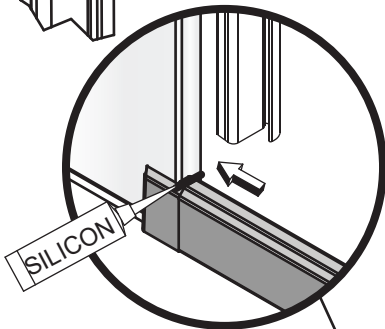

OUTSIDE VIEW

SIDE PANEL
SEAL


(c)

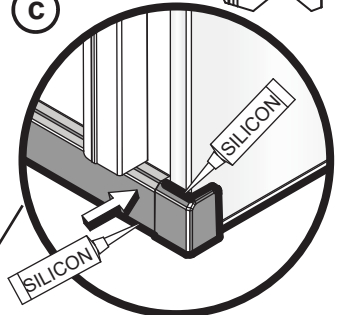

OUTSIDE VIEW

(d)

OUTSIDE VIEW

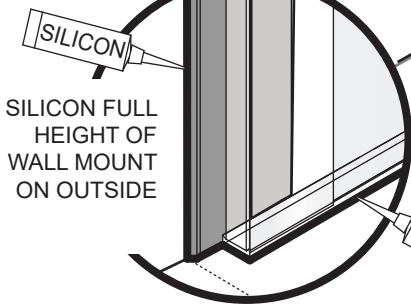


SILICON FULL
HEIGHT OF
WALL MOUNT
ON OUTSIDE

THRESHOLD SEAL


SILICON

(d)

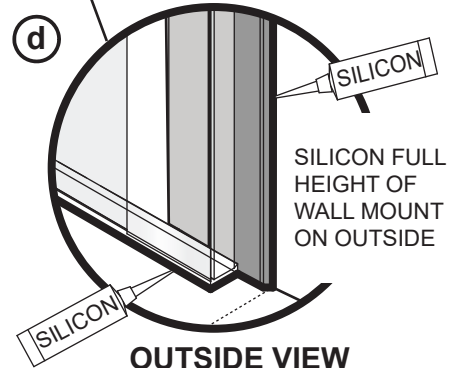

SILICON FULL
HEIGHT OF
WALL MOUNT
ON OUTSIDE


OUTSIDE VIEW

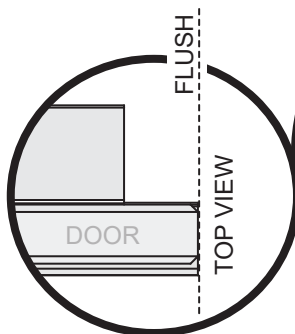


FLUSH

DOOR

TOP VIEW

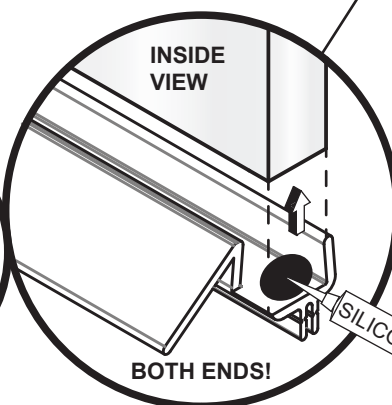


BOTH ENDS!

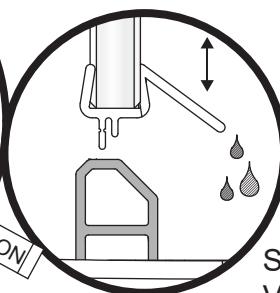


SECTION
VIEW



PARTS LIST

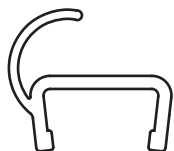


HINGE SEAL
1300217

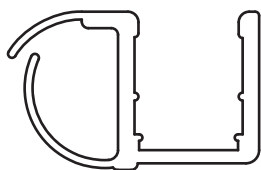

CORNER
CLOSURE SEAL
1300207



HINGE PANEL
ASSEMBLY
10437 AF

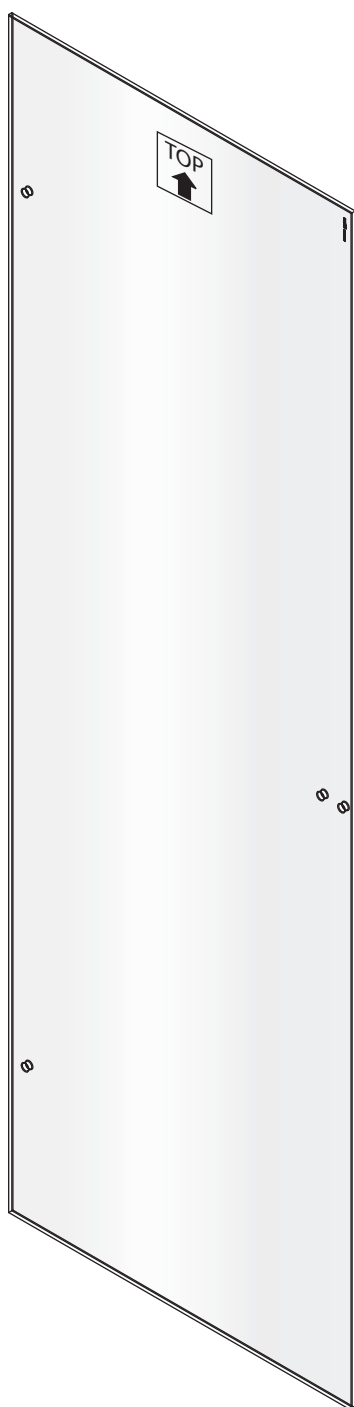

CORNER/INLINE DOOR GLASS
900 MODEL : 1300004
800 MODEL : 1300016
760 MODEL : 1300017




SIDE PANEL GLASS
900 MODEL : 1300007
800 MODEL : 1300020
760 MODEL : 1300021




PANEL BRACKET
ASSEMBLY
10439 AF

PARTS LIST

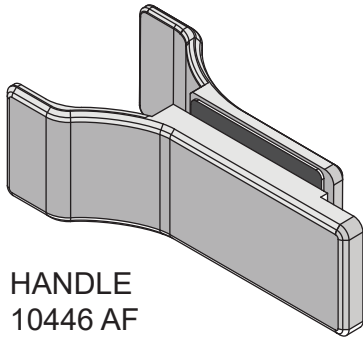


HANDLE
10446 AF

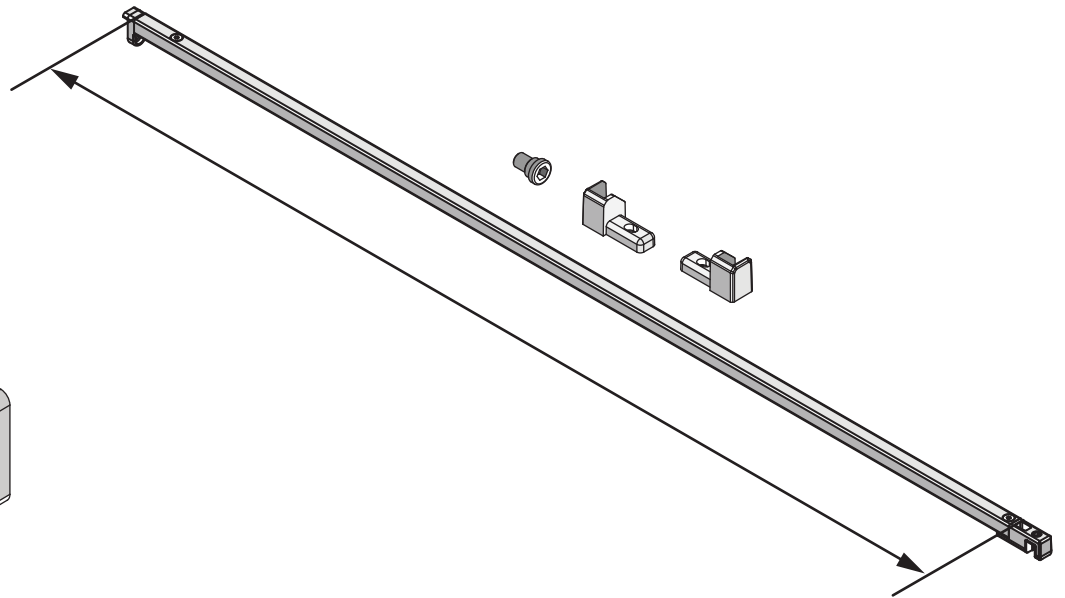

BRACE BAR PACK


900 MODEL (841mm) : 10442 AF
800 MODEL (741mm) : 10441 AF
760 MODEL (701mm) : 10440 AF

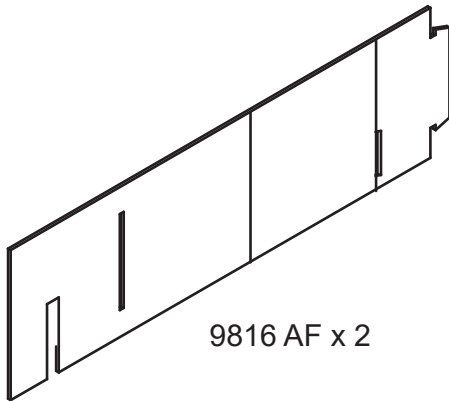


9816 AF x 2

THRESHOLD SEAL

900 MODEL (763mm) : 1300215
800 MODEL (663mm) : 1300220
760 MODEL (623mm) : 1300221

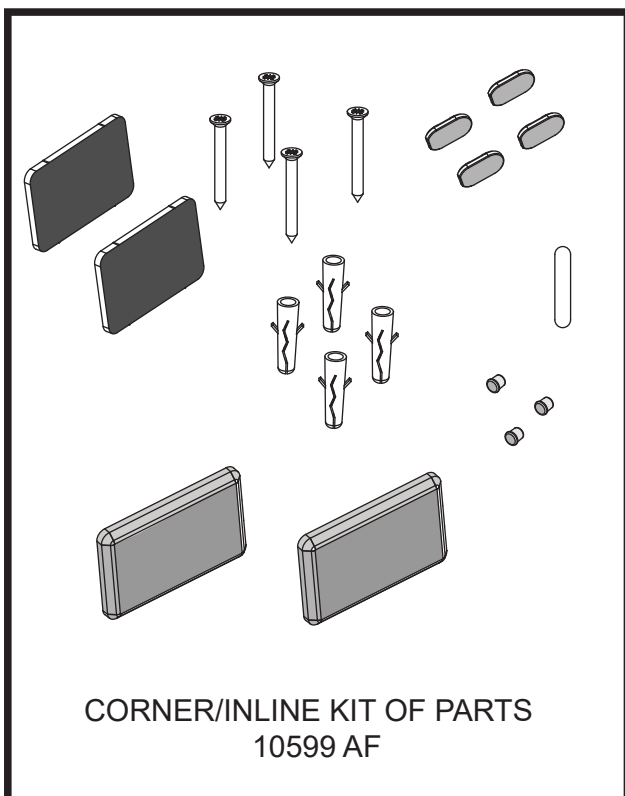

CORNER/INLINE KIT OF PARTS
10599 AF

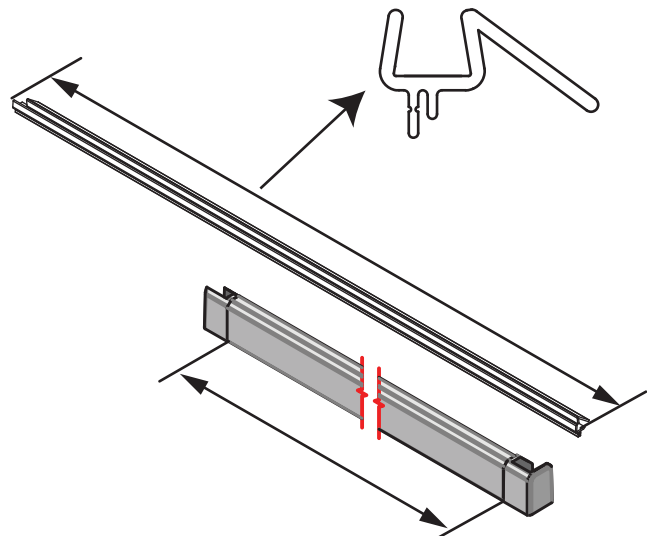

CORNER/INLINE THRESHOLD PACK

900 MODEL (765mm) : 10455 AF
800 MODEL (665mm) : 10454 AF
760 MODEL (625mm) : 10453 AF