

matki

ECLIPSE

LPSC - INLINE CORNER

1200/1100/1000 x 900/800/760

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER



MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10626 AF 11/22

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.


PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS


INLINE CORNER
1200/1100/1000 x
900/800/760

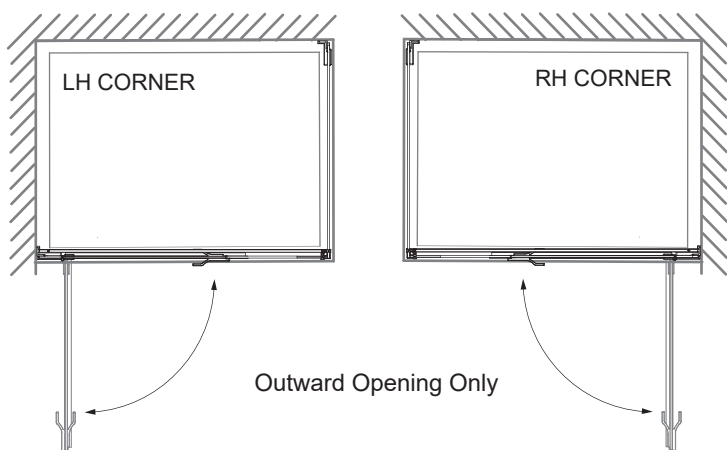


MODEL	A	B	C	D
LPSC1000	980-1000	97-117	670	213
LPSC1100	1080-1100	97-117	670	313
LPSC1200	1180-1200	97-117	670	413

SIDE PANEL	E
LPSCSP760	740-760
LPSCSP800	780-800
LPSCSP900	880-900

Dimensions are approximate

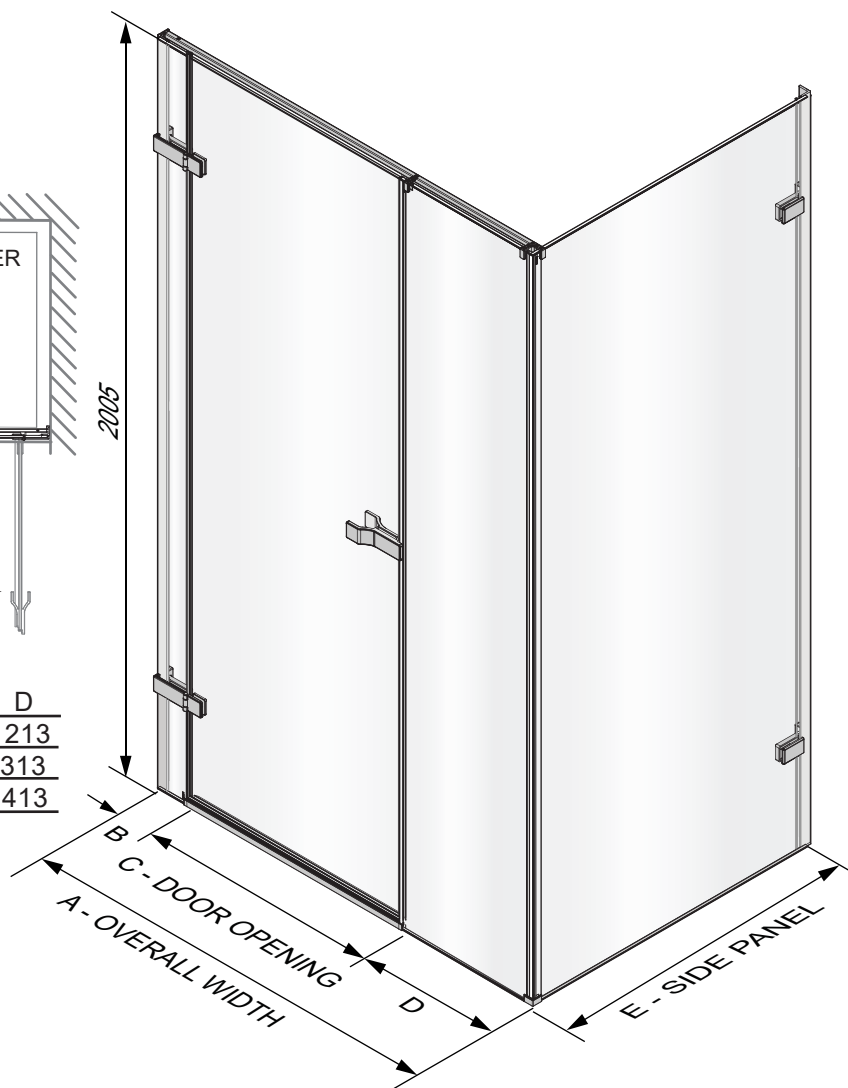

HANDING OF UNIT

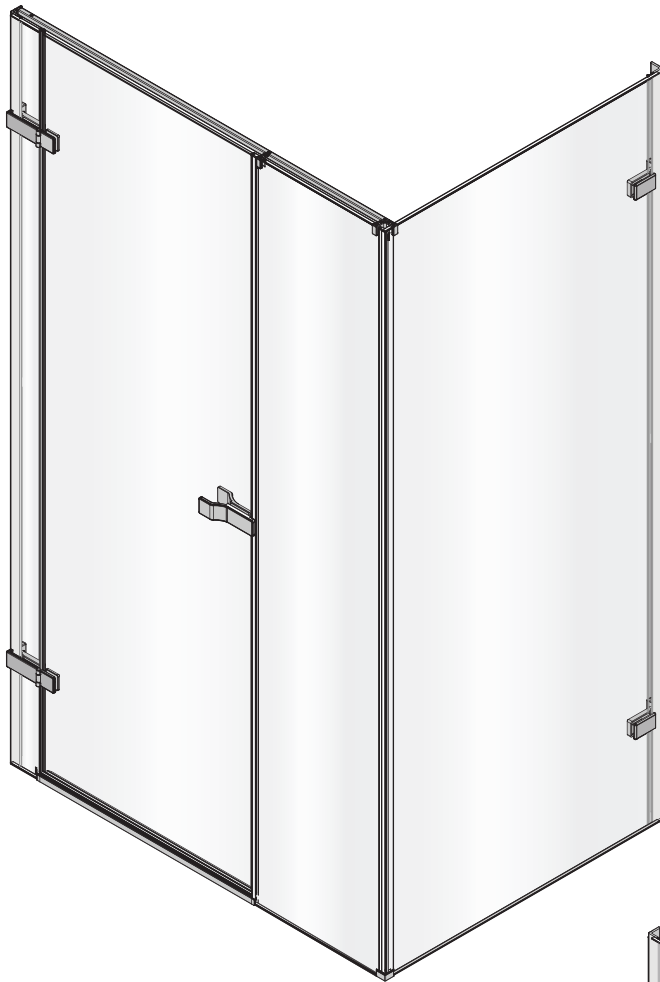


LH CORNER



RH CORNER

SETTING OUT

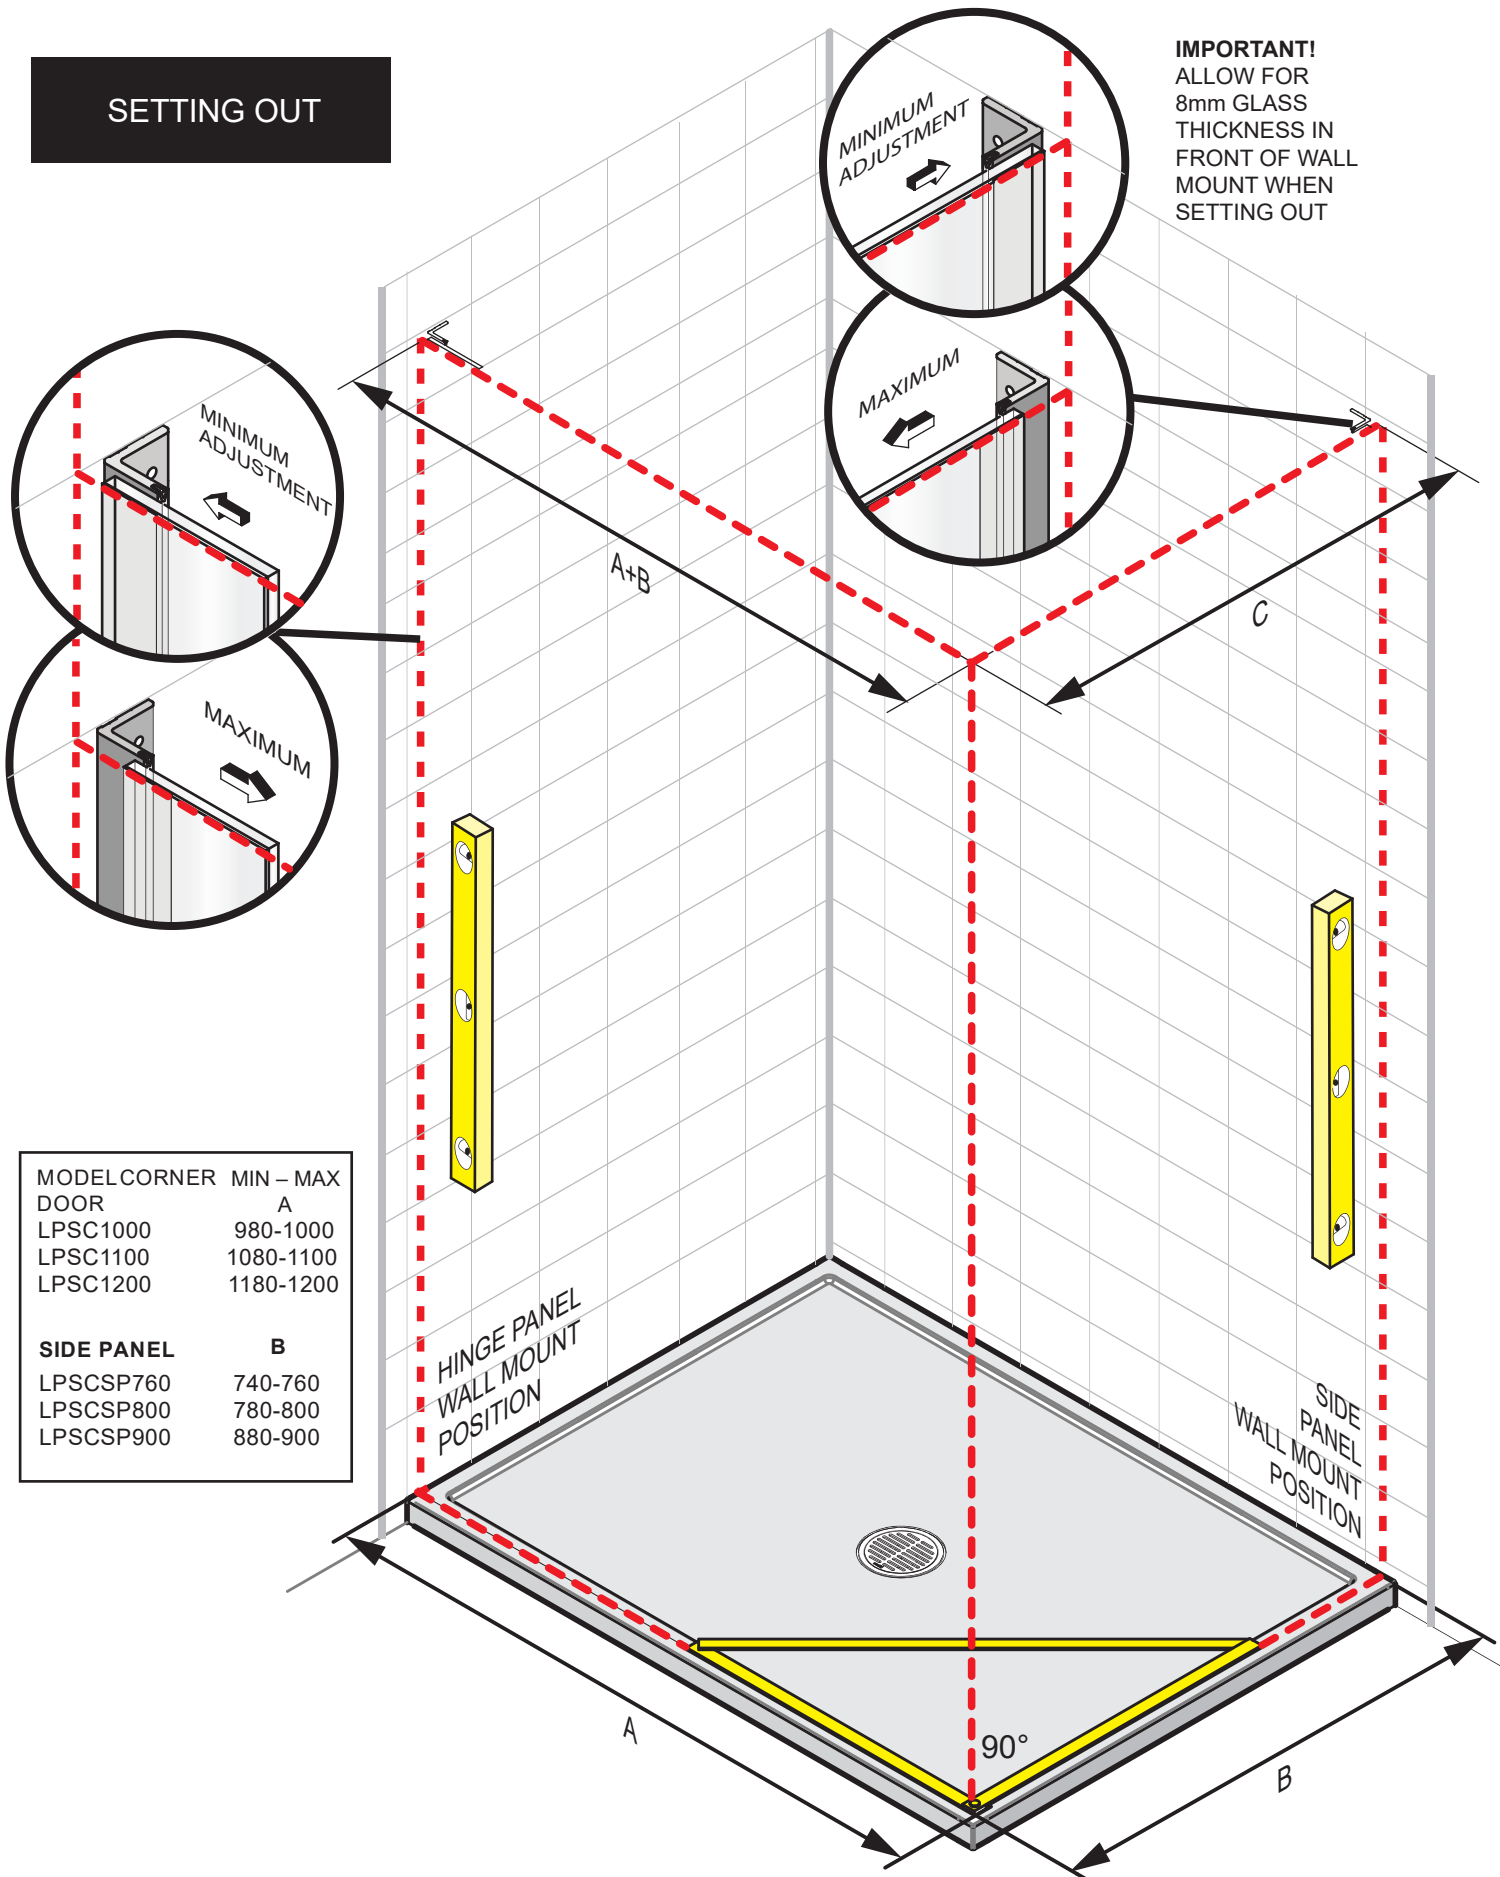

Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimetres the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1


INSTRUCTIONS SHOW
LH INSTALLATION





HINGE ASSEMBLY

SIDE PANEL BRACKET ASSEMBLY

TOP VIEW

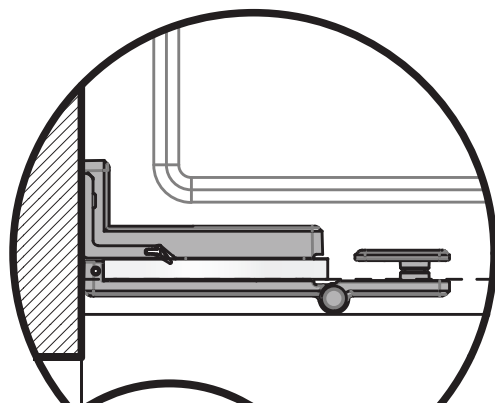

OUTSIDE
GLASS LINE



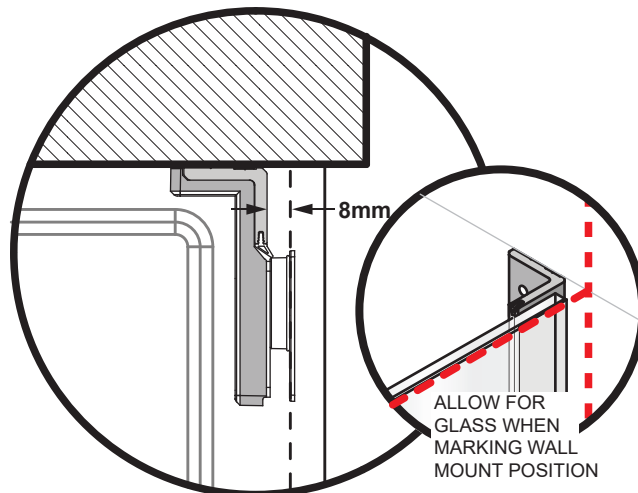
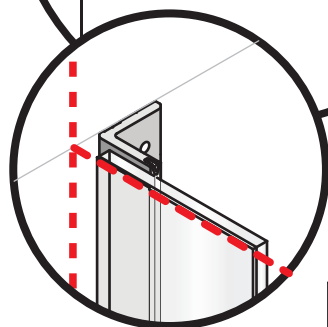


OUTSIDE
GLASS LINE


LEVEL FOR
UPRIGHT
MARK HOLES
DRILL HOLES

MARK
HINGE PANEL
BRACKETS x2
INSIDE VIEW


MARK PANEL
BRACKETS x 2
INSIDE VIEW

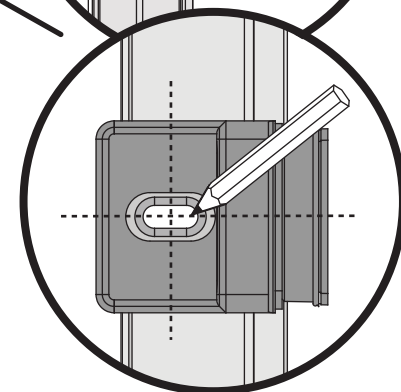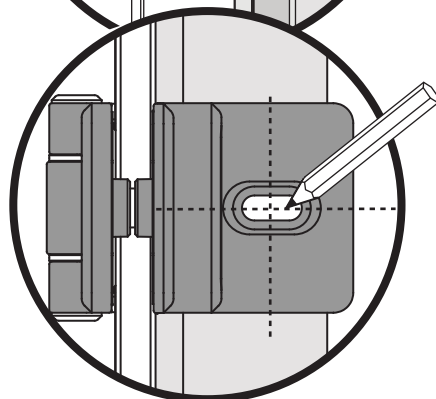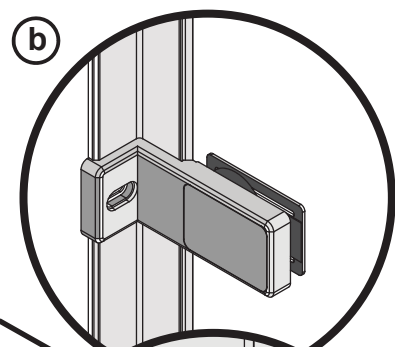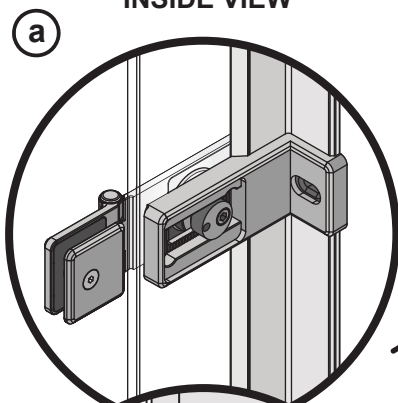

STAGE 2




**IMPORTANT! BEFORE FITTING
HINGE PANEL REMOVE
PROTECTIVE TAPE**

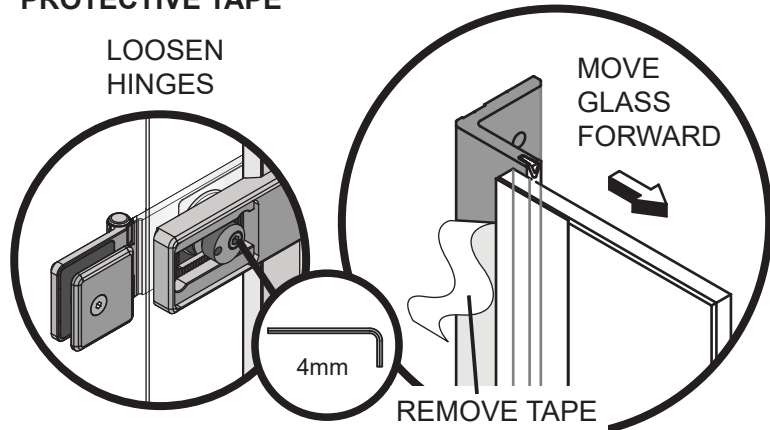

RE-TIGHTEN HINGES AFTER TAPE REMOVAL!


(b)

**HINGE PANEL x 2
INSIDE VIEW**

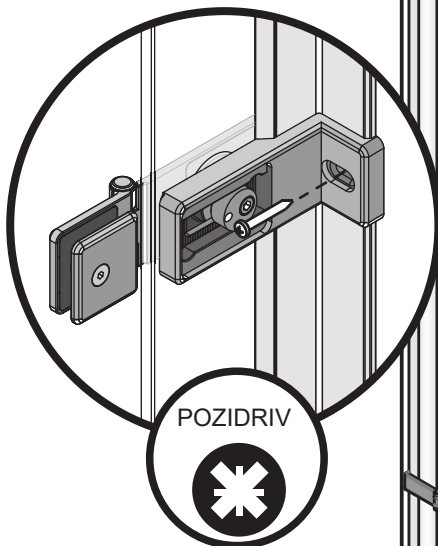


(c)


**PANEL BRACKET x 2
INSIDE VIEW**

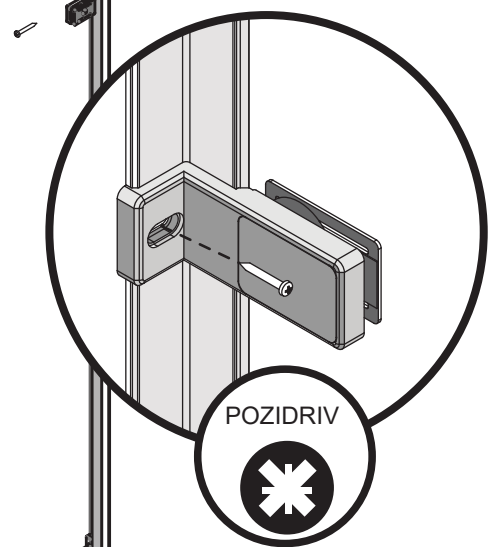

(a)

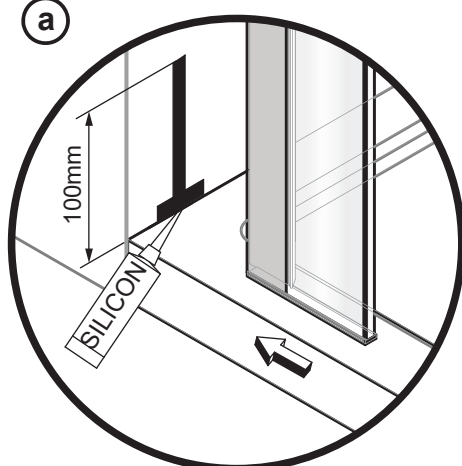


(a)

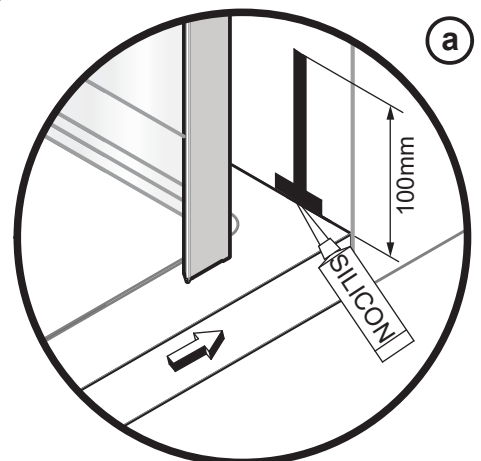


STAGE 3

ENSURE HINGE SEAL SITS
FLAT AGAINST FACE OF GLASS

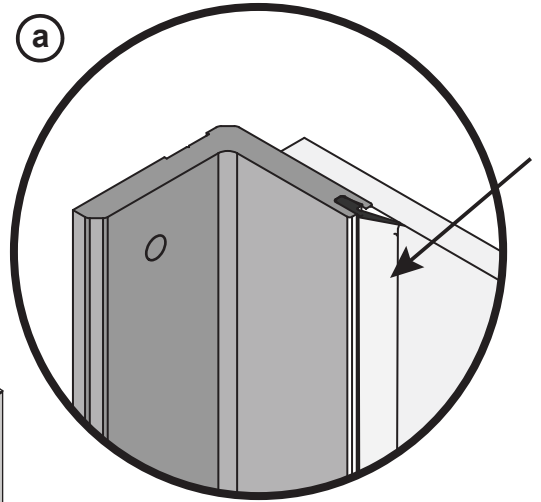


LOAD PANEL
FROM OUTSIDE
OF UNIT


PANEL BRACKETS x 2

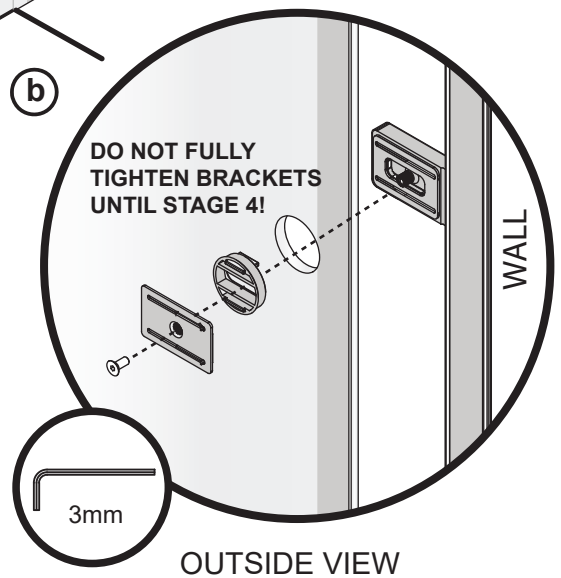



STAGE 4

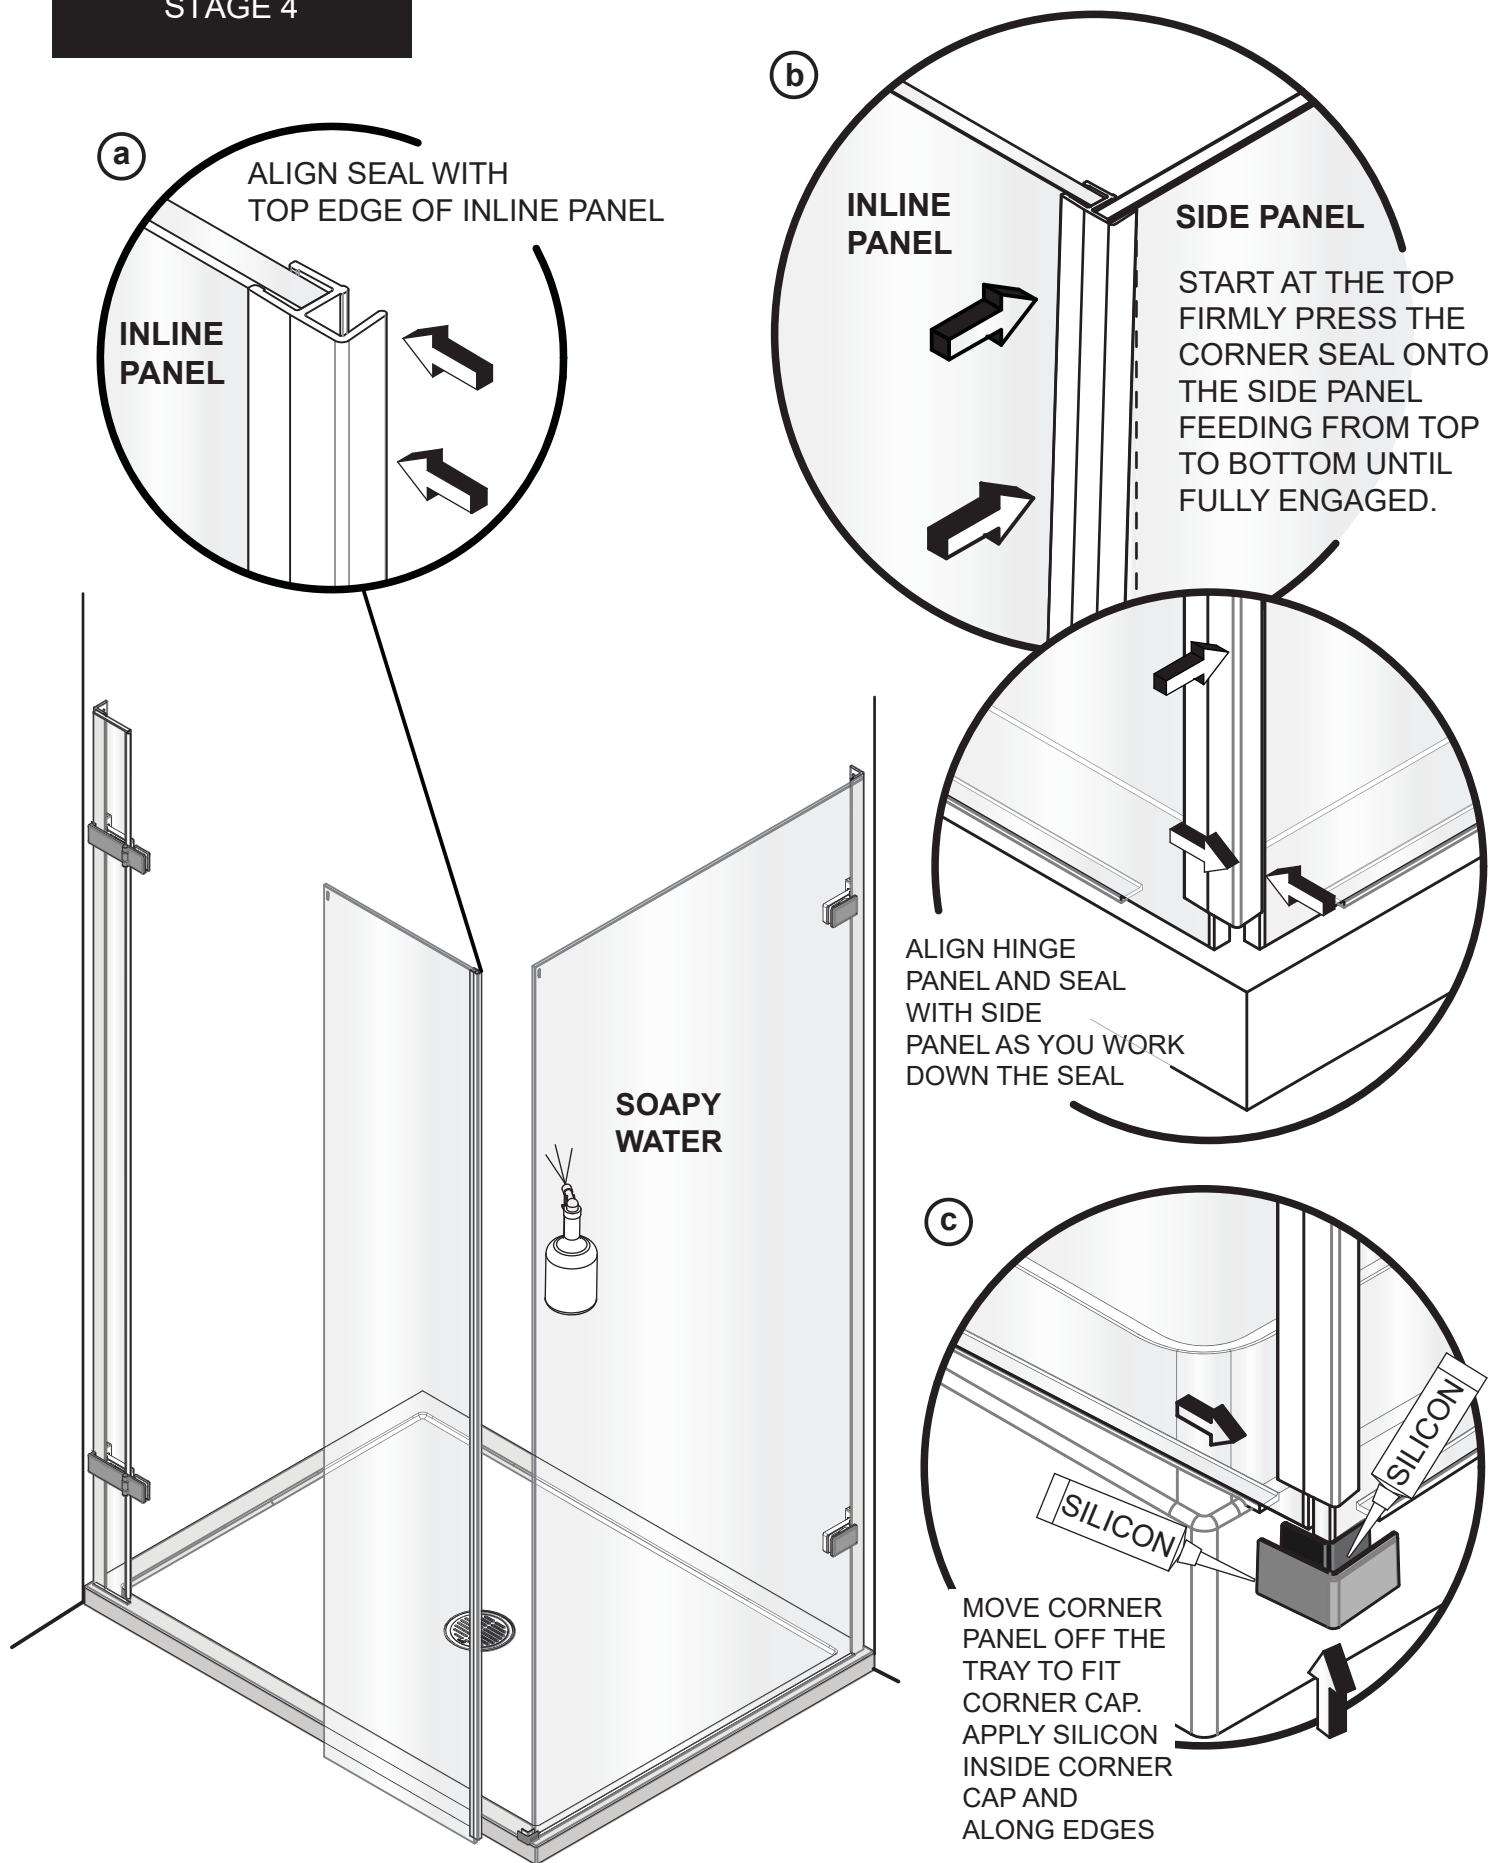




STAGE 5

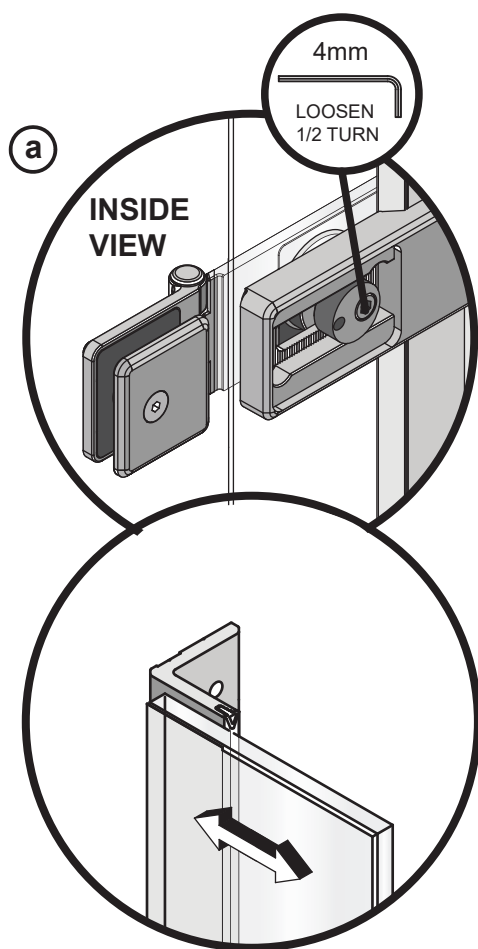

ADJUST GLASS
PANELS OUT EVENLY
TO MEET THRESHOLD

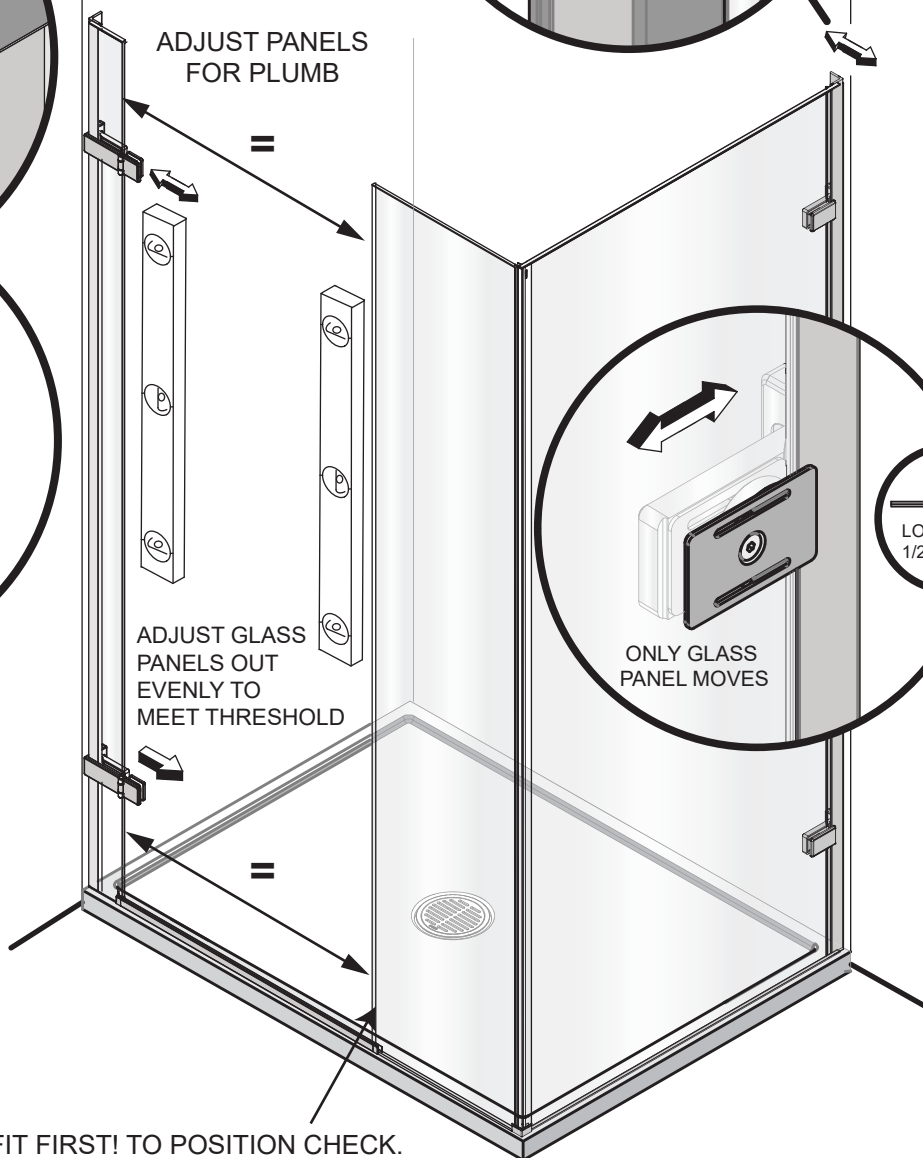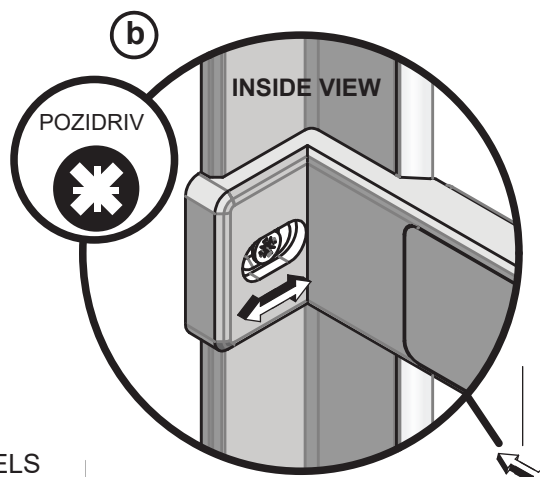


DRY FIT FIRST! TO POSITION CHECK.
APPLY SILICON AT END CAPS
PEEL OFF TAPE FILM AND PRESS IN PLACE

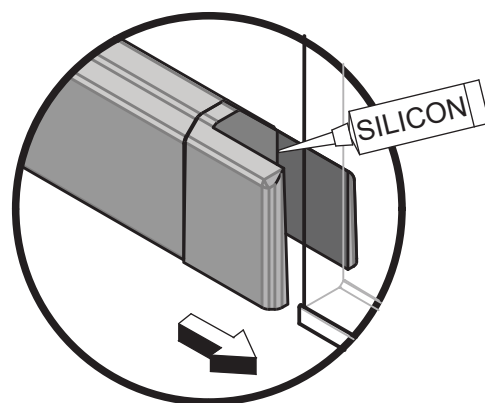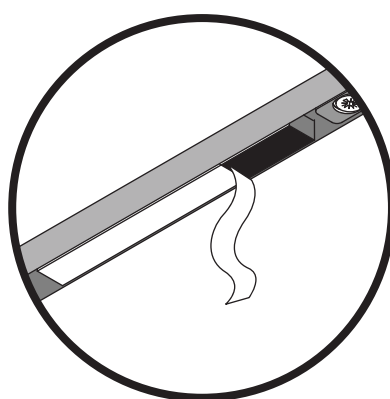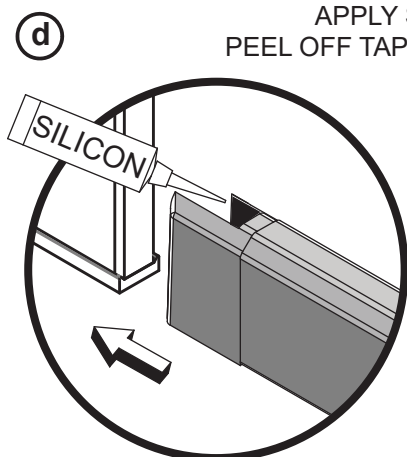


STAGE 6


BEFORE FITTING DOOR

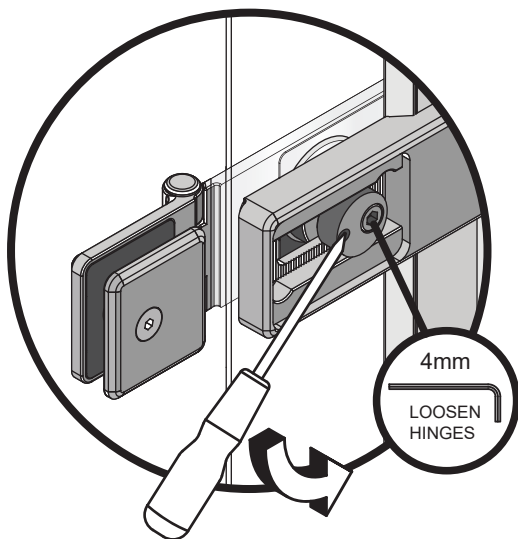


SET BOTH UPPER AND LOWER
DOOR CAMS TO RAISED
POSITION

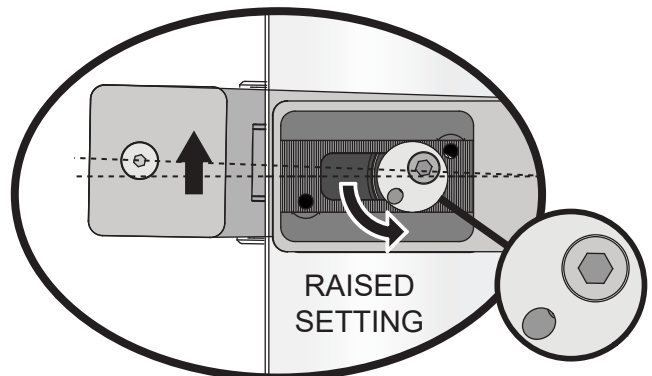


LH HINGE DOOR SUPPORT x 2

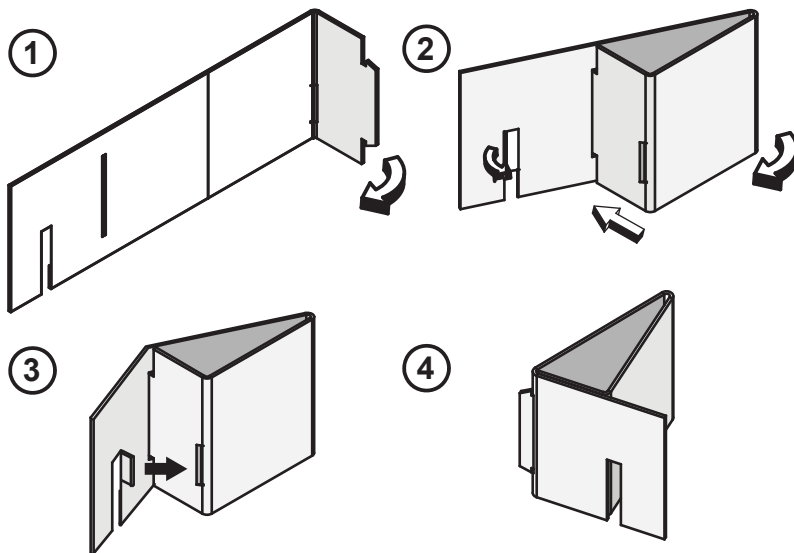


USE HINGE SUPPORTS x 2
FOR DOOR FITTING

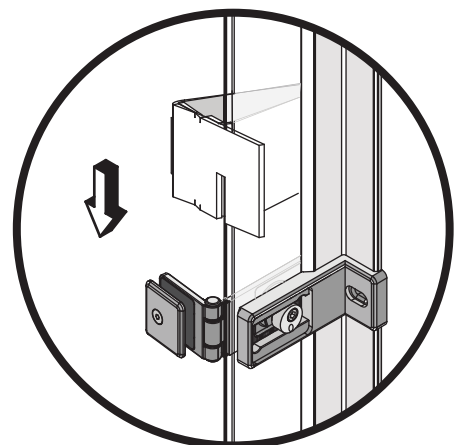


RH HINGE DOOR SUPPORT X2

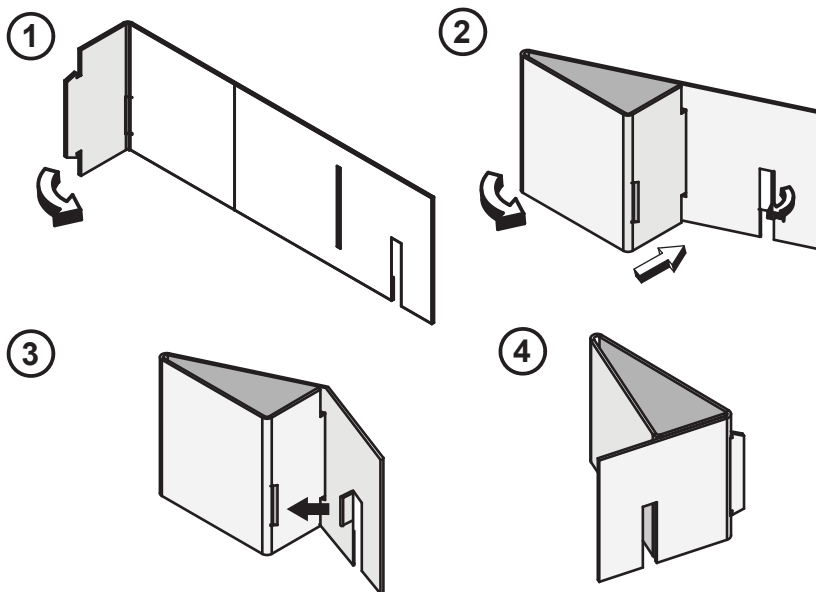

USE HINGE SUPPORTS x 2
FOR DOOR FITTING

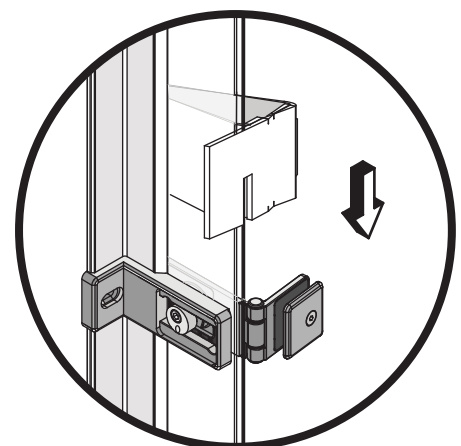




STAGE 7



2 PERSON
INSTALLATION

FIT DOOR TO
HINGE x 2
WITH BACK
HINGE PLATES


ALIGN BACK
HINGE PLATES
WITH FRONT
AND TIGHTEN

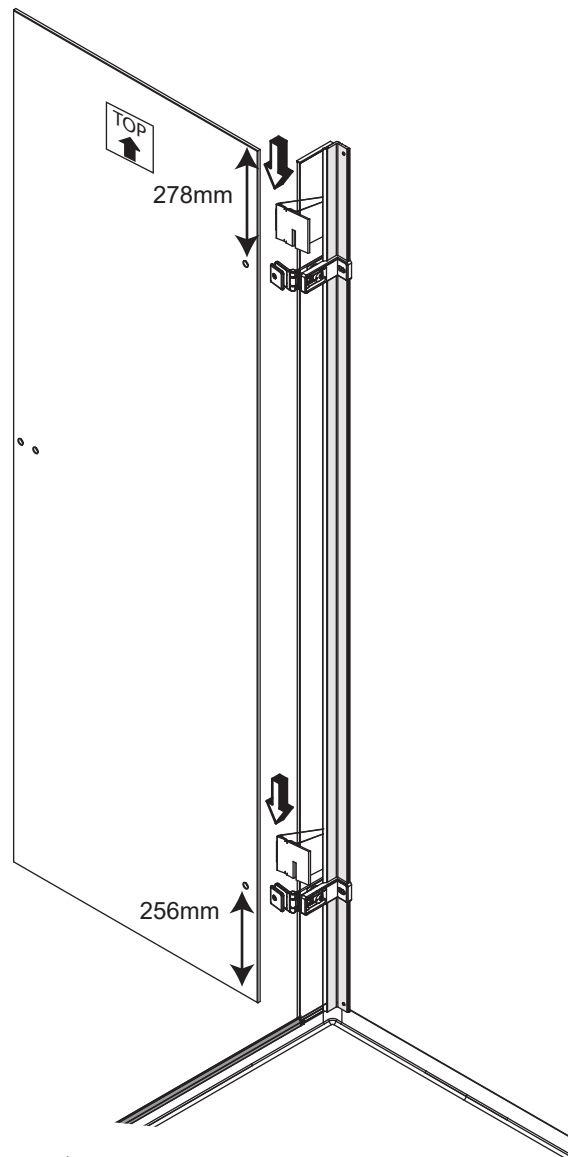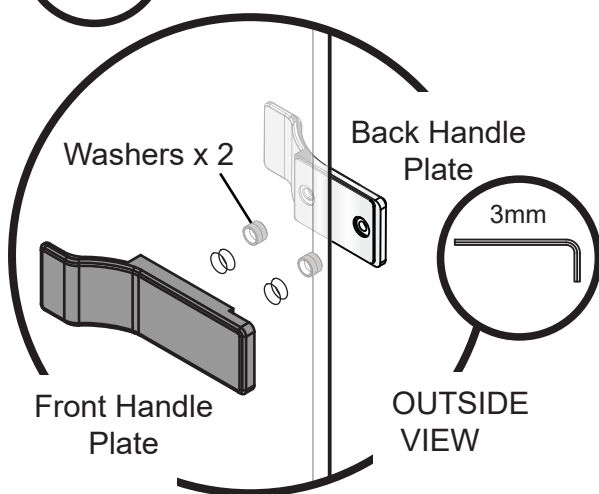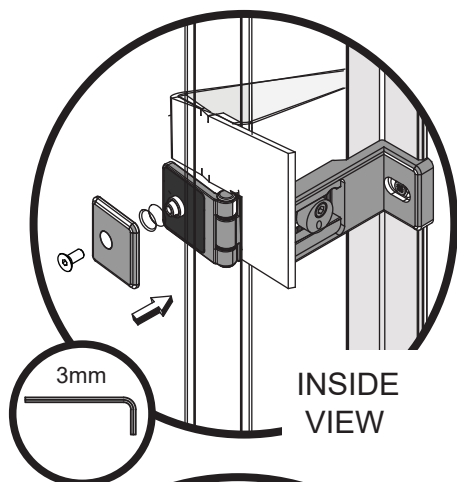


DOOR ADJUSTMENT

WHEN ADJUSTING DOOR, OPEN AT 90°

ADJUST DOOR LEFT-RIGHT

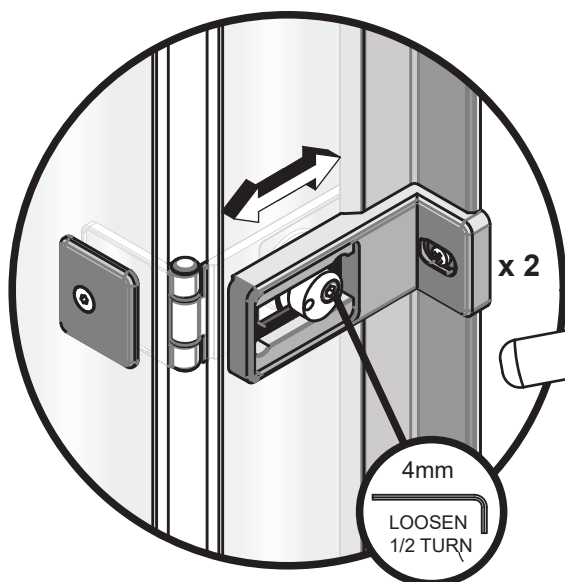


ADJUST DOOR UP-DOWN

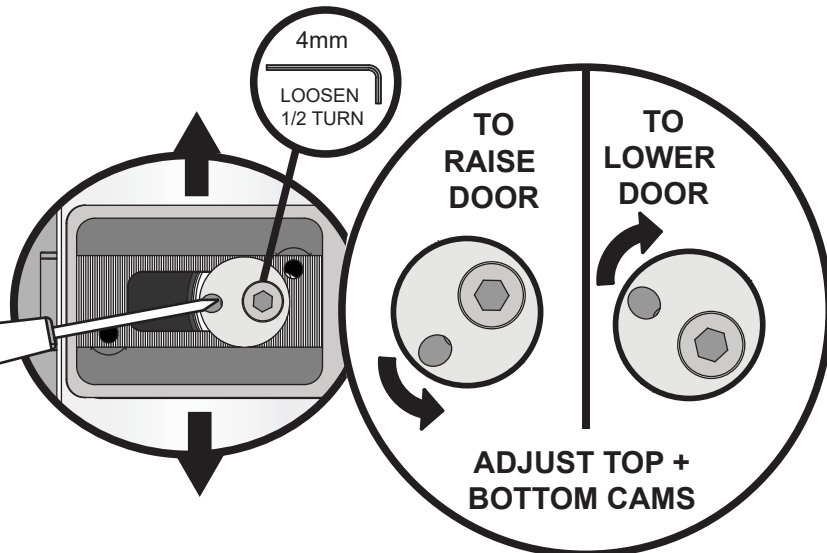

STAGE 8



(a)

REMOVE TOP
EDGE PROTECTORS
NOT REQUIRED

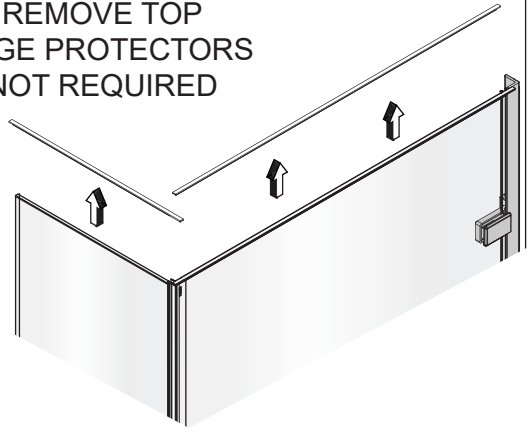


PUSH FIT
END OF
BRACE
OVER
SIDE PANEL &
INLINE PANEL

(b)

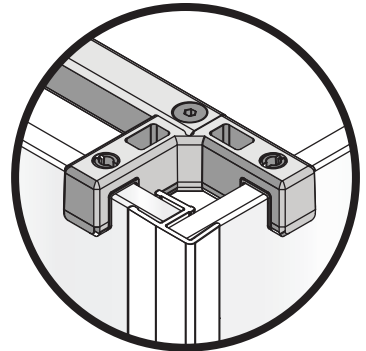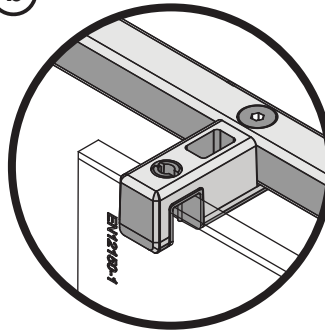


CONNECT BRACE
BRACKET TO WALL
MOUNT
(INSIDE VIEW)

(c)

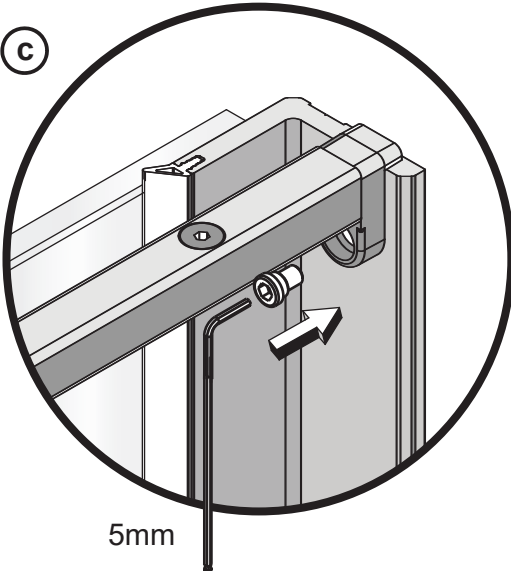

5mm

(d)

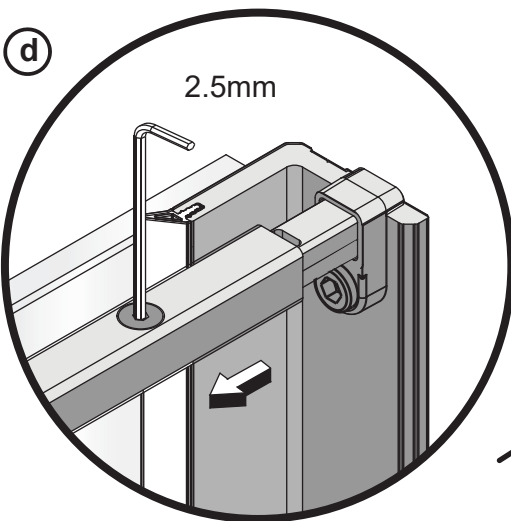


2.5mm

ADJUST ENDS
OUT AS
REQUIRED





STAGE 8 - CONT


BRACE BAR IS FACTORY ASSEMBLED
FOR LH CORNER UNIT
CHANGING BRACE BAR FOR RH CORNER UNIT

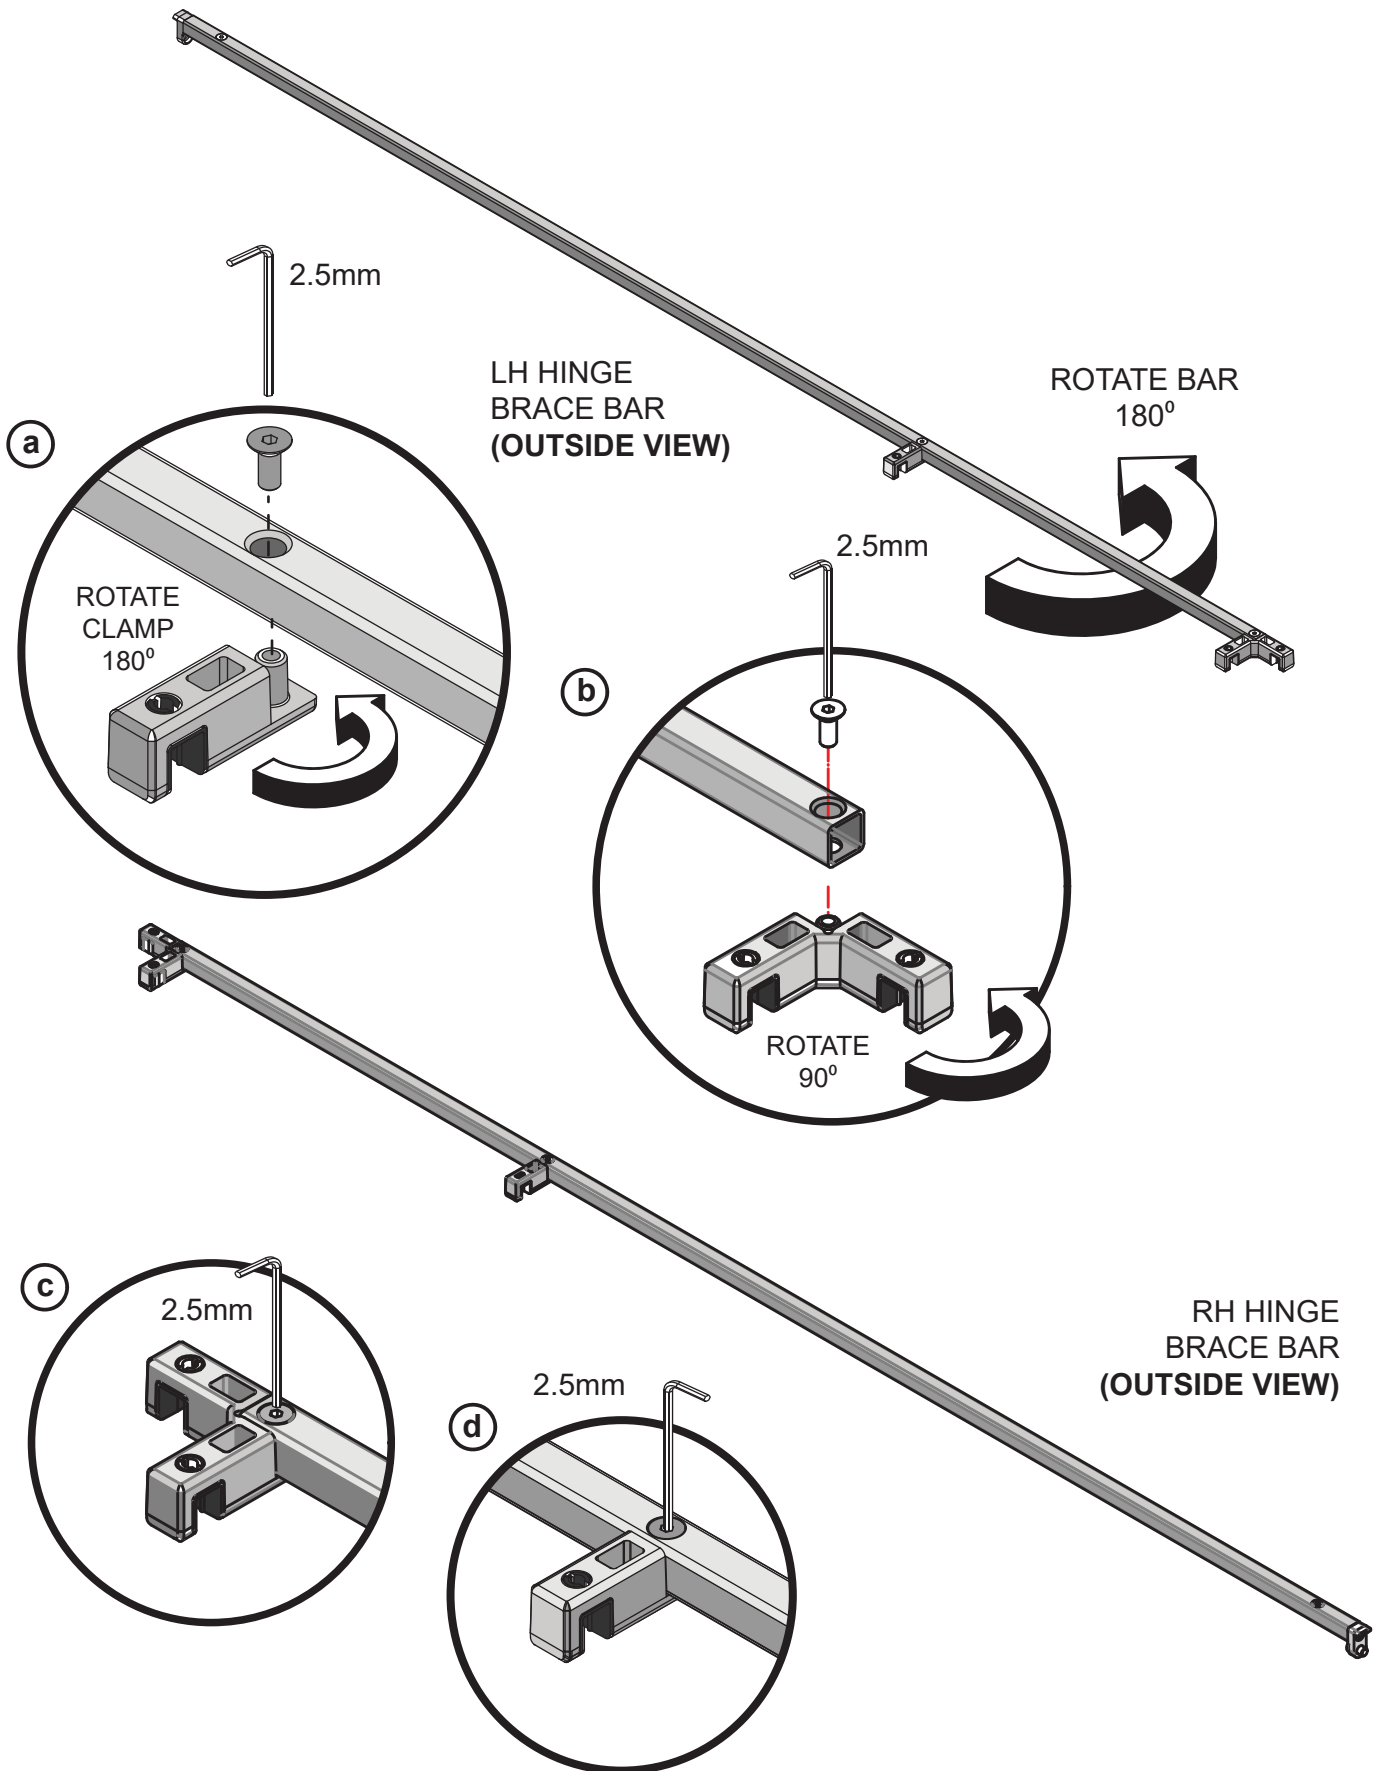



STAGE 9

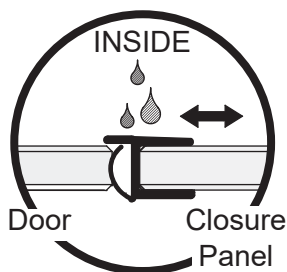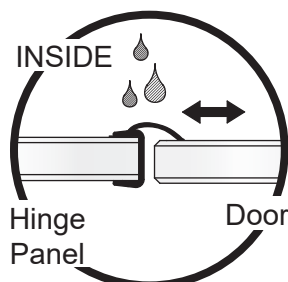

CLOSURE
PANEL
SEAL

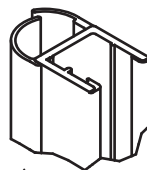

d

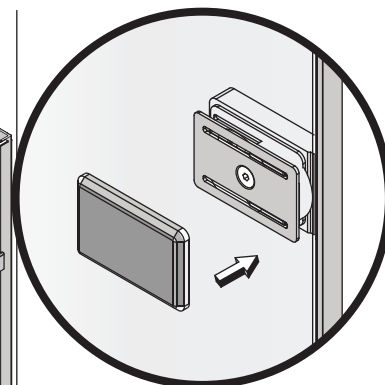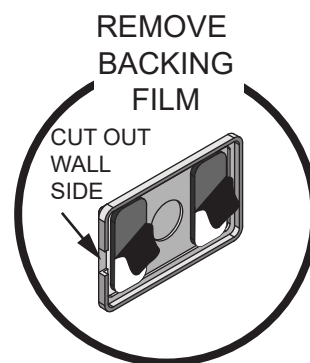



PANEL BRACKETS x 2
OUTSIDE VIEW



WALL MOUNT CAPS
x 3
INSIDE VIEW




PEEL & STICK
MAGNET IN SEAL

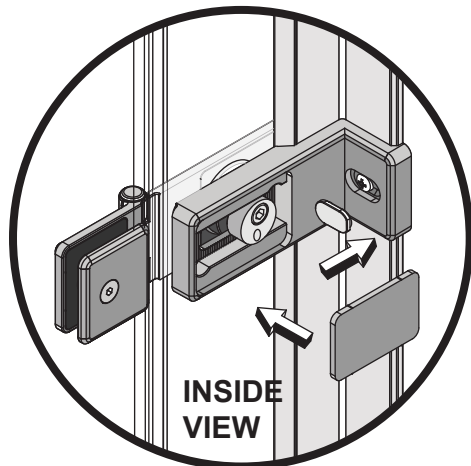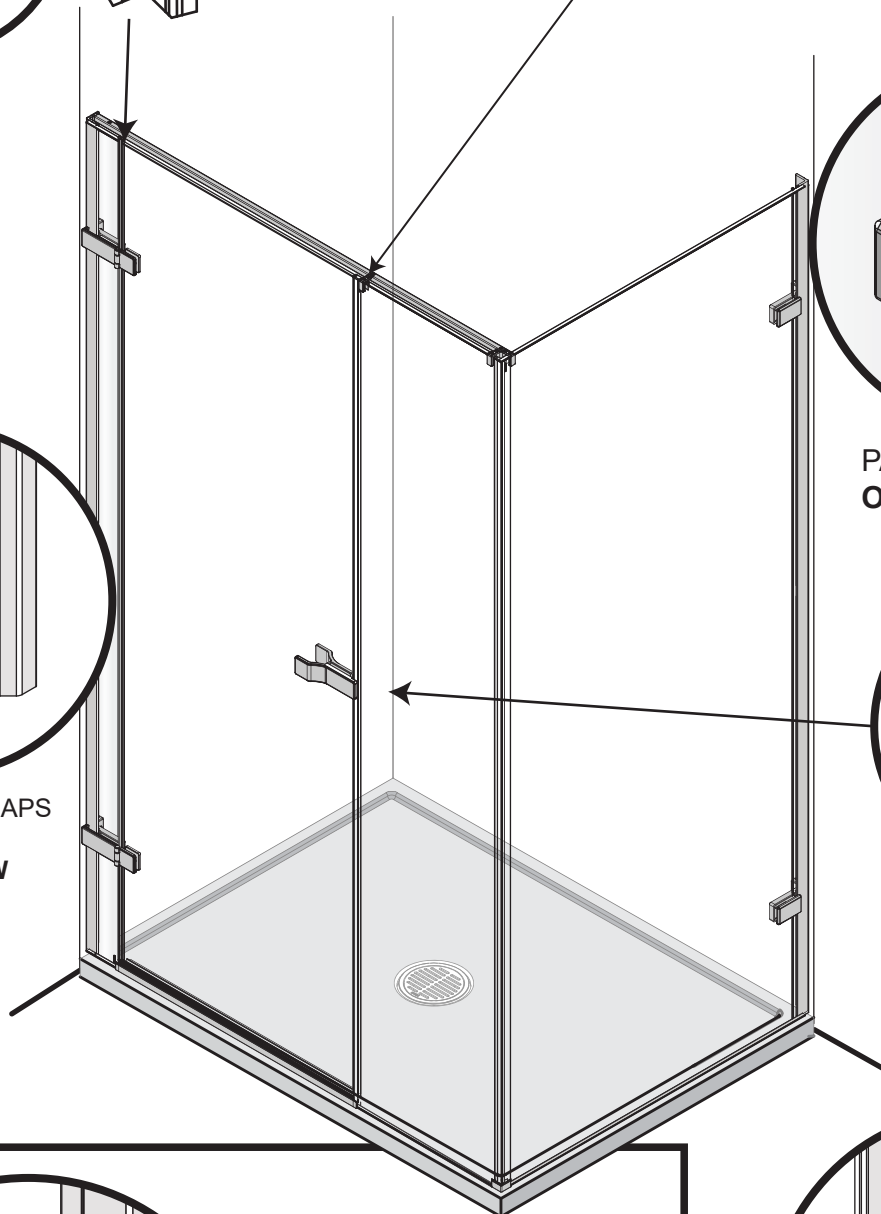

HINGE BRACKET
CAPS x 2

IMPORTANT!
FIT CAPS AFTER ALL
ADJUSTMENTS
ARE COMPLETE.

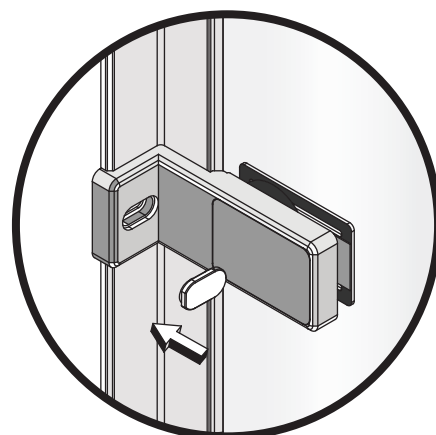

PANEL BRACKET
CAPS x 2
INSIDE VIEW

SILICON UNIT

ENSURE
HINGE SEAL
SITS FLAT
ALONG FACE
OF GLASS

SILICON FULL HEIGHT OF
WALL MOUNT ON INSIDE

INSIDE
VIEW

HINGE SEAL

OUTSIDE
VIEW

CLOSURE
PANEL SEAL

OUTSIDE VIEW

SILICON FULL
HEIGHT OF
WALL MOUNT
ON OUTSIDE

OUTSIDE
VIEW

SILICON FULL
HEIGHT OF
WALL MOUNT
ON OUTSIDE

OUTSIDE
VIEW


THRESHOLD
DOOR SEAL

INSIDE
VIEW


BOTH ENDS!

SECTION
VIEW

LEAVE
24hr

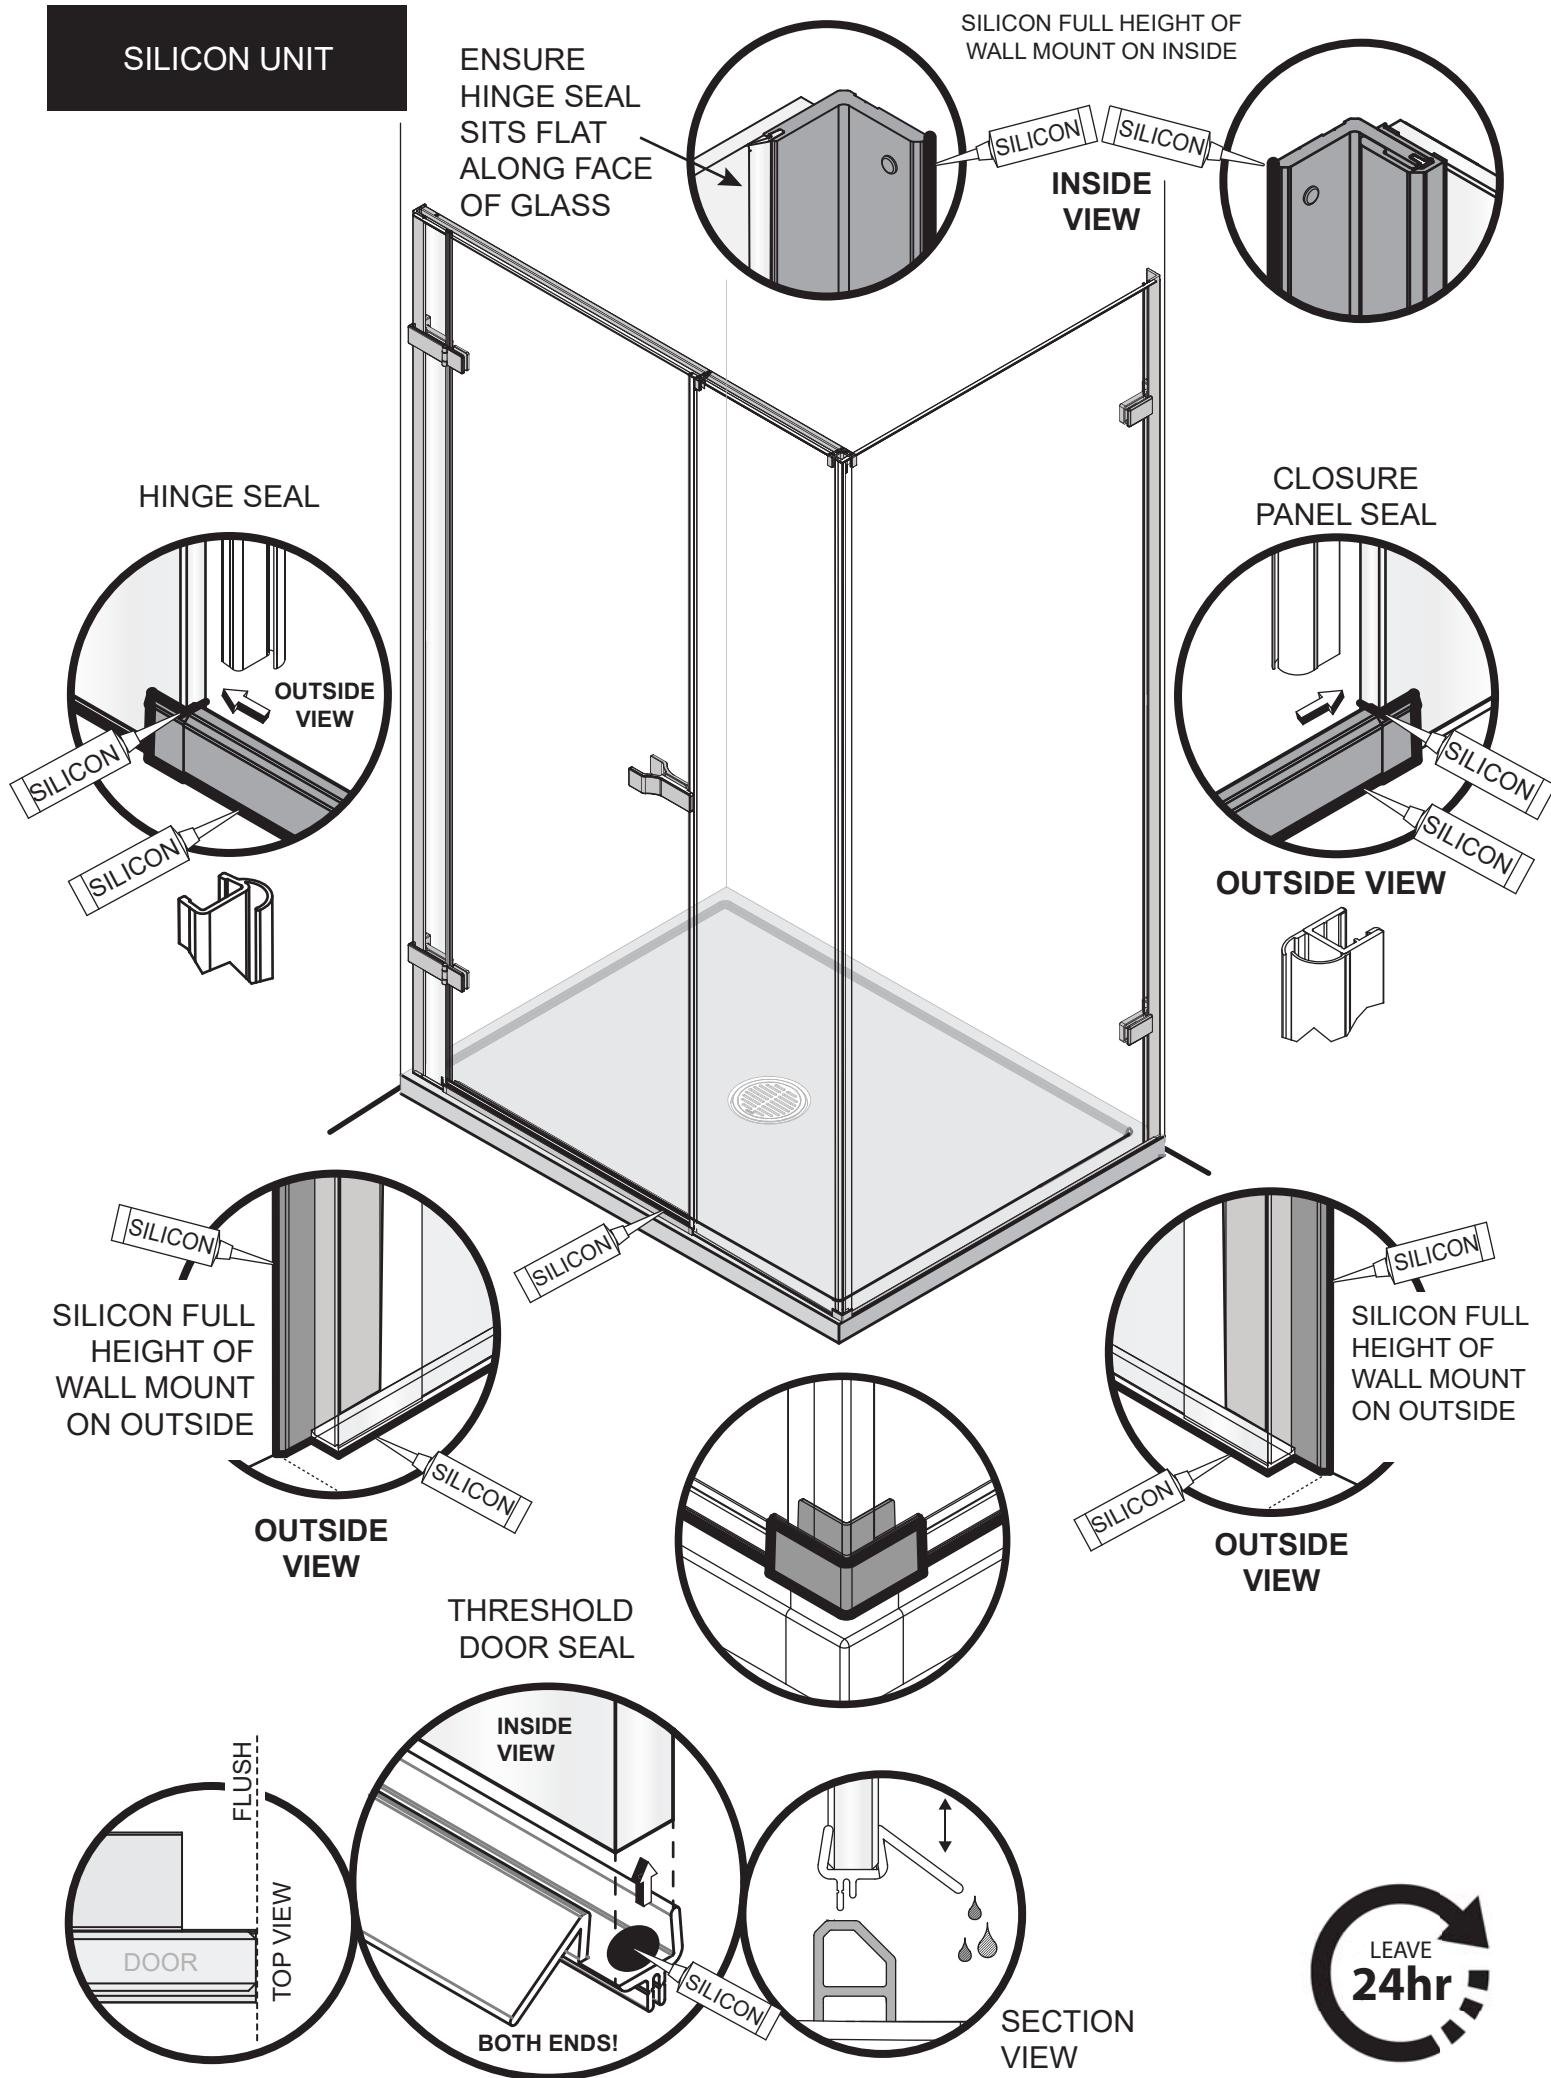


PARTS LIST

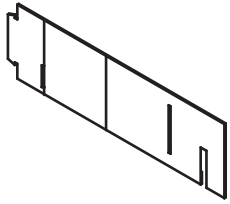

9816 AF x 2


INLINE CORNER
BRACE BAR PACK
1200 MODEL : 10445 AF
1100 MODEL : 10444 AF
1000 MODEL : 10443 AF

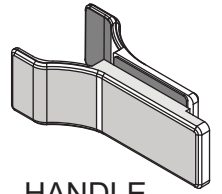


HANDLE
10446 AF

CORNER/INLINE
THRESHOLD PACK
10454 AF

THRESHOLD
SEAL
1300220

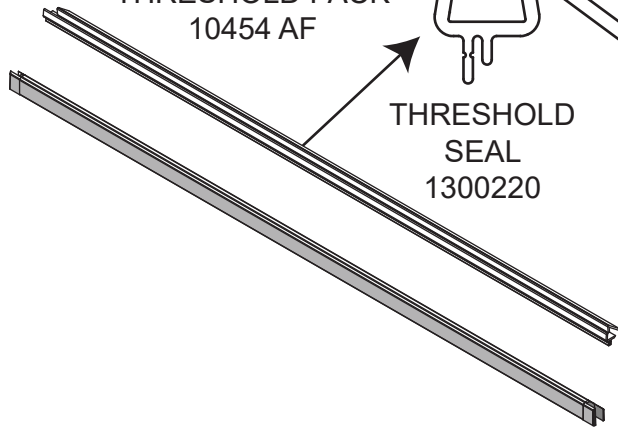


CORNER/INLINE KIT OF PARTS
10599 AF

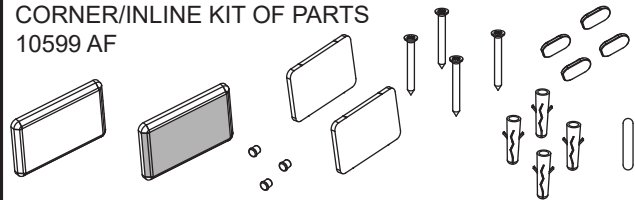



HINGE SEAL
1300217



CLOSURE SEAL
1300211

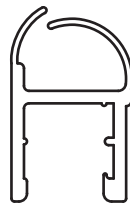

CORNER SEAL
1300212

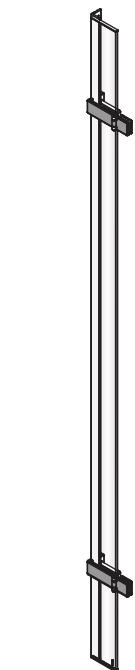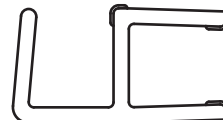

HINGE PANEL
ASSEMBLY
10437 AF



CORNER/INLINE
DOOR GLASS
1300016



INLINE PANEL GLASS
1200 MODEL : 1300009
1100 MODEL : 1300022
1000 MODEL : 1300023



SIDE PANEL GLASS
900 MODEL : 1300007
800 MODEL : 1300020
760 MODEL : 1300021



PANEL BRACKET
ASSEMBLY
10439 AF