

matki


ECLIPSE

LPSR - RECESS 1200/1100/1000

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

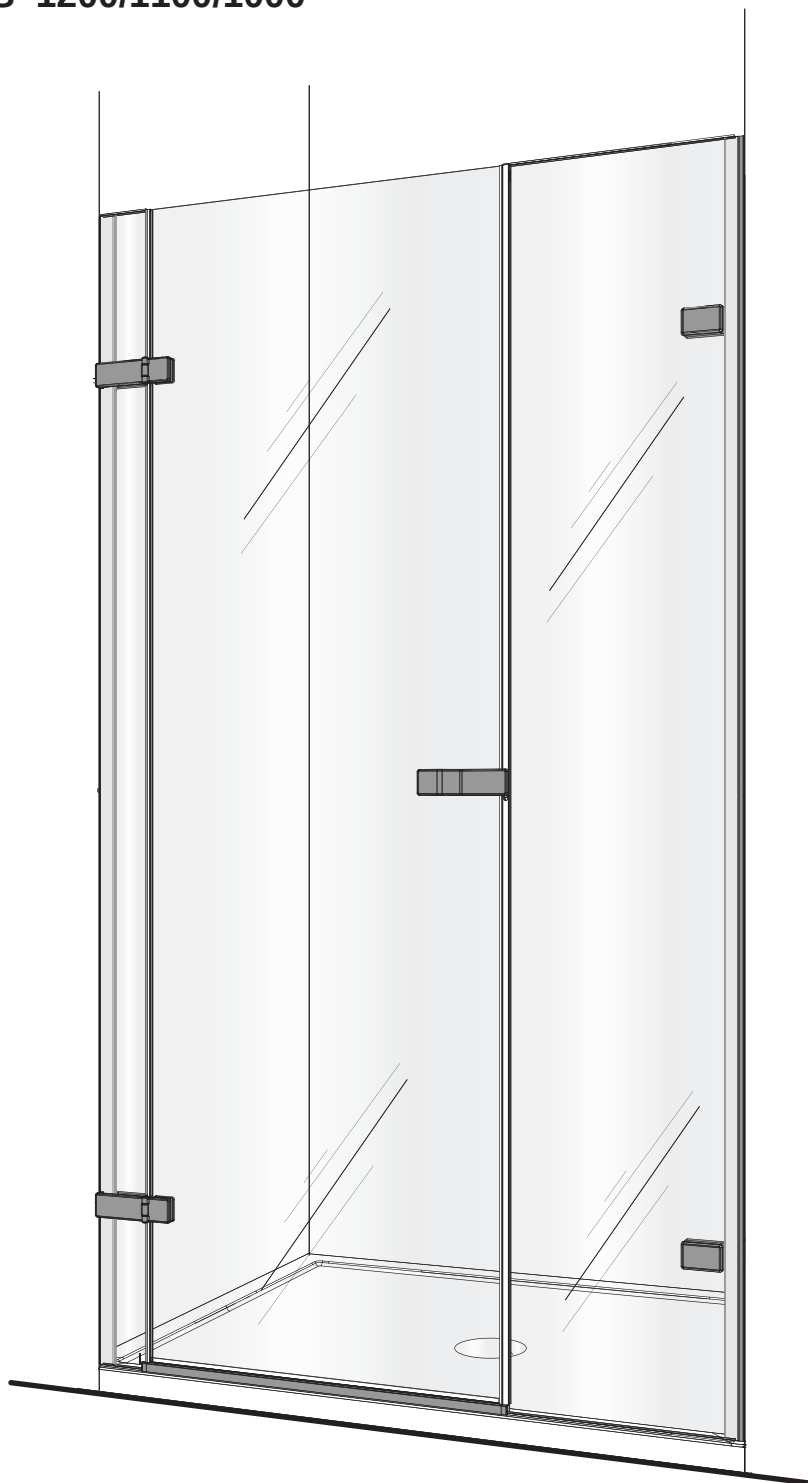

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10624 AF 06/22

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.


PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

INLINE RECESS
1200/1100/1000

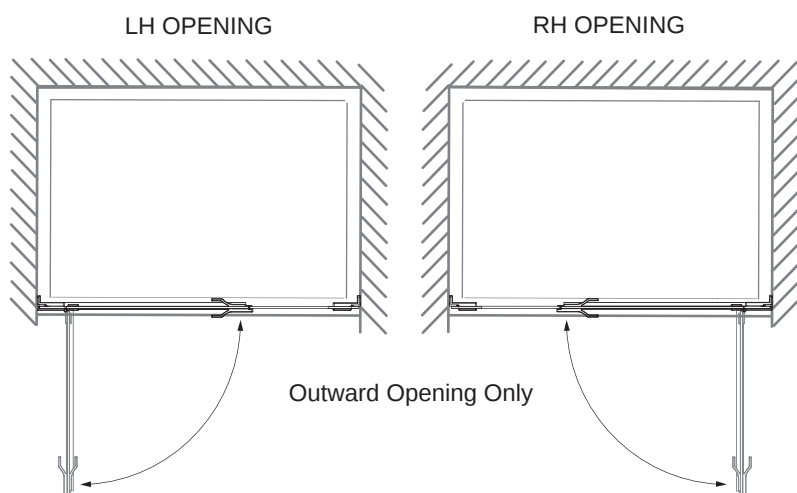


Model	A	B	C	D
LPSR1000	960-1000	97-117	650	193-213
LPSR1100	1060-1100	97-117	650	293-313
LPSR1200	1160-1200	97-117	650	393-413

Dimensions are approximate

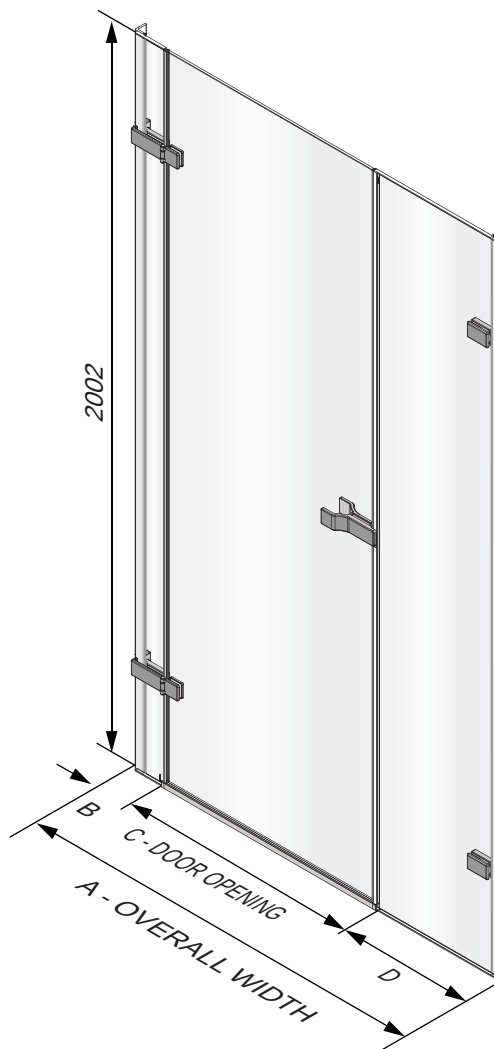


HANDING OF UNIT

LH INLINE RECESS

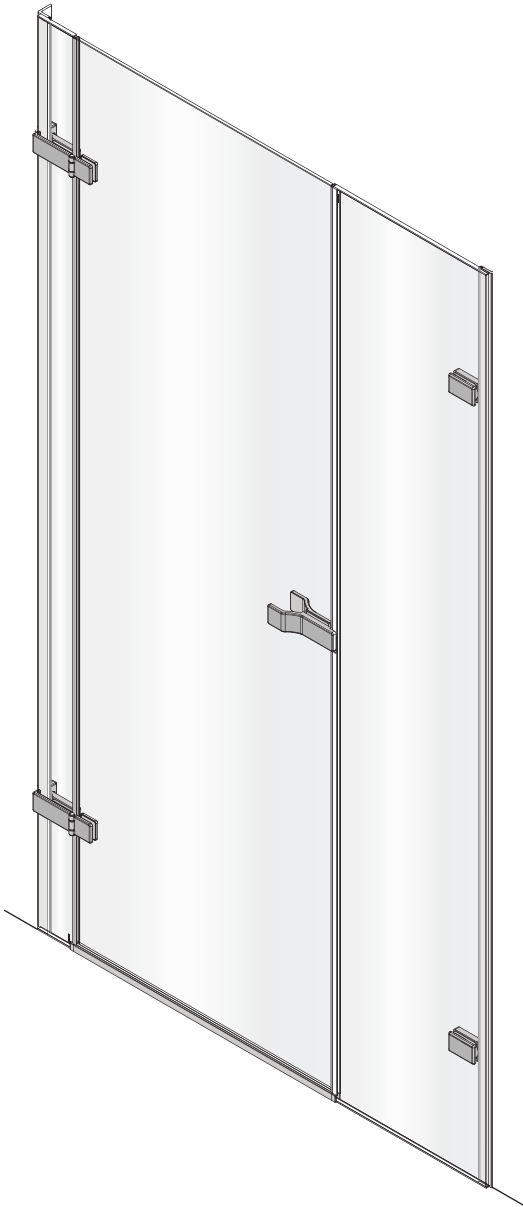

RH INLINE RECESS

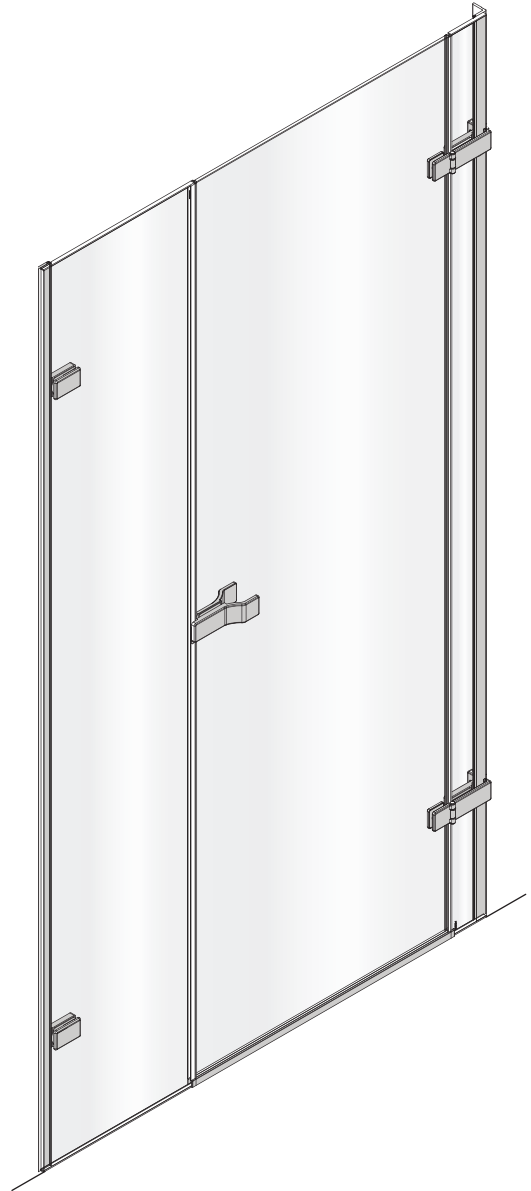

STAGE 1


INSTRUCTIONS SHOW
LH INSTALLATION




HINGE ASSEMBLY

TOP VIEW



CLOSURE PANEL
BRACKET ASSEMBLY

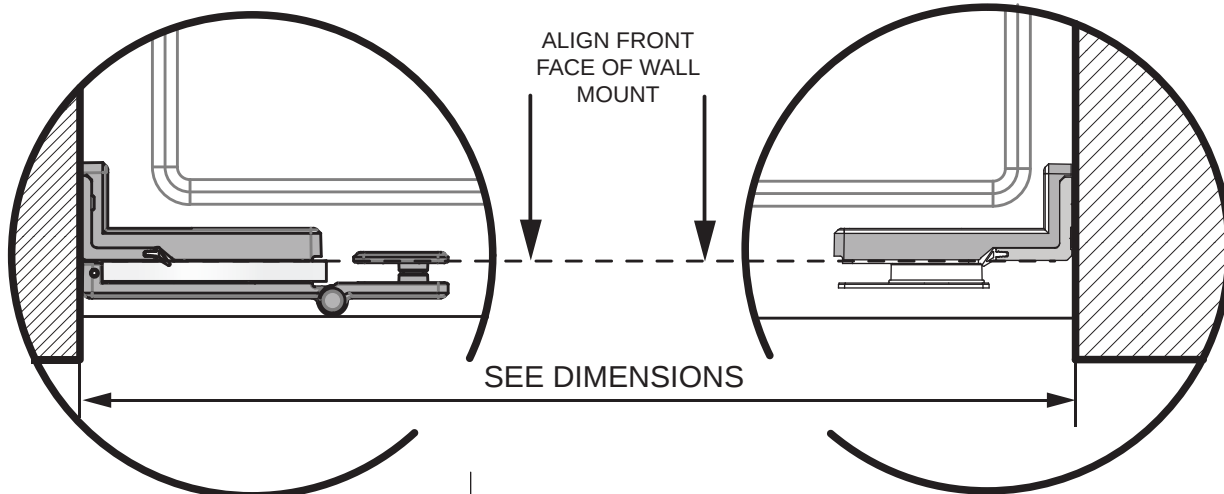


MARK
HINGE PANEL
BRACKETS x 2
INSIDE VIEW

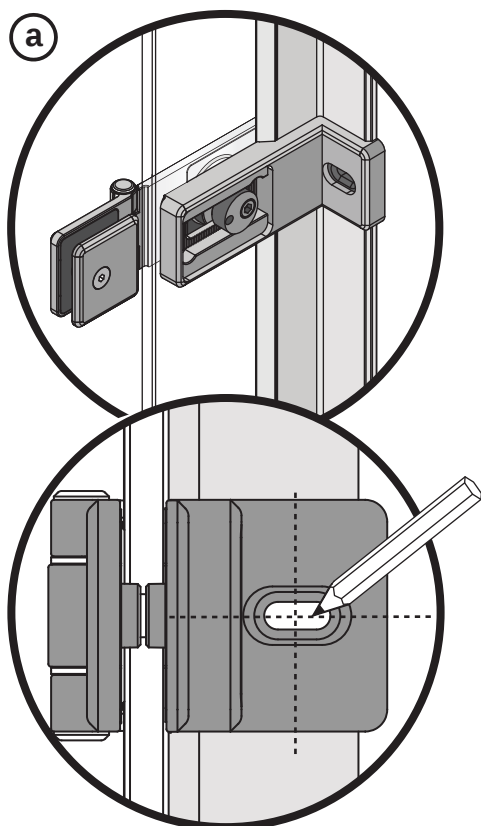

MARK PANEL
BRACKETS x 2
INSIDE VIEW

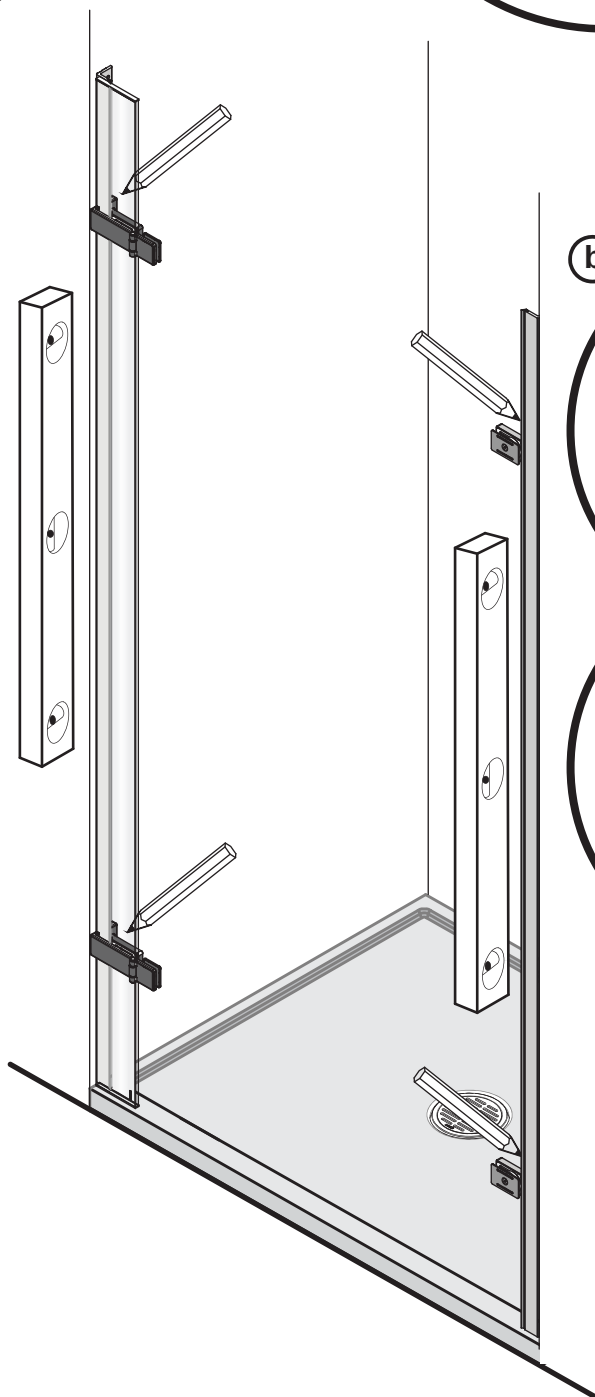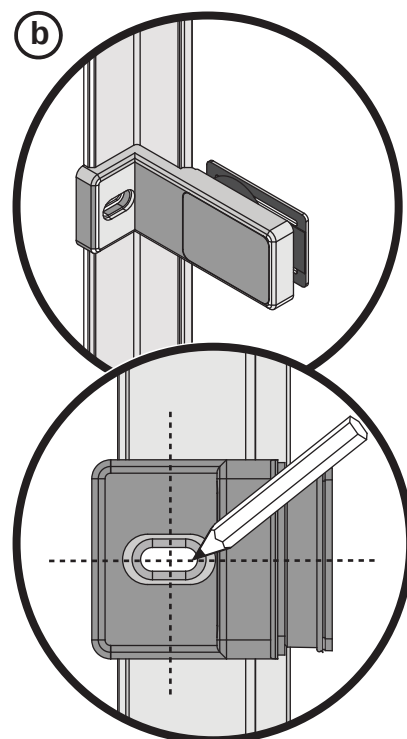

STAGE 2



**IMPORTANT! BEFORE FITTING
HINGE PANEL REMOVE
PROTECTIVE TAPE**

LOOSEN
HINGES



MOVE
GLASS
FORWARD

4mm



REMOVE TAPE

RE-TIGHTEN HINGES AFTER TAPE REMOVAL!



HINGE PANEL x 2
INSIDE VIEW

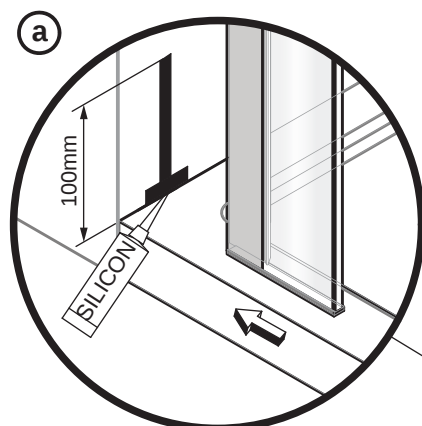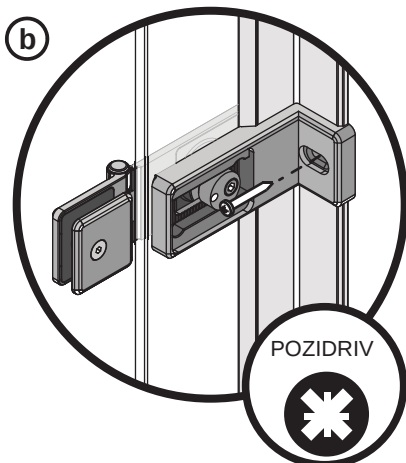


CLOSURE
PANEL BRACKET x 2
INSIDE VIEW

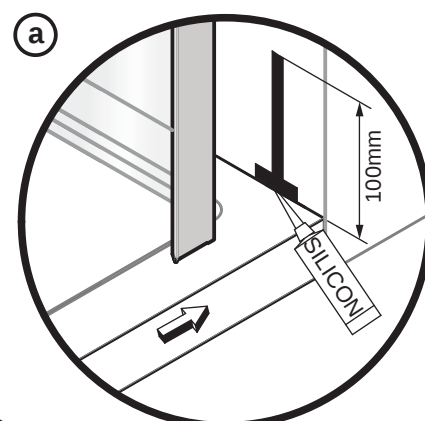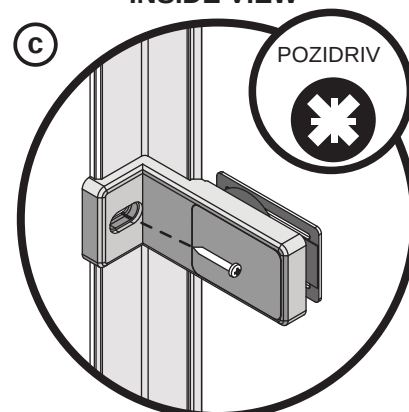

STAGE 3

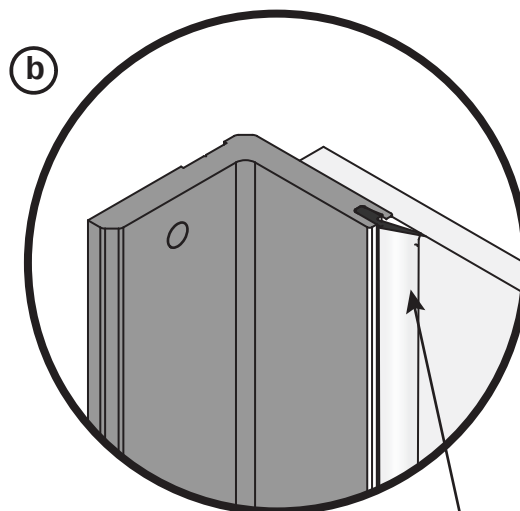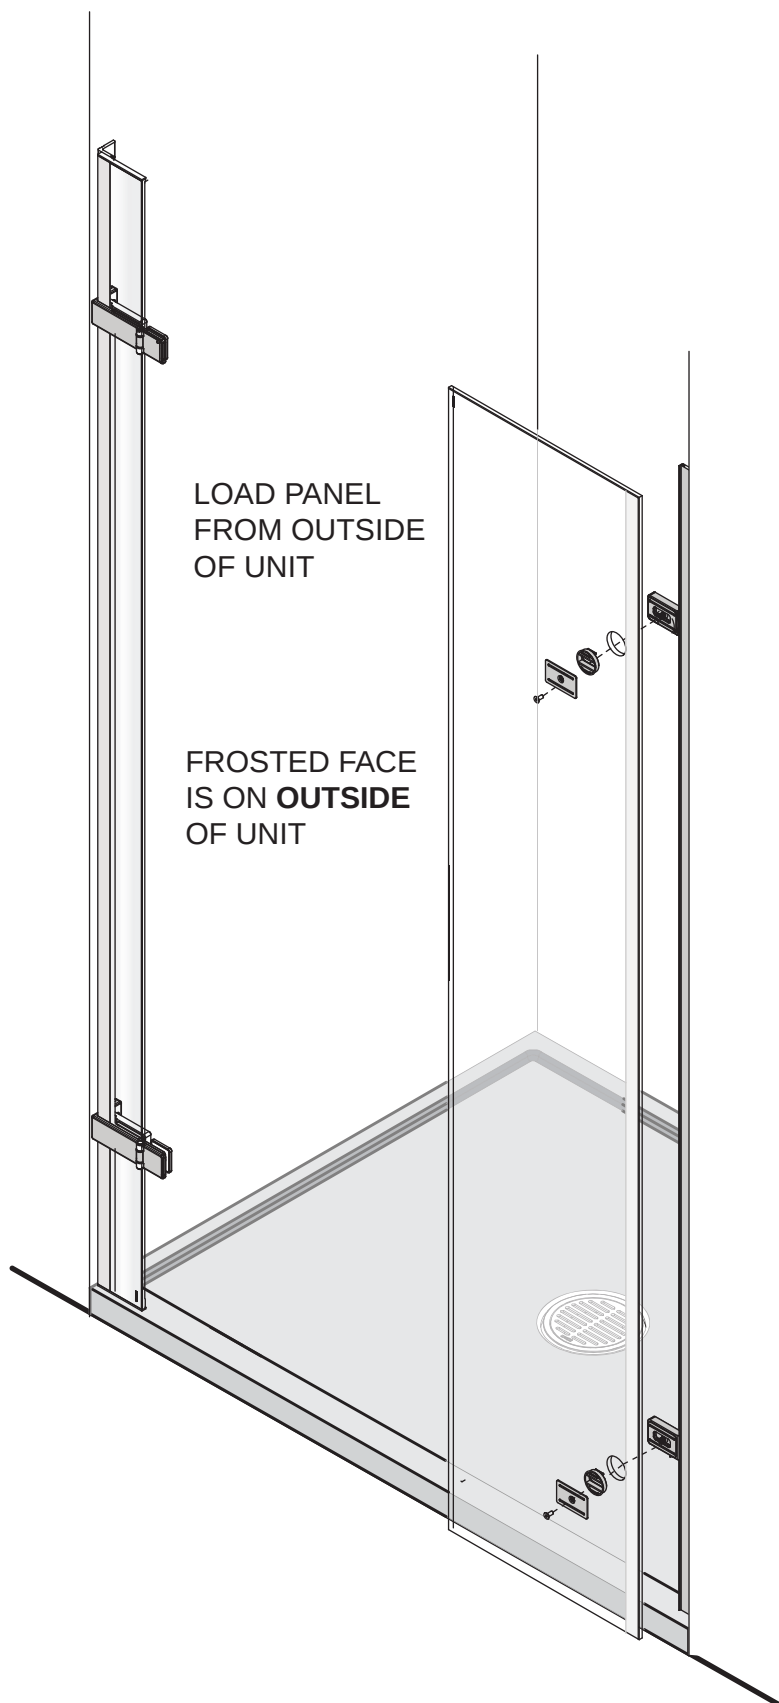


INSIDE VIEW
ENSURE HINGE SEAL SITS FLAT
ALONG FACE OF GLASS


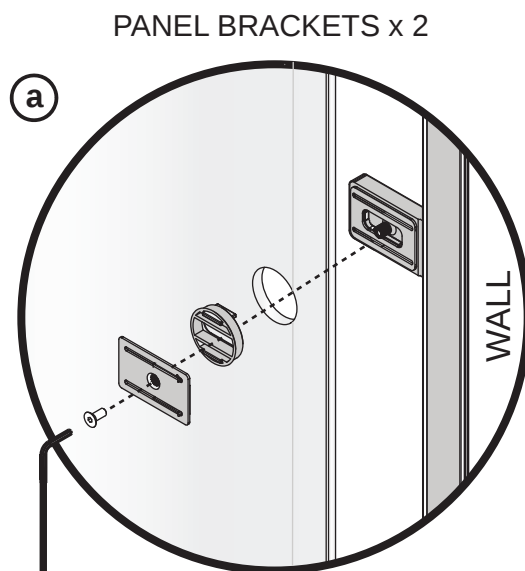


OUTSIDE VIEW
3mm


STAGE 4

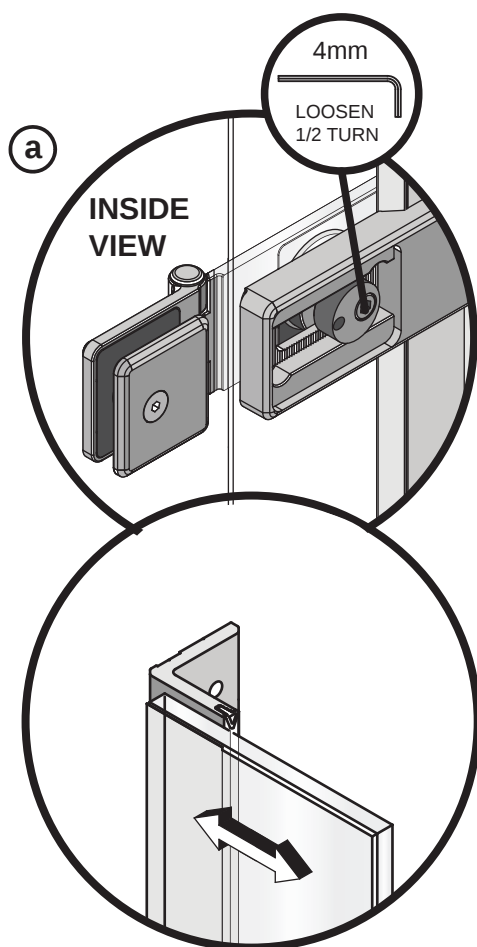

ADJUST GLASS
PANELS OUT EVENLY
TO MEET THRESHOLD

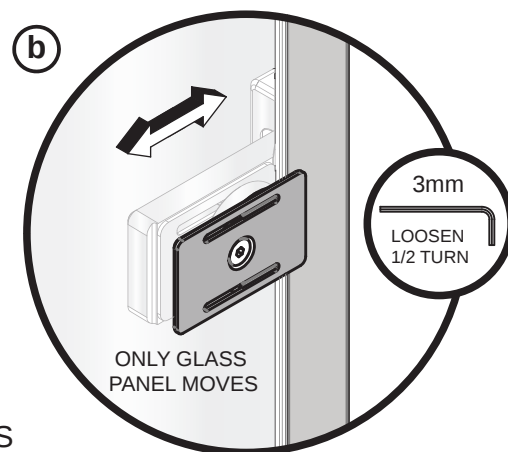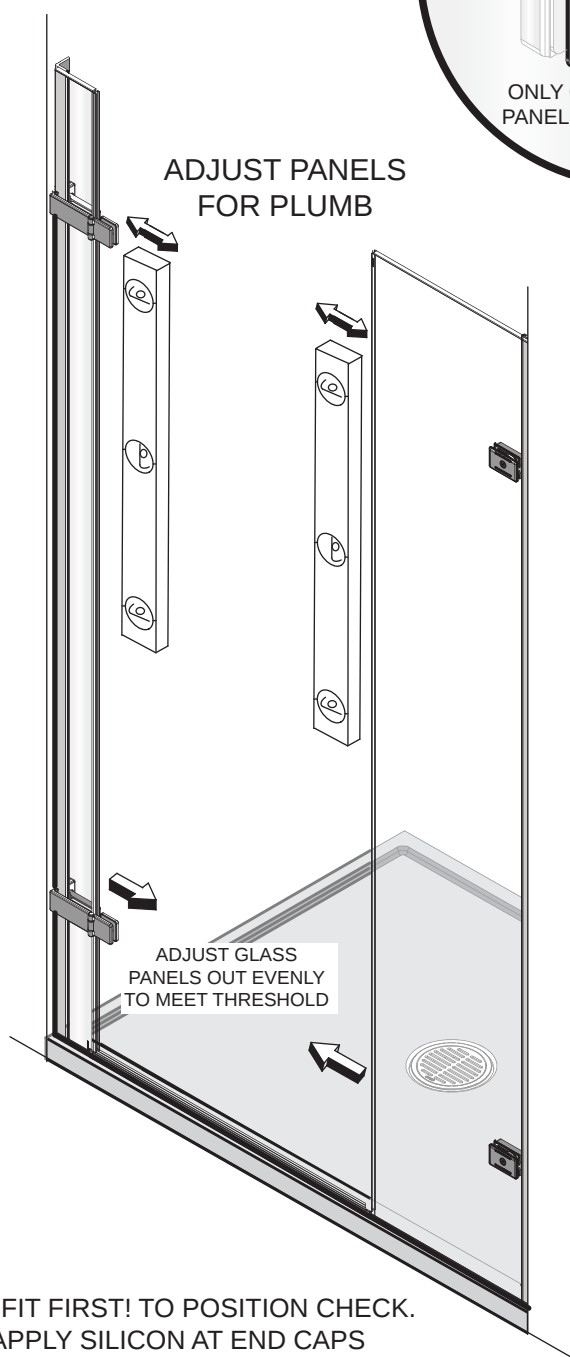


DRY FIT FIRST! TO POSITION CHECK.
APPLY SILICON AT END CAPS
PEEL OFF TAPE FILM AND PRESS IN PLACE

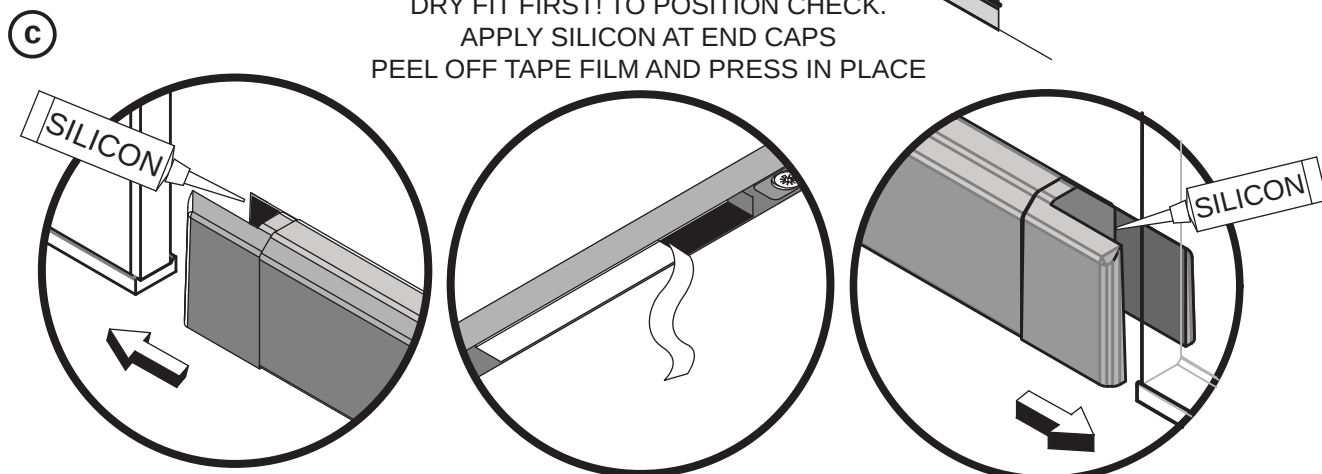


STAGE 5


BEFORE FITTING DOOR

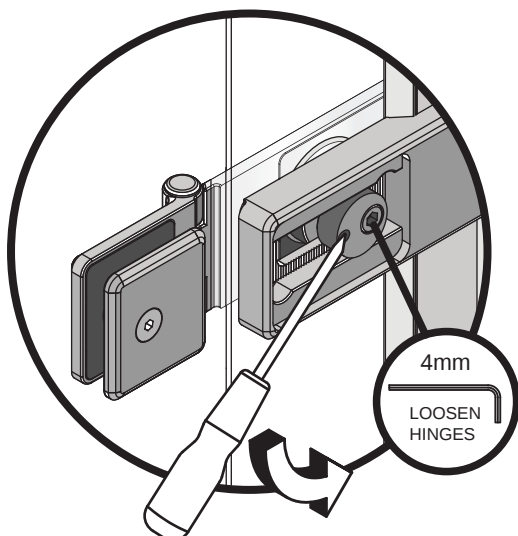


SET BOTH UPPER AND LOWER
DOOR CAMS TO RAISED
POSITION

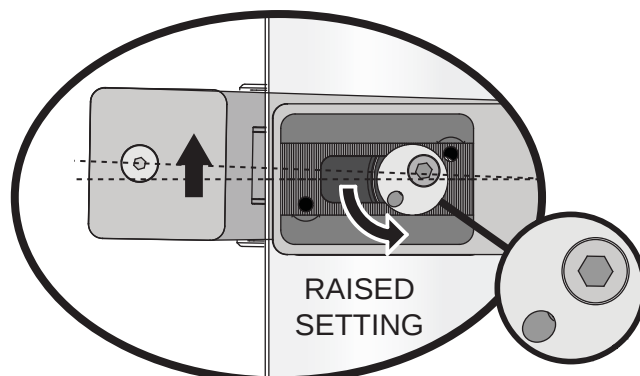

LH HINGE DOOR SUPPORT x 2

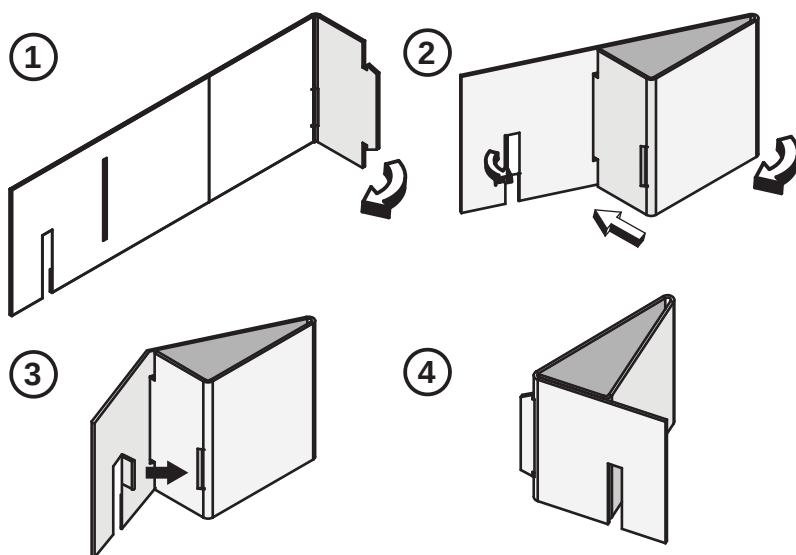


USE HINGE SUPPORTS x 2
FOR DOOR FITTING

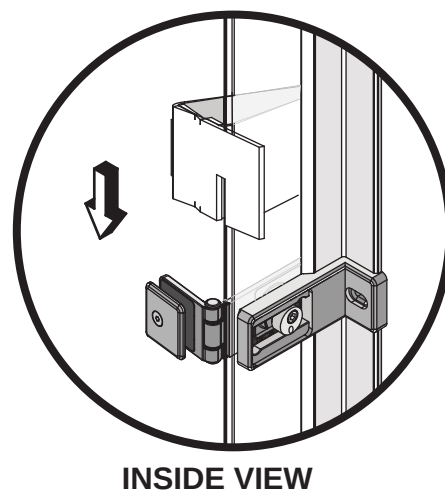


INSIDE VIEW

RH HINGE DOOR SUPPORT X2

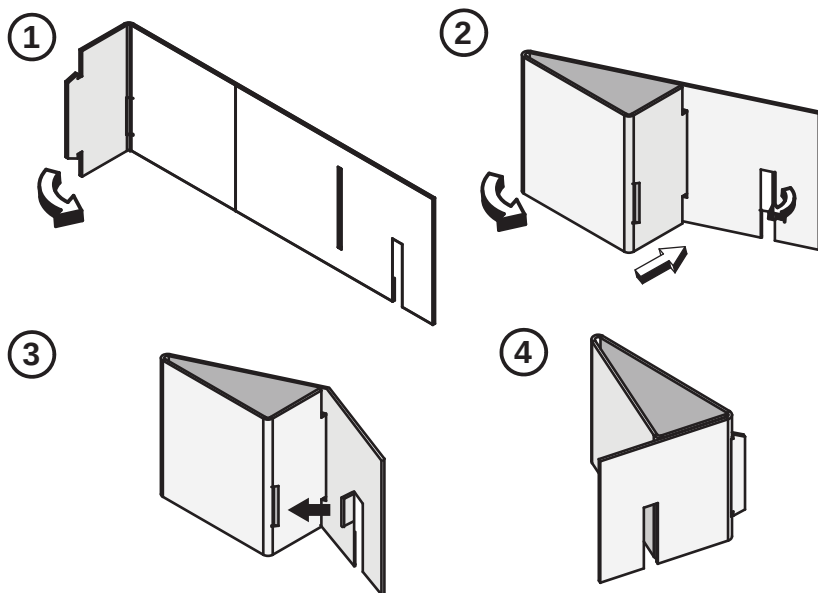


USE HINGE SUPPORTS x 2
FOR DOOR FITTING

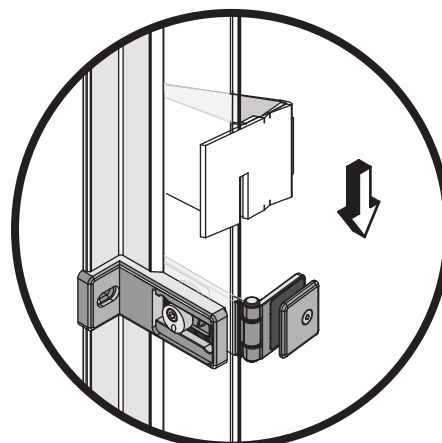

INSIDE VIEW




STAGE 6



2 PERSON
INSTALLATION

FIT DOOR TO
HINGE x 2
WITH BACK
HINGE PLATES


ALIGN BACK
HINGE PLATES
WITH FRONT
AND TIGHTEN

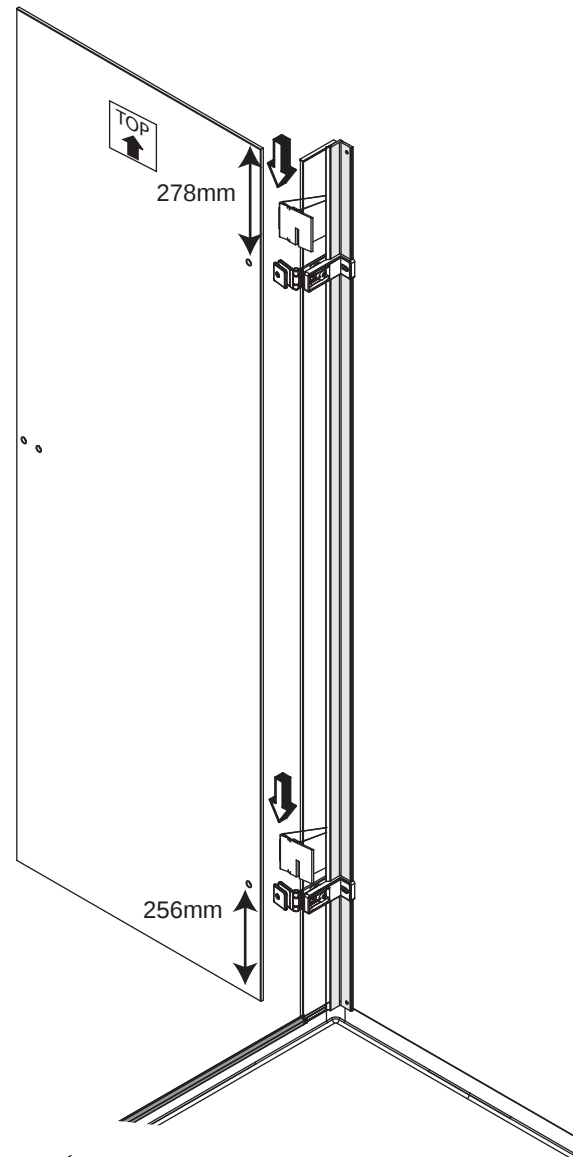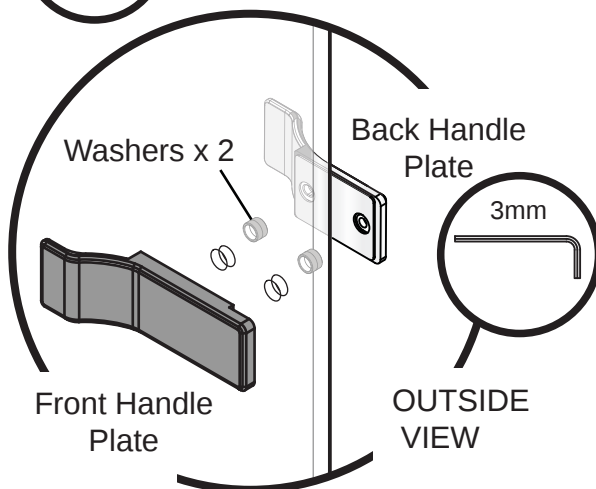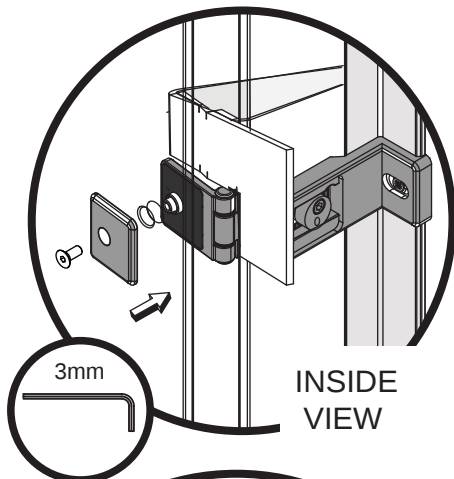


DOOR ADJUSTMENT

WHEN ADJUSTING DOOR, OPEN AT 90°

ADJUST DOOR LEFT-RIGHT

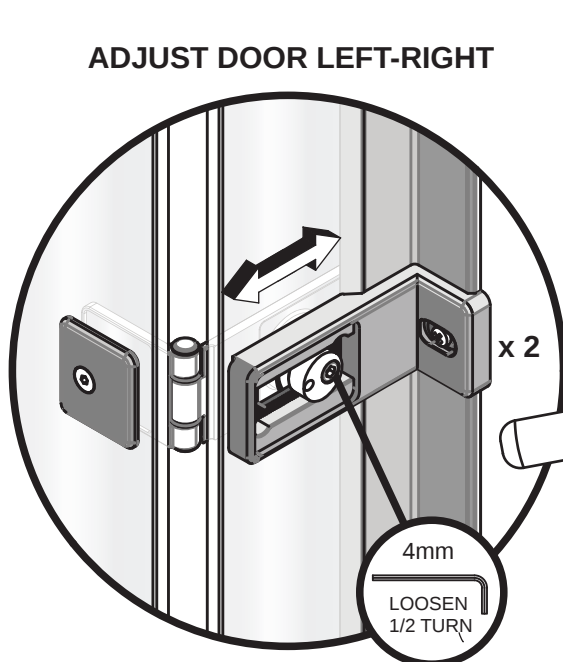

ADJUST DOOR UP-DOWN

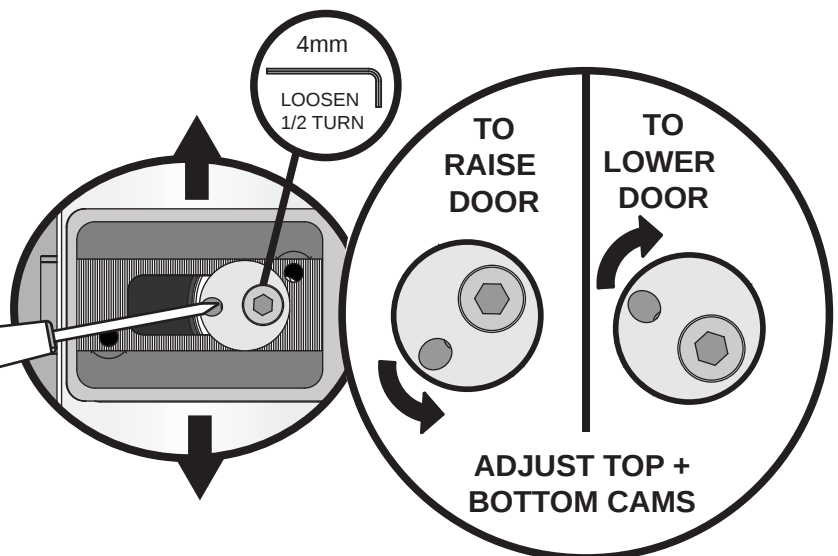


STAGE 7

**BRACE BAR
ONLY REQUIRED
FOR MODELS 1200
& 1100**


(a)




REMOVE TOP EDGE PROTECTORS
NOT REQUIRED FROM HINGE AND
CLOSURE PANEL

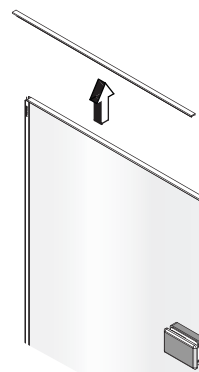

(d)

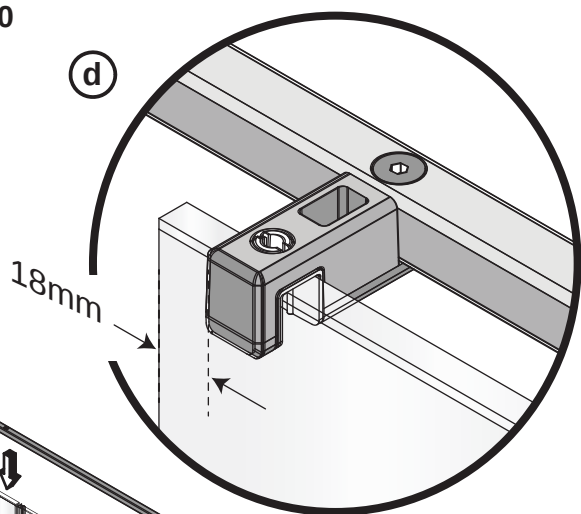


(b)

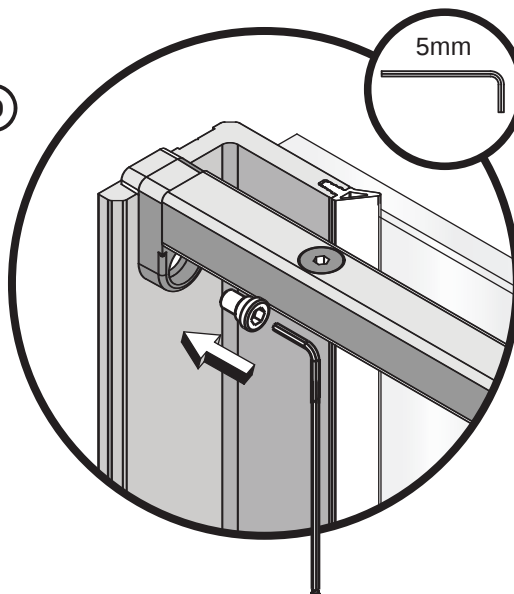

CONNECT BRACE
BRACKET TO WALL
MOUNT x 2

(c)

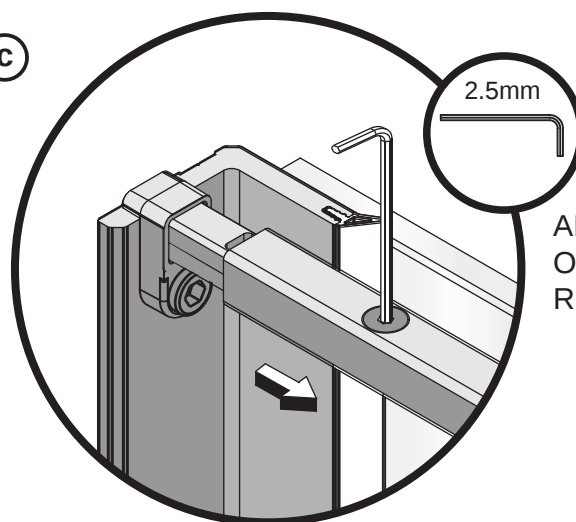



ADJUST ENDS
OUT EVENLY AS
REQUIRED




STAGE 7 - CONT

TO CHANGE HAND OF BRACE BAR


BRACE BAR IS FACTORY
ASSEMBLED FOR LH
HINGE UNIT

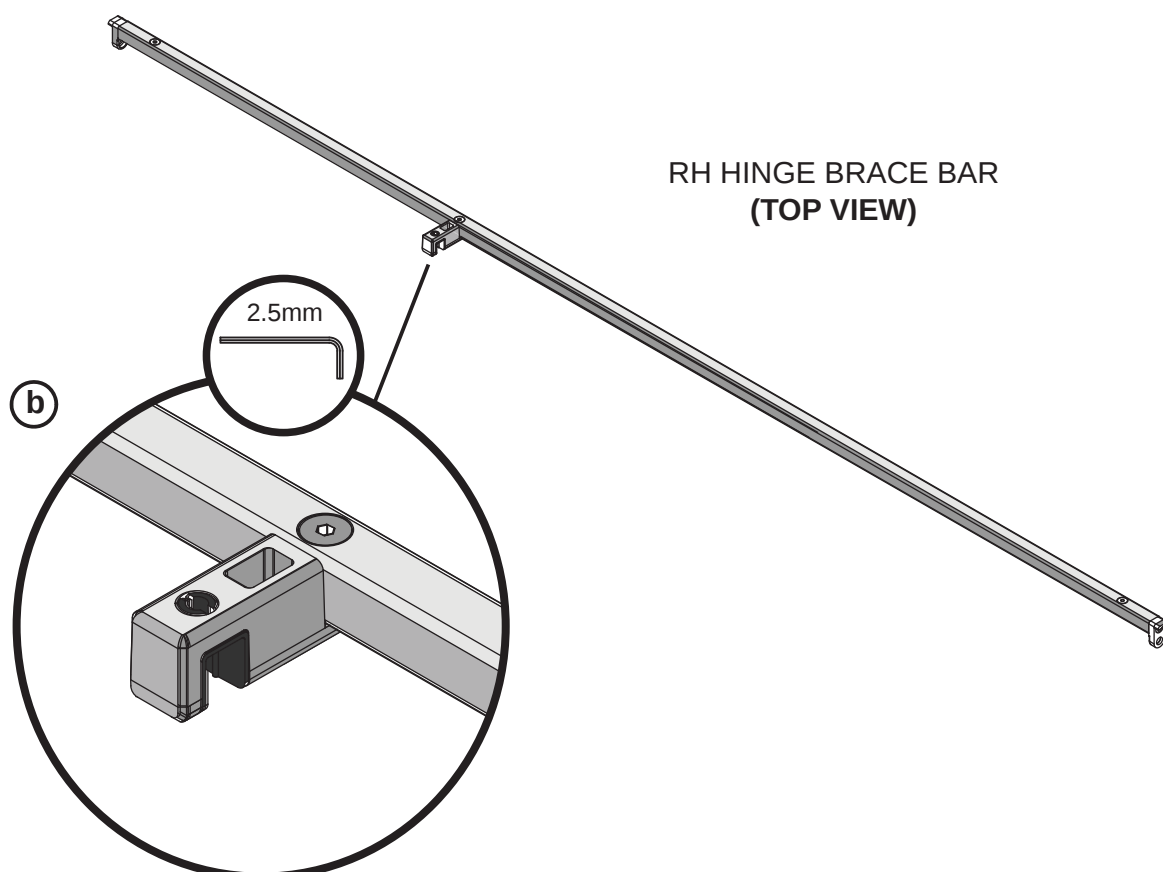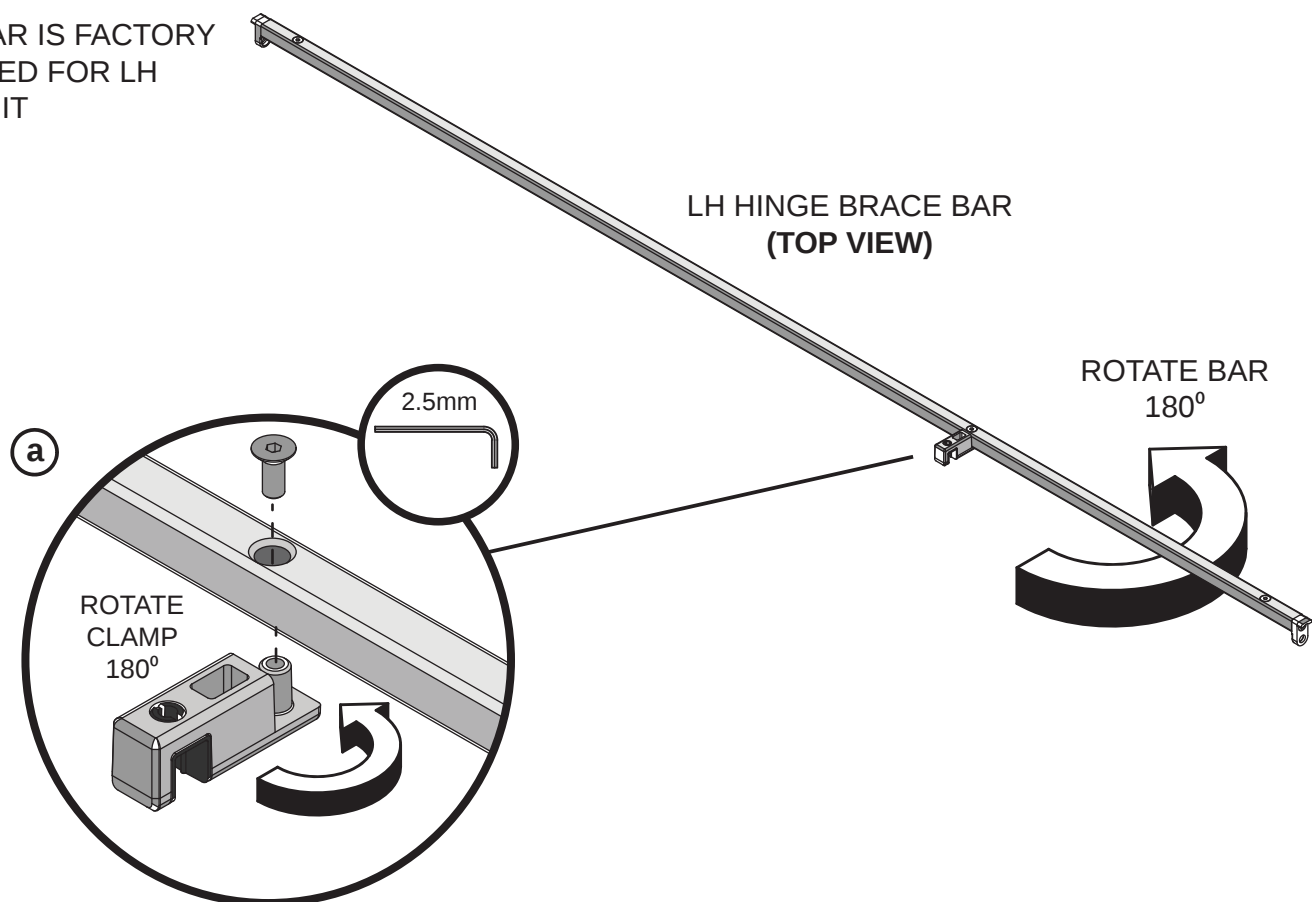


STAGE 8

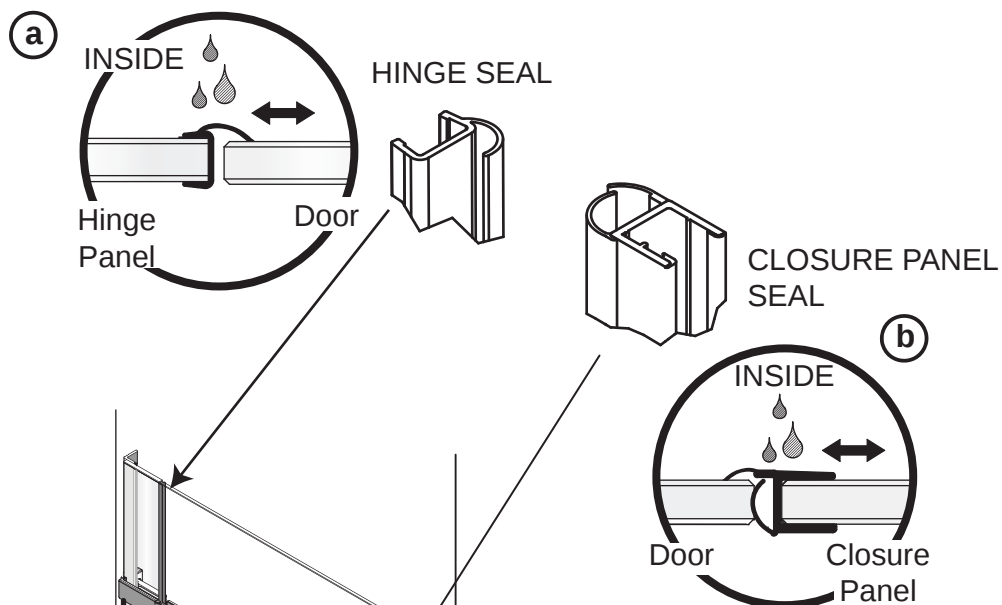


PANEL BRACKET CAPS x 2
INSIDE VIEW

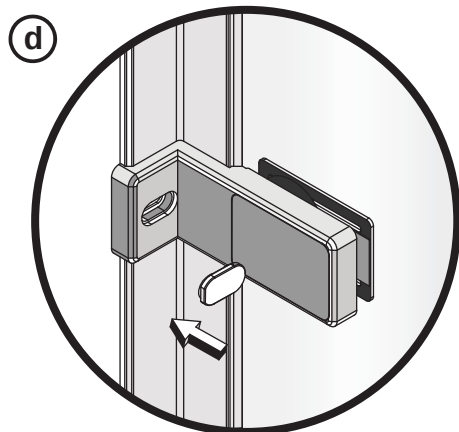

PEEL & STICK MAGNET IN SEAL


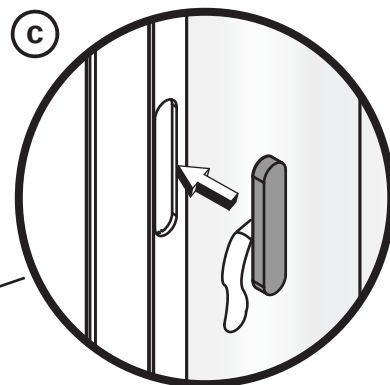


HINGE BRACKET CAPS x 2
INSIDE VIEW

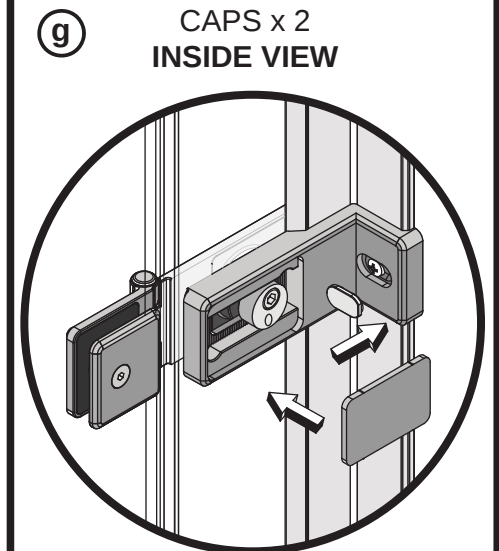


IMPORTANT!
FIT CAPS AFTER ALL
ADJUSTMENTS
ARE COMPLETE.

**REMOVE
BACKING
FILM**

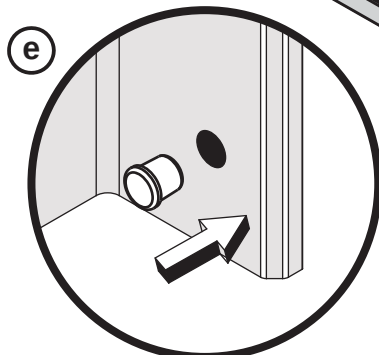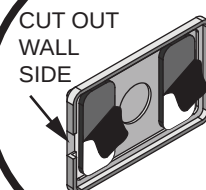


WALL MOUNT CAPS
x 4 - 1000 MODEL
x 2 - 1200/1100 MODEL

PANEL BRACKETS x 2
OUTSIDE VIEW

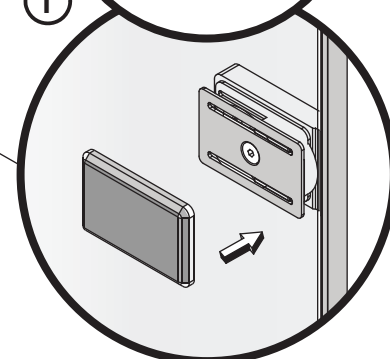


STAGE 9

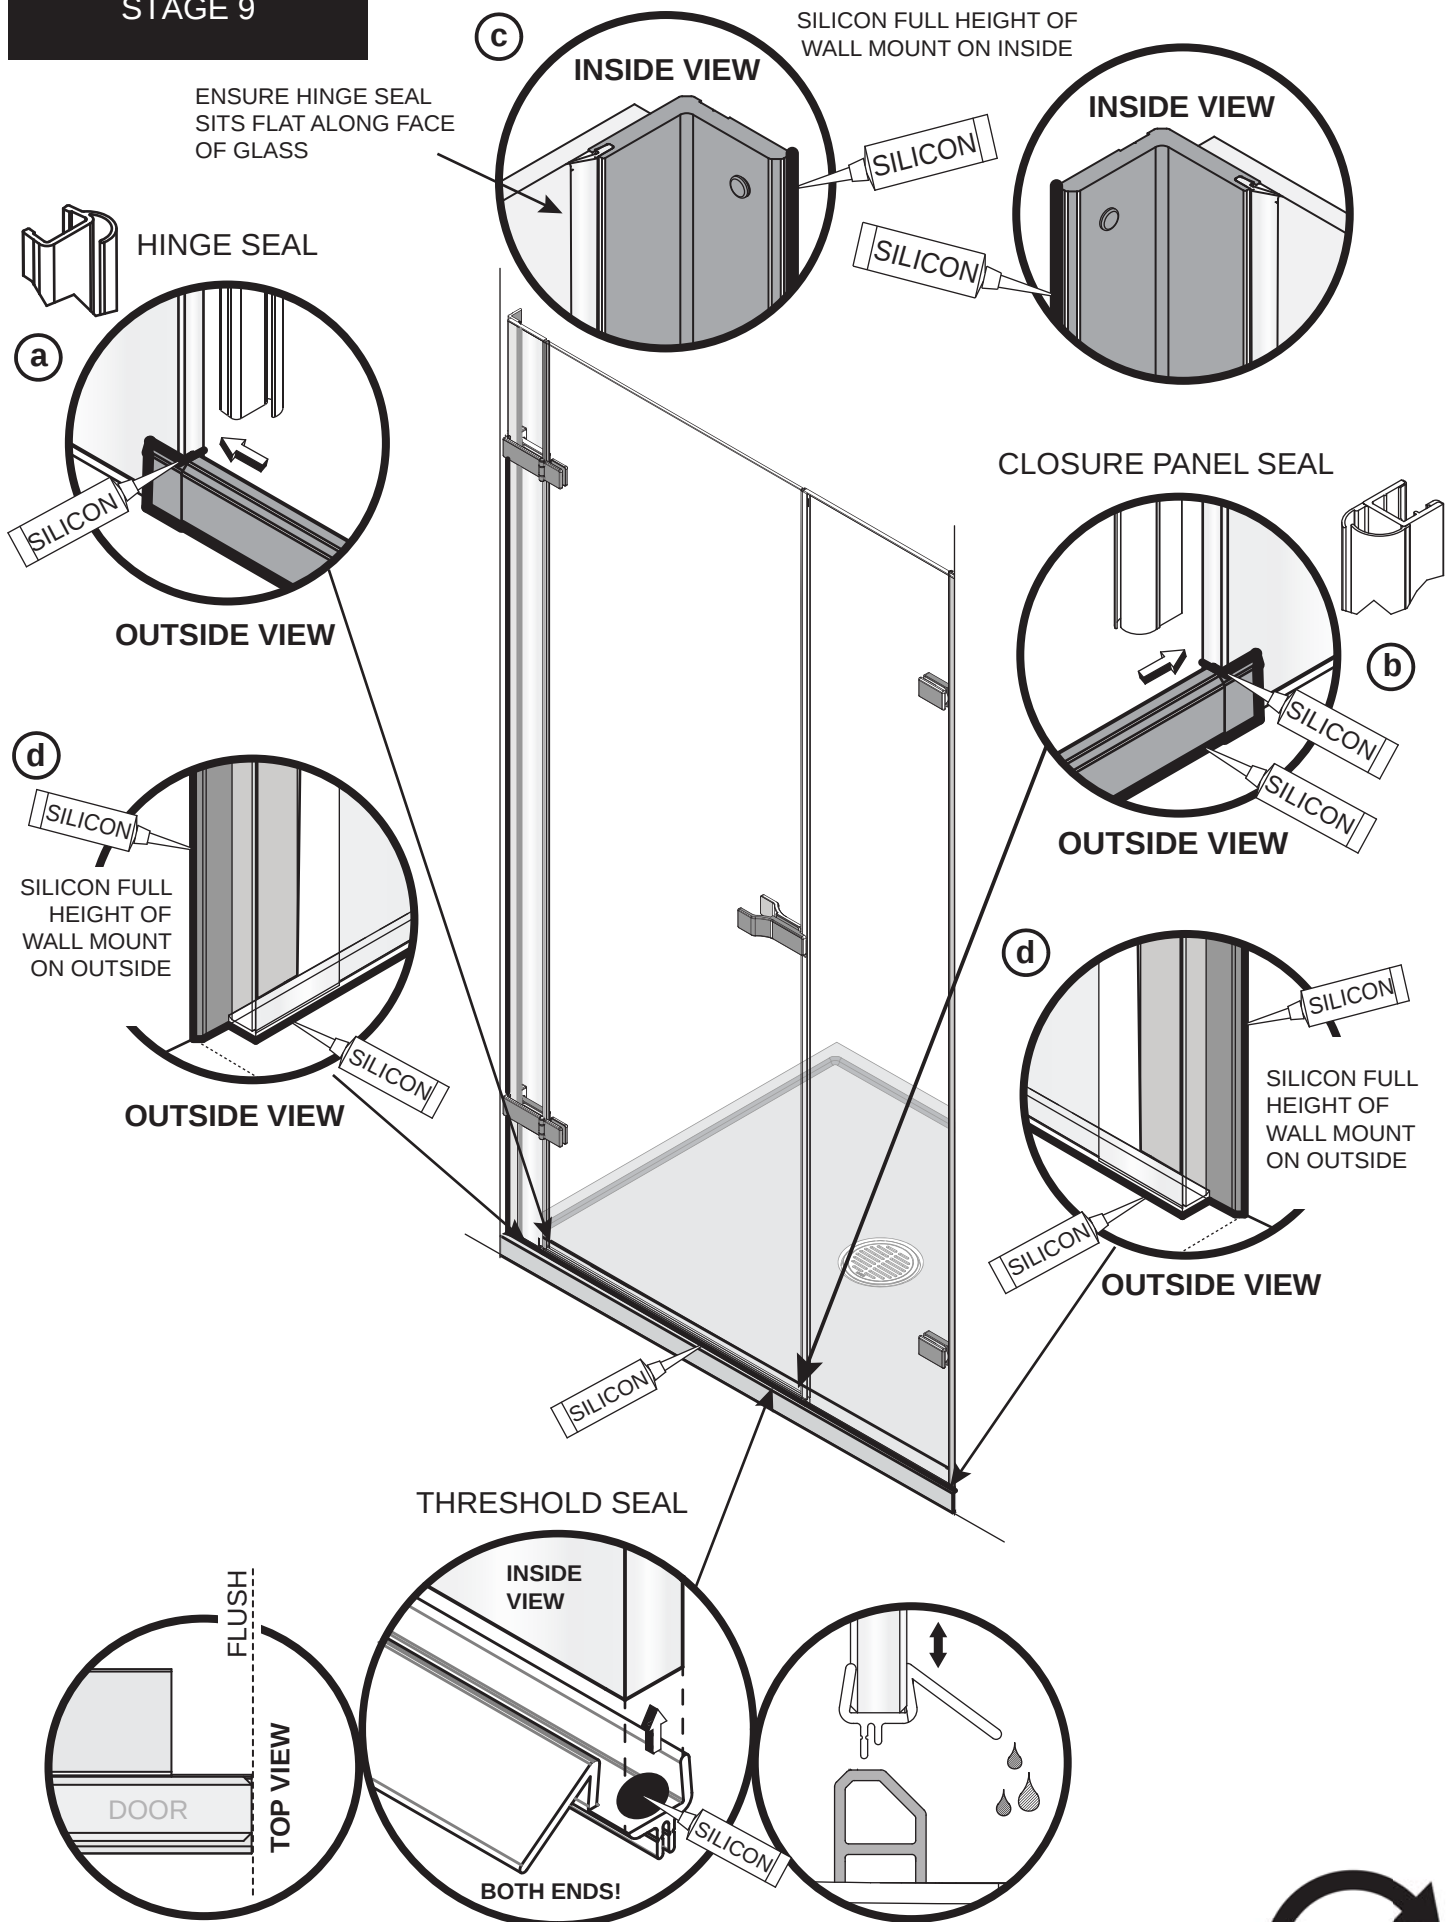


NOTES

PARTS LIST

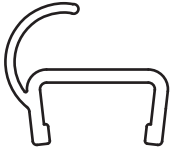

HINGE SEAL
1300217

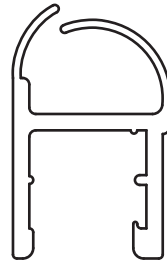

CLOSURE SEAL
1300211




HINGE PANEL
ASSEMBLY
10437 AF



CORNER/INLINE
DOOR GLASS
1300016




INLINE PANEL GLASS
1200 MODEL : 1300005
1100 MODEL : 1300018
1000 MODEL : 1300019




PANEL BRACKET
ASSEMBLY
10439 AF


PARTS LIST

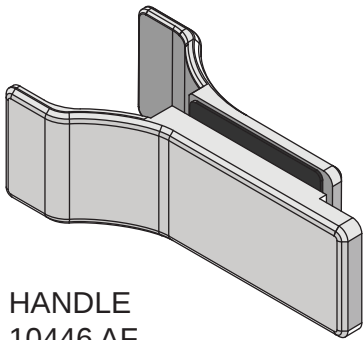


HANDLE
10446 AF

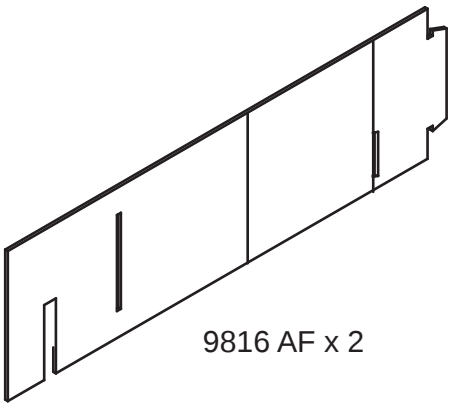


9816 AF x 2

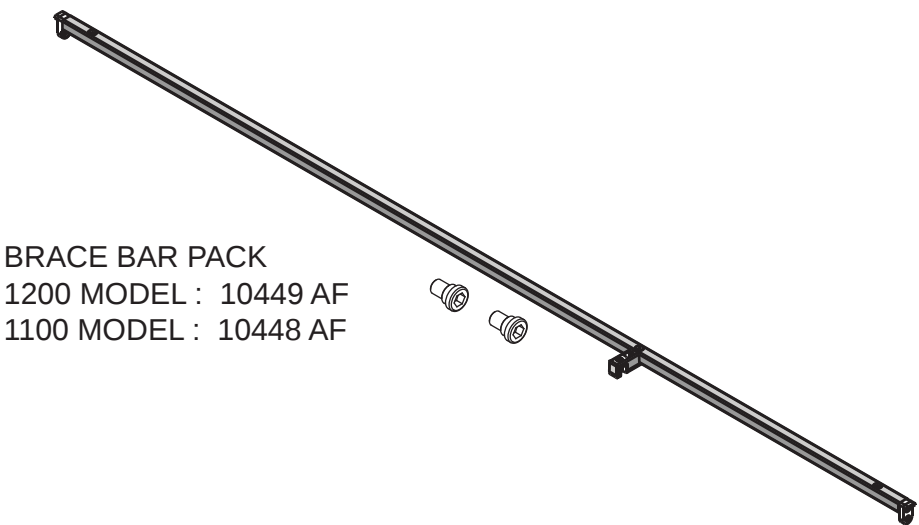

BRACE BAR PACK
1200 MODEL : 10449 AF
1100 MODEL : 10448 AF

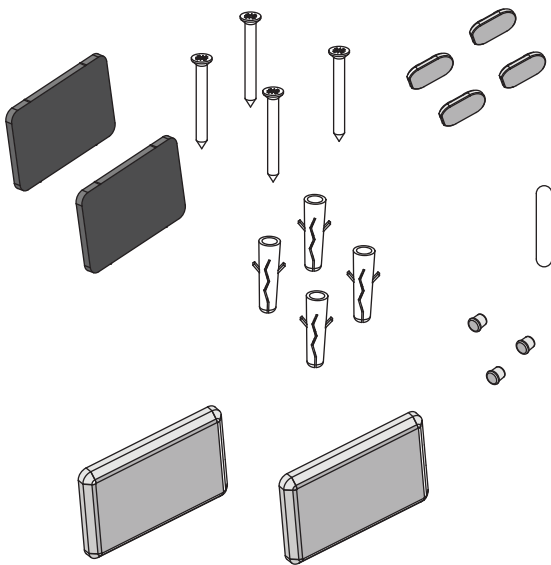

CORNER/INLINE KIT OF PARTS
10599 AF

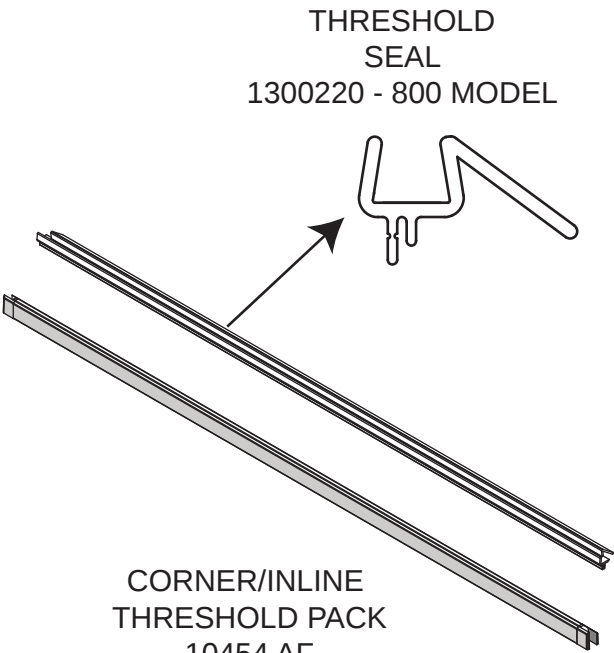

THRESHOLD
SEAL
1300220 - 800 MODEL

CORNER/INLINE
THRESHOLD PACK
10454 AF