

matki

ECLIPSE

LPSR - RECESS 900/800/760



INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10623 AF 07/22

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.


PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

RECESS
900/800/760

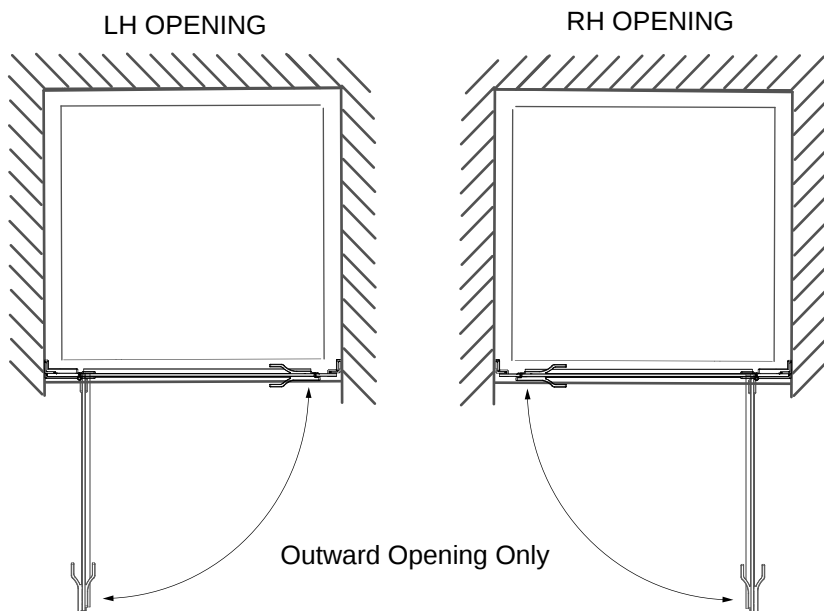


Model	A	B	C	D
LPSR760	720-760	103-123	520	97-117
LPSR800	760-800	103-123	560	97-117
LPSR900	860-900	103-123	660	97-117

Dimensions are approximate

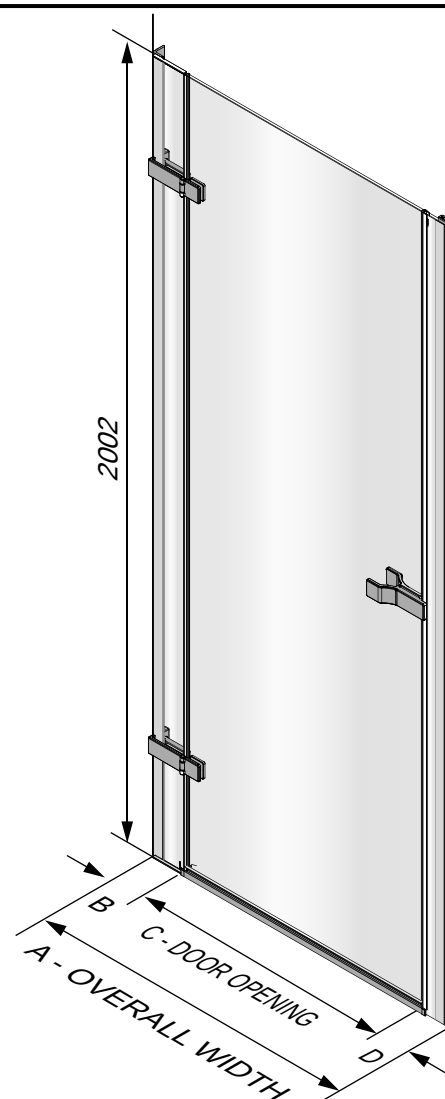


HANDING OF UNIT

LH RECESS

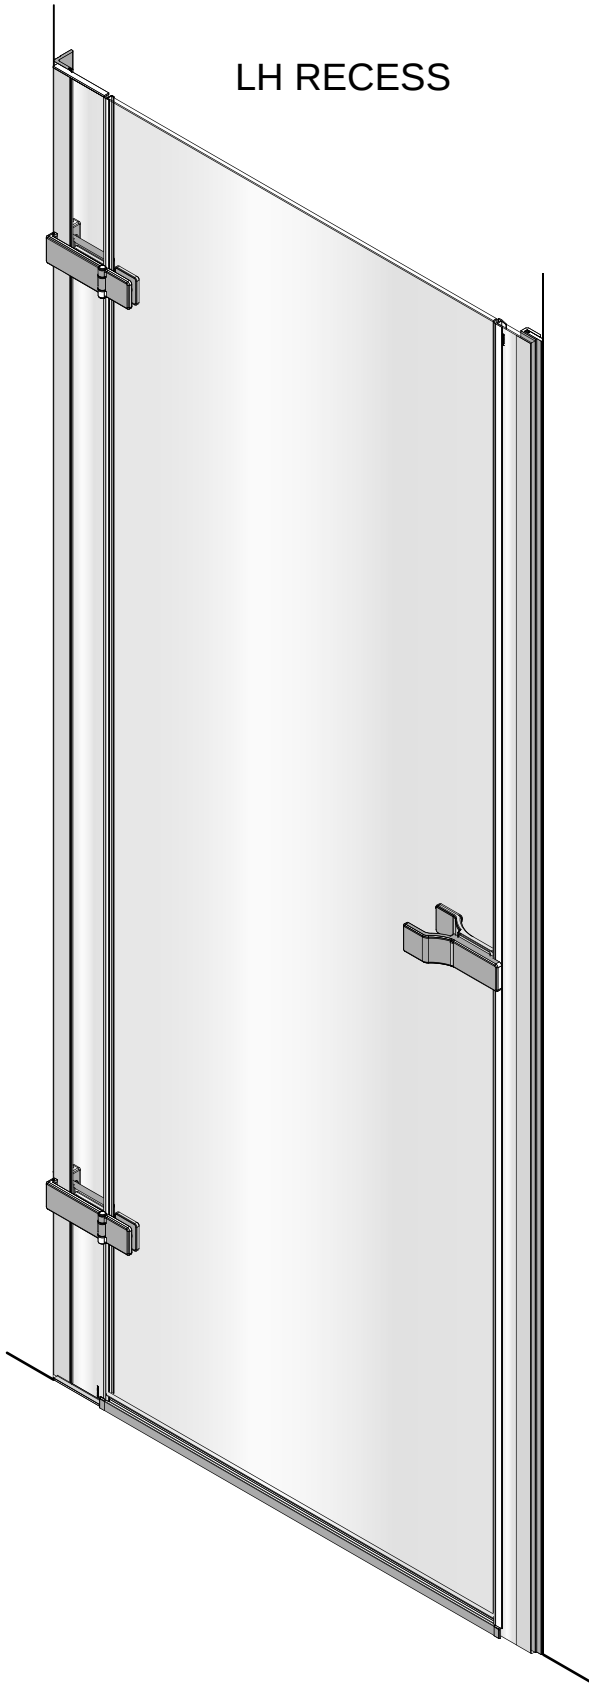


RH RECESS

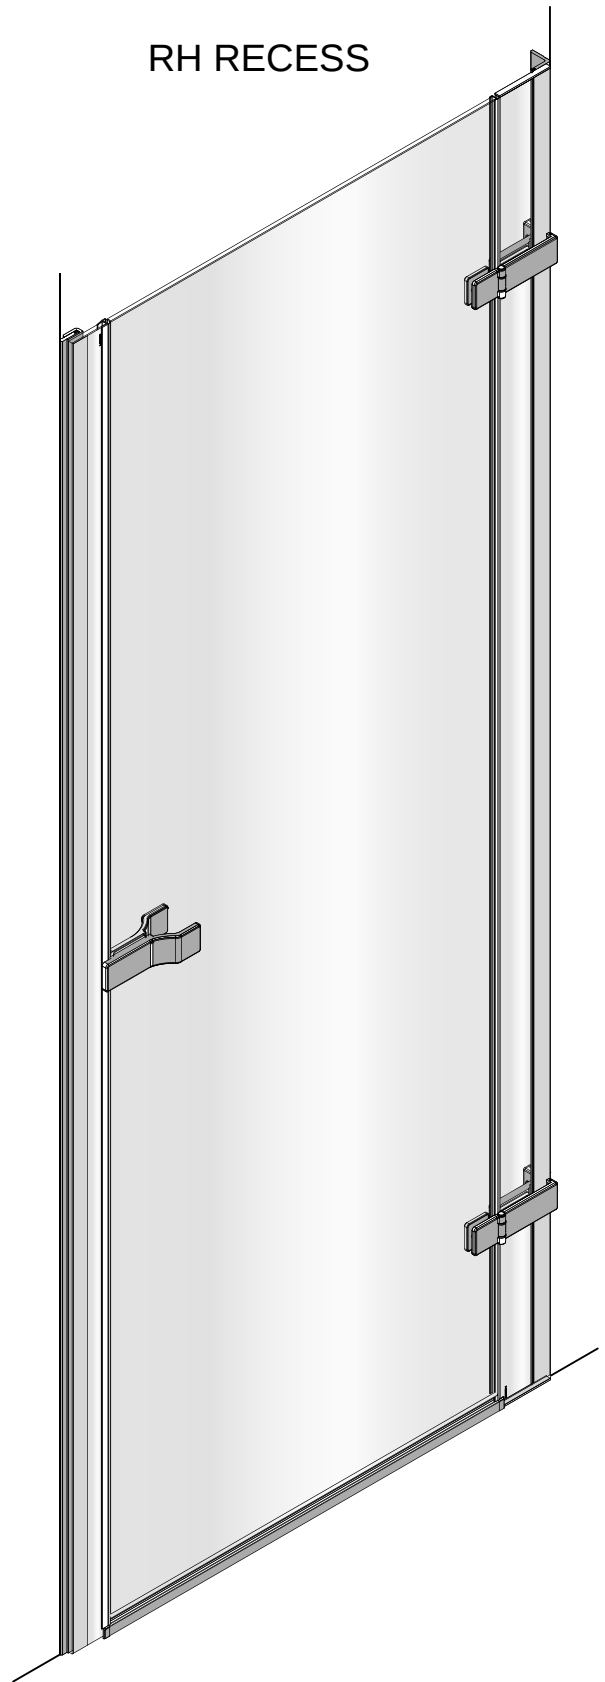

STAGE 1


INSTRUCTIONS SHOW
LH INSTALLATION



HINGE ASSEMBLY



TOP VIEW

CLOSURE ASSEMBLY

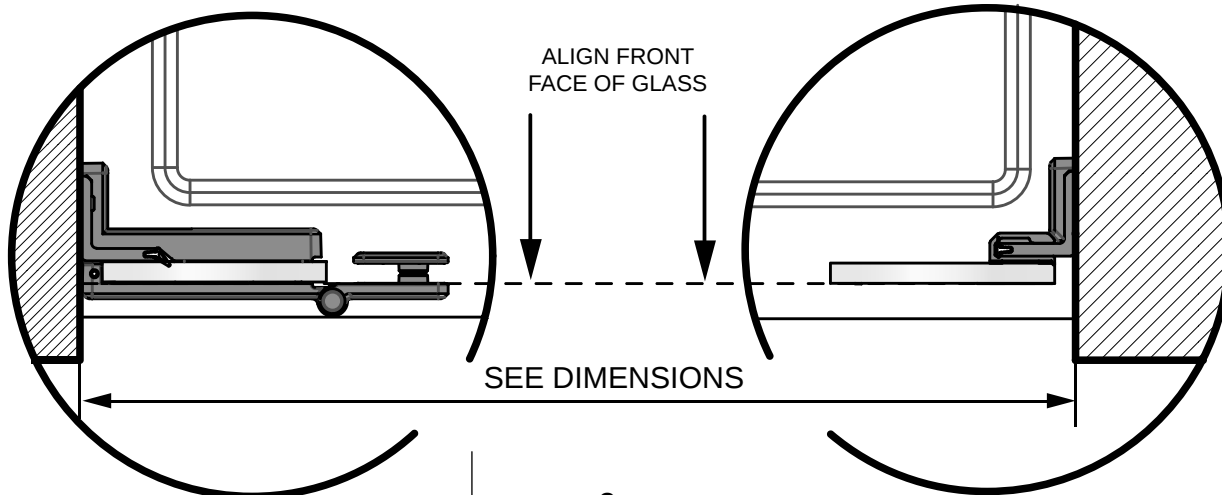




MARK
HINGE PANEL
BRACKETS x2
(INSIDE VIEW)

a

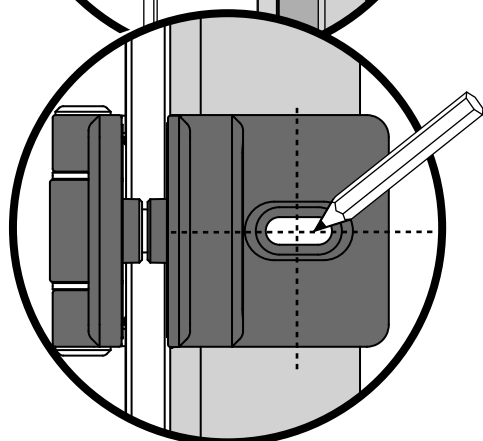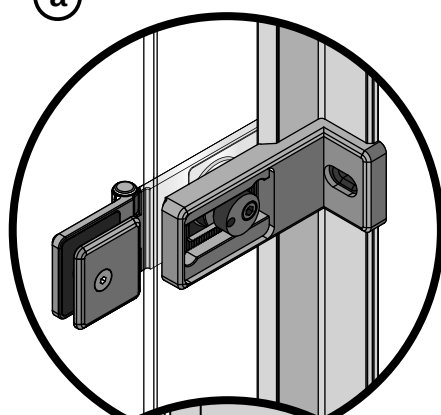


MARK
CLOSURE PANEL
BRACKETS x2
(KIT OF PARTS)
(INSIDE VIEW)



b

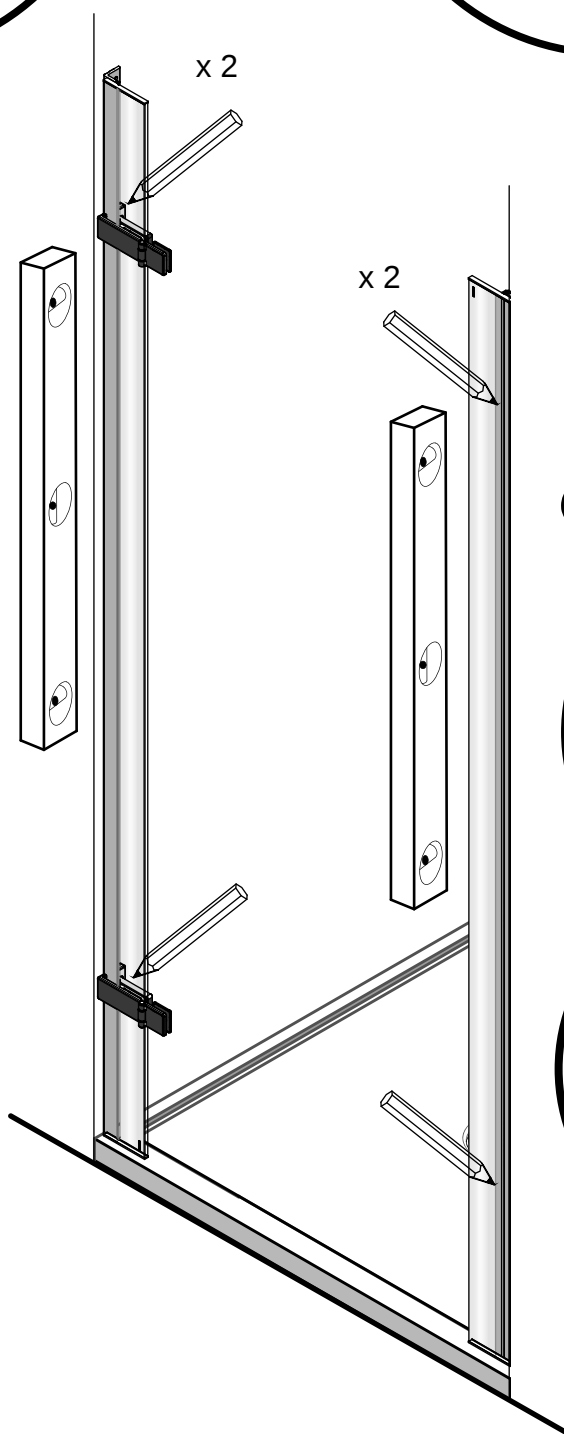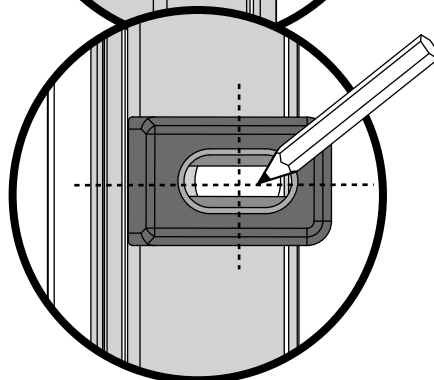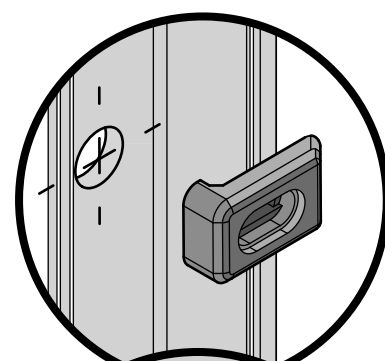


STAGE 2





HINGE PANEL x 2
INSIDE VIEW

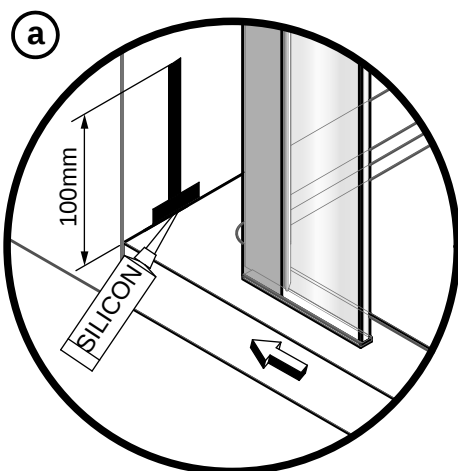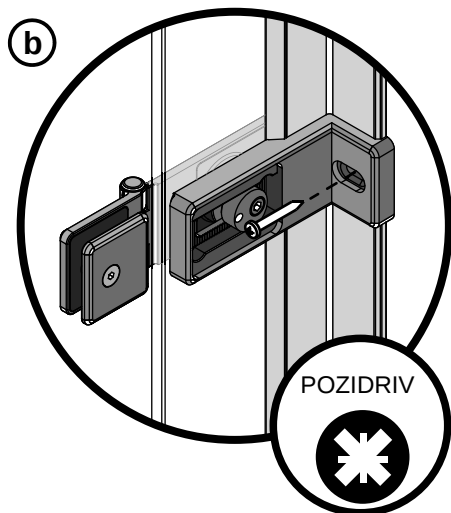



**IMPORTANT! BEFORE FITTING
HINGE PANEL REMOVE
PROTECTIVE TAPE**

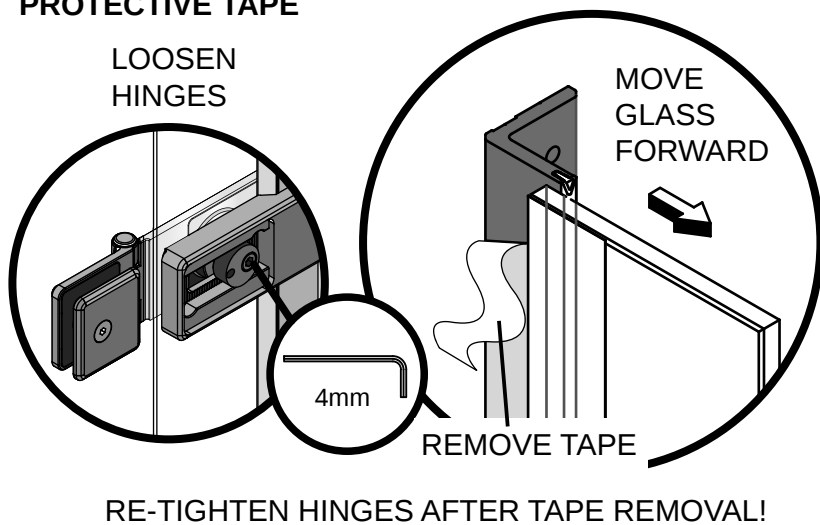




CLOSURE PANEL x 2
INSIDE VIEW

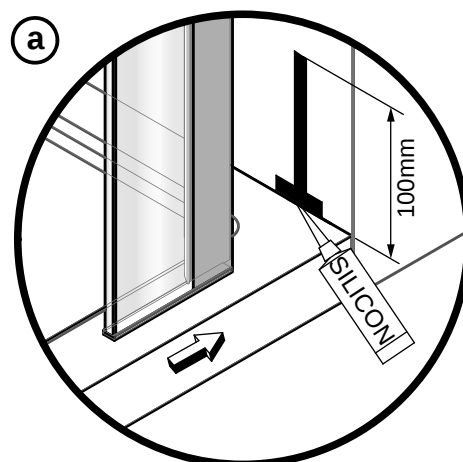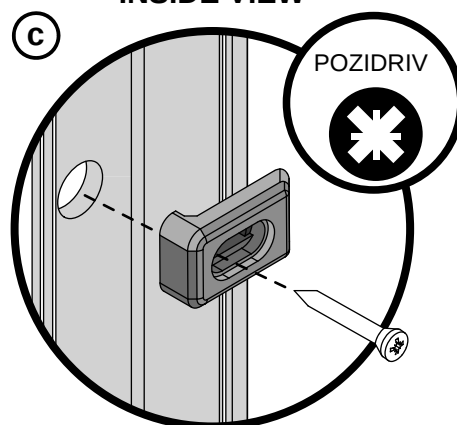

STAGE 3


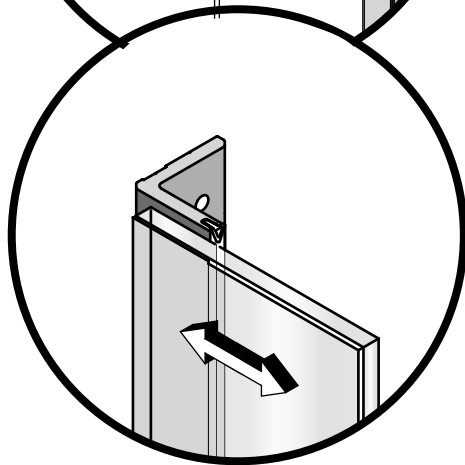
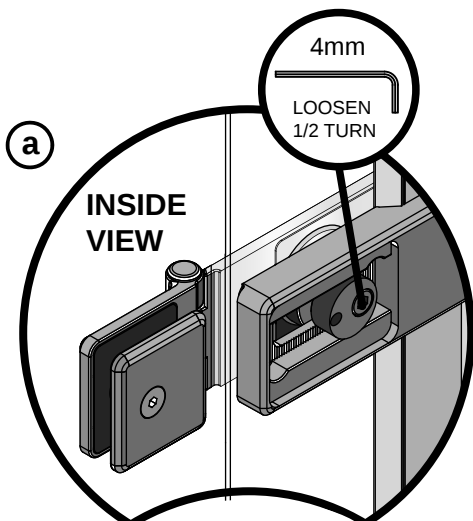


ADJUST GLASS PANELS OUT EVENLY TO MEET THRESHOLD

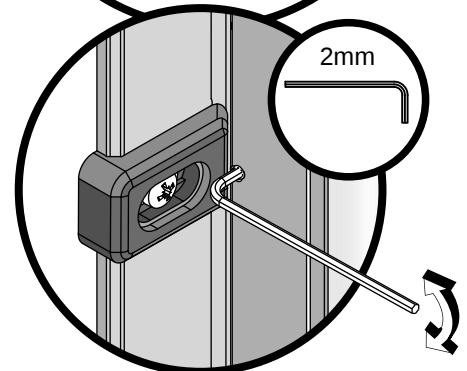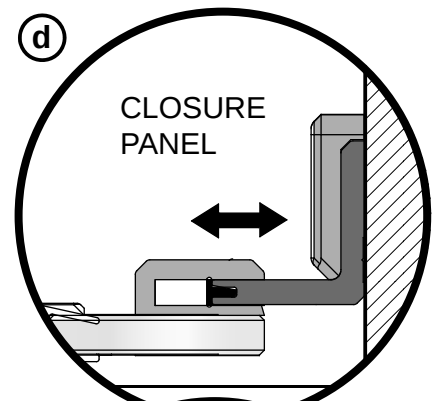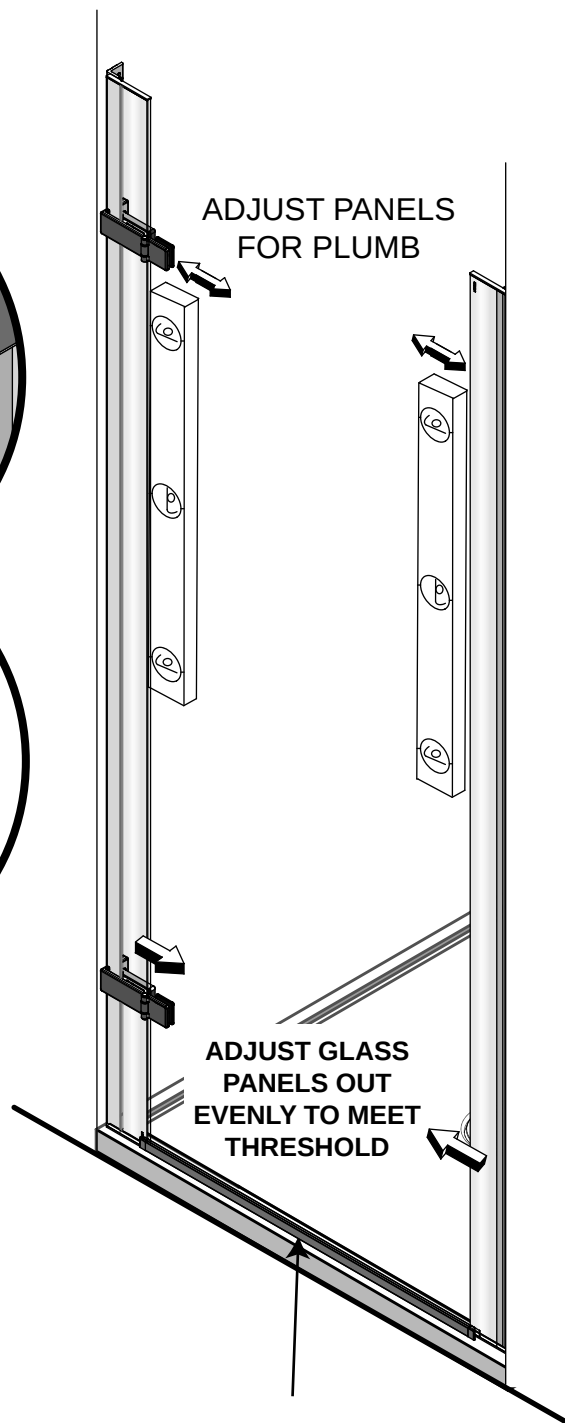


INSIDE VIEW
TIGHTEN GRUB SCREWS x 3
TO SECURE CLOSURE
PANEL IN PLACE

DRY FIT FIRST! TO POSITION CHECK.
APPLY SILICON AT END CAPS
PEEL OFF TAPE FILM AND PRESS IN PLACE

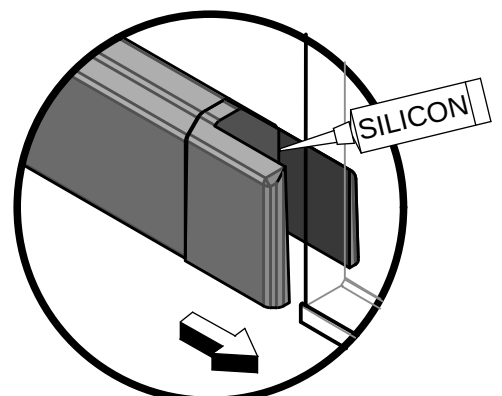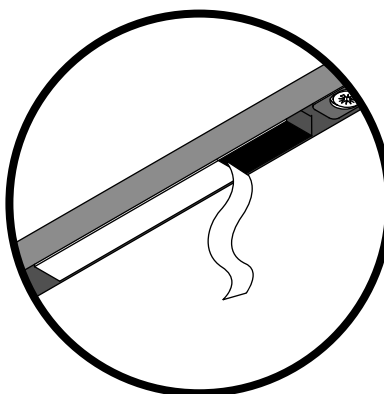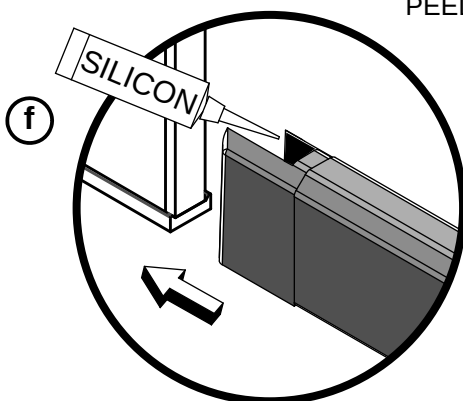


STAGE 4


BEFORE FITTING DOOR

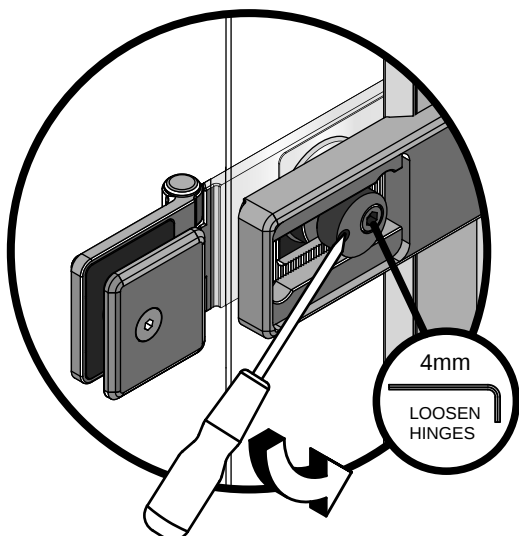


SET BOTH UPPER AND LOWER
DOOR CAMS TO RAISED
POSITION

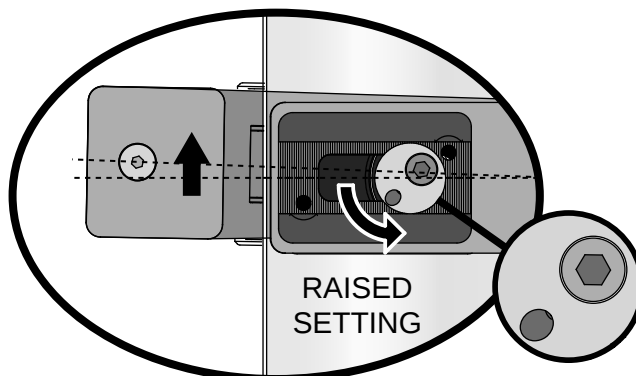


LH HINGE DOOR SUPPORT x 2

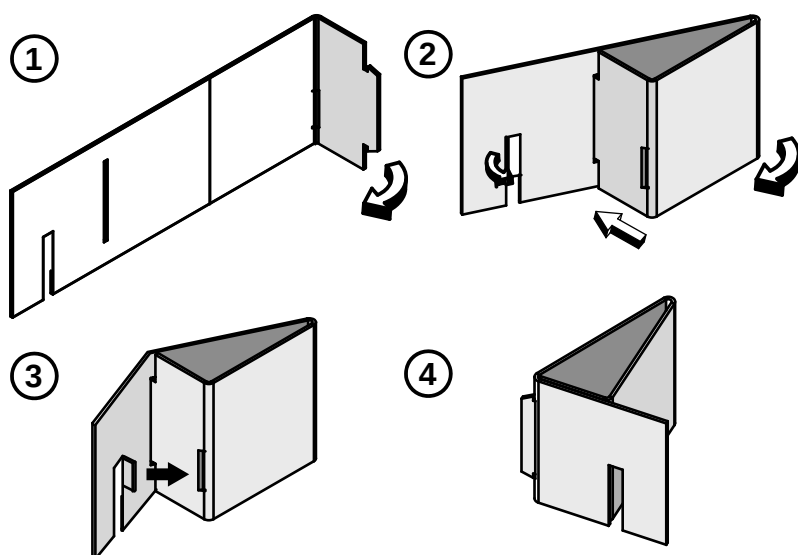


USE HINGE SUPPORTS x 2
FOR DOOR FITTING

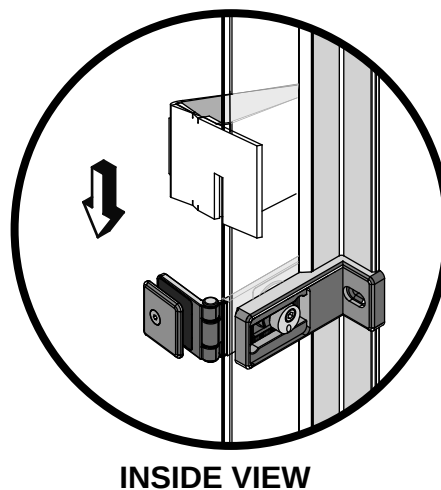


RH HINGE DOOR SUPPORT X2

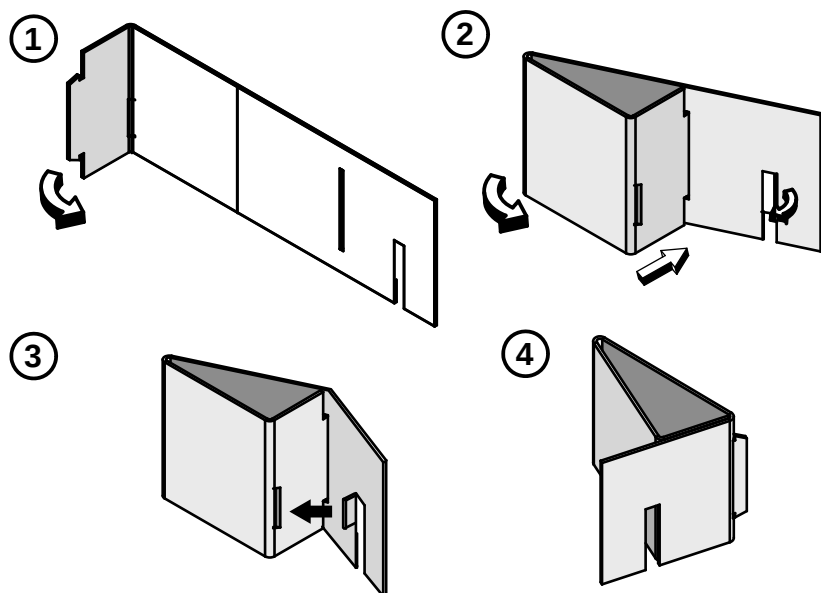

USE HINGE SUPPORTS x 2
FOR DOOR FITTING

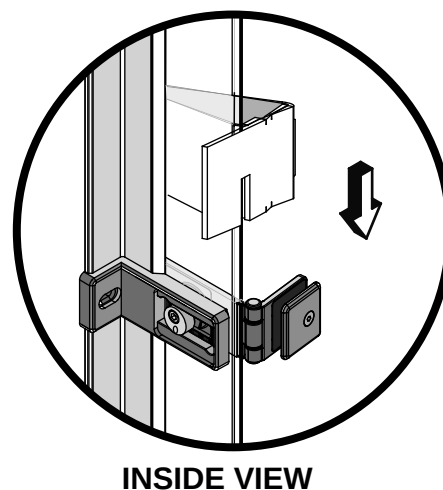




STAGE 5



2 PERSON
INSTALLATION

FIT DOOR TO
HINGE x 2
WITH BACK
HINGE PLATES


ALIGN BACK
HINGE PLATES
WITH FRONT
AND TIGHTEN

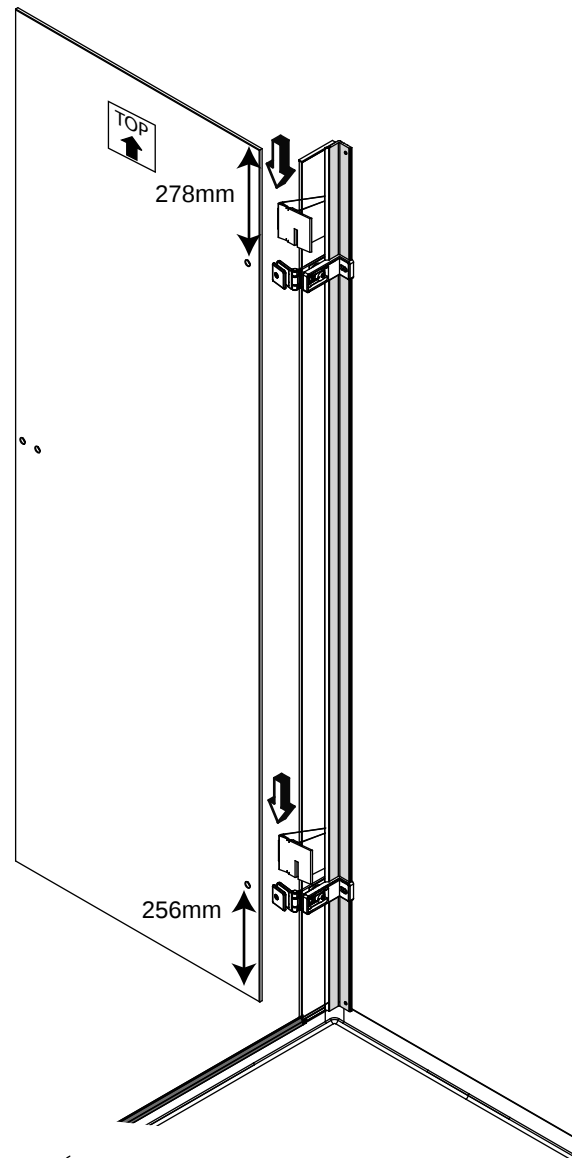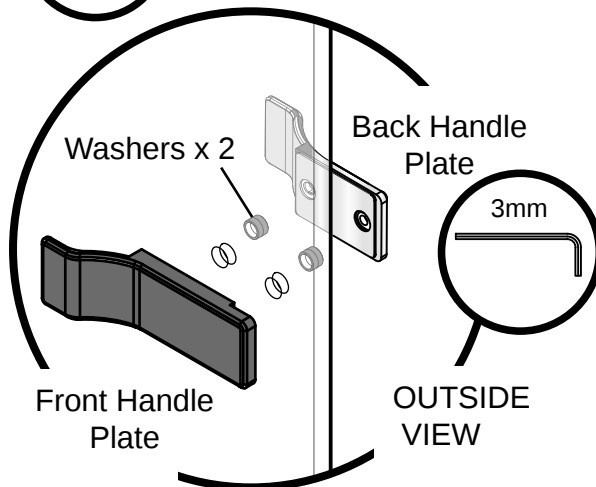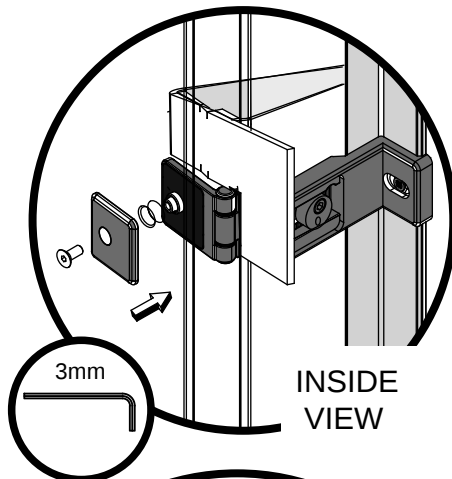


DOOR ADJUSTMENT

WHEN ADJUSTING DOOR, OPEN AT 90°



ADJUST DOOR LEFT-RIGHT

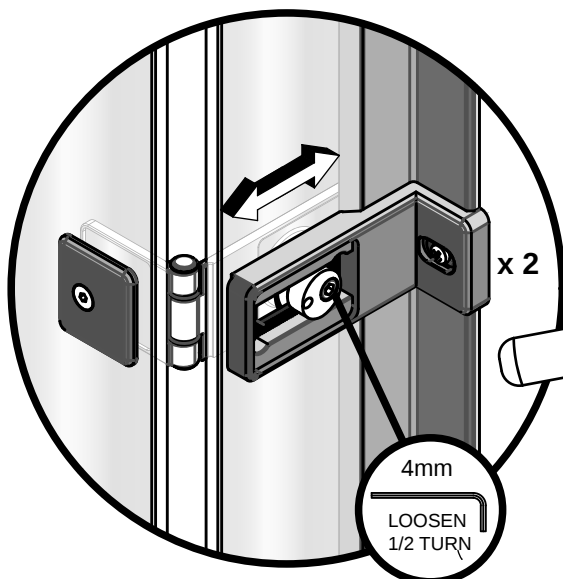


ADJUST DOOR UP-DOWN

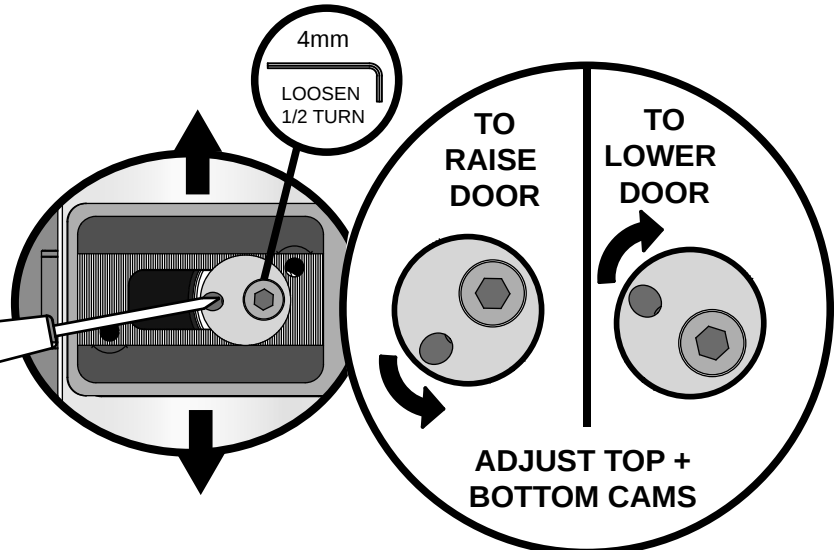



STAGE 6

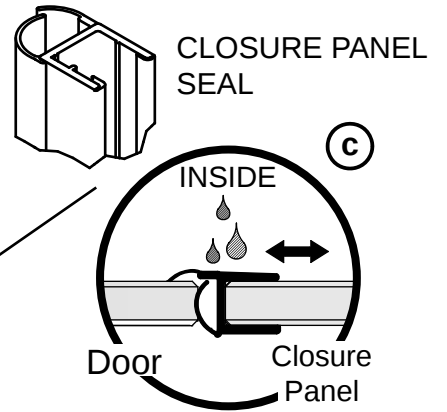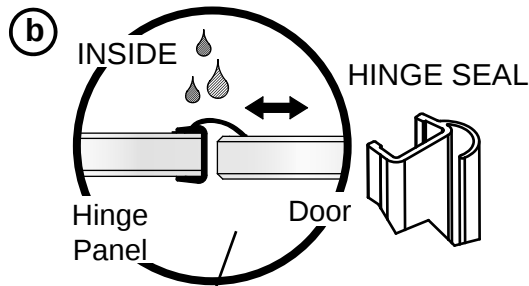


CLOSURE BRACKET
CAPS x 2

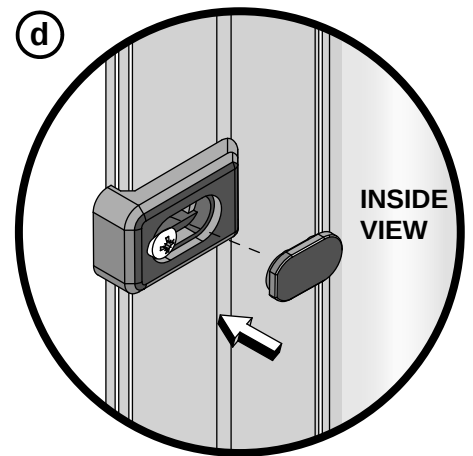

PEEL & STICK MAGNET IN SEAL

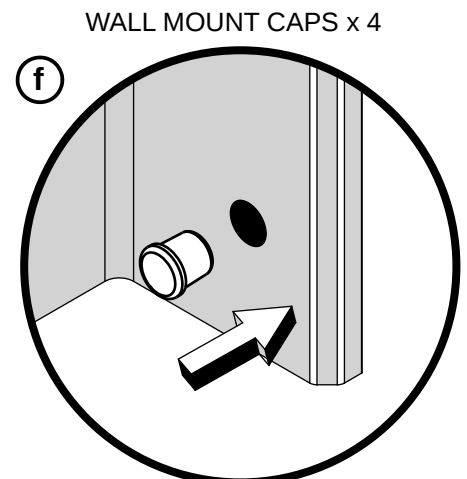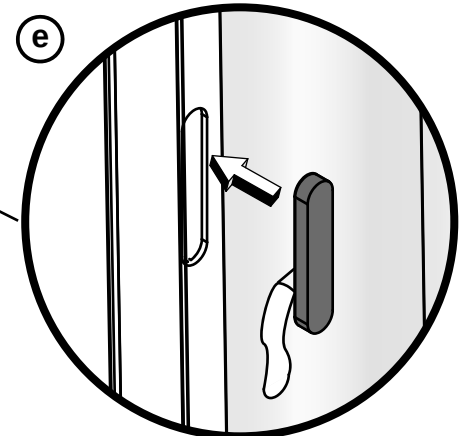


HINGE BRACKET
CAPS x 2
INSIDE VIEW

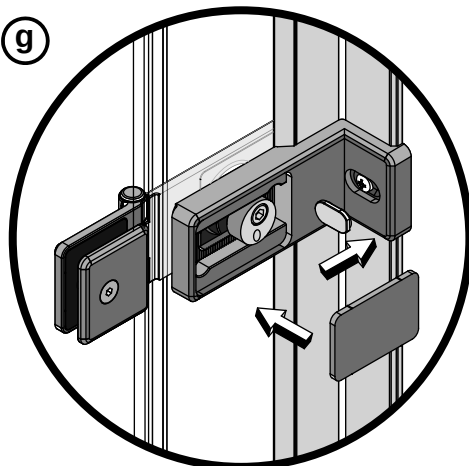


IMPORTANT!
FIT CAPS AFTER ALL
ADJUSTMENTS
ARE COMPLETE.


STAGE 7

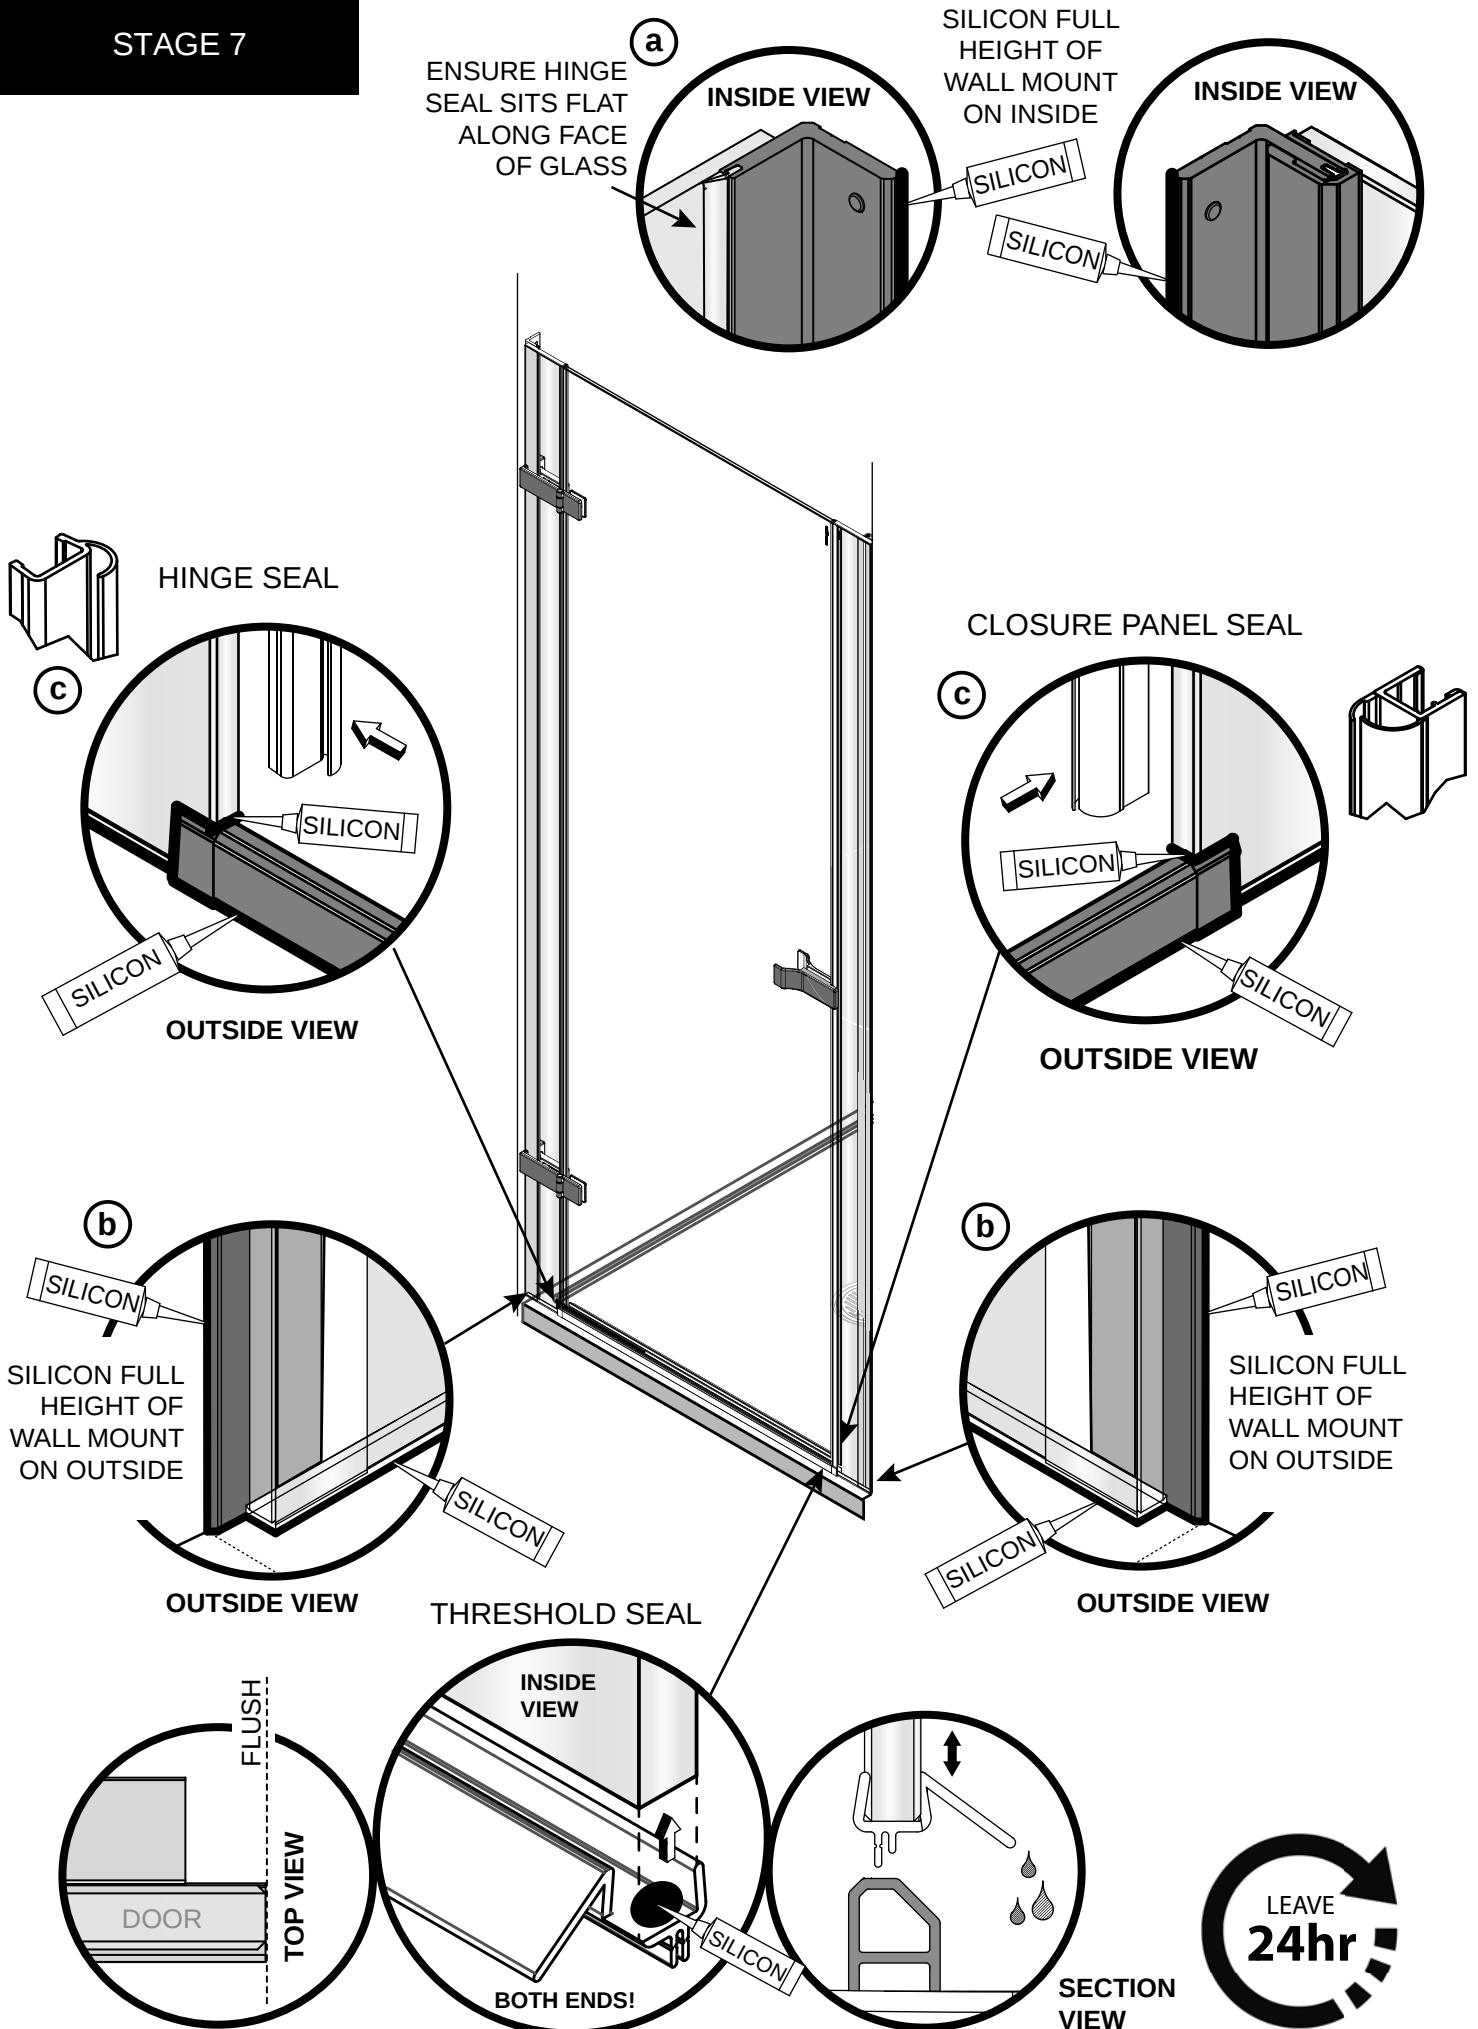


PARTS LIST

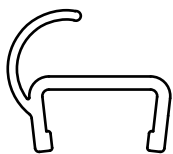


HINGE SEAL
1300217

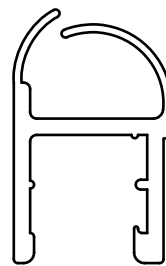


CLOSURE SEAL
1300211



HINGE PANEL
ASSEMBLY
10437 AF

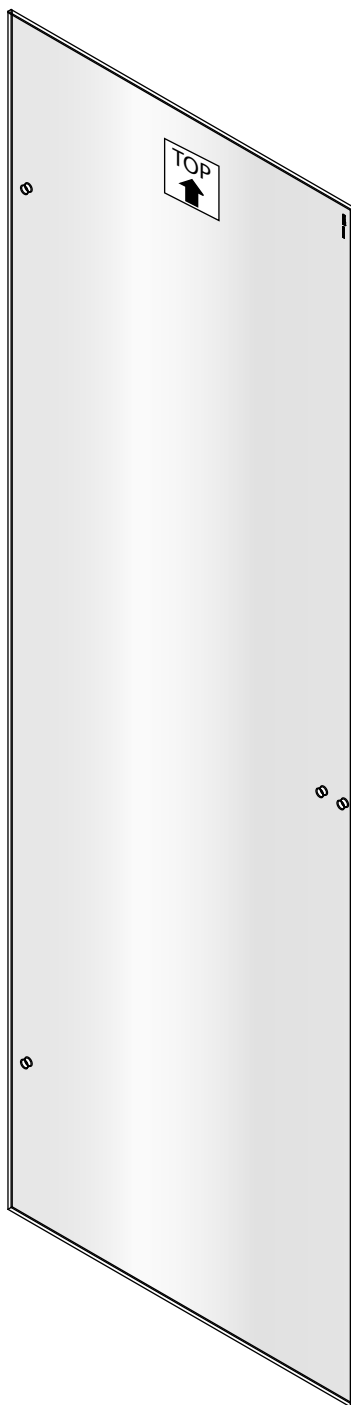


RECESS DOOR GLASS
900 MODEL : 1300001
800 MODEL : 1300014
760 MODEL : 1300015




RECESS CLOSURE
ASSEMBLY
10438 AF

PARTS LIST

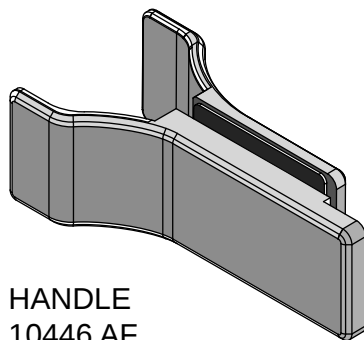


HANDLE
10446 AF

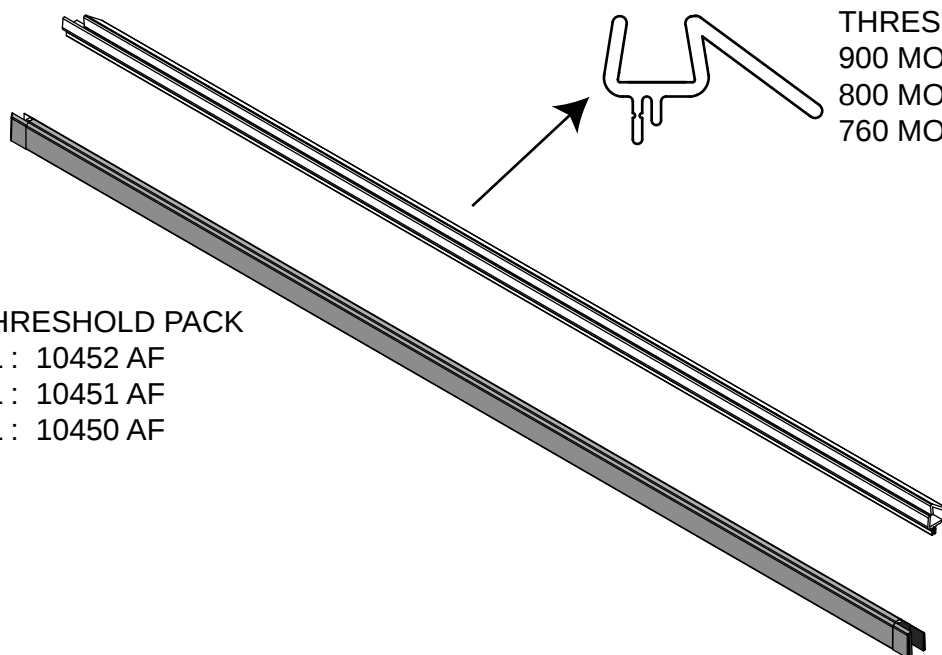


THRESHOLD SEAL
900 MODEL : 1300209
800 MODEL : 1300218
760 MODEL : 1300219

RECESS THRESHOLD PACK
900 MODEL : 10452 AF
800 MODEL : 10451 AF
760 MODEL : 10450 AF

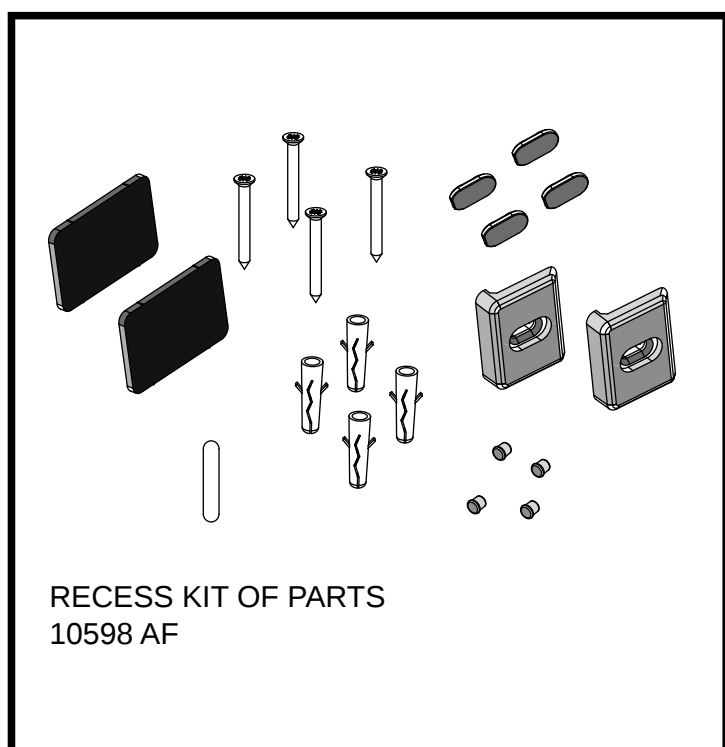

RECESS KIT OF PARTS
10598 AF

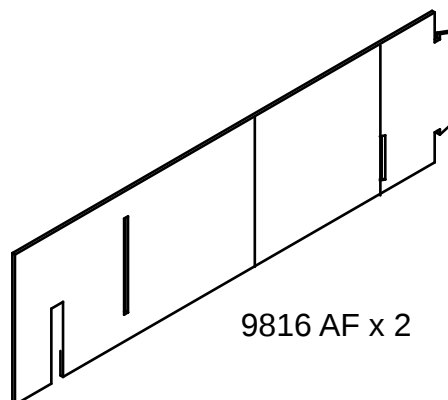

9816 AF x 2