

matki

ELEGANZA BATH SCREEN



EIB 925

INWARD OPENING

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

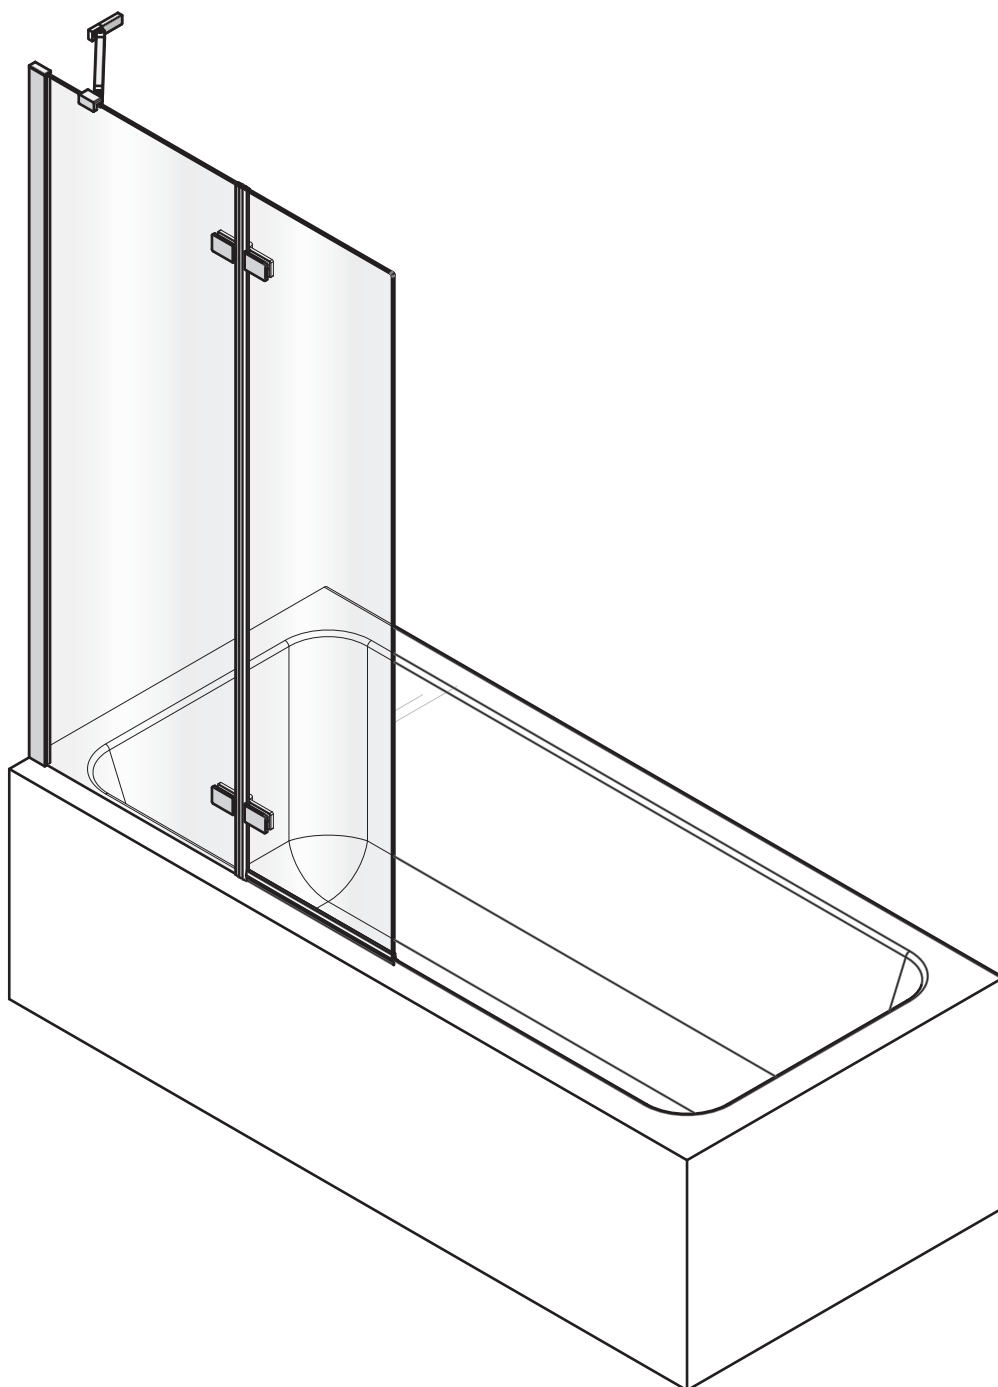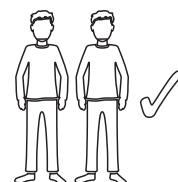

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk









11164 AF 05/24 B

Matki recommend that this product is fitted by professional installers


HANDING

EIB 925 IS SUPPLIED AS A LH BATH SCREEN
SEE BELOW TO CHANGE TO RH

CHANGE WALL BRACKET
HANDING AS REQUIRED

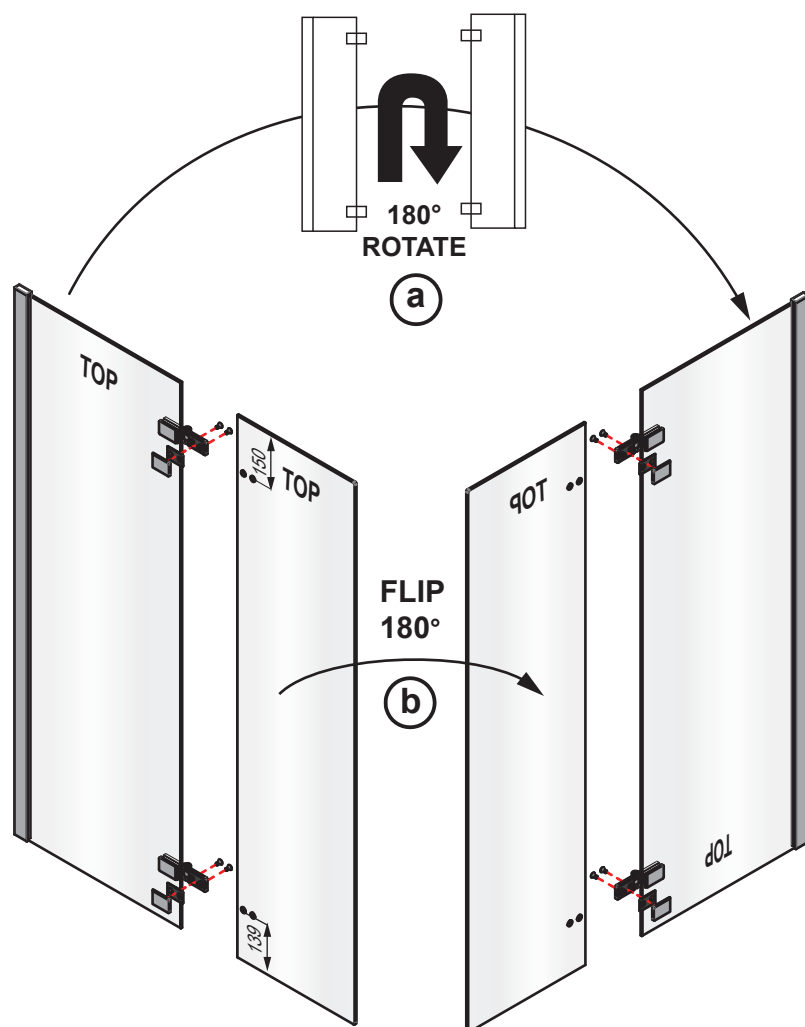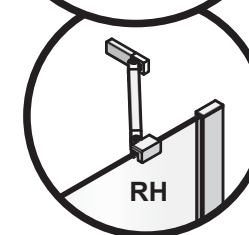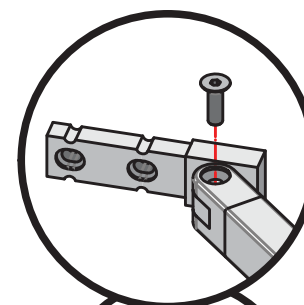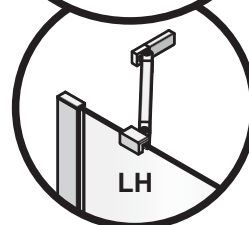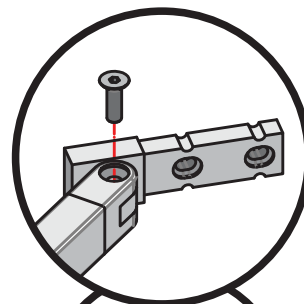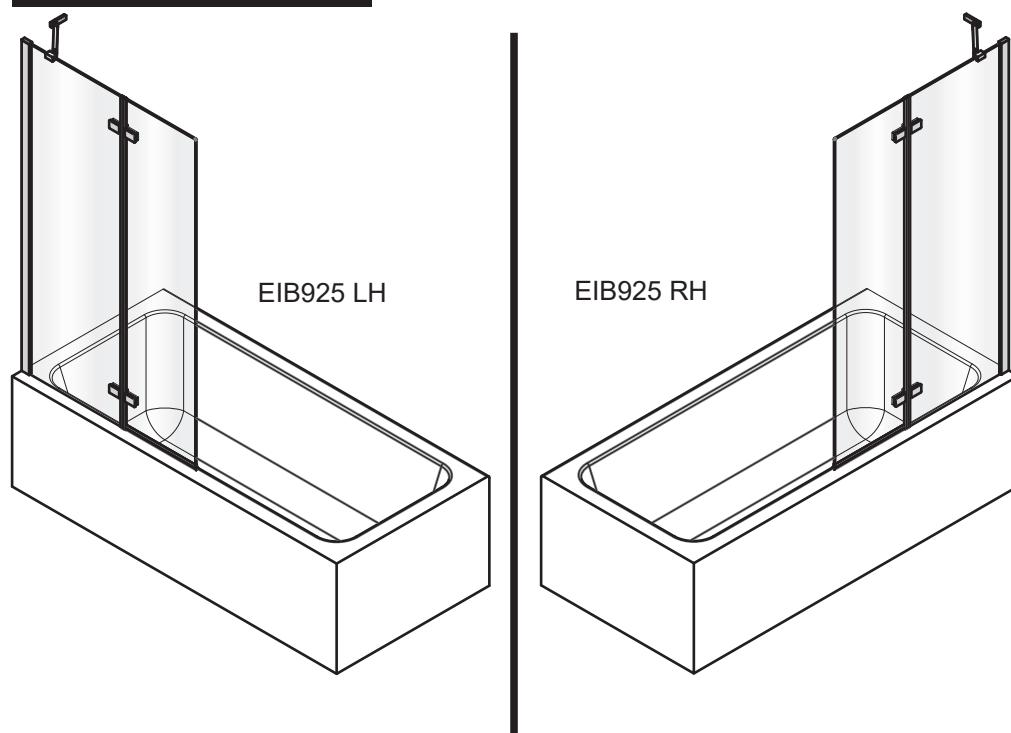

(c) OUTSIDE VIEW TOP

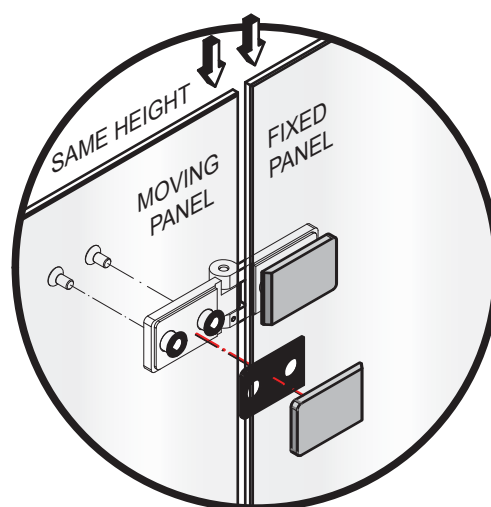

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED BATH SCREEN INSTALLATION, REVERSE FOR RH.

IMPORTANT


Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Bathscreen.
2. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Seal between Bath and tiles. Remove any excess sealant from the area/joint between the Bath and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and Bath.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


TYPICAL INSTALLATION OF BATH SCREEN ON BATH

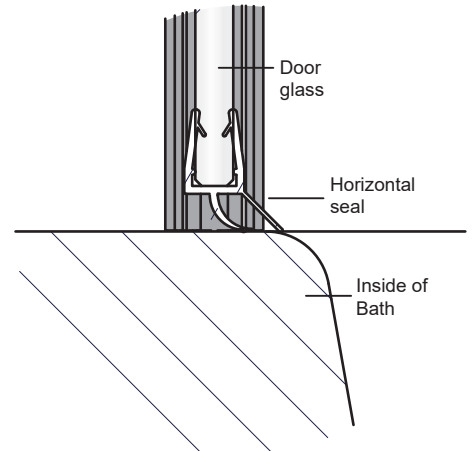

It is recommended to install the Bath screen wall mount close to the inside edge of the bath to reduce any unwanted water build up.


DIMENSIONS

Dimensions are approximate due to nature of materials used

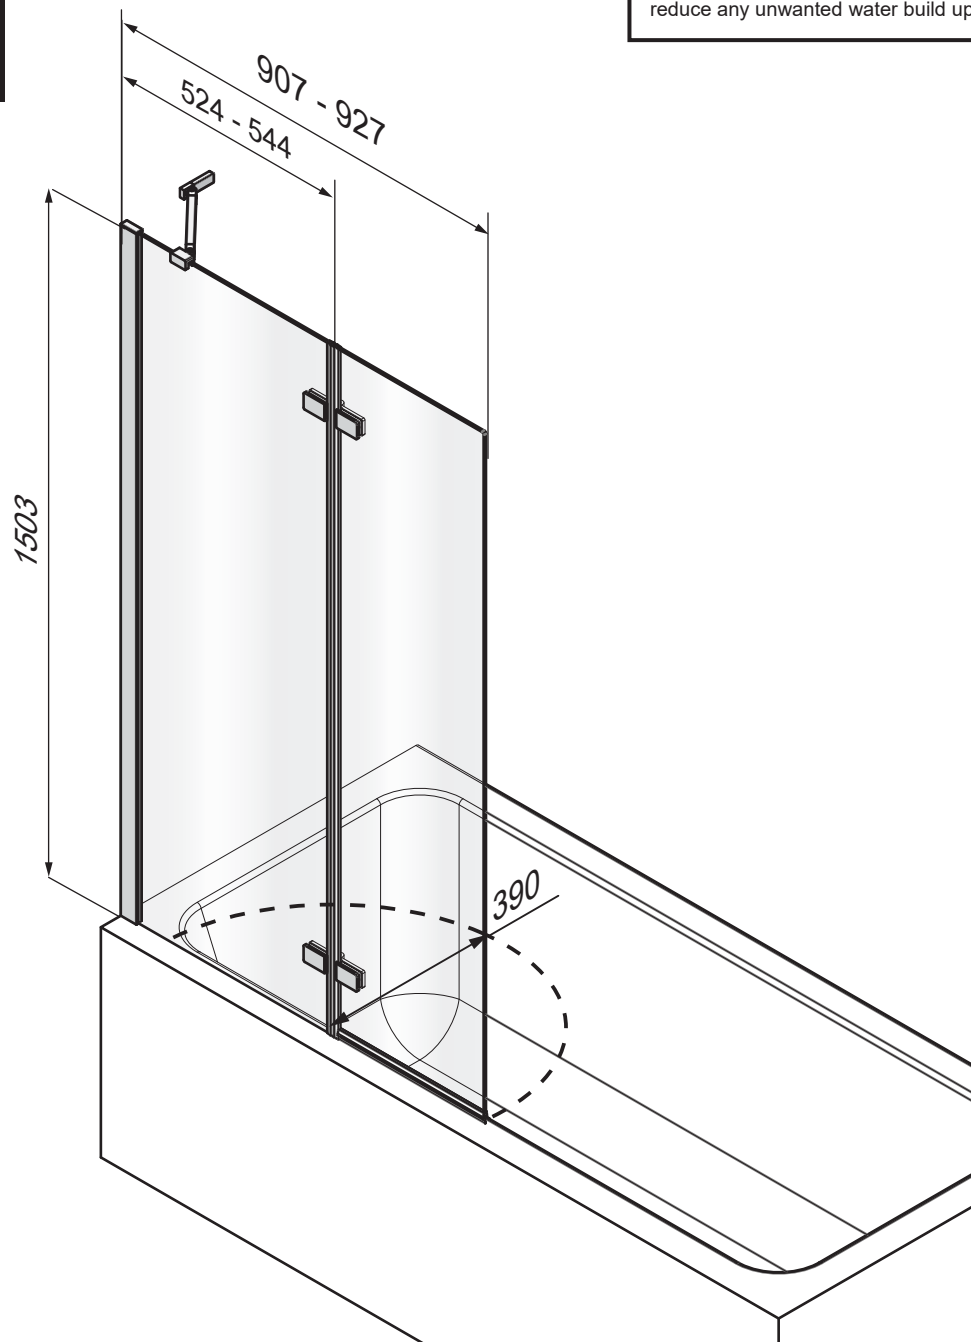


STAGE 1



IMAGES SHOW LH HINGED
BATHTHSCREEN INSTALLATION.

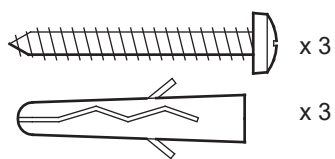



(a)

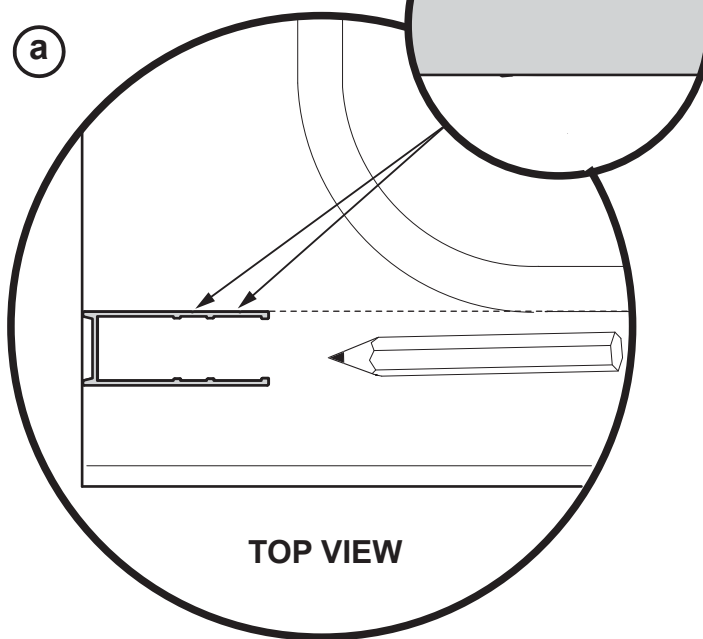

(b)

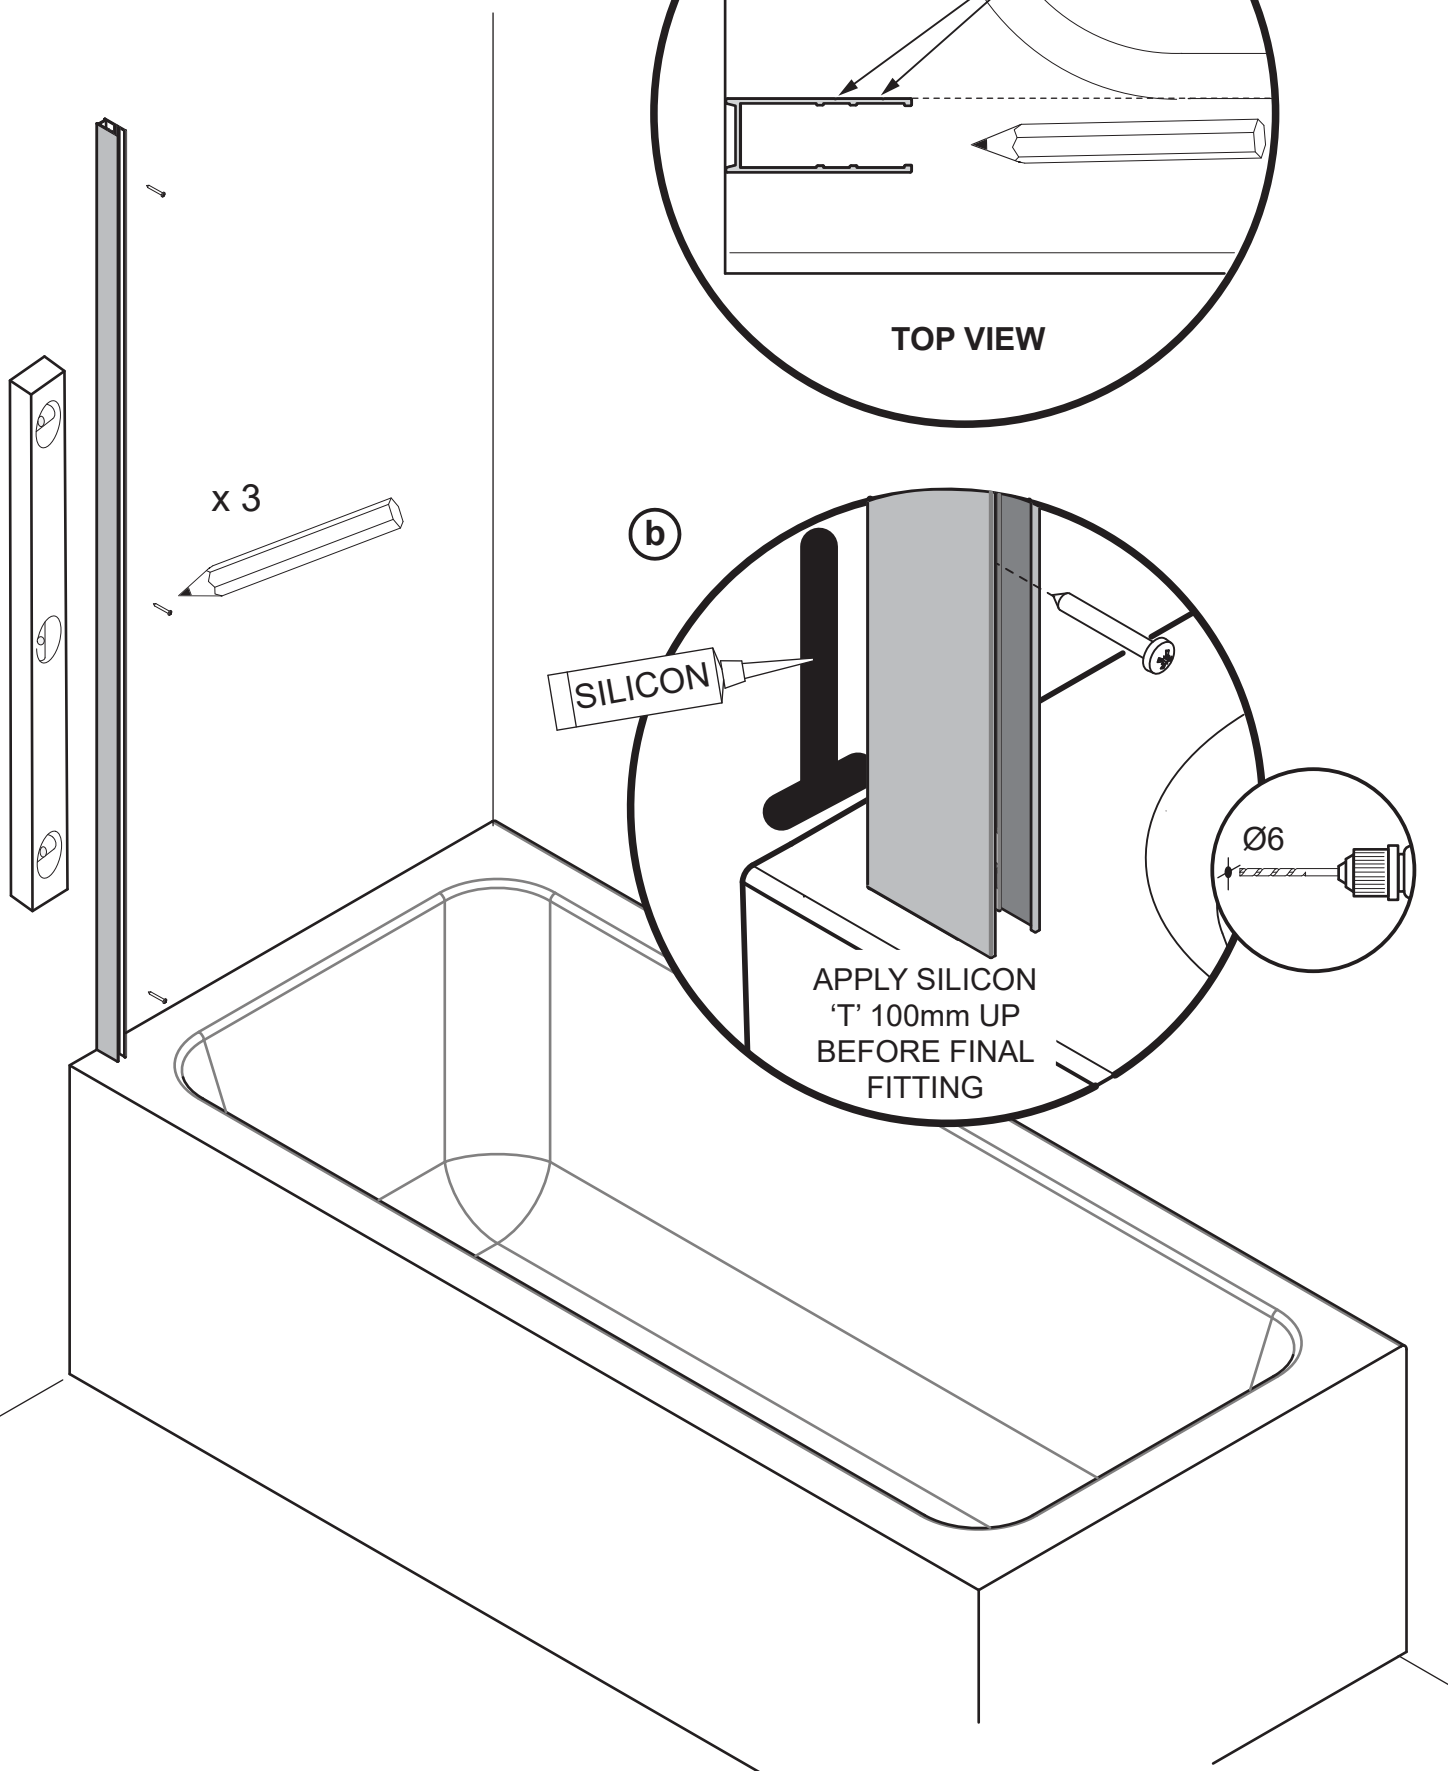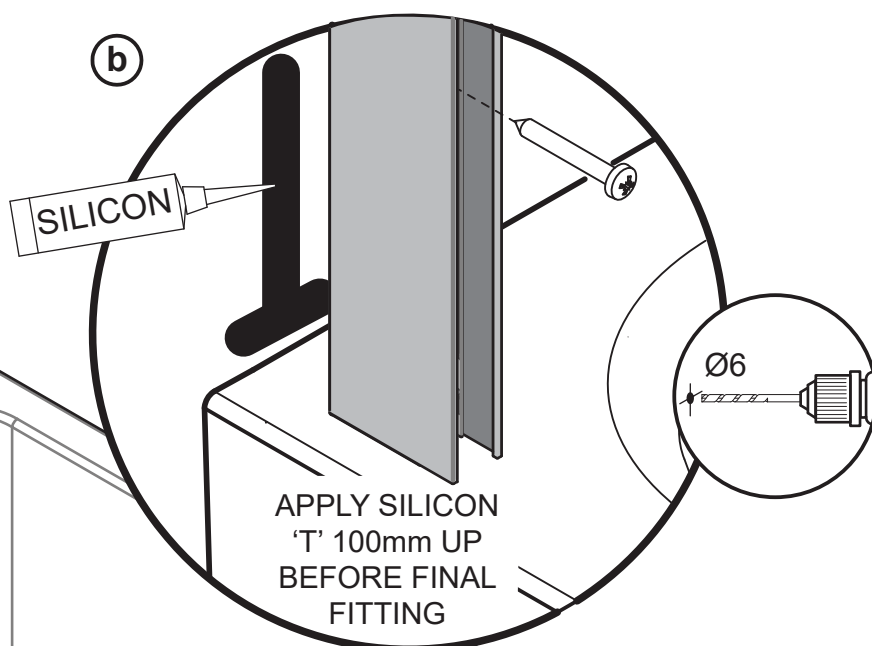

STAGE 2

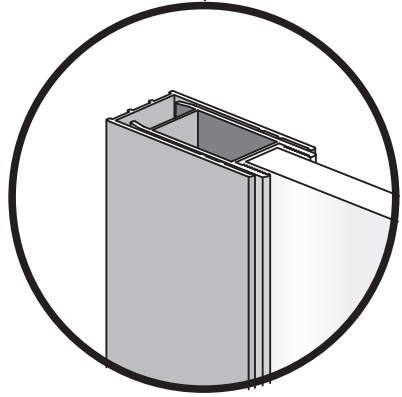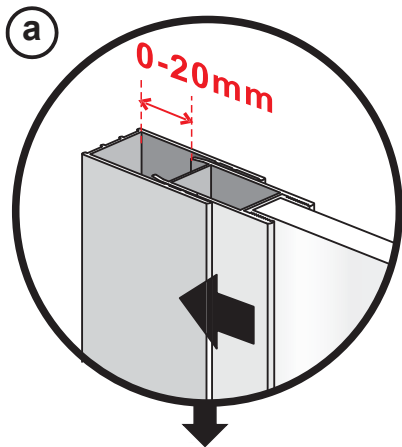









[11] x3





[12] x3




[13] x3 (ST4x10)

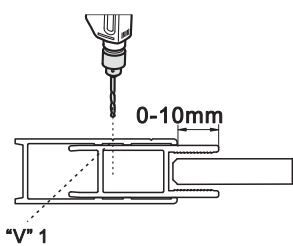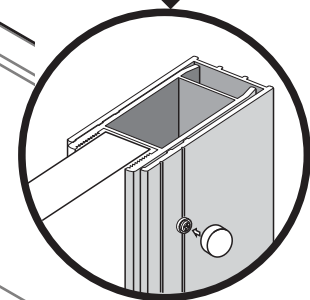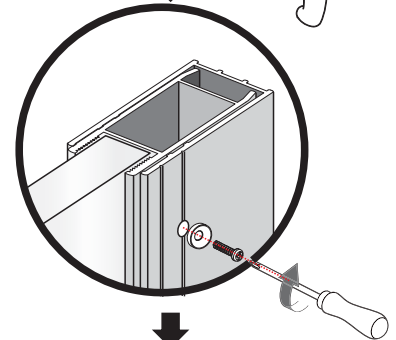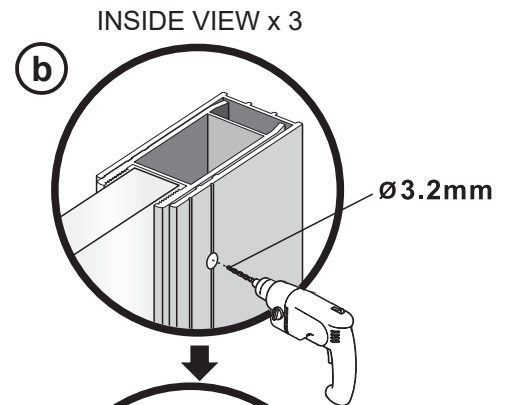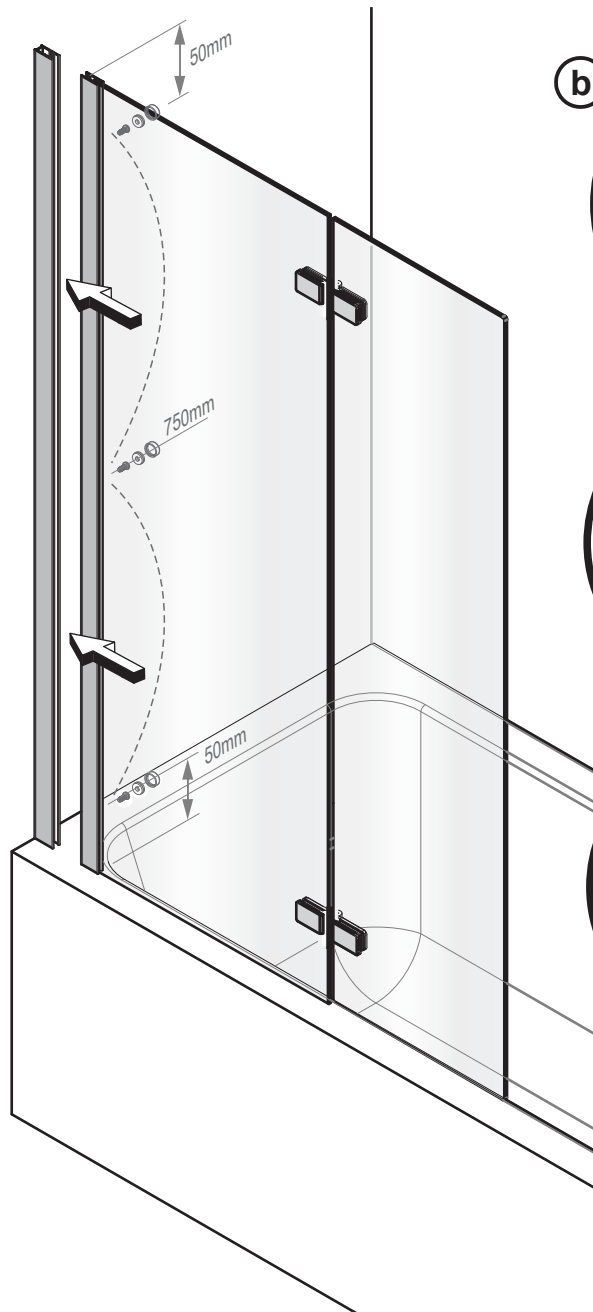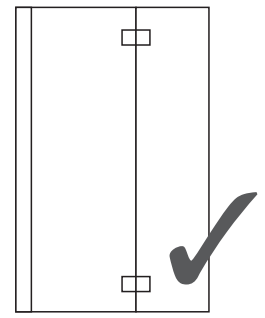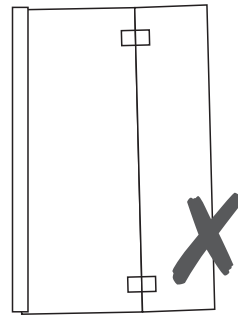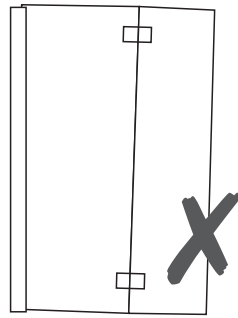


OR

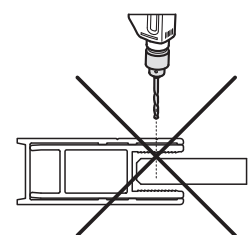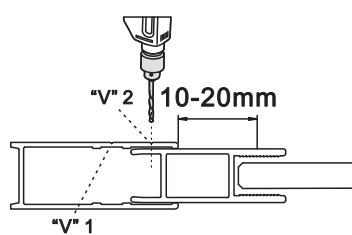




STAGE 3

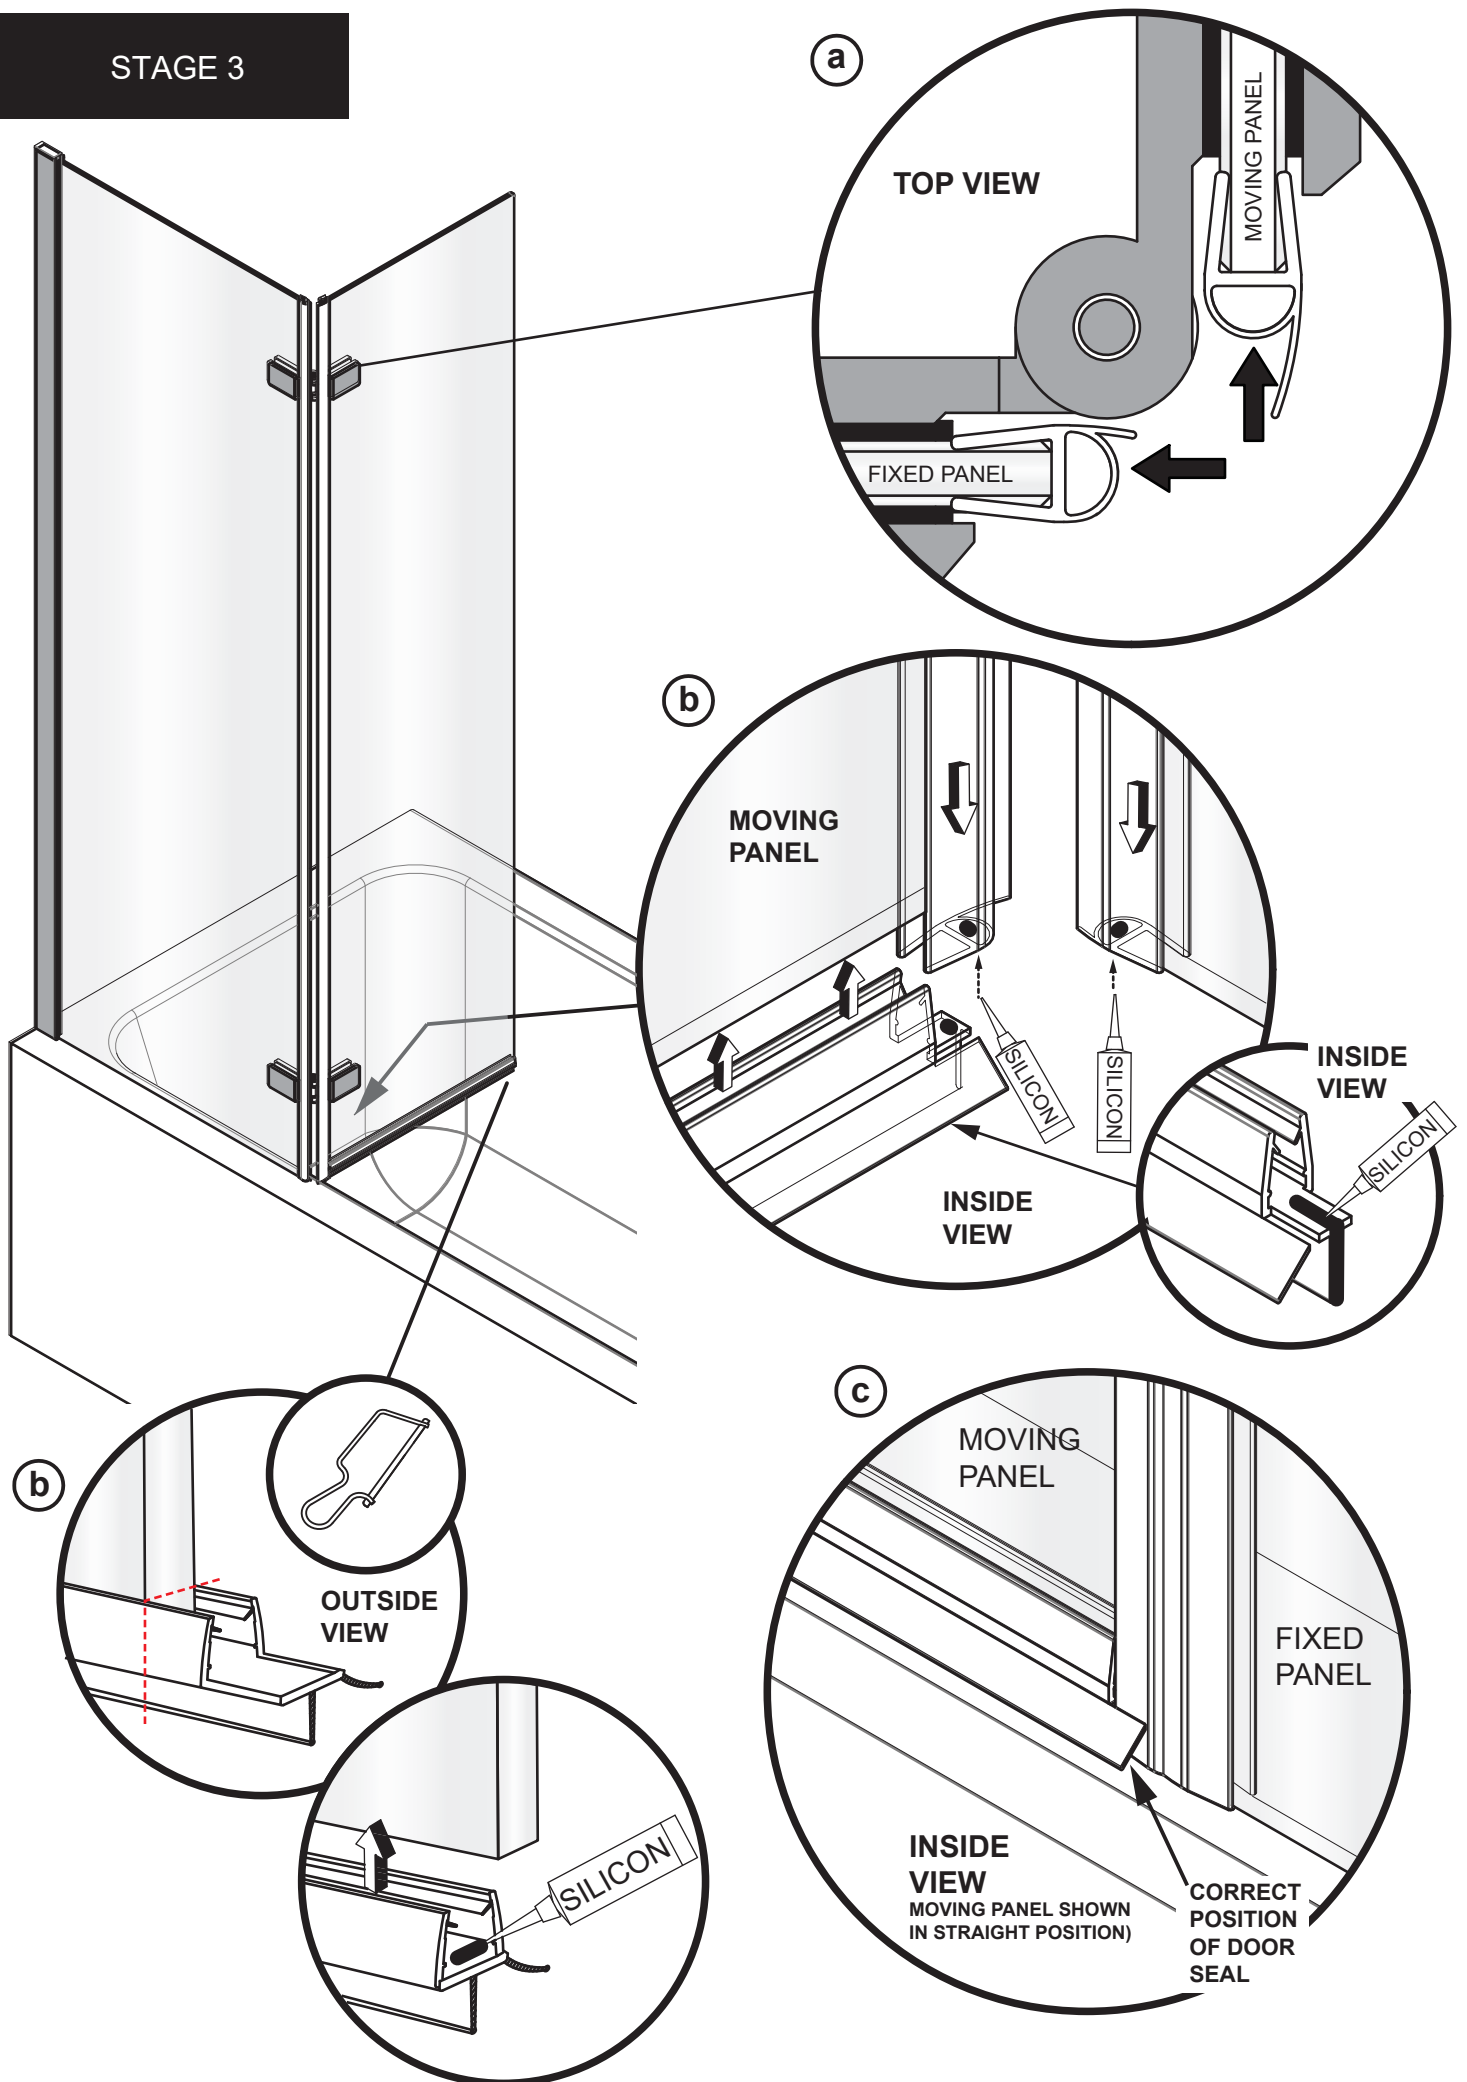


STAGE 4

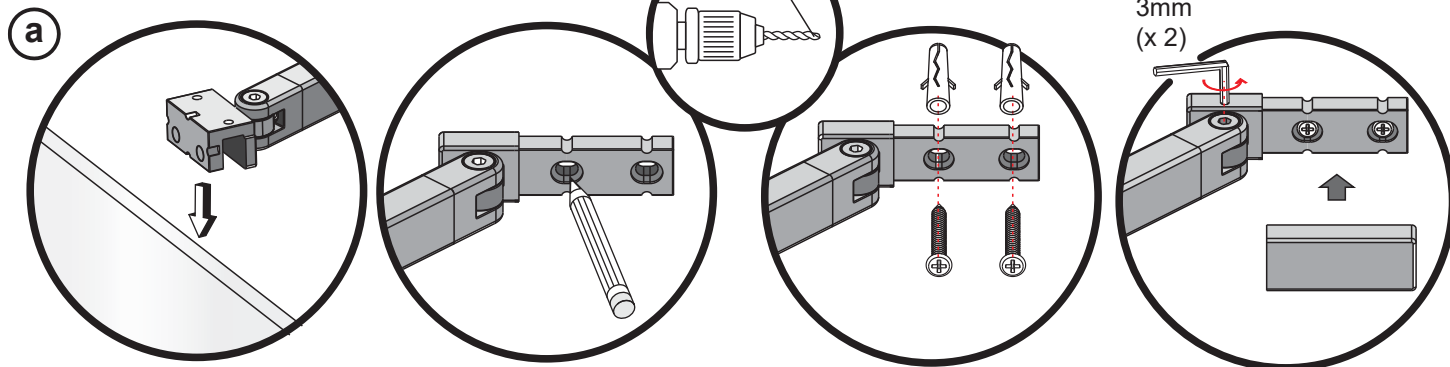

ENSURE BRACE IS POSITIONED TO CLEAR PANEL WHEN FOLDED!

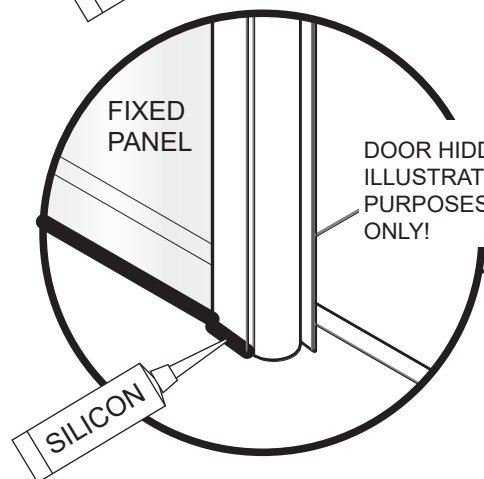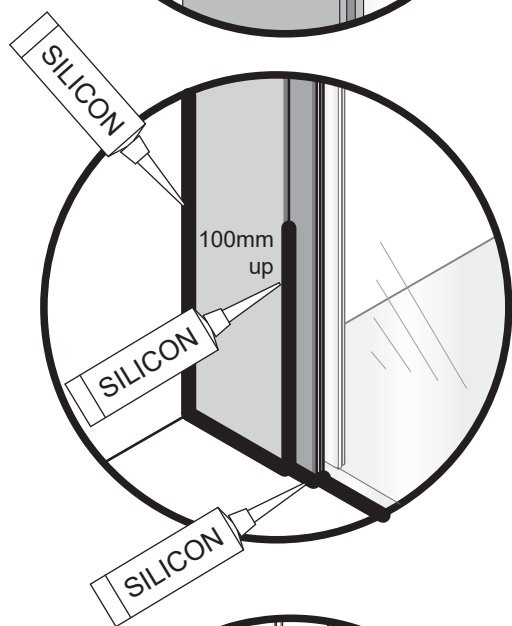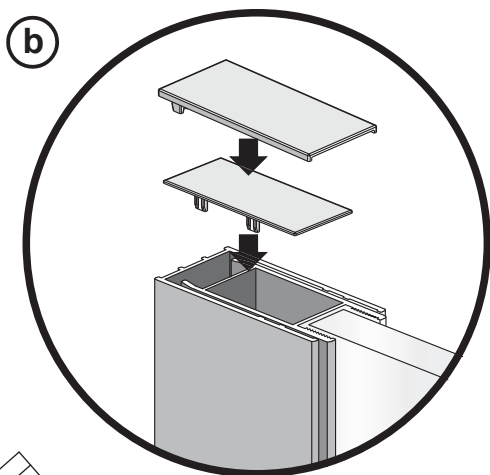

DOOR HIDDEN FOR ILLUSTRATIVE PURPOSES ONLY!

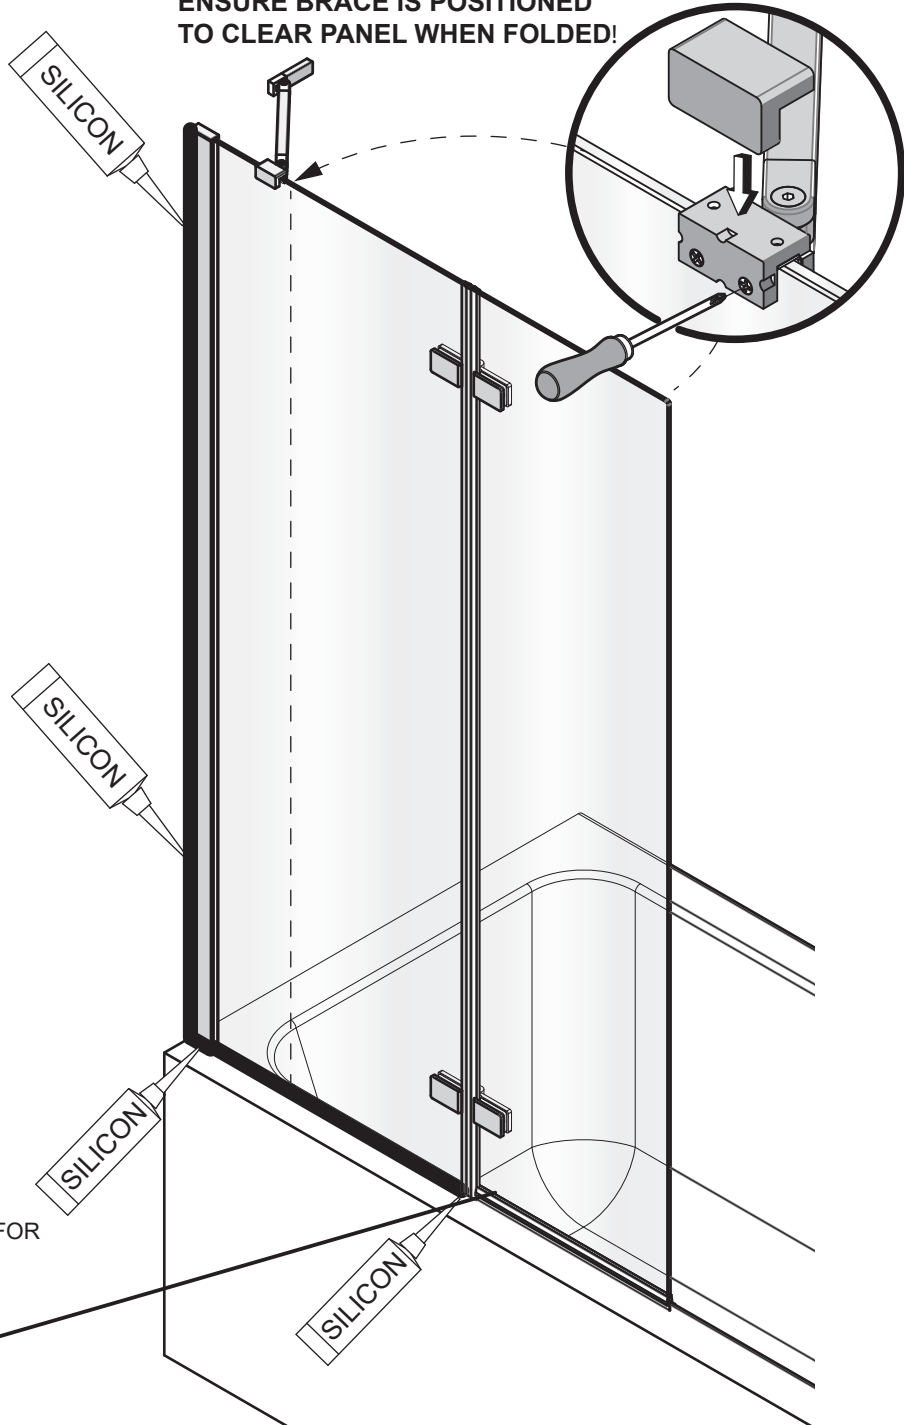

PARTS LIST

