

HANDLE WITH CARE



Installation Instructions for Matki Shower Floors

IMPORTANT

- 1. Check the Matki Shower Floor is undamaged and is in the size and finish ordered.
- 2. For fitting with Wet Room/Walk-In Panels – water may escape the edges of the Shower Floor. Consider whether the surrounding area should be designed and installed as a fully tanked and prepared wet room area with tiles angled to return escaped water into the Shower Floor and towards the waste.
- 3. For fitting with Shower Enclosures, please refer to installation instructions before fitting the Shower Floor to ensure dimensions are compatible.

FITTING

- The Shower Floor must be fully supported under all of its base. We recommend that it is bedded on a flexible cement-based tile adhesive.
- Ensure optimum fall on pipework and compliance with Building Regulations.
- It is important that the top of the Shower Floor is absolutely level along its outside edges (see illustration).
- Perform a drainage test before the Shower Floor is tiled in.
- Make sure there is a watertight seal between the Shower Floor and tiles before installing a shower screen (see illustration).

PROTECTION


- The Shower Floor is covered in a protective film, this must be removed from the edges before tiling and completely removed before fitting a shower screen.
- Protect the surface of the Shower Floor until the bathroom is finished.

CARE AND MAINTENANCE


- After use, rinse and dry off with a towel.
- Clean with warm, soapy water, then rinse and dry off with a towel.
- Do not use abrasive household cleaners, scouring pads or acidic-based descaler products.
- Remove any rubber shower mats from the Shower Floor after showering to avoid staining.

PLEASE CONTACT US IMMEDIATELY IF THERE ARE ANY ISSUES. ONCE THE SHOWER FLOOR IS INSTALLED, NO CLAIMS WILL BE ACCEPTED WHERE INSTALLATION INSTRUCTIONS ARE NOT FOLLOWED.



Typical Installation for Wetroom Floor

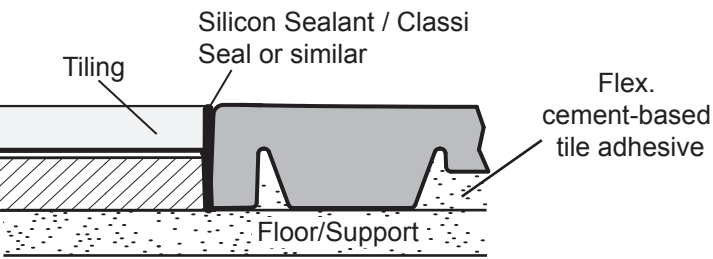

Typical Wall Installation

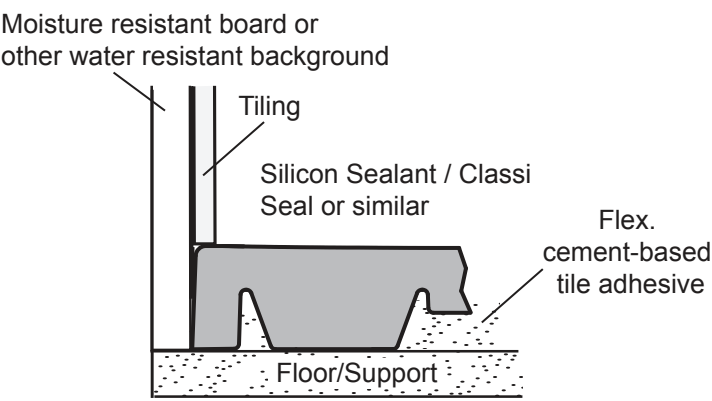

SHOWER FLOOR
MUST BE LEVEL
IN ALL PLANES

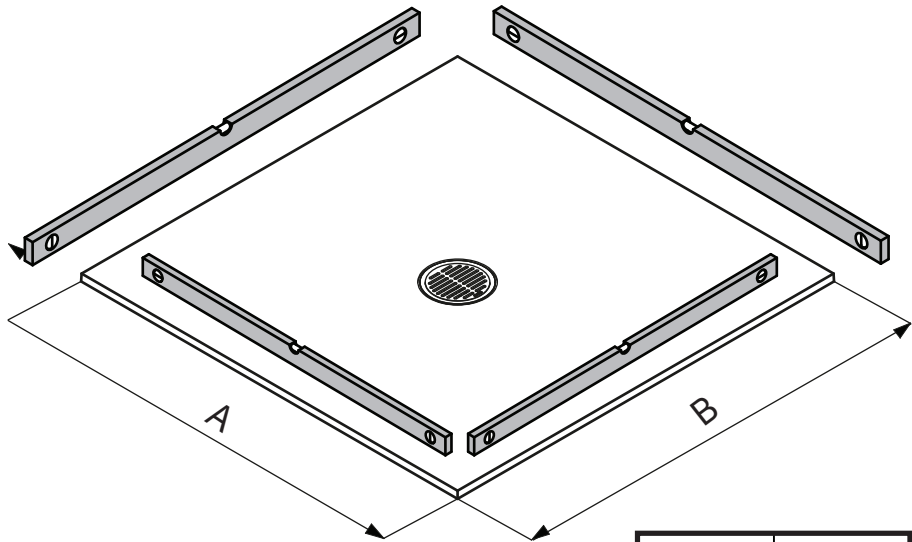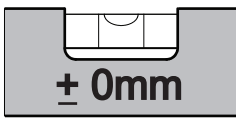

Models:

- Slate Shower Floors (SLF)
- Continental Shower Floors (FL)
- Continental Linear Shower Floors (FLL)
- Preference Shower Floors (MF)

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

