



EAUZONE

EFDSP - FRAMED DOMED WETROOM SIDE PANEL

EWDPSP - DOMED WETROOM SIDE PANEL

INSTALLATION

PARTS LIST


PLEASE PASS THE
GUARANTEE CARD ON TO
THE CUSTOMER




TWO PEOPLE
RECOMMENDED

Before Installation, please check
all parts against the parts list on
the back page of this booklet.

- Make sure that the parts are
undamaged and that their finish
is as expected.
- Should you find a faulty or
damaged part, please be in
touch with our Customer
Services Team immediately
using the contact details below.
- Any claim for faulty or damaged
parts will require the affected
part to be returned to Matki for
inspection and testing.
- No claim for damaged parts or
issues with a product finish will
be accepted after the product
has been installed.
- Where silicone is required, only
use **neutral cure silicone**.

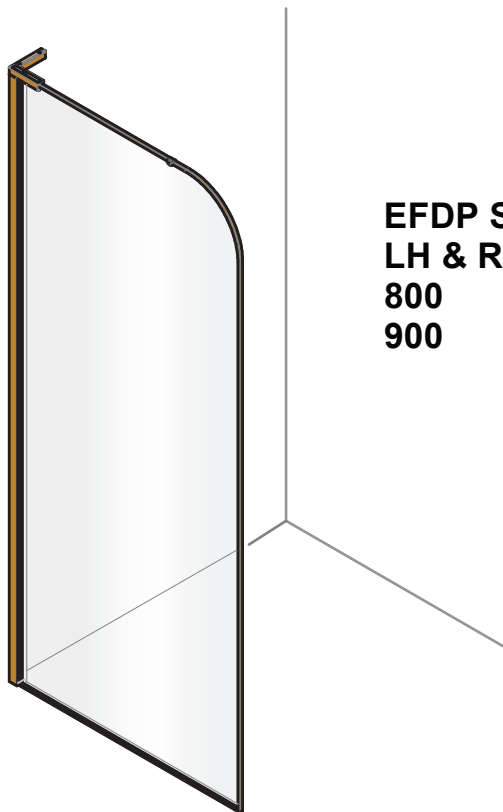

EFDSP (FRAMED)
LH & RH
800
900

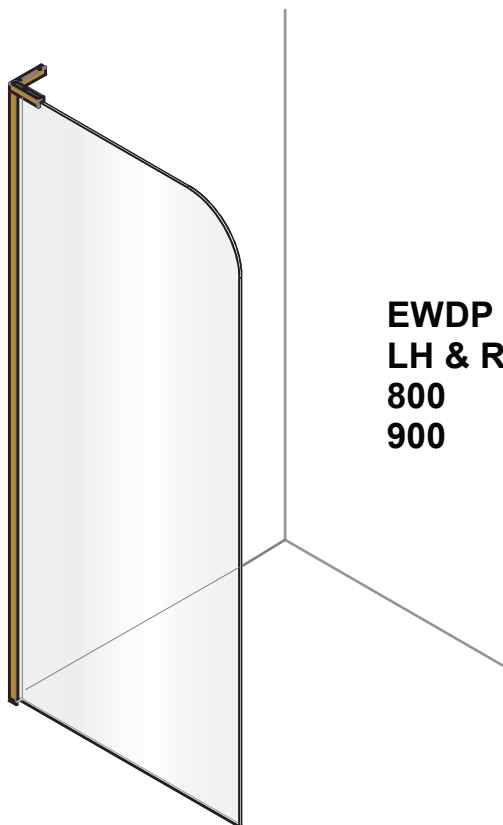

EWDPSP
LH & RH
800
900



matki

13

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

EN 14428:2008+A1

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT


1. Please read complete installation instructions before fitting for enclosure and tray (if fitting).
2. We recommend that two people are available for fitting of Wetroom Panel, Stage 2. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of safety glasses and non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the wall frames and panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the tray and wall coverings are in place. Trays with tiling lips should be let into the wall with the tiling lip flush with the wall to allow the tiling to overlap the tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the wall mount is to be fitted. This will ensure the wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.



DIMENSIONS

Dimensions are approximate

Image shows LH

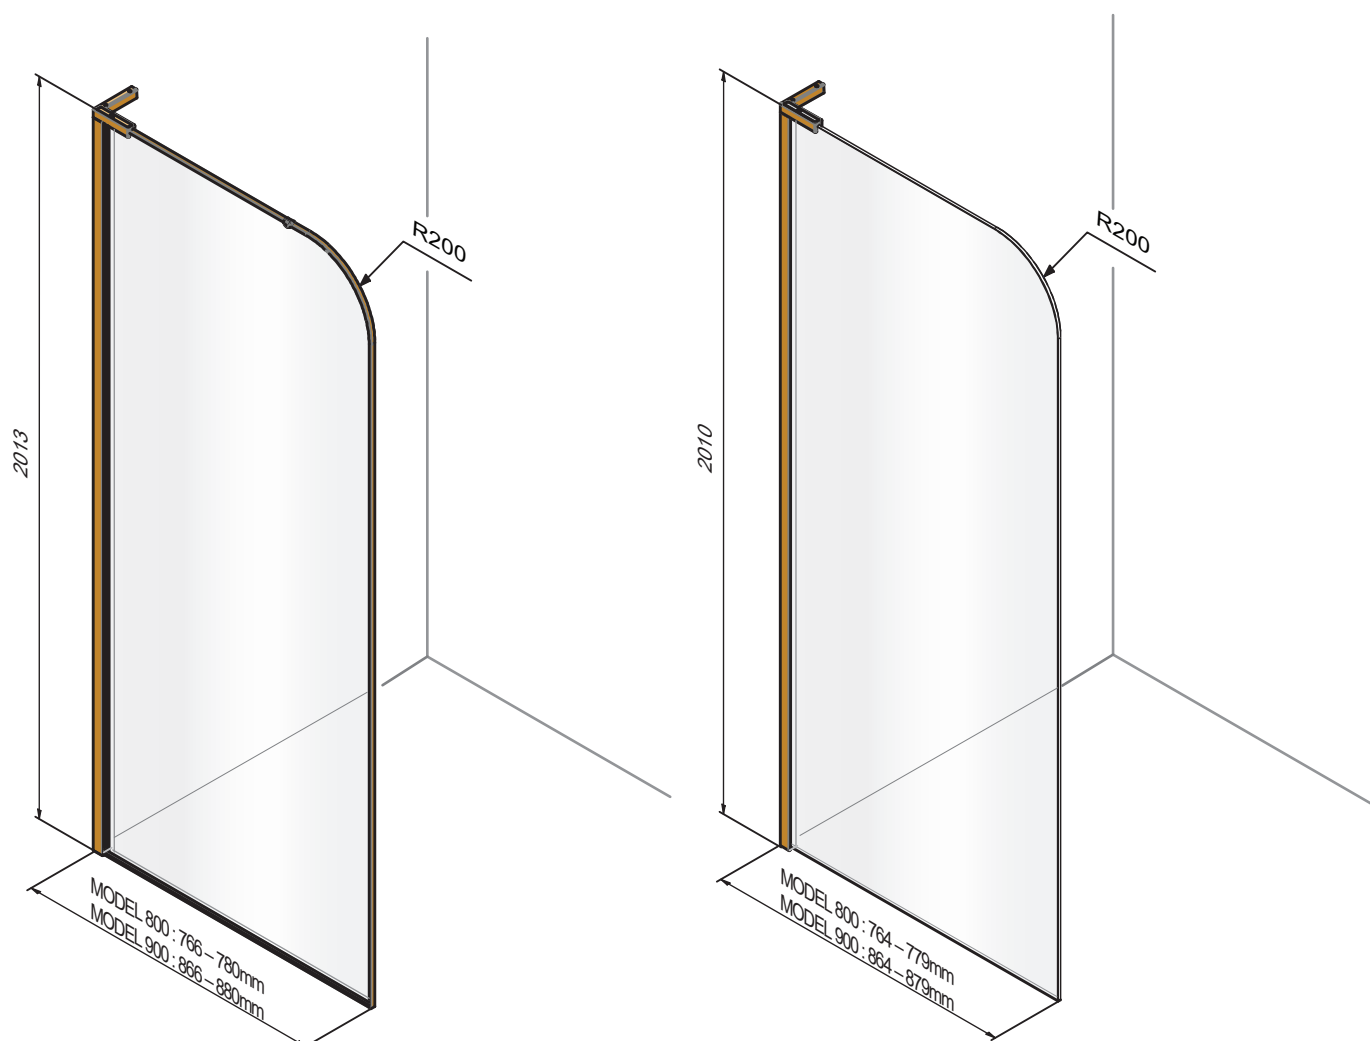


STAGE 1 - FITTING WALL MOUNT

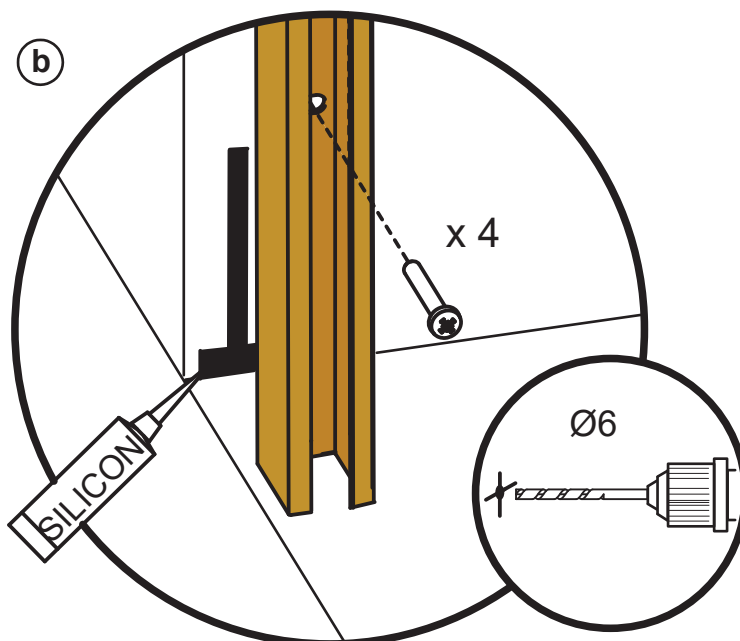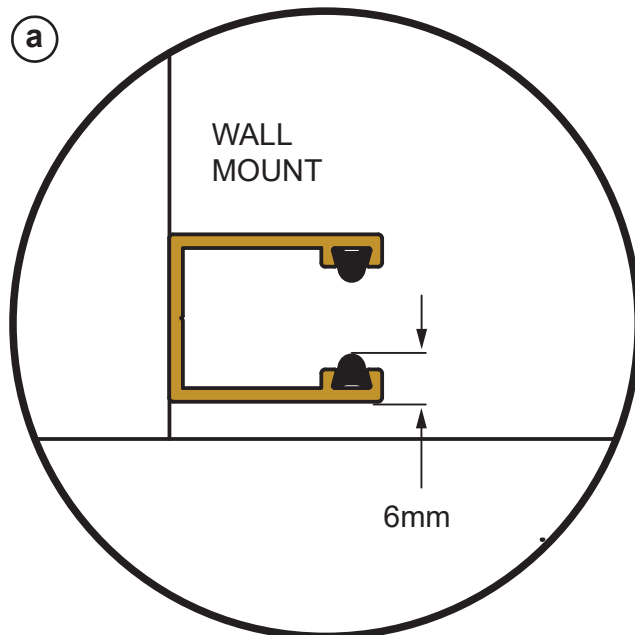


APPLY SILICON 'T'
100mm UP BEFORE FINAL
FITTING

No 8 x 32 (x 4)

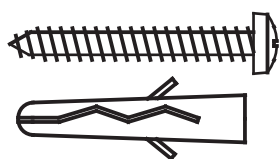

MARK HOLES x 4

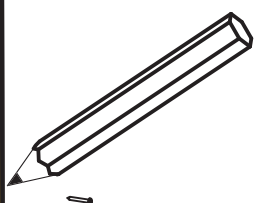


DRILL HOLES &
FIT PLUGS x 4
(CLEAN AREA
AFTER)


ENSURE WALL MOUNT IS PLUMB




STAGE 2 - FITTING GLASS

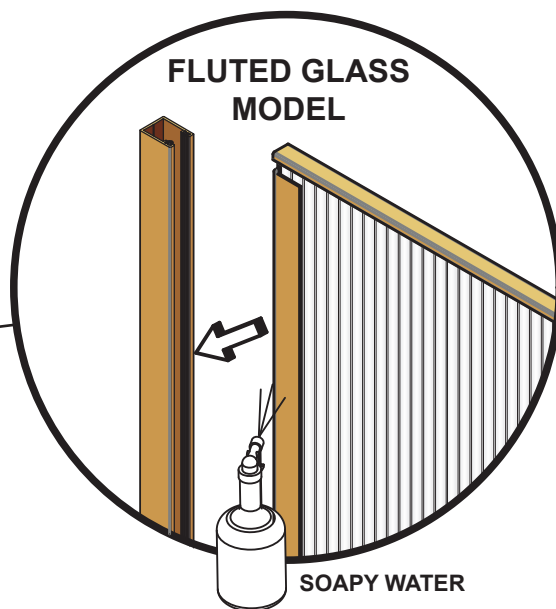



a

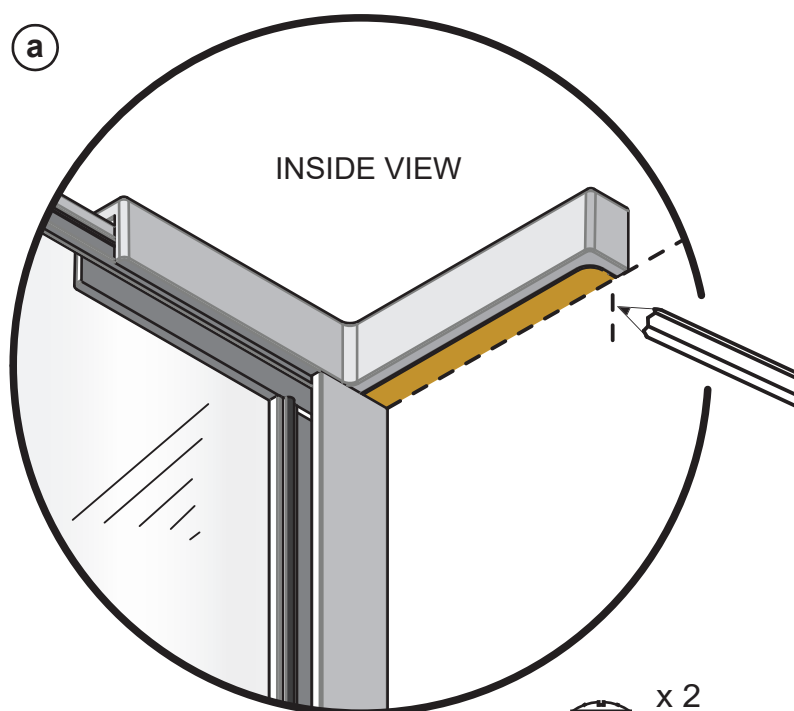


b

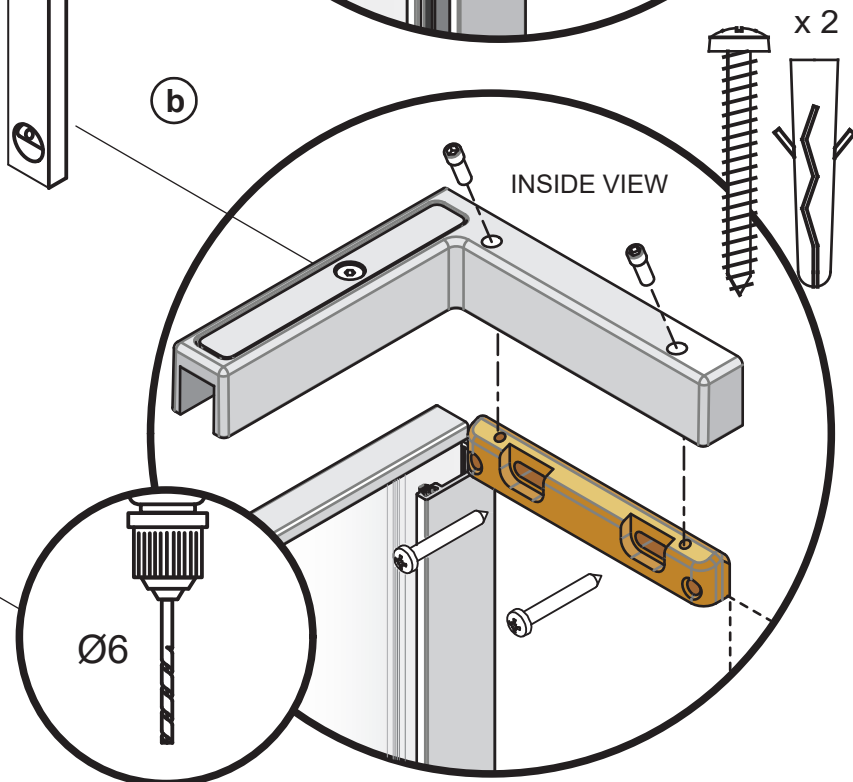



STAGE 5: SEALING

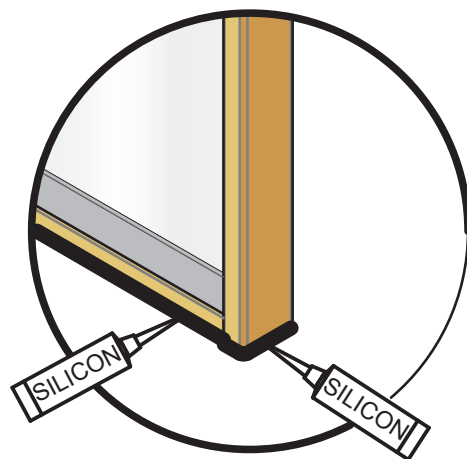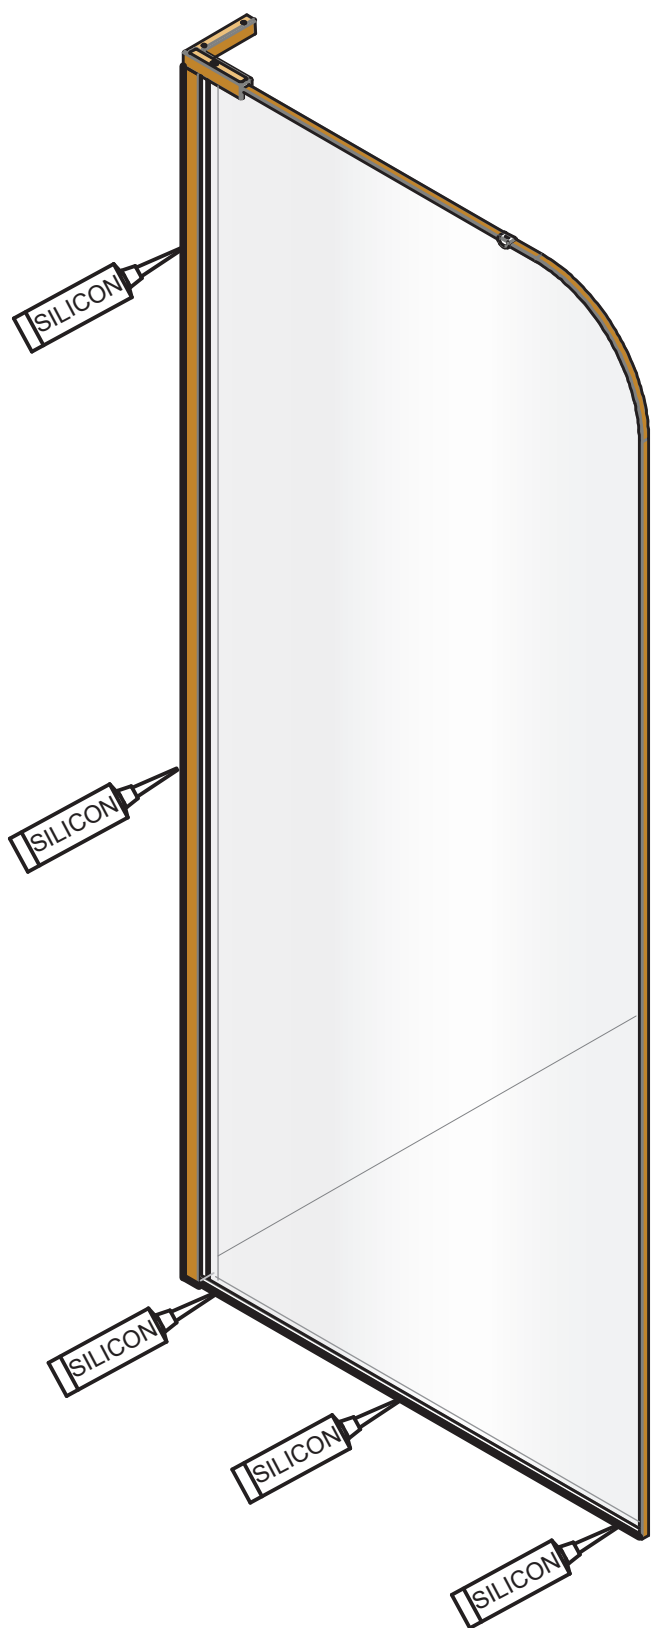

**UNFRAMED
MODEL**

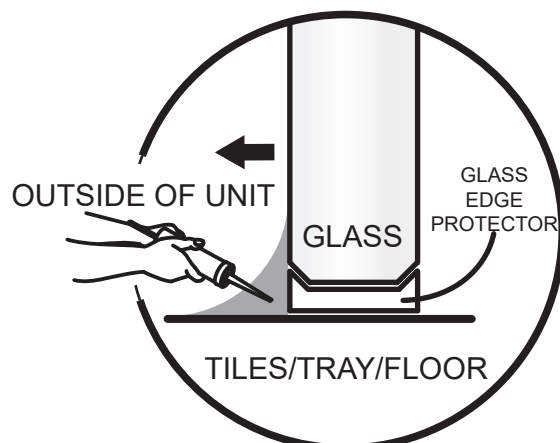

**FRAMED
MODEL**

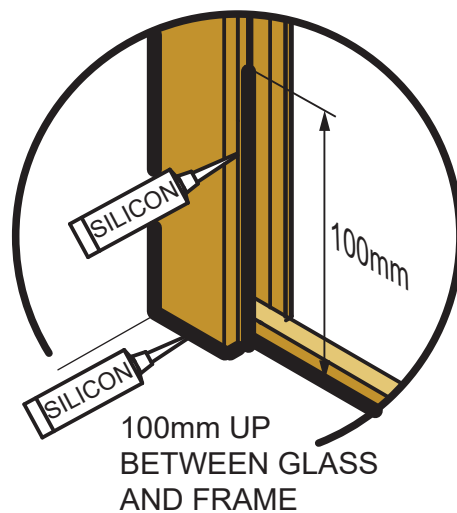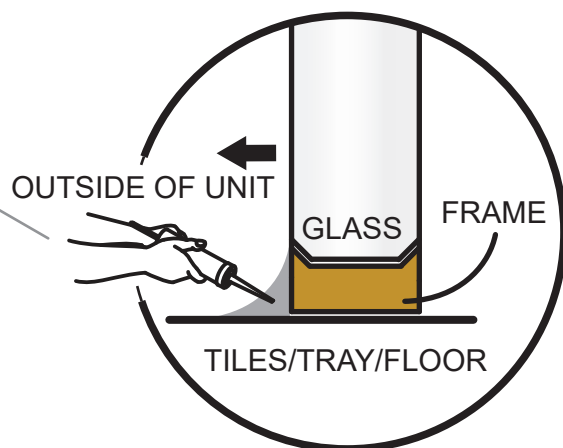

**100mm UP
BETWEEN GLASS
AND FRAME**

NOTES

NOTES

PARTS LIST

FRAMED MODELS

LH TOP BRACKET 11200 / RH TOP BRACKET 11199

UNFRAMED MODELS


LH TOP BRACKET 9813 / RH TOP BRACKET 9814

FRAMED MODELS

TOP ACCENT FRAME

11299 BRASS (MODEL 800)

11327 BRASS (MODEL 900)

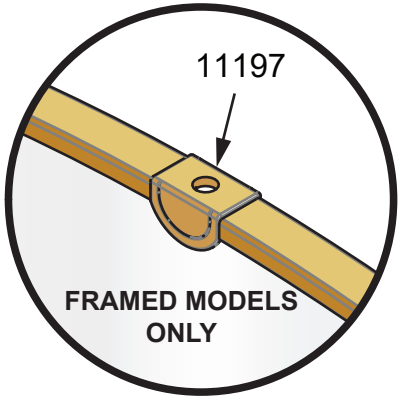


FRAMED MODELS ONLY

FRAMED MODELS

FRONT EDGE ACCENT FRAME

11289 BRASS

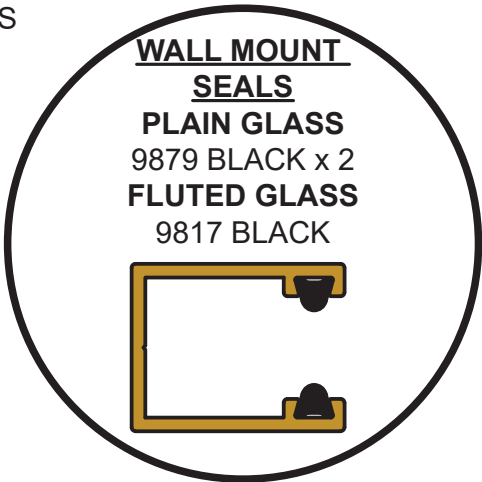


WALL MOUNT SEALS

PLAIN GLASS


9879 BLACK x 2

FLUTED GLASS

9817 BLACK

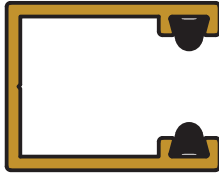

FLUTED GLASS MODEL

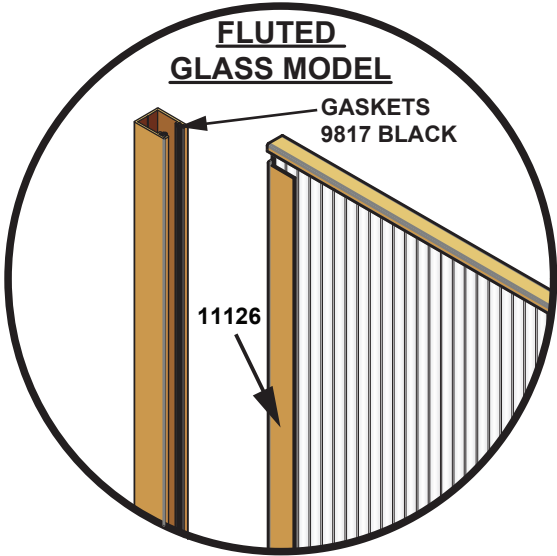

GASKETS 9817 BLACK

11126

FRAMED MODELS ONLY

BOTTOM HORIZONTAL

FRAME

9738 BRASS (MODEL 800)

9739 BRASS (MODEL 900)

UNFRAMED MODELS

EDGE PROTECTOR STRIP

6091 CLEAR

9864 AF		QTY
No.8 x 32 PAN HEAD SELF TAP SCREW	1471 A SILVER	6
WALL PLUG	1818 AF	6

We recommend that these instructions are handed to the user with a note of a date of purchase and model details.
To order replacements quote:Part Descriptions, Model, Part Number and Colour.