

matki

EAUZONE

EPIT - THREE SIDED HINGED DOOR WITH HINGE PANEL AND INLINE PANEL

BRITISH PATENT NO:2470778



INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL




BS EN 14428:2015+A1:2018

10851 AF 03/25

Matki recommend that this product is fitted by professional installers

BESPOKE DIMENSIONS

SEE CUSTOMER APPROVAL DRAWING FOR DIMENSIONS

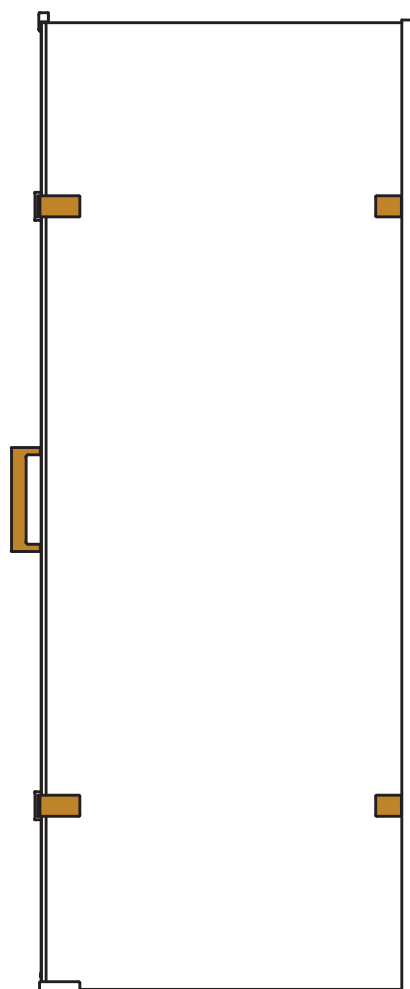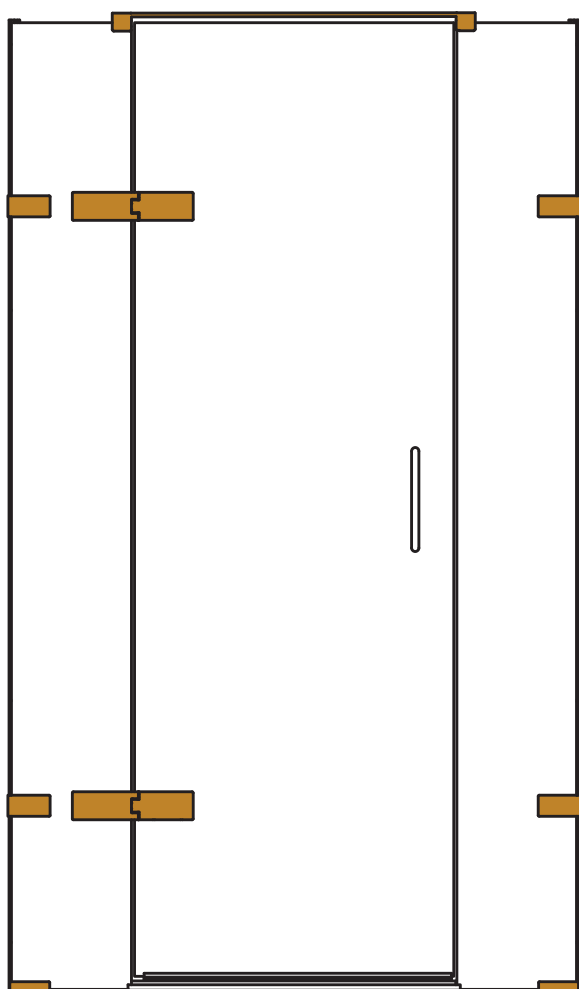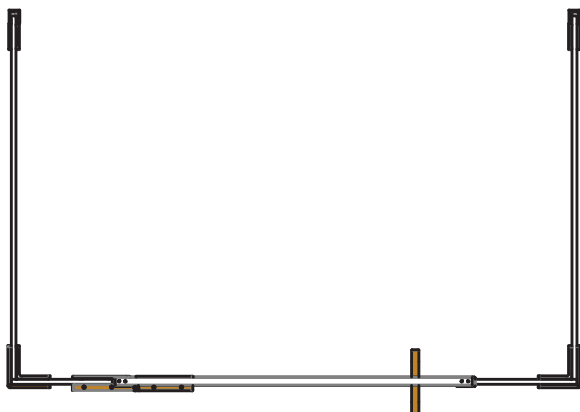

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS


- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door and Side panel, Stage 7 - 8. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed to a solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

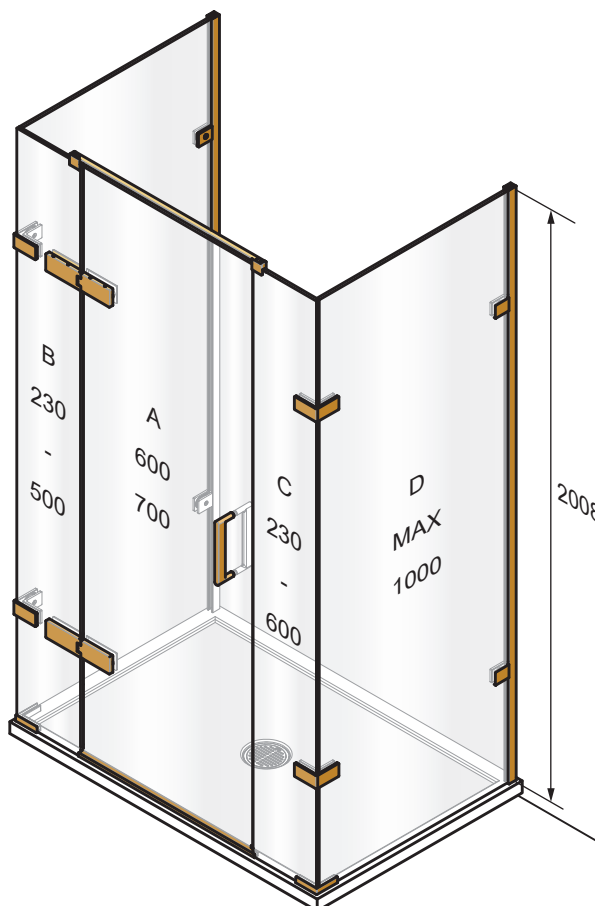

*2023mm TO TOP OF BRACE BAR





Dimensions are approximate

SETTING OUT

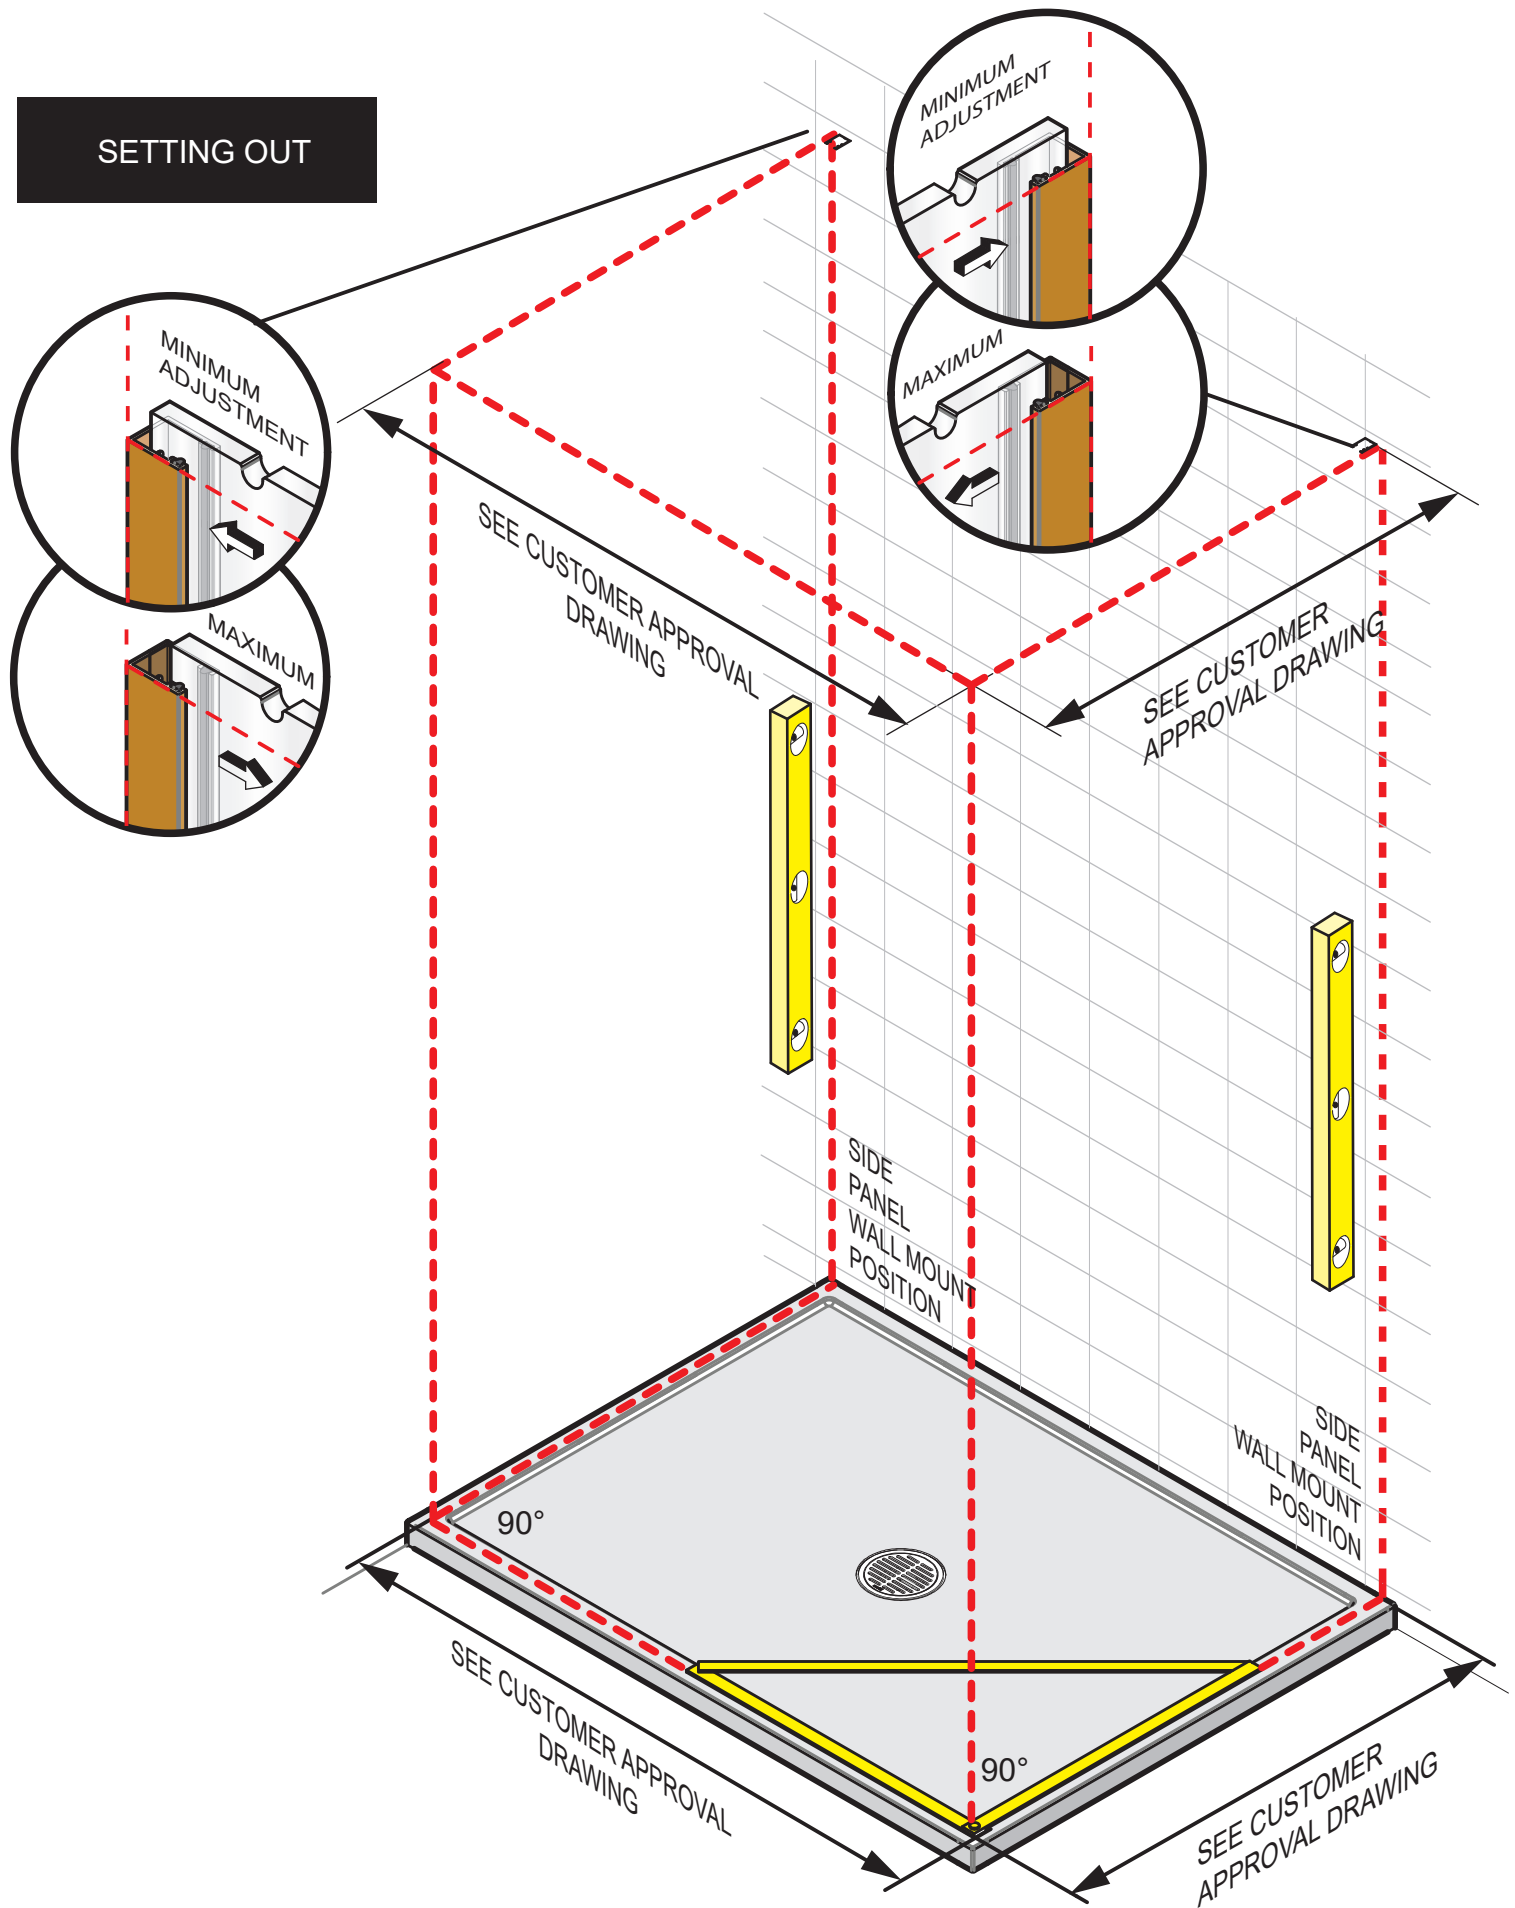


Attention! Both lower and upper dimensions must be equal to each other. The width dimensions are measured to outside of Wall mounts. The depth dimension is measured from back of wall mount to front of Lower corner bracket. **The tray must be level.**

STAGE 1

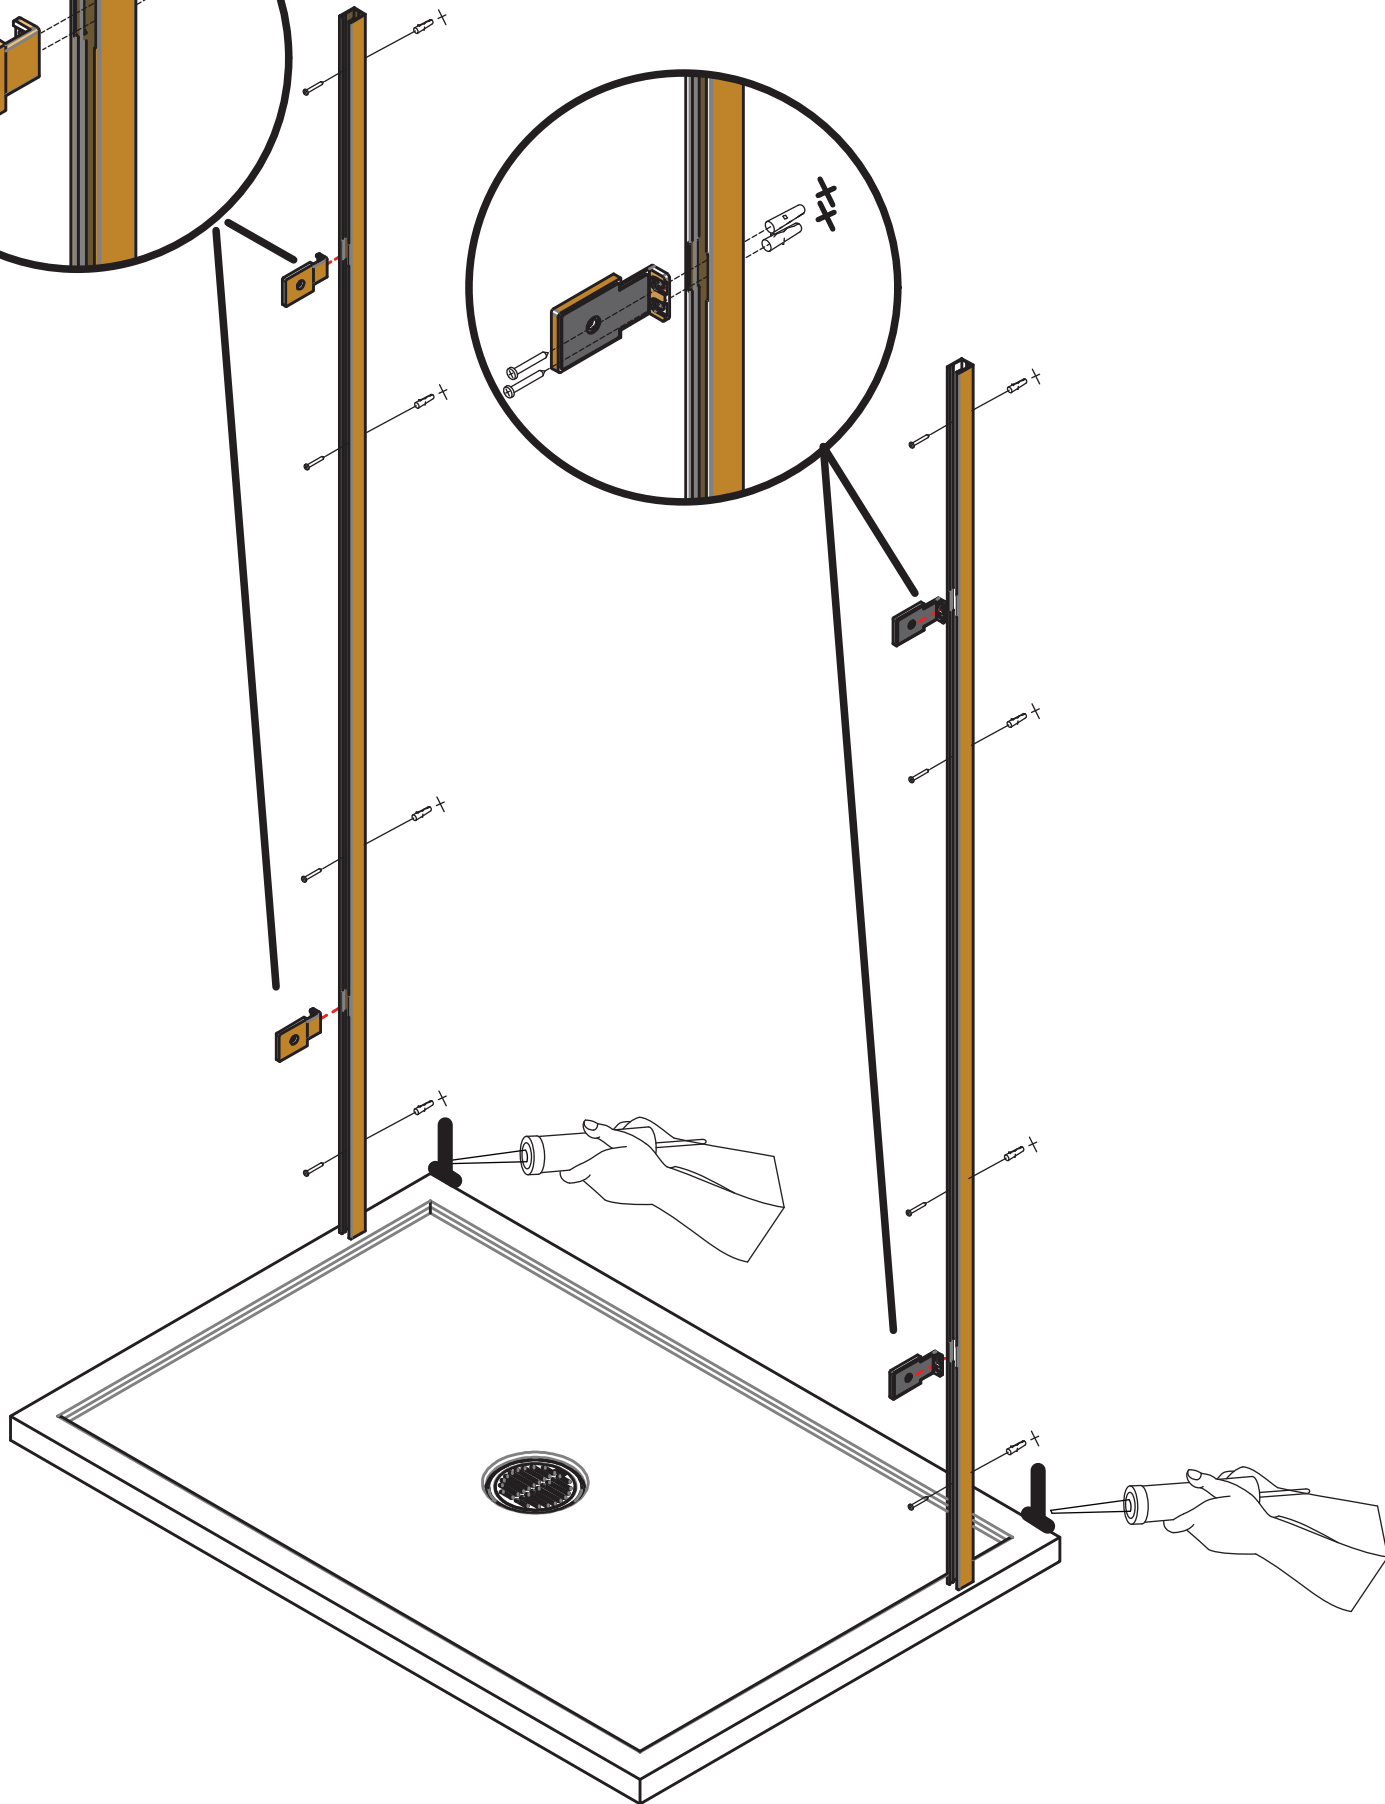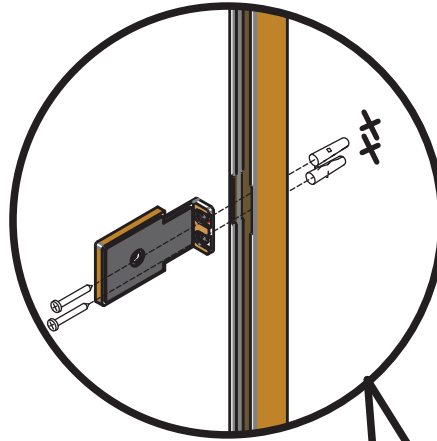
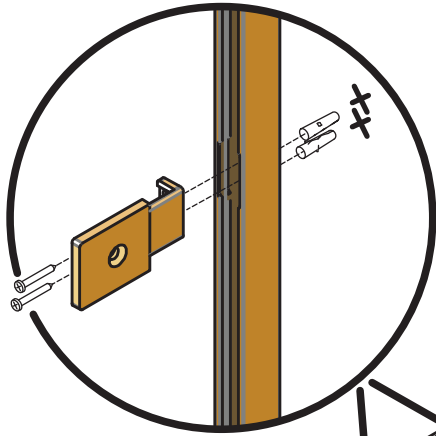
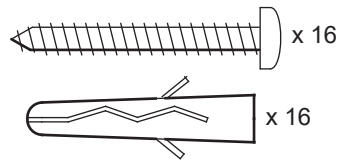


STAGE 2

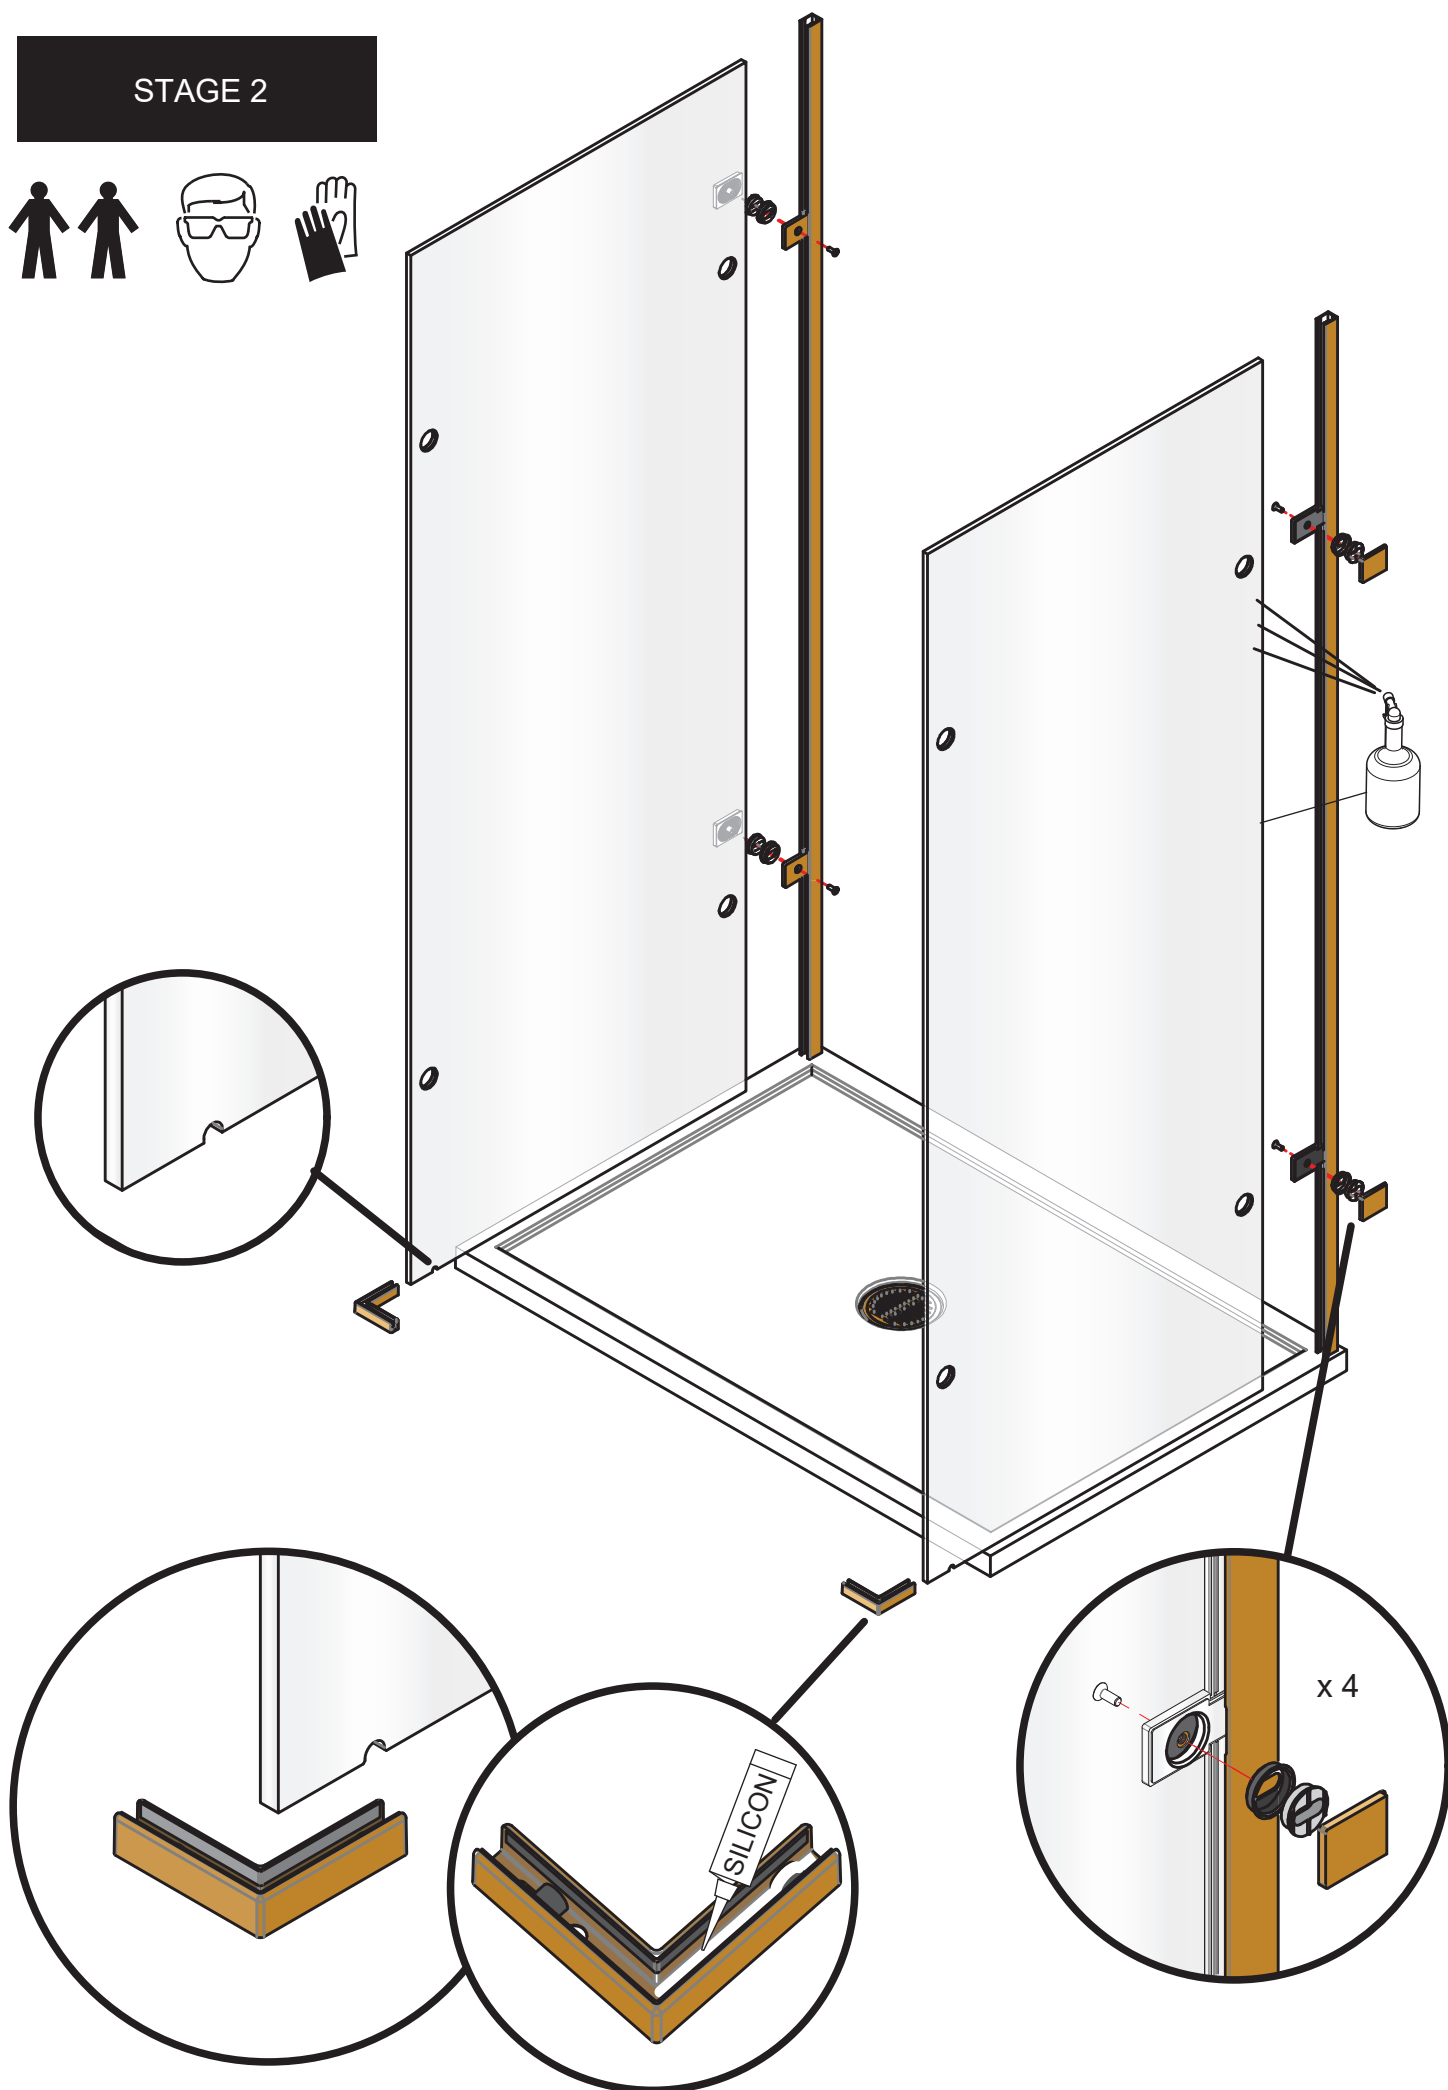


STAGE 3




PREPARING THE
CLOSURE PANEL

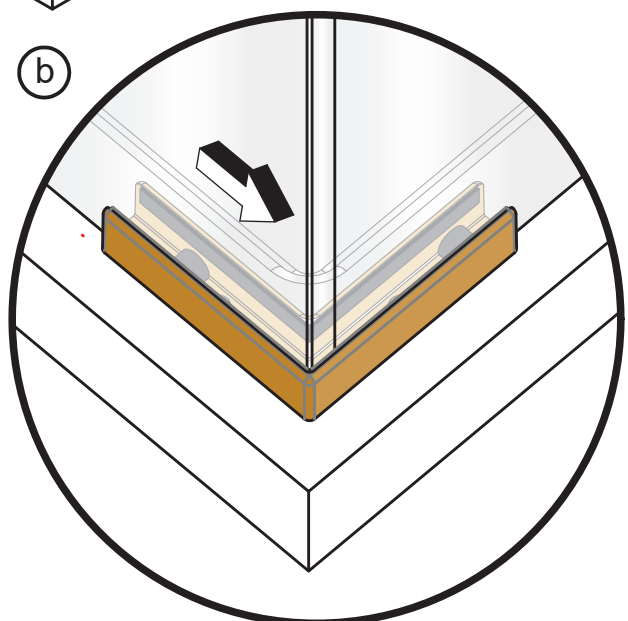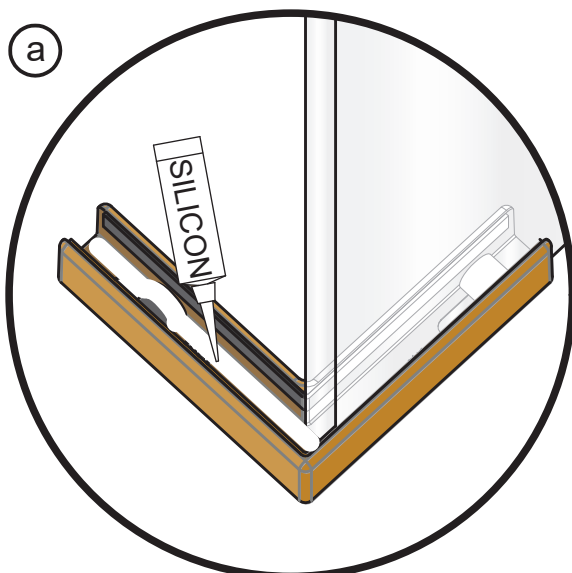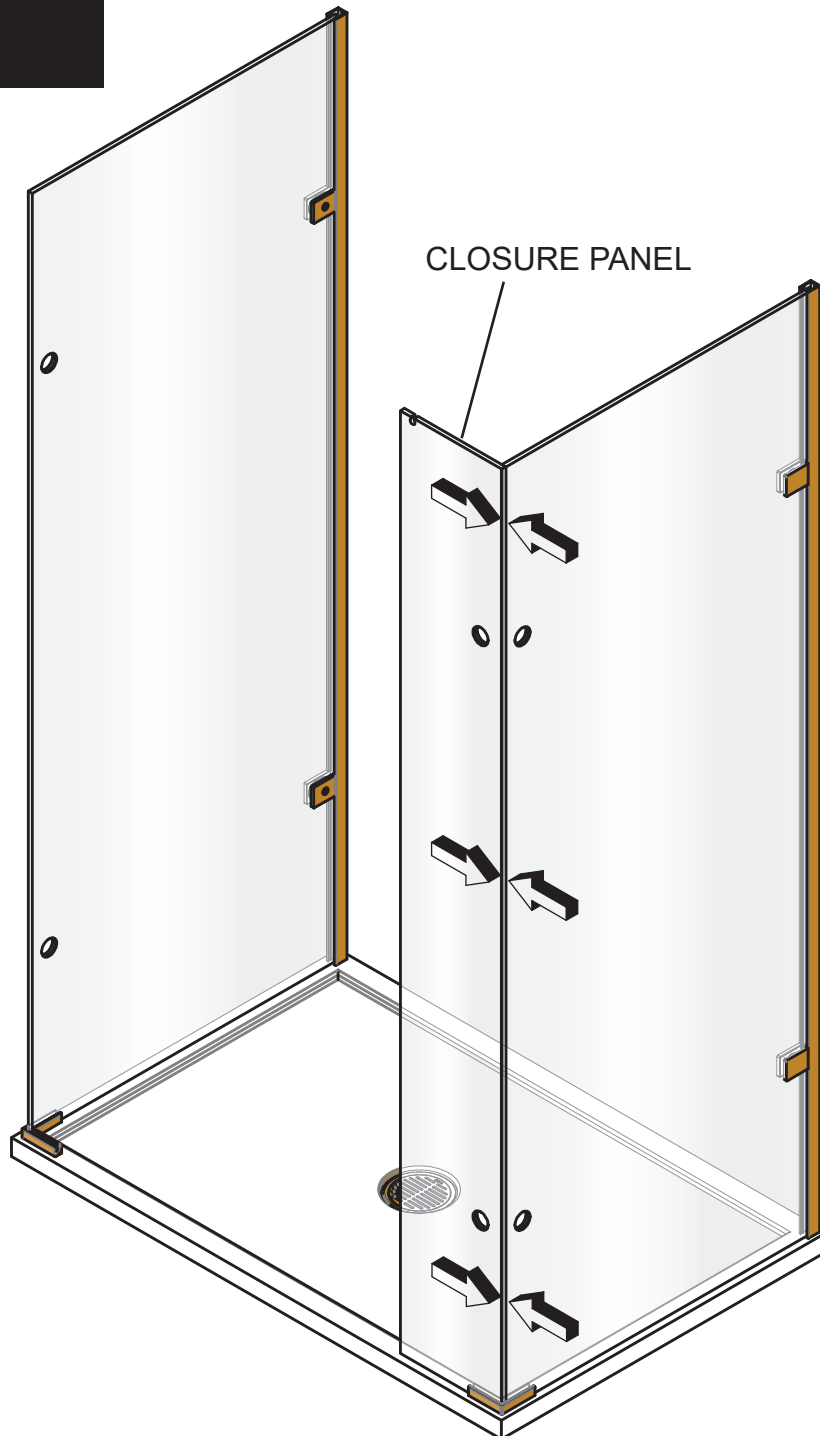

STAGE 4




FITTING THE CLOSURE PANEL

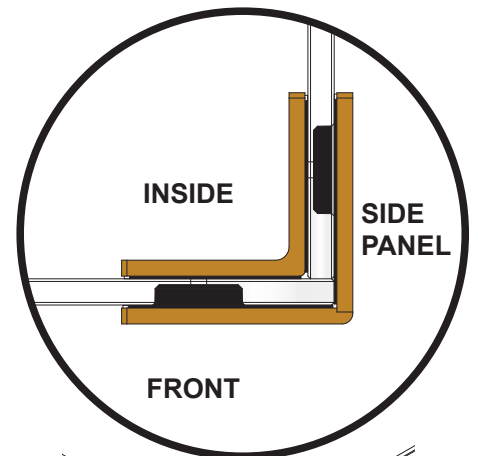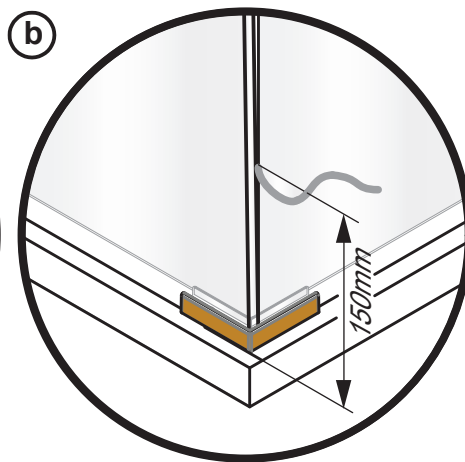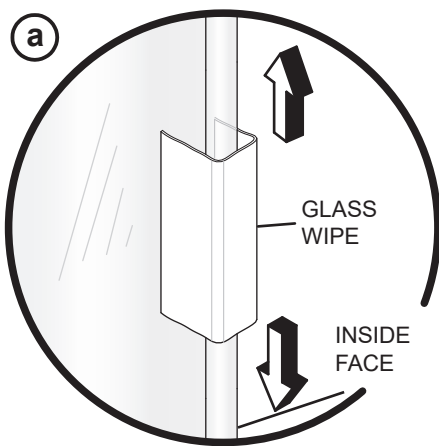




1. Attach front plate

2. Attach side panel plate

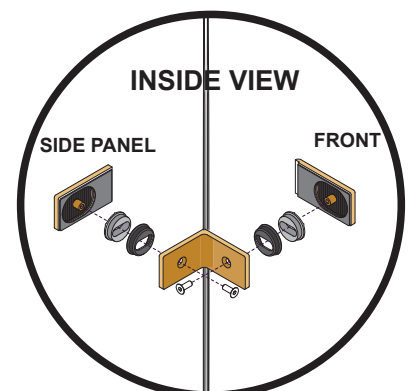


STAGE 5





PREPARING THE HINGE PANEL

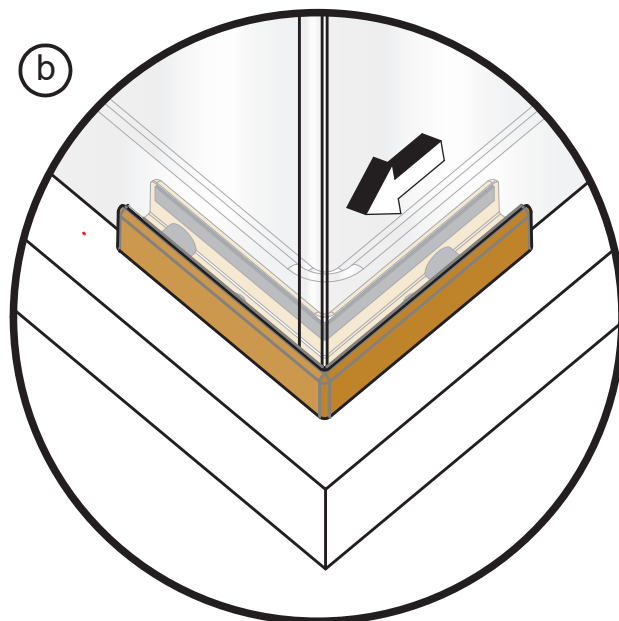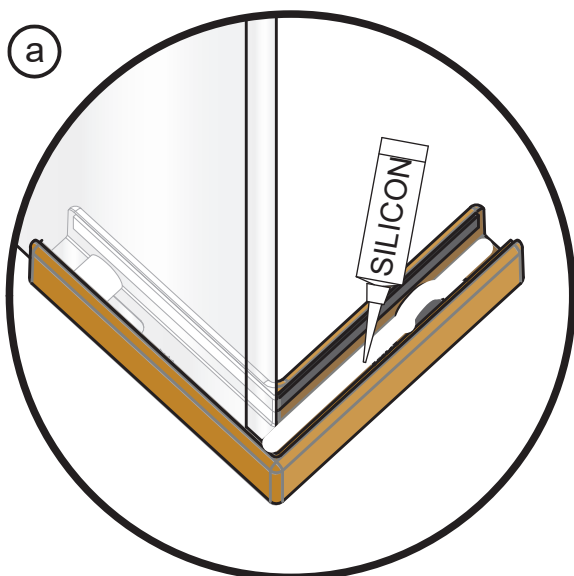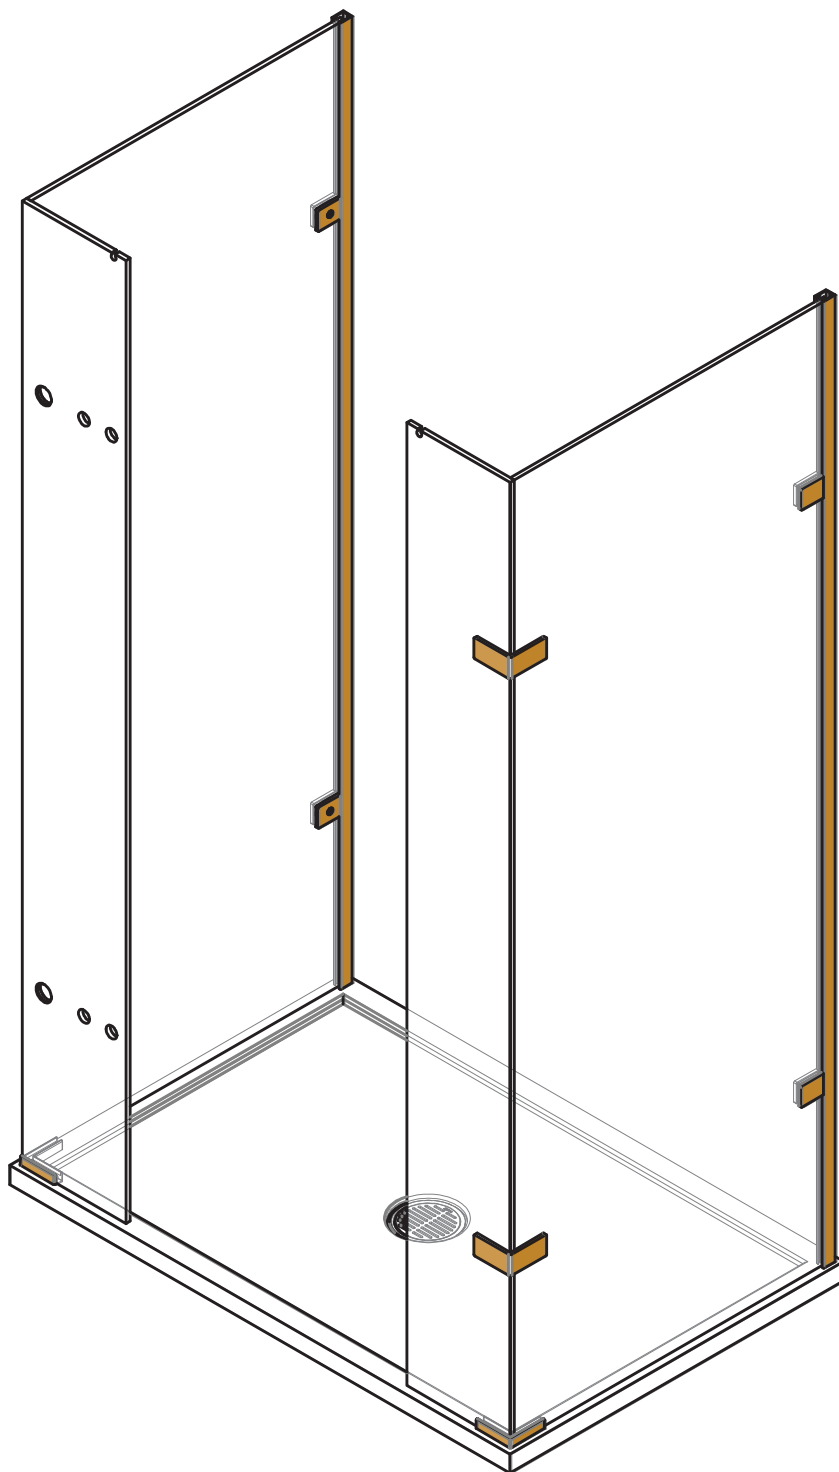

STAGE 6






FITTING THE HINGE PANEL

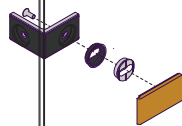
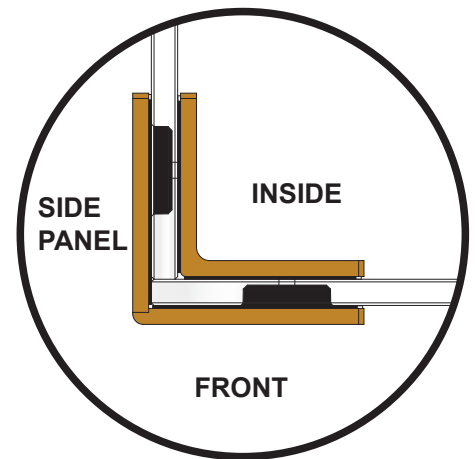
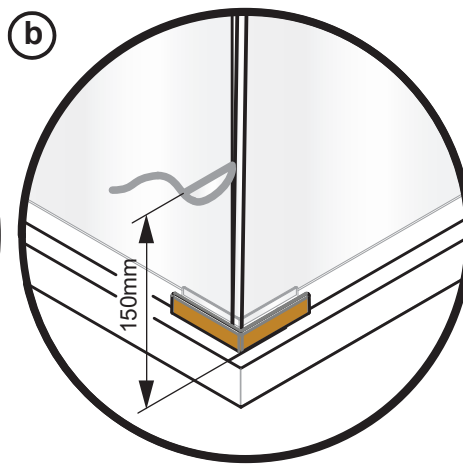
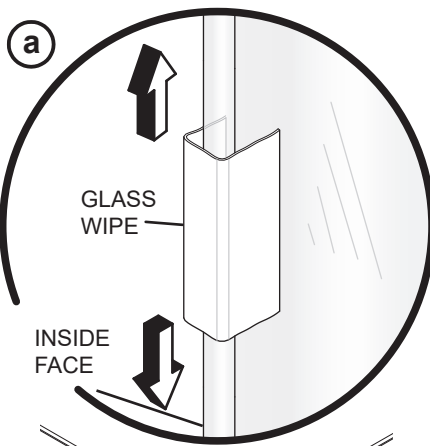


1. Attach front plate


2. Attach side panel plate

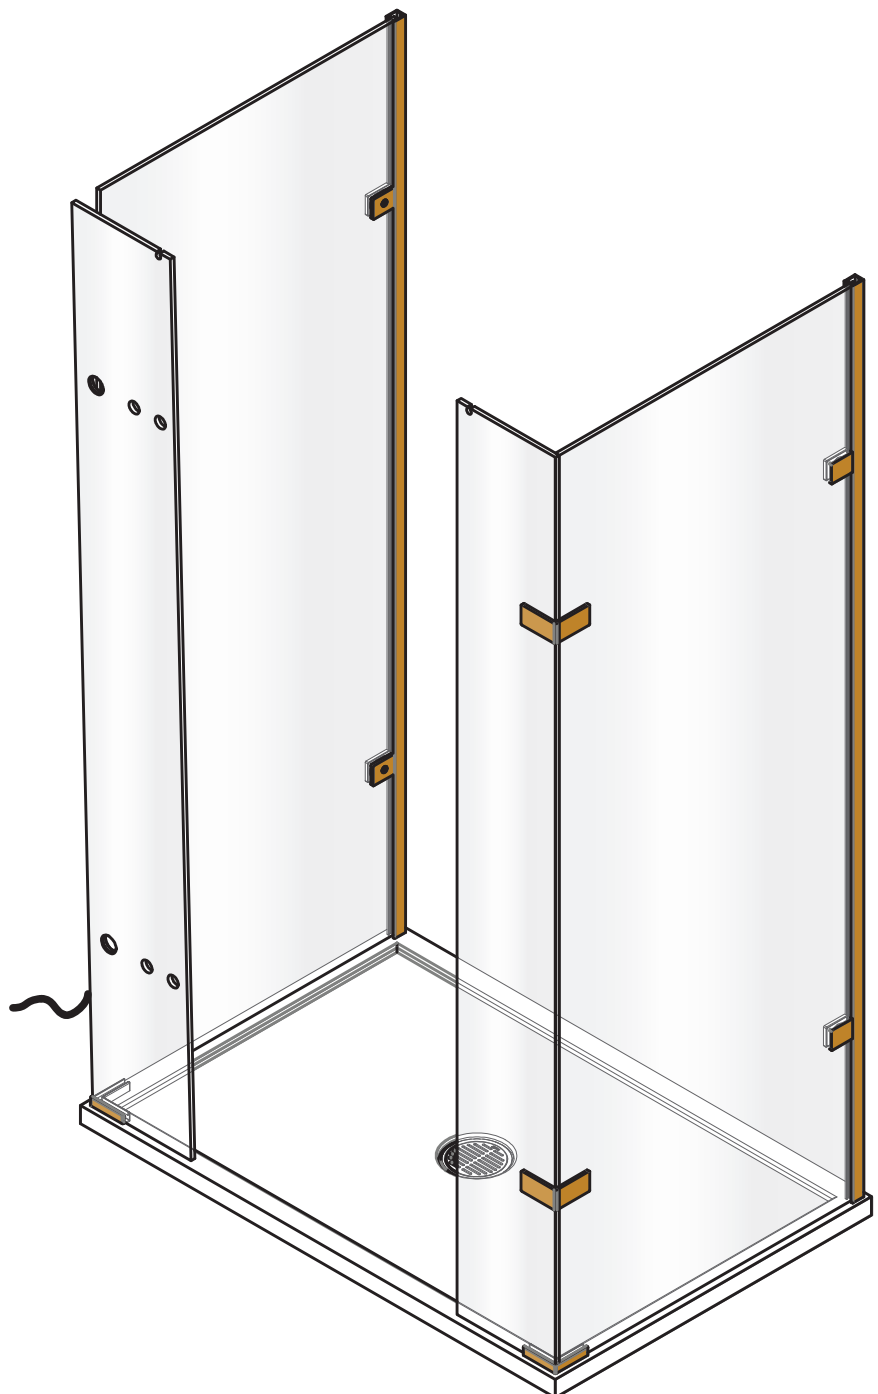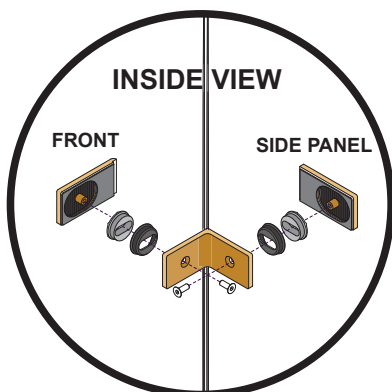


STAGE 7

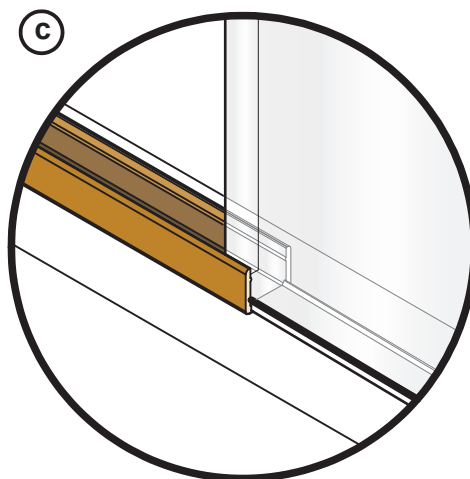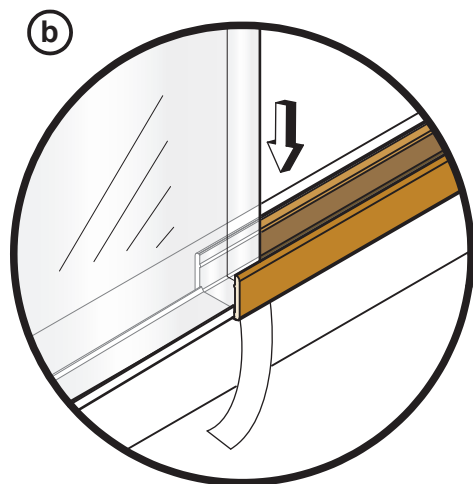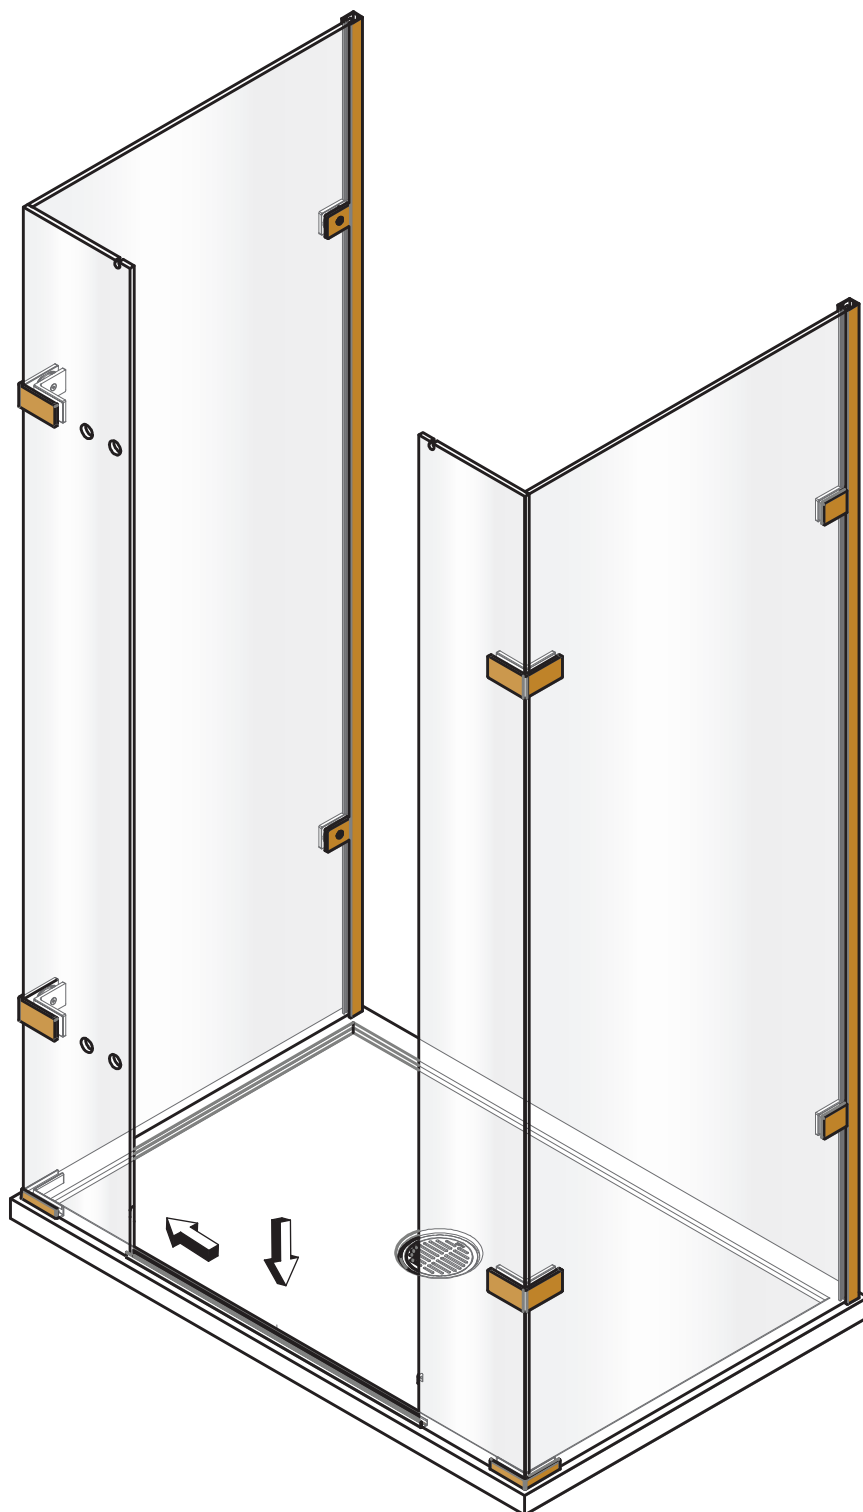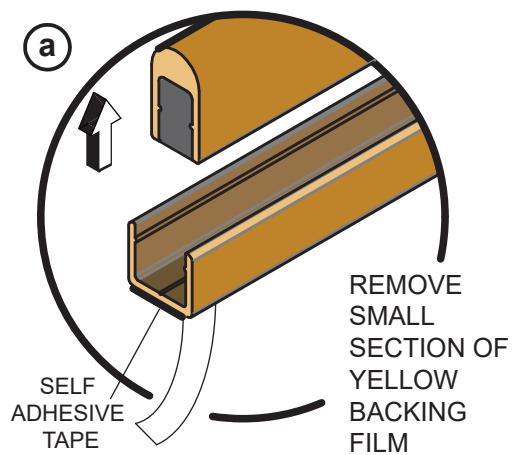

STAGE 8

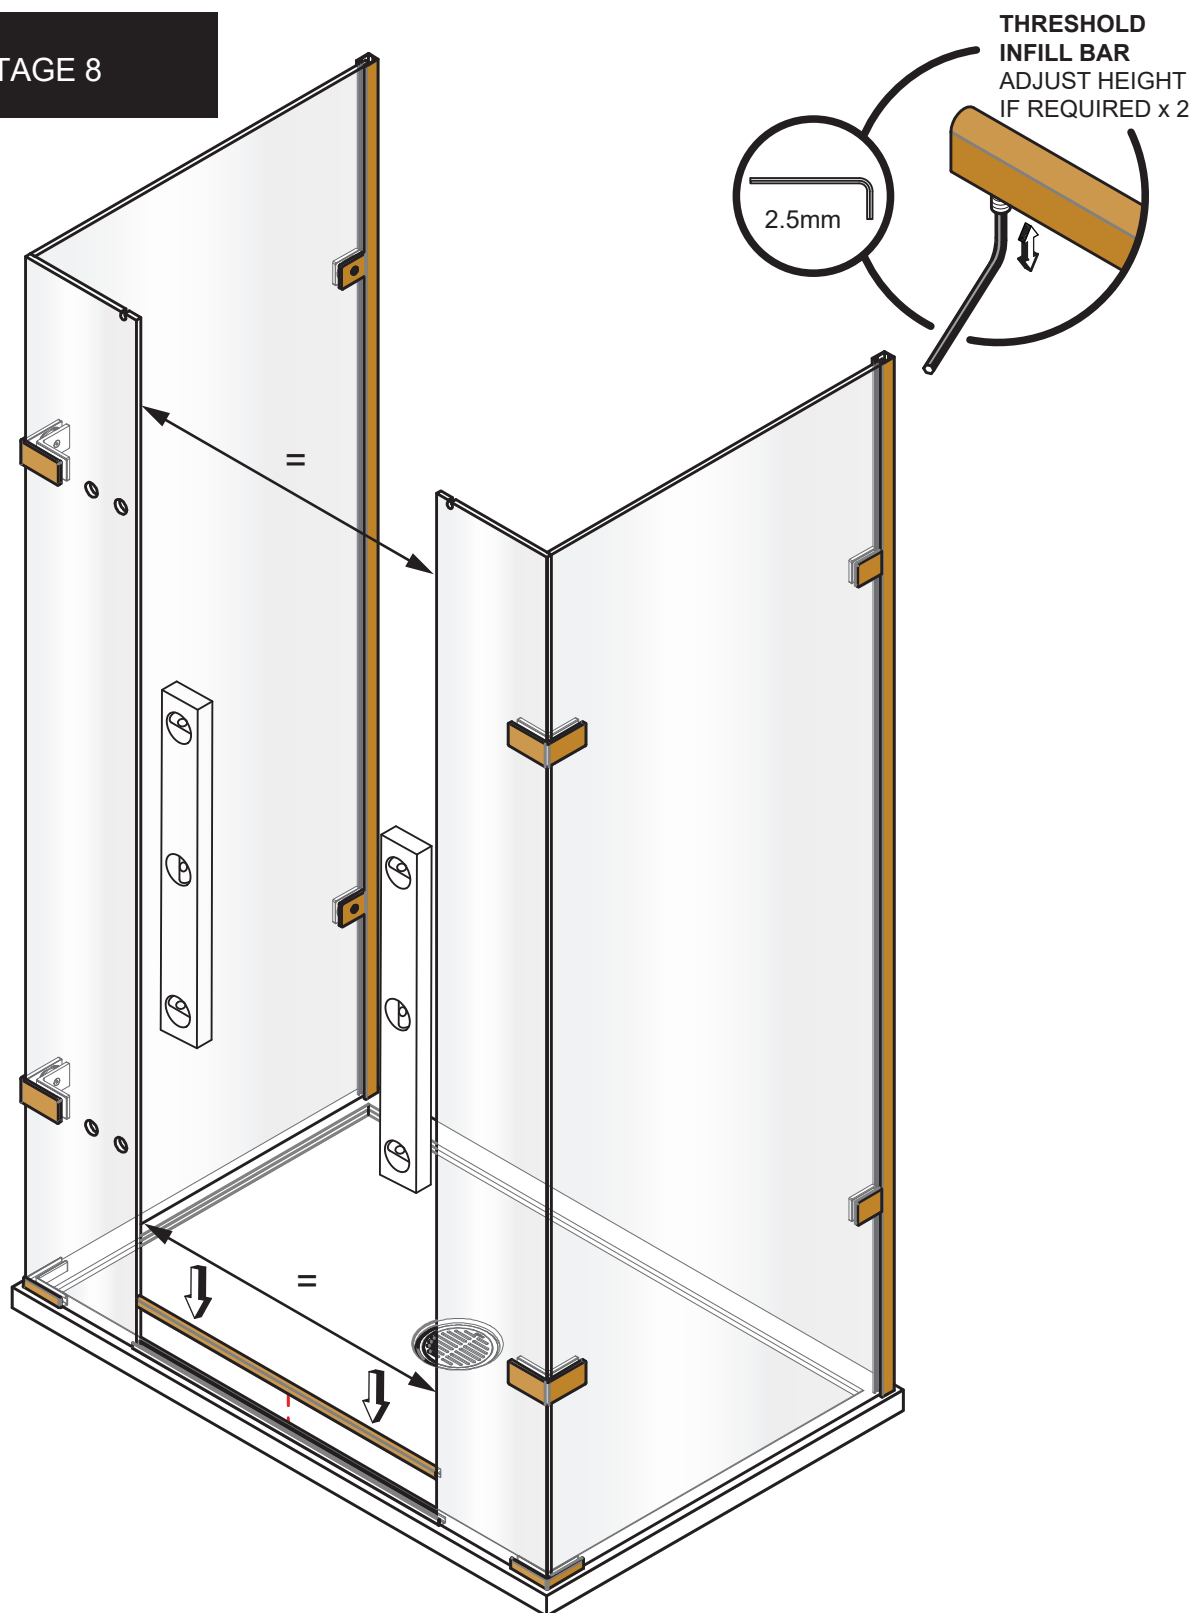

THRESHOLD INFILL BAR

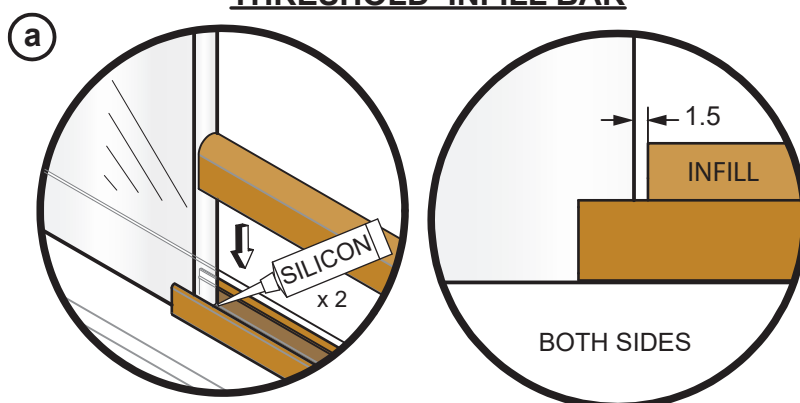


STAGE 9

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND


LH HINGE PANEL ADJUSTMENT BLOCK POSITION

RH HINGE PANEL ADJUSTMENT BLOCK POSITION

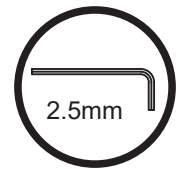


UPPER HINGE

REMOVE BACKING
FILM

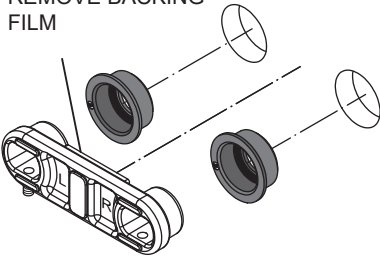


ROTATE
OUT BY
2mm




UPPER HINGE

REMOVE BACKING
FILM

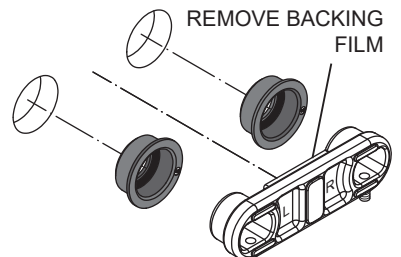


ROTATE
OUT BY
2mm




LOWER HINGE

REMOVE BACKING
FILM

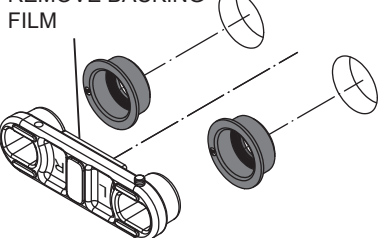


ROTATE
OUT BY
2mm




LOWER HINGE

REMOVE BACKING
FILM

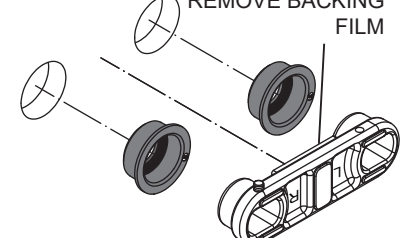

ROTATE
OUT BY
2mm






STAGE 10




IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH DOOR ADJUSTMENT BLOCK POSITION


RH DOOR ADJUSTMENT BLOCK POSITION

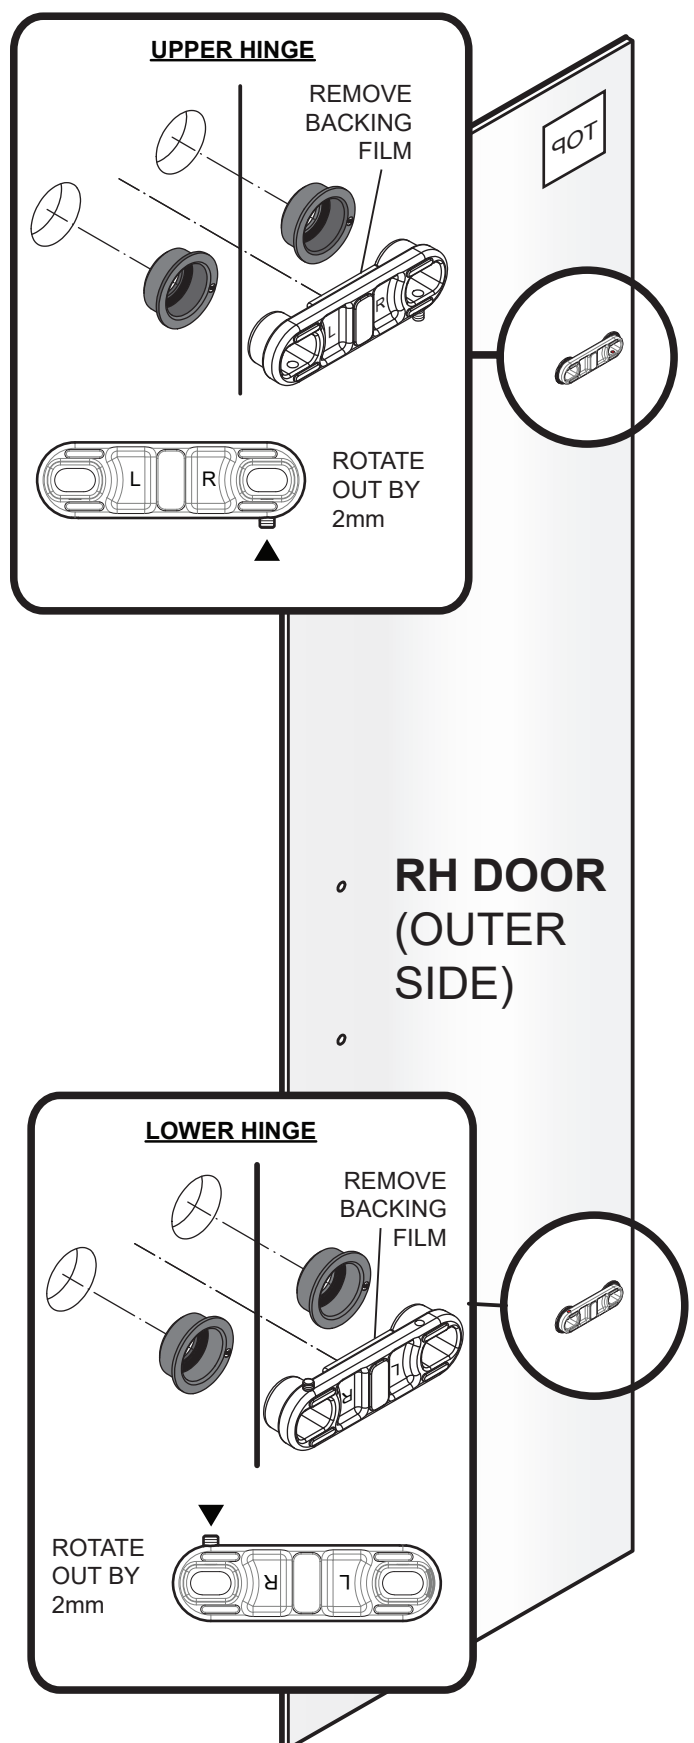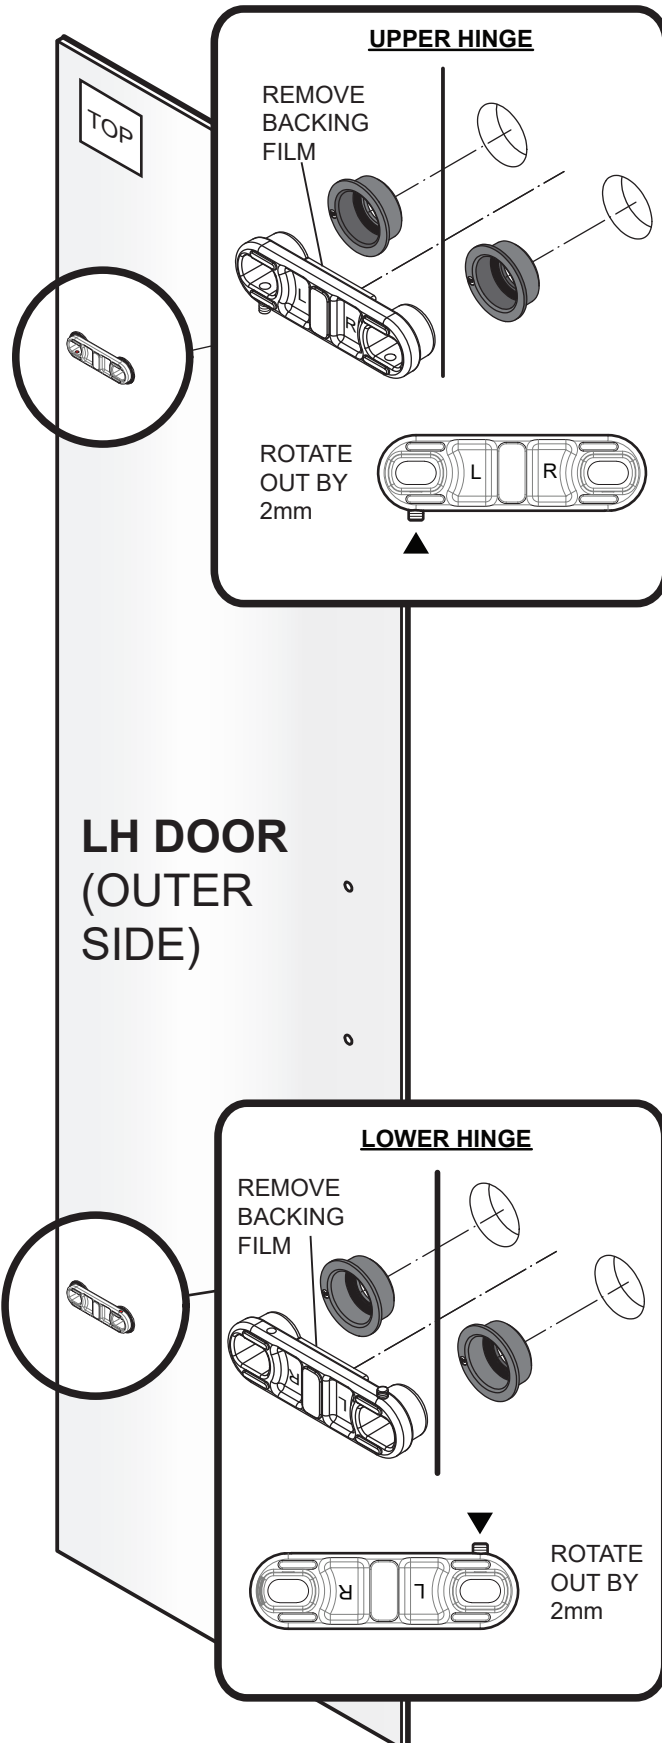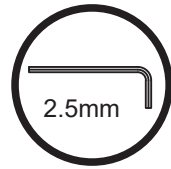


STAGE 11

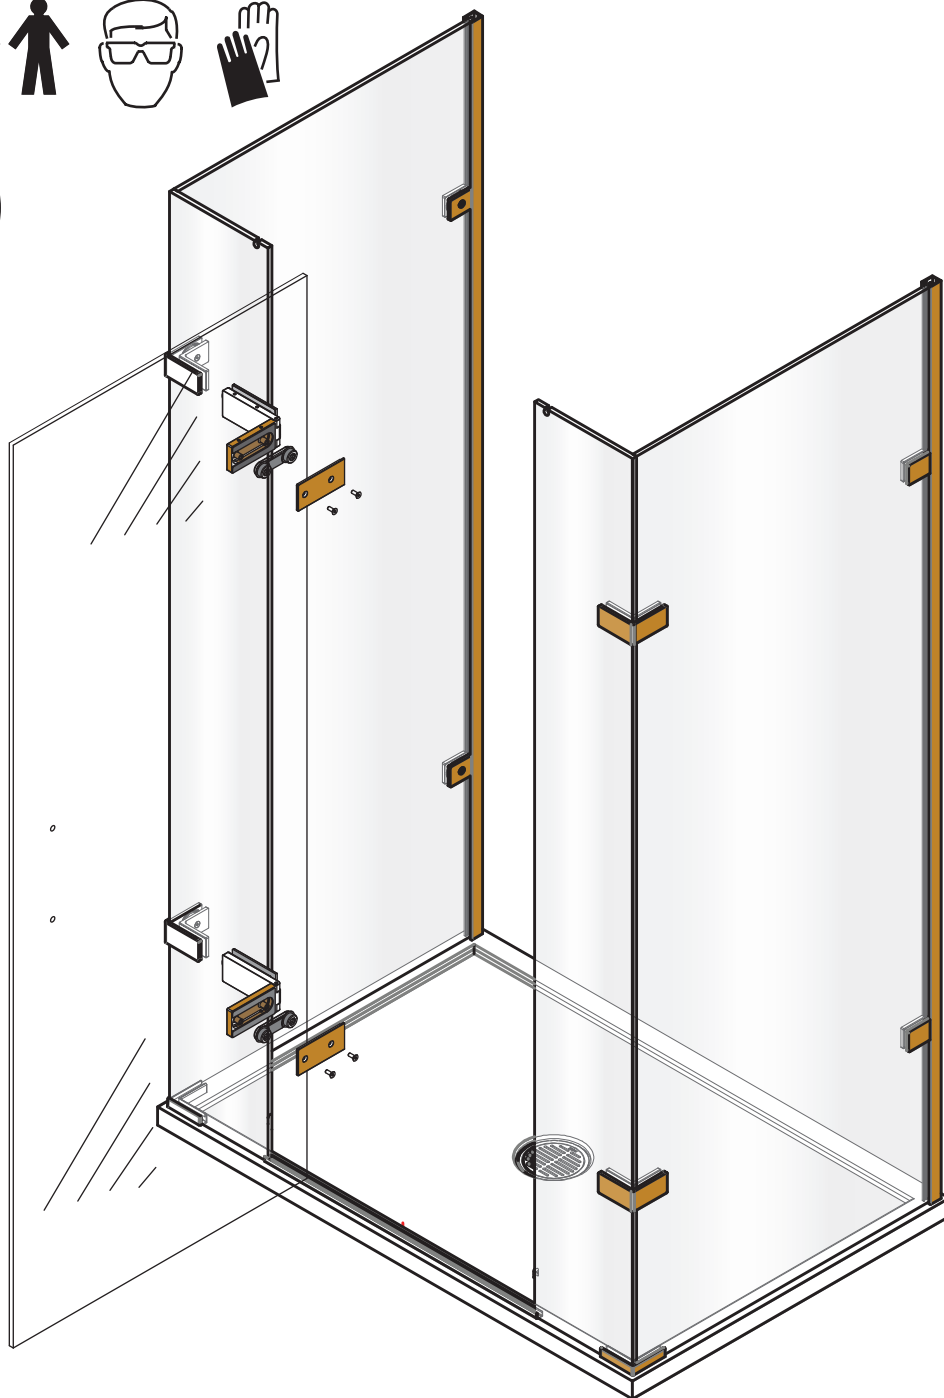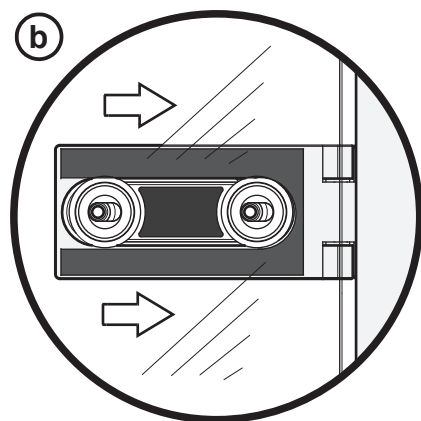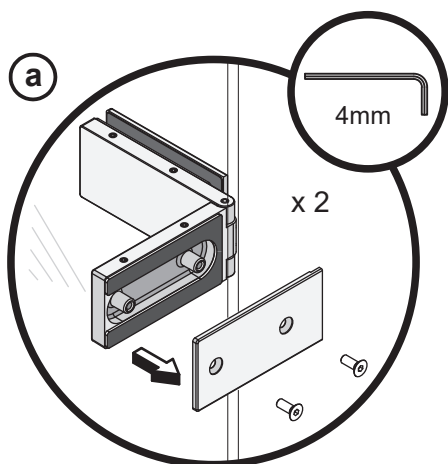

c HINGE VERTICAL SEAL

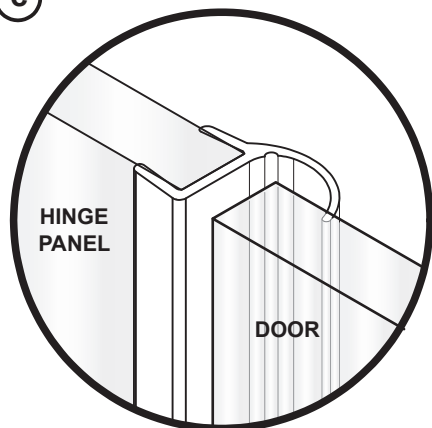


CLOSURE VERTICAL SEAL

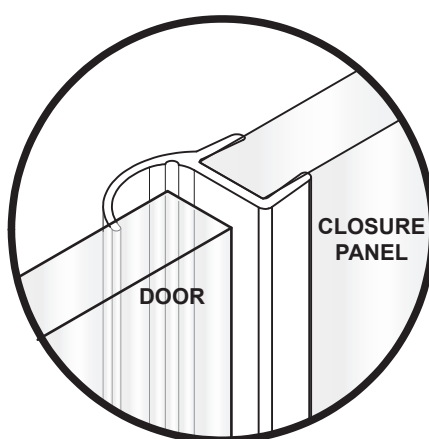


STAGE 12


HANDLE VARIANTS

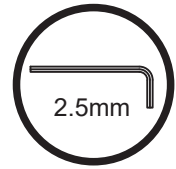


ILLUSTRIOUS

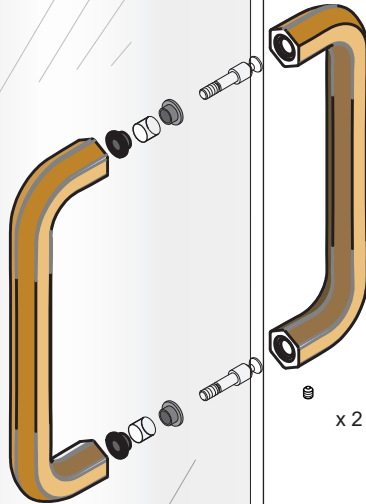


LINEAR

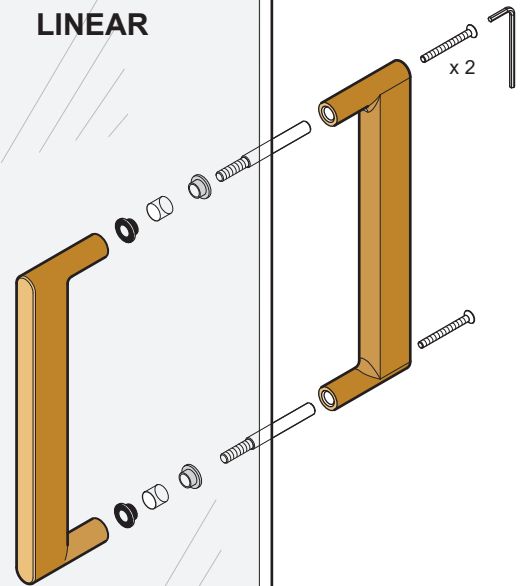




TRADITIONAL

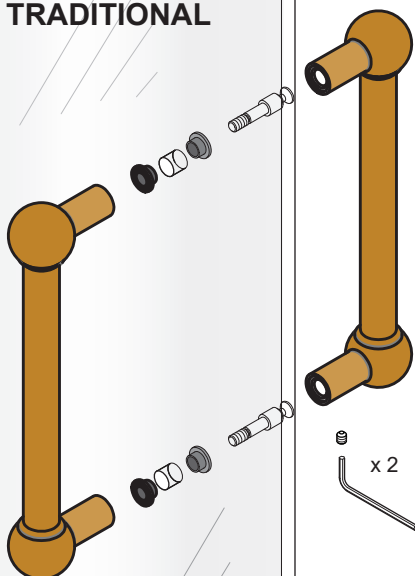

ENGINEER

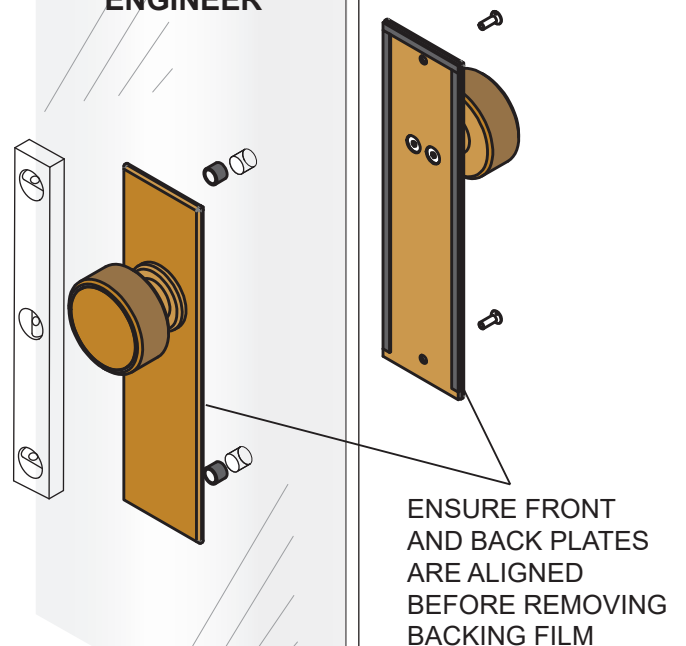


STAGE 13








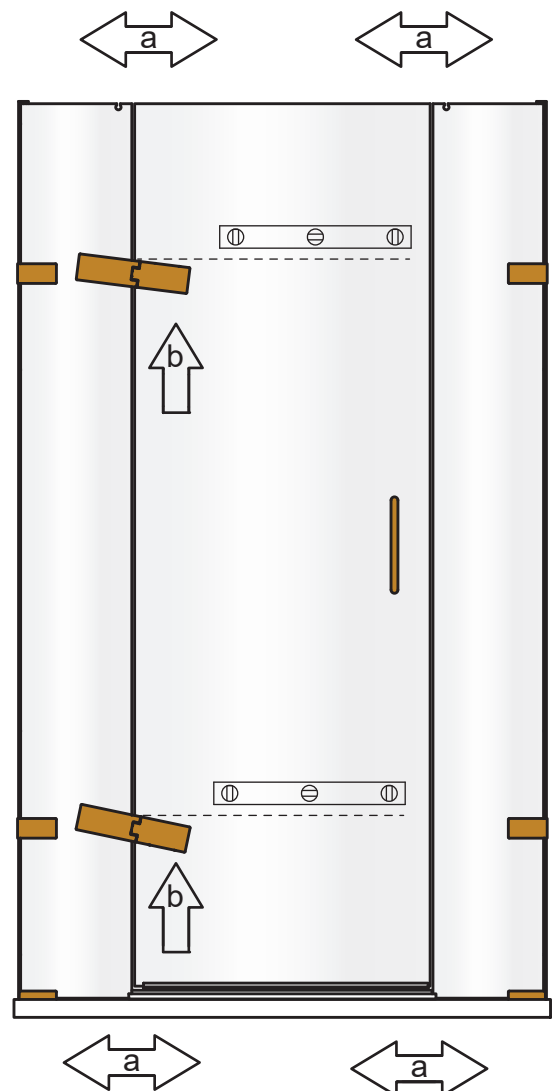
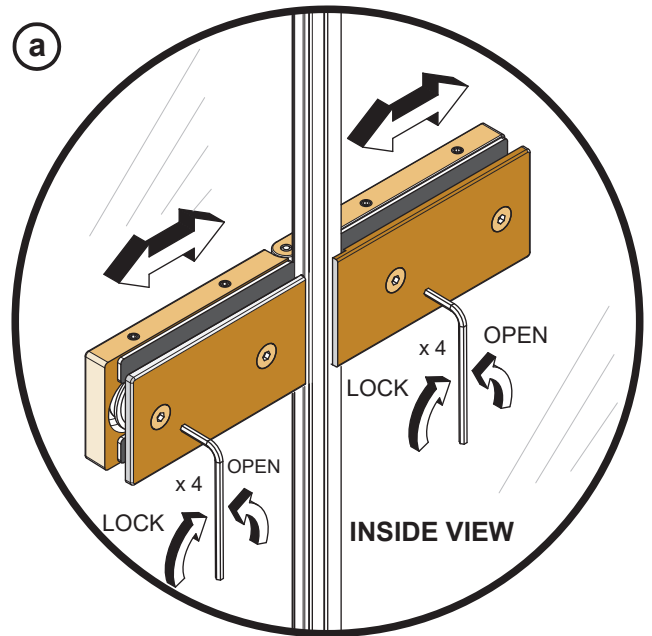
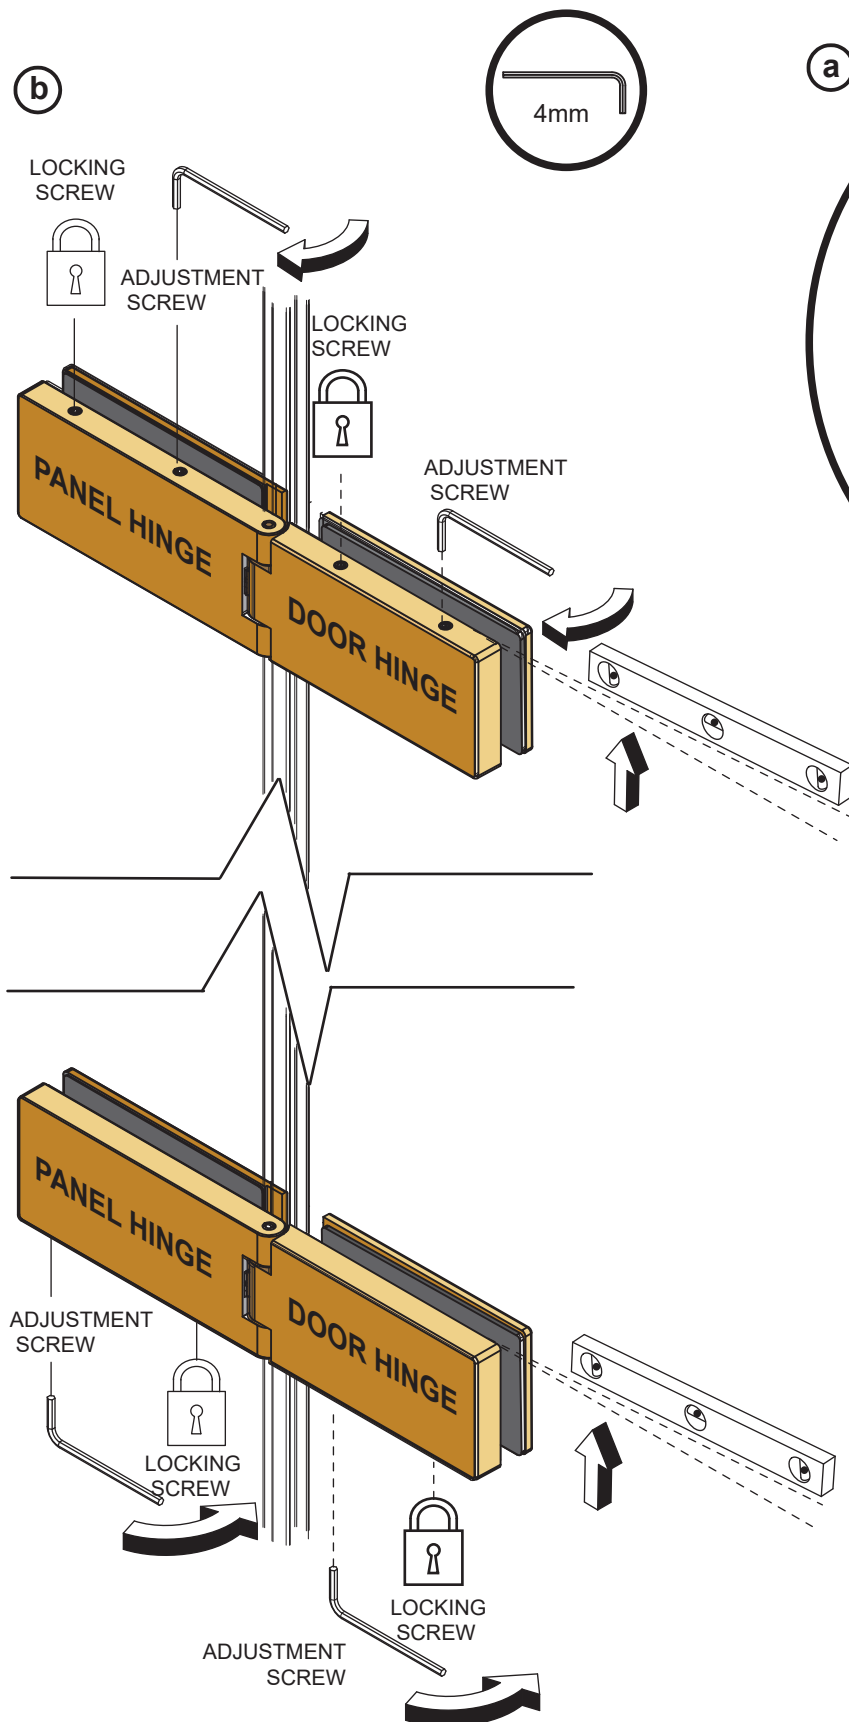


STAGE 14

FITTING THE DOOR BRACE

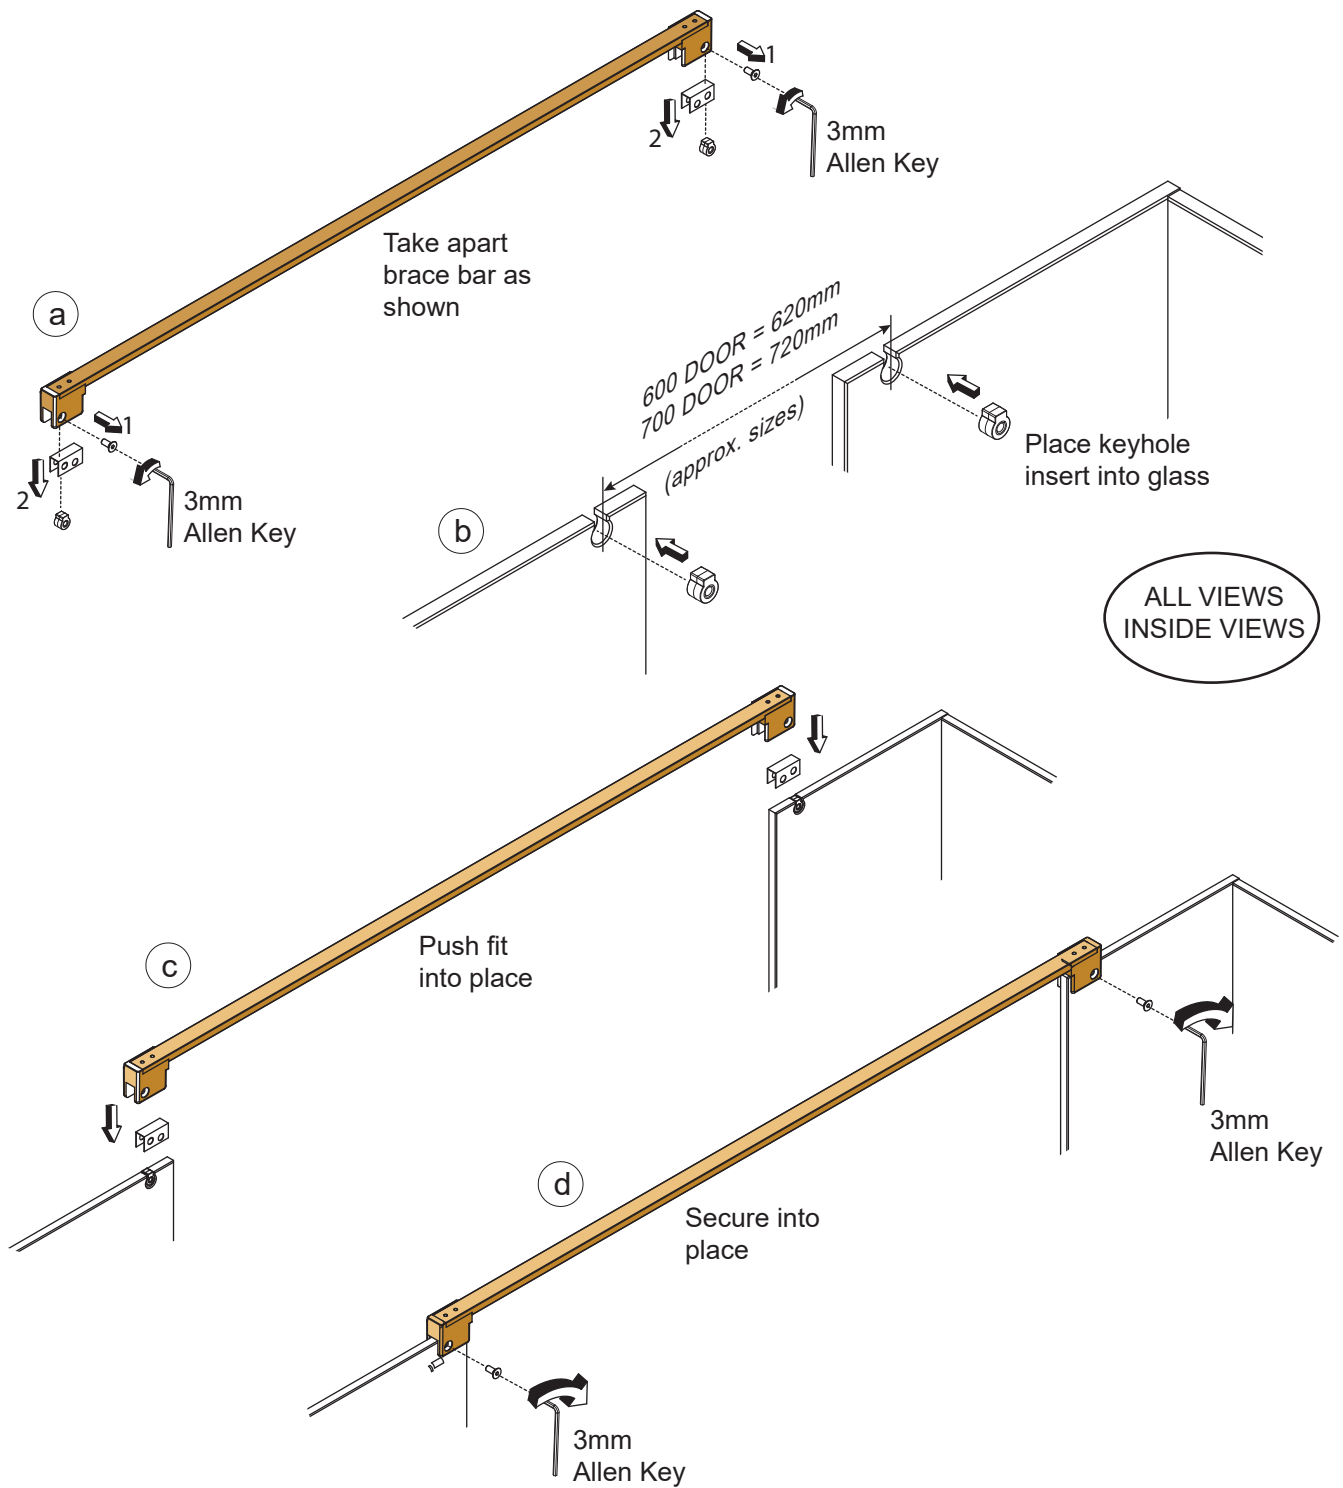

STAGE 15

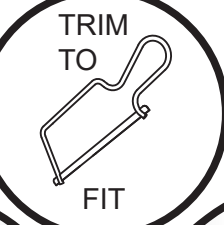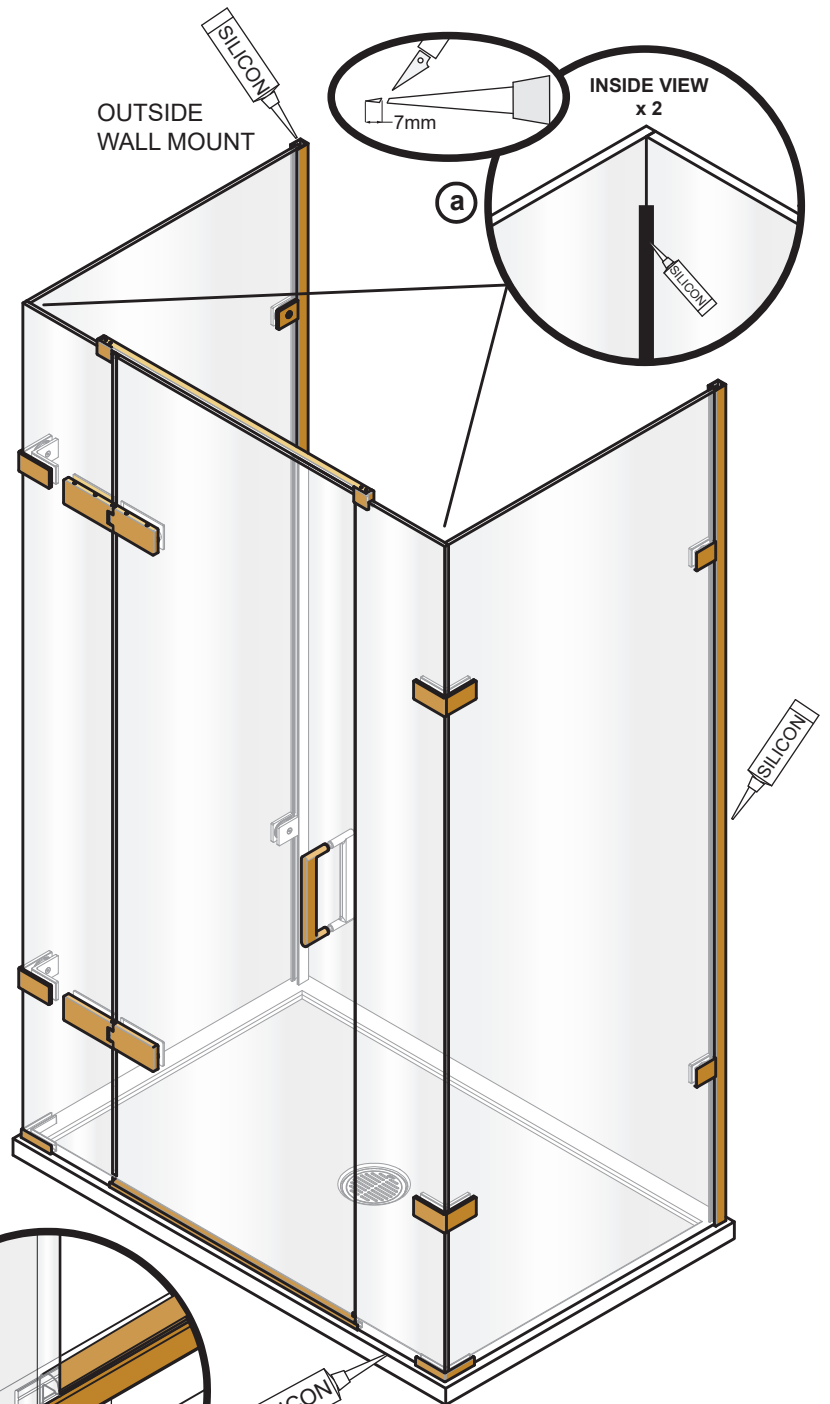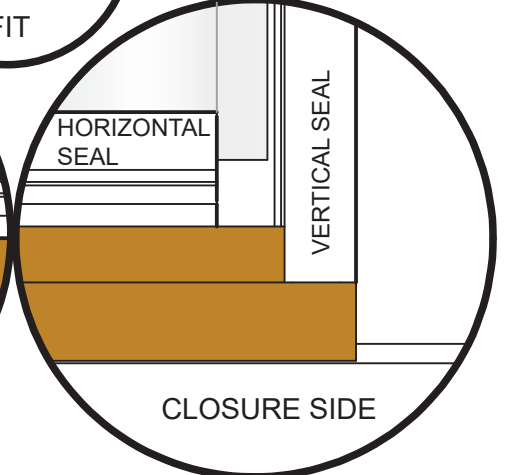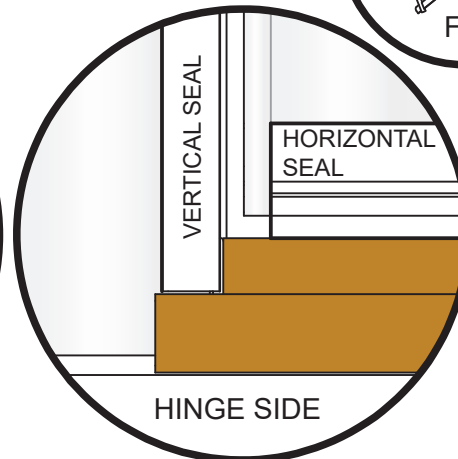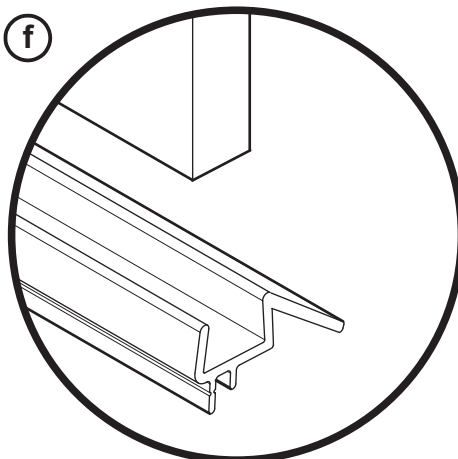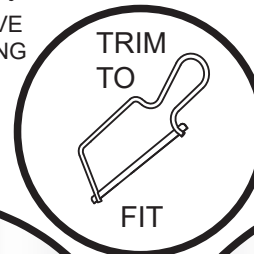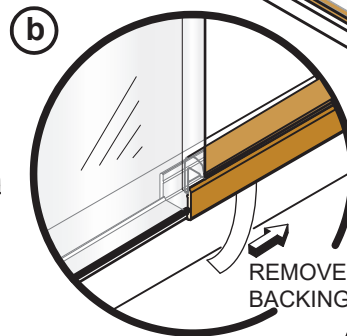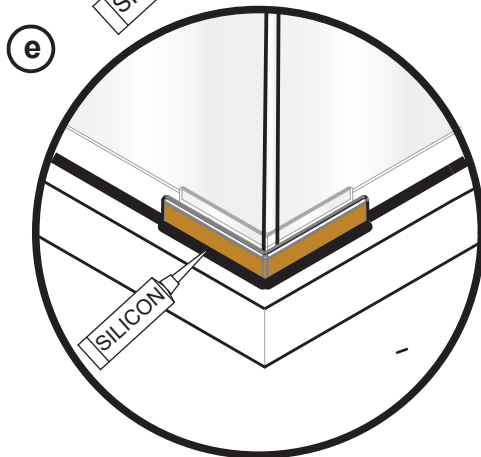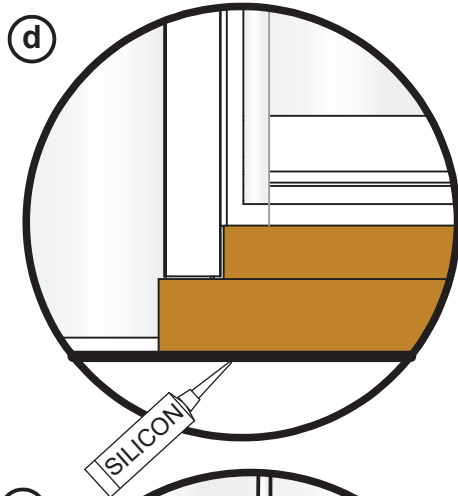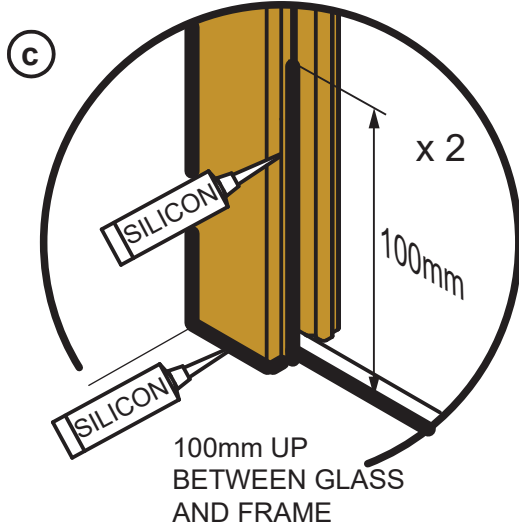


CUT HORIZONTAL SEAL TO LENGTH BETWEEN FINS OF BOTH VERTICAL SEALS

HINGE SIDE

CLOSURE SIDE

PARTS LIST

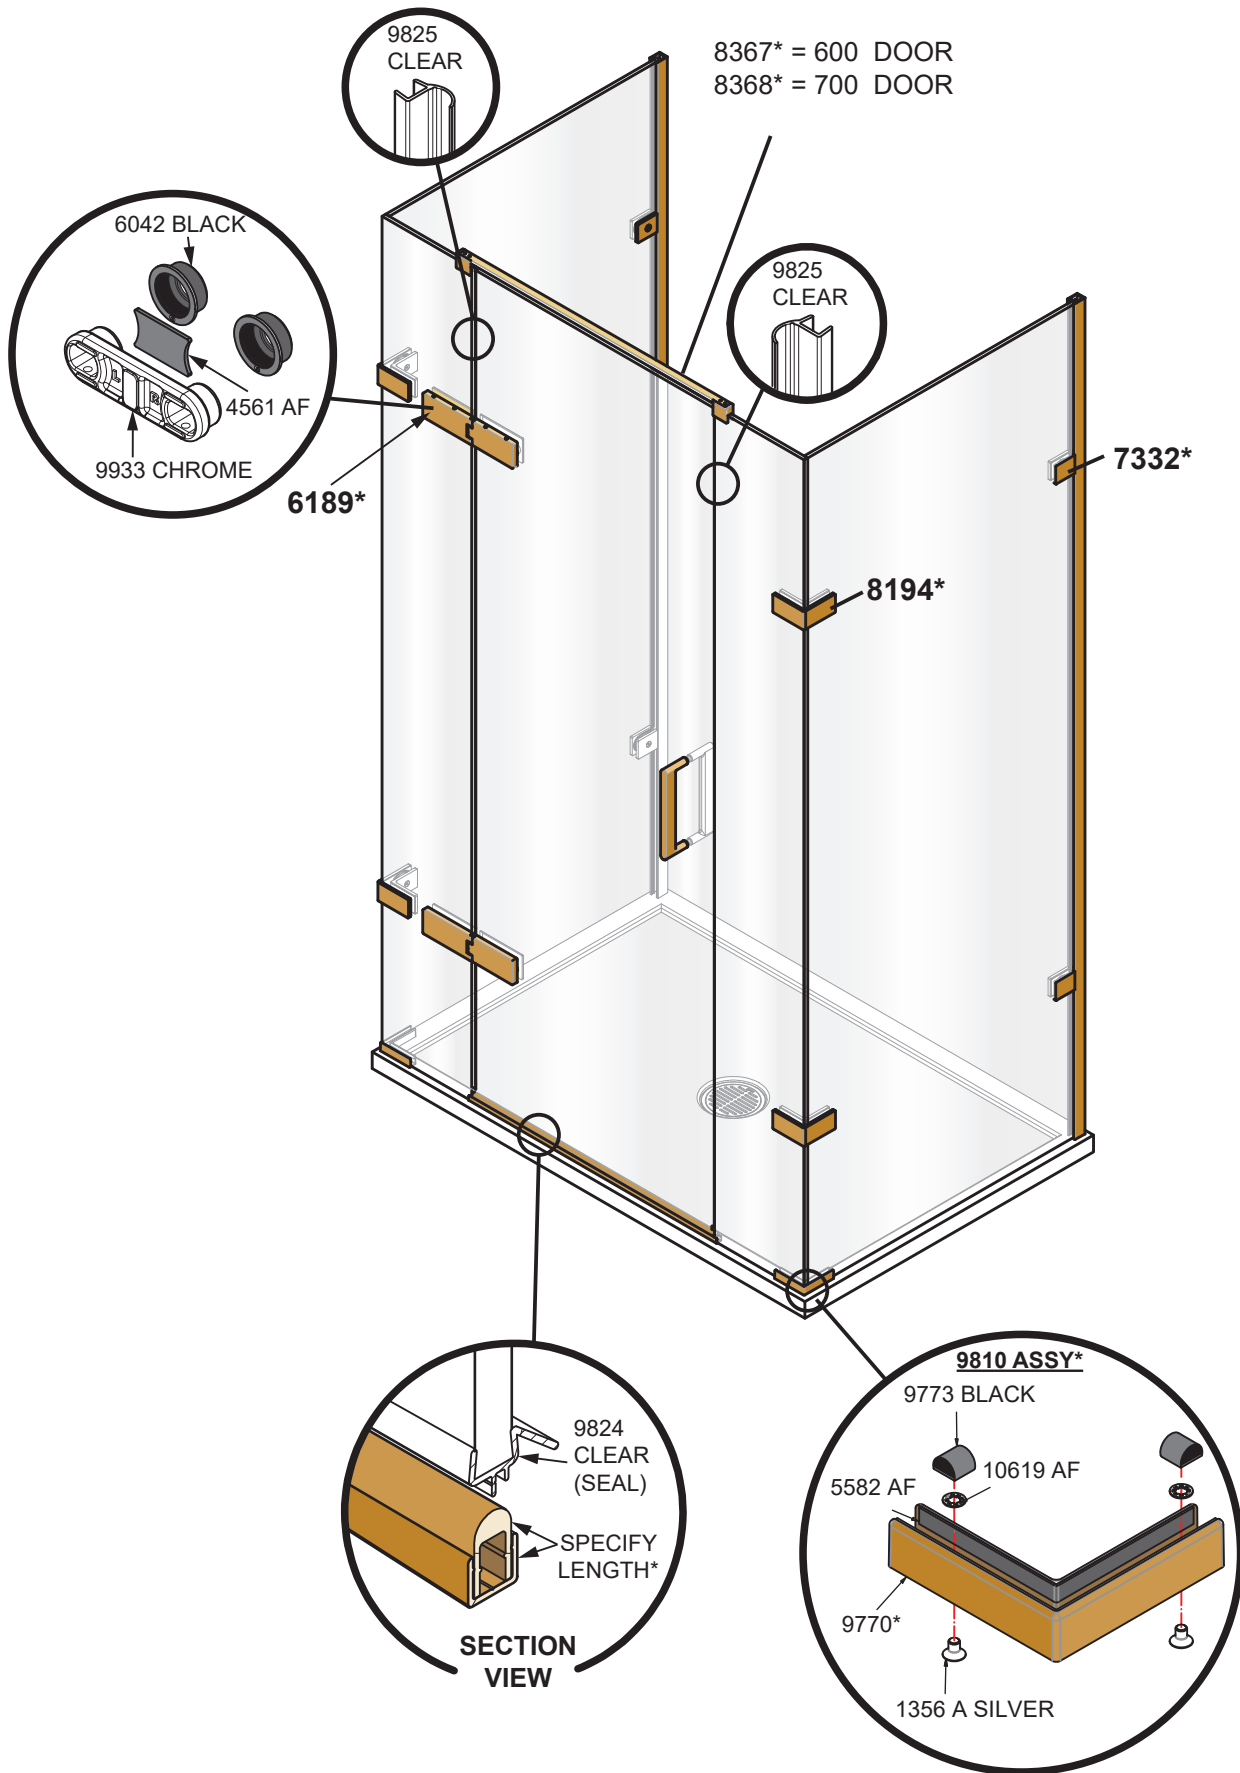

* ALL FINISHES APART
FROM SC/MB