

matki

EAUZONE PLUS EPSR- RECESS SLIDER

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER



MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

0990 AF 01/24

Matki recommend that this product is fitted by professional installers



EPSR RH



EPSR LH

THE STAGES IN THIS INSTALLATION BOOKLET SHOW AN EPSR RH INSTALLATION REVERSE FOR LH

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for enclosure and tray (if fitting).
2. We recommend that two people are available for fitting of Door, Stage 6. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of safety glasses and non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the wall frames and panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the tray and wall coverings are in place. Trays with tiling lips should be let into the wall with the tiling lip flush with the wall to allow the tiling to overlap the tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the wall mount is to be fitted. This will ensure the wall mount fits correctly to the wall and tray/or tiled floor.


CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT. DO NOT CUT TOP TRACK IN ANY CIRCUMSTANCES.

DIMENSIONS

Dimensions are approximate


MODEL RECESS	TOTAL WIDTH A	DOOR OPENING B	CLOSURE PANEL C	FIXED PANEL D
EPSR1100	1062-1092	435	55-70	483-498
EPSR1125	1087-1117	435	80-95	483-498
EPSR1150	1112-1142	435	105-120	483-498
EPSR1175	1137-1167	435	130-145	483-498
EPSR1200	1162-1192	465	55-70	523-538
EPSR1225	1187-1217	465	80-95	523-538
EPSR1250	1212-1242	465	105-120	523-538
EPSR1275	1237-1267	465	130-145	523-538
EPSR1300	1262-1292	465	155-170	523-538
EPSR1325	1287-1317	465	180-195	523-538
EPSR1350	1312-1342	465	205-220	523-538
EPSR1375	1337-1367	465	230-245	523-538
EPSR1400	1362-1392	465	255-270	523-538
EPSR1425	1387-1417	465	280-295	523-538
EPSR1450	1412-1442	465	305-320	523-538
EPSR1475	1437-1467	465	330-345	523-538
EPSR1500	1462-1492	610	55-70	678-693
EPSR1525	1487-1517	610	80-95	678-693
EPSR1550	1512-1542	610	105-120	678-693
EPSR1575	1537-1567	610	130-145	678-693
EPSR1600	1562-1592	610	155-170	678-693
EPSR1625	1587-1617	610	180-195	678-693
EPSR1650	1612-1642	610	205-220	678-693
EPSR1675	1637-1667	610	230-245	678-693
EPSR1700	1662-1692	610	255-270	678-693
EPSR1725	1687-1717	610	280-295	678-693
EPSR1750	1712-1742	610	305-320	678-693
EPSR1775	1737-1767	610	330-345	678-693
EPSR1800	1762-1792	610	355-370	678-693

EAUZONE PLUS SLIDER RECESS

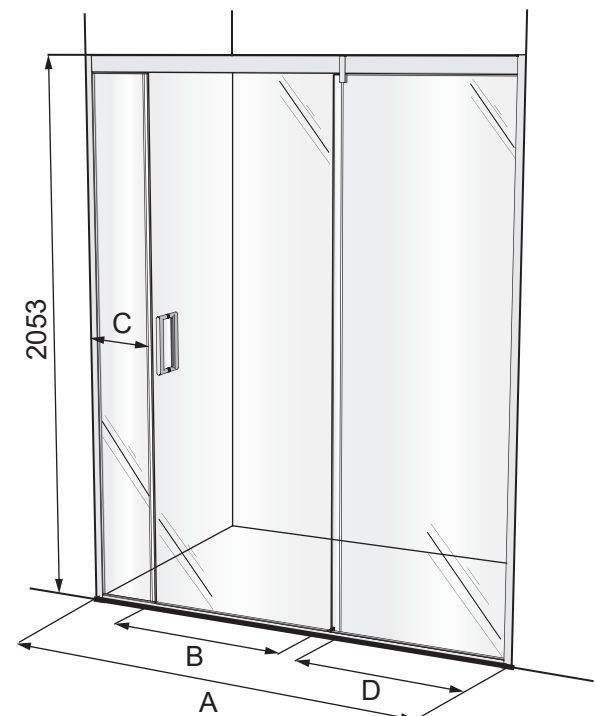

STAGE 1

IMAGES SHOW RH RECESS DOOR INSTALLATION REVERSE FOR LH.

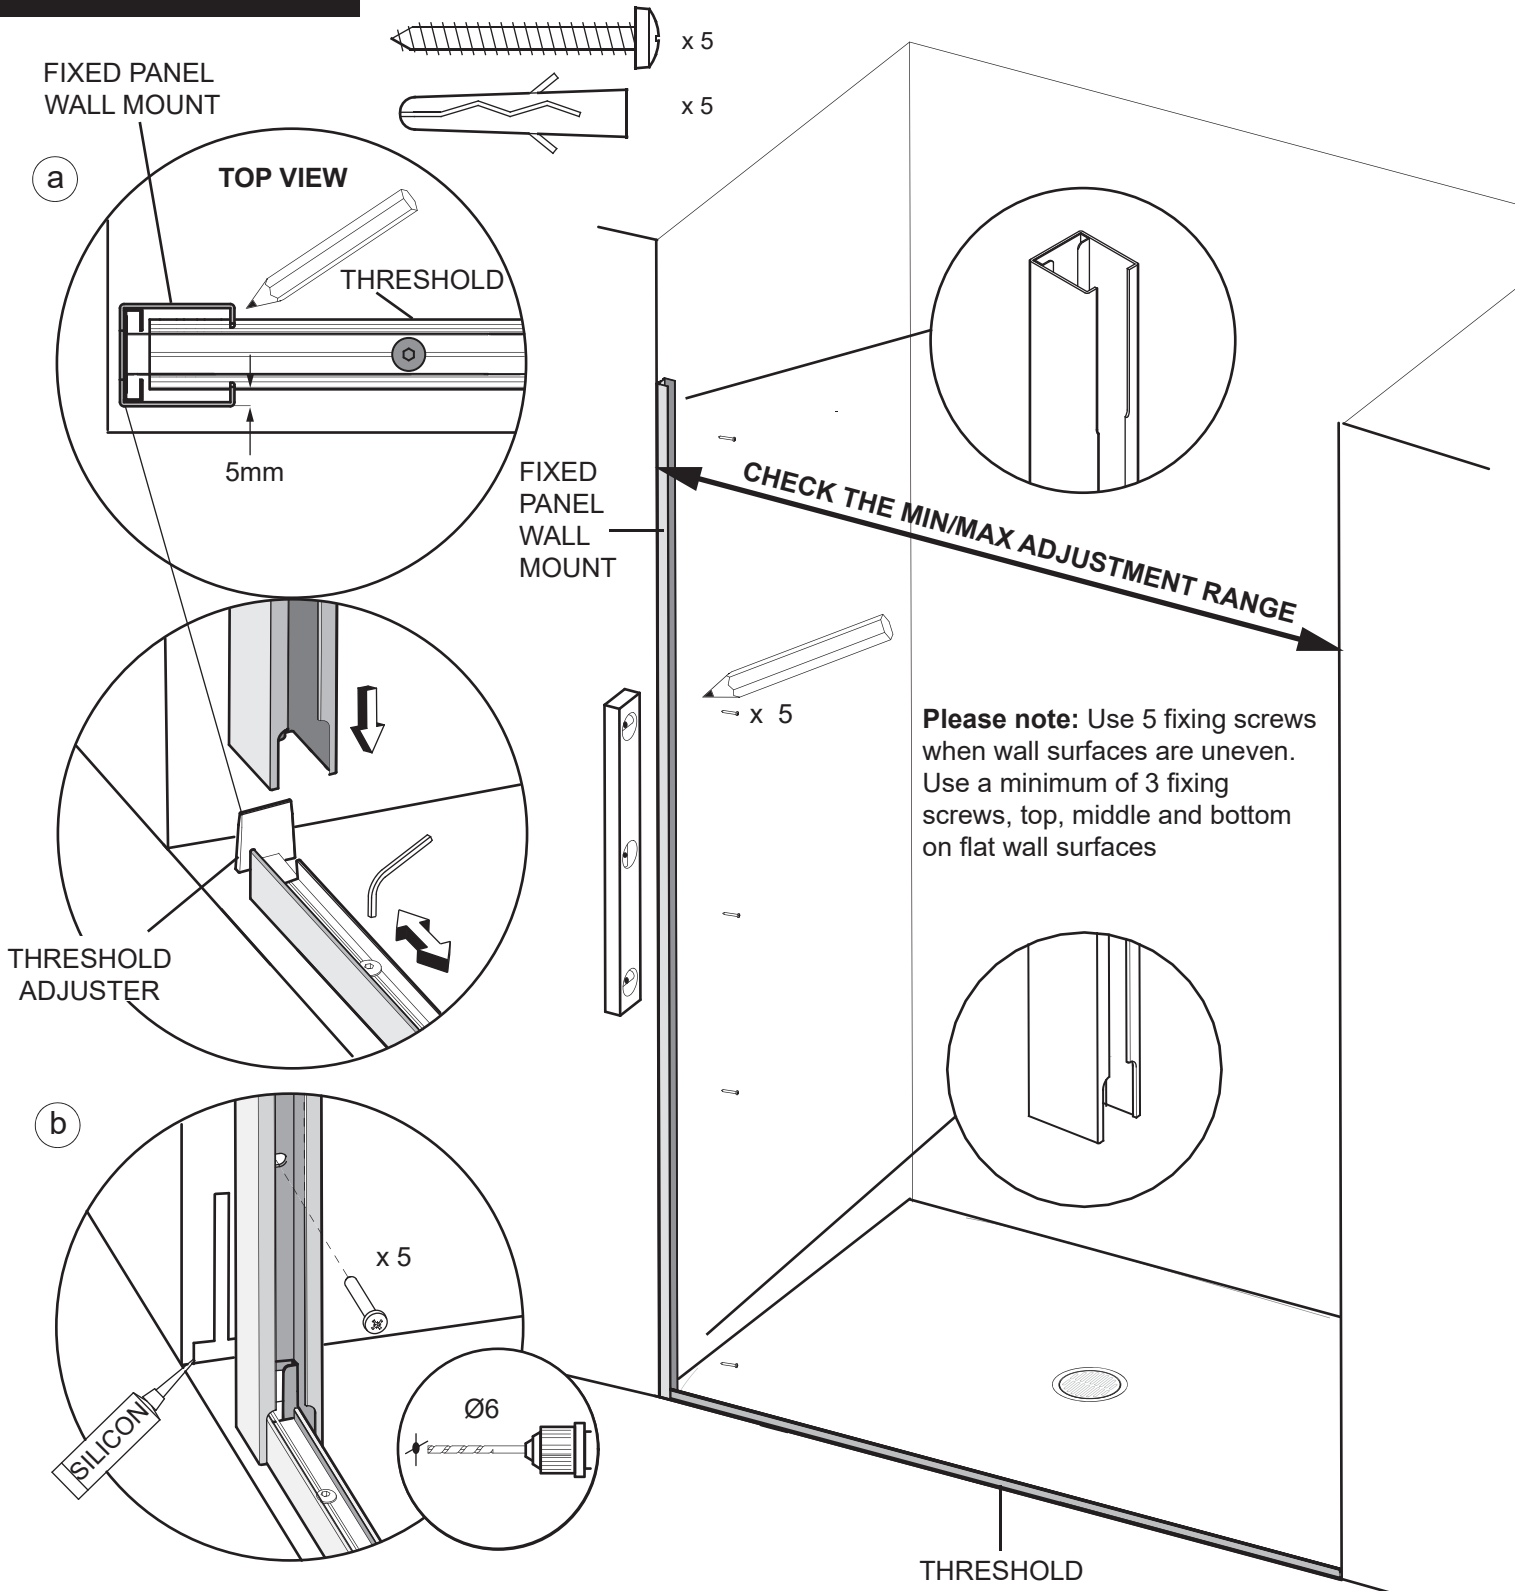


This stage is describing the fitting of the Fixed panel wall mount

Before fitting the enclosure please check that your product will fit the finished aperture size.(See dimensions)

a. Place the horizontal threshold into position on tray. (If fitting close to the front edge of the tray take into account that the front face of the fixed panel wall mount sits 3mm in front of the threshold). Position the fixed panel wall mount on to the wall over threshold (wall mount has a top and bottom, threshold cut-out should be at bottom). Ensure the threshold adjuster fits up into the back of the wall mount extrusion in the recess as shown. Adjust position of threshold adjuster as required, to adjust loosen screw only 1/2 a turn, re-tighten after adjustment, do not over tighten. Plumb the wall mount for upright and mark the fixing holes in the centre of the slots.

b. Drill 5 x fixing holes in the wall and insert wall plugs. Clean area and apply silicon sealant to the area behind the wall mount between the tray and tiles and 100mm up the wall, central to the width of the wall mount. Fit the wall mount using the No.8 x 32mm Pan Head Screws

STAGE 2



Please note: Use 5 fixing screws when wall surfaces are uneven. Use a minimum of 3 fixing screws, top, middle and bottom on flat wall surfaces

FIXED PANEL WALL MOUNT

TOP VIEW

THRESHOLD

5mm

a

THRESHOLD ADJUSTER

b

TOP VIEW

x 5

x 5

Ø6

SILICON


This stage is describing the fitting of the Closure panel wall mount.

a. Position the closure panel wall mount over the threshold and ensure the threshold adjuster fits up into the back of the wall mount extrusion in the recess as shown. Adjust position of threshold adjuster as required to ensure the threshold extends under the wall mount. To adjust loosen screw only 1/2 a turn, re-tighten after adjustment, do not over tighten. Plumb the wall mount for upright and mark the fixing holes in the centre of the slots.

b. Drill 5 x fixing holes in the wall and insert wall plugs. Clean the area and apply silicon sealant to the area behind the wall mount between the tray and tiles and 100mm up the wall, central to the width of the wall mount. Fit the wall mount using the No.8 x 32mm Pan Head Screw.

c. Fit the wall mount seals into both the wall mounts by pinching the sides together and fitting them into the wall mounts until they snap into position, the bottom of the seal should sit on top of the horizontal extrusion.

STAGE 3

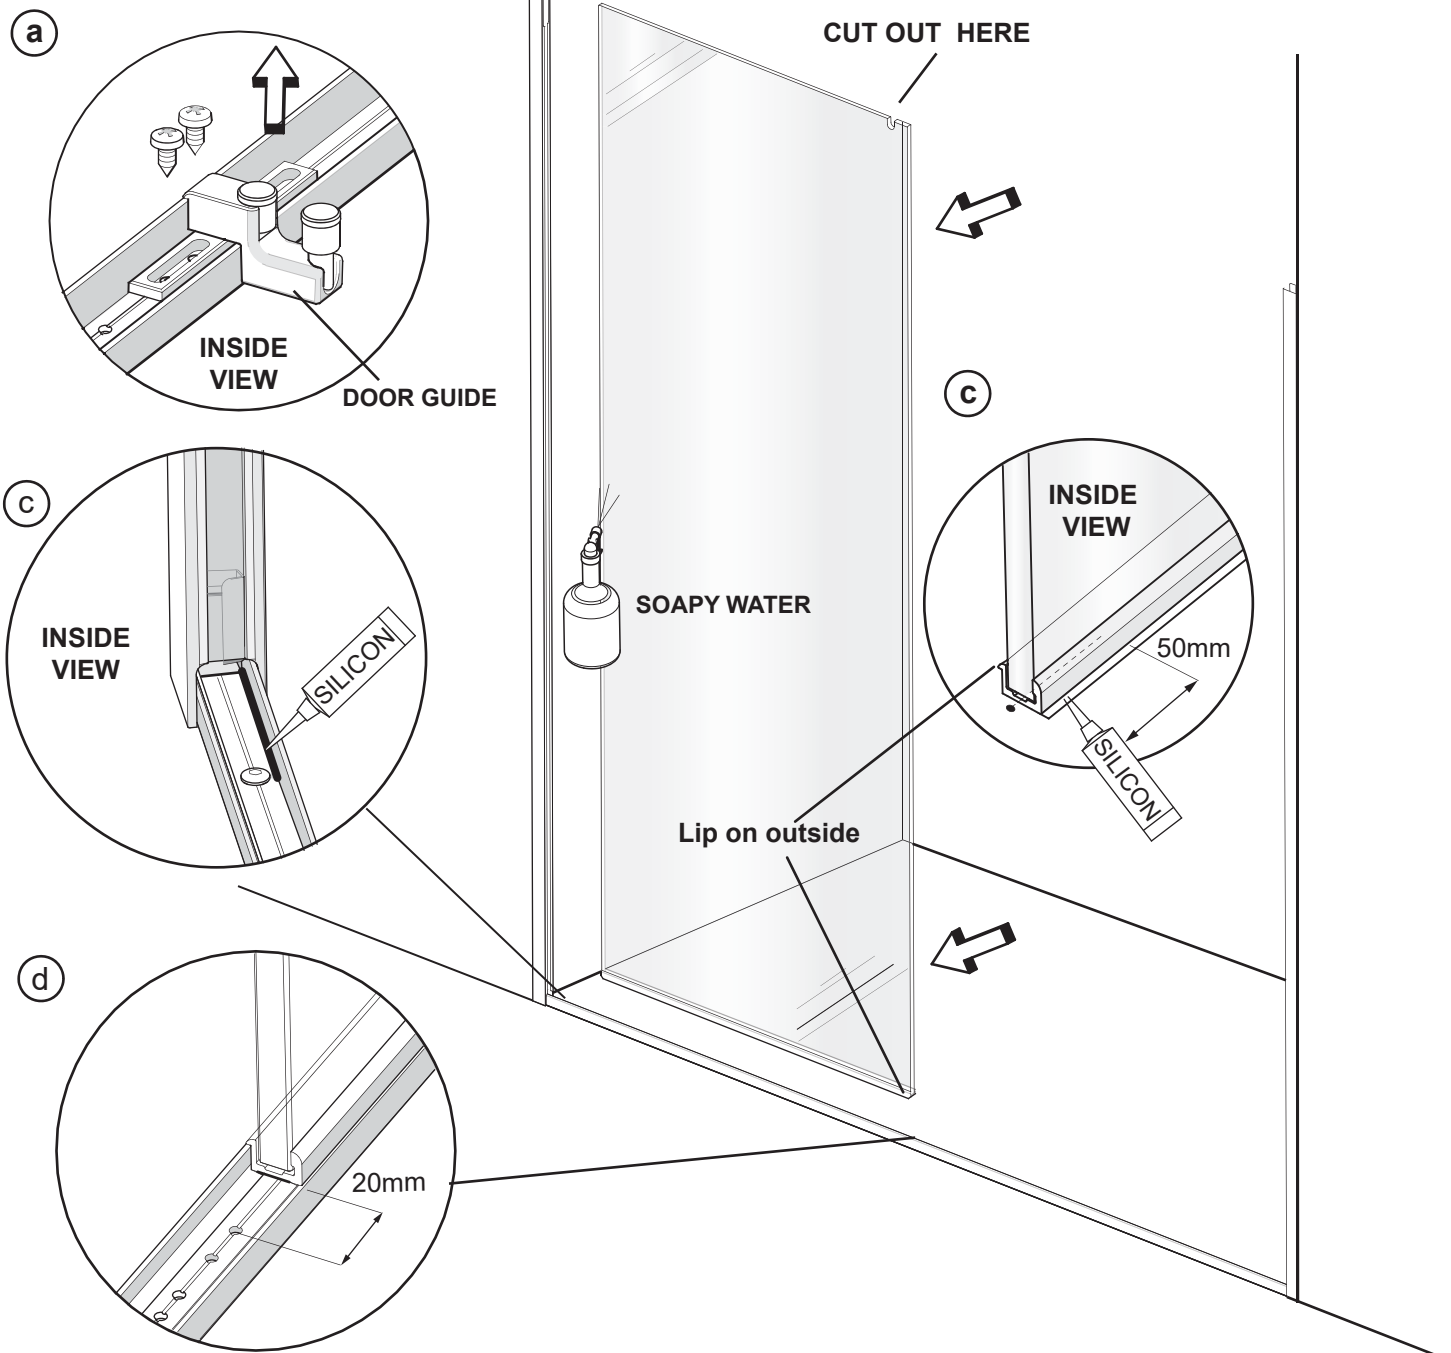

This stage is describing the fitting of the Fixed panel.

Before fitting the fixed glass panel adjust the threshold extrusion so that it is equally positioned between the two wall mounts. Loosen the threshold adjusters at each end and lightly tighten in position as required.


a. Remove the door guide from the threshold extrusion before fitting the fixed glass panel.

b. Apply a bead of Silicon along the front inside edge of the Threshold up to the adjuster screw.

c. IMPORTANT - Before fitting the fixed panel, apply a 50mm long bead of silicon sealant central to the underside of the extrusion. Fit the fixed panel with the cut out in the top of the glass panel outwards. Lightly wet the edge of the fixed panel with soapy water and gently lower the panel into the wall mount and threshold extrusion. Push the top of the panel into the wall mount first, followed by the bottom.

d. As a guide the end of the panel should be positioned 20mm from the first hole in the threshold track further slight adjustments may be required during the fitting of the closure panel Stage 4.

STAGE 4

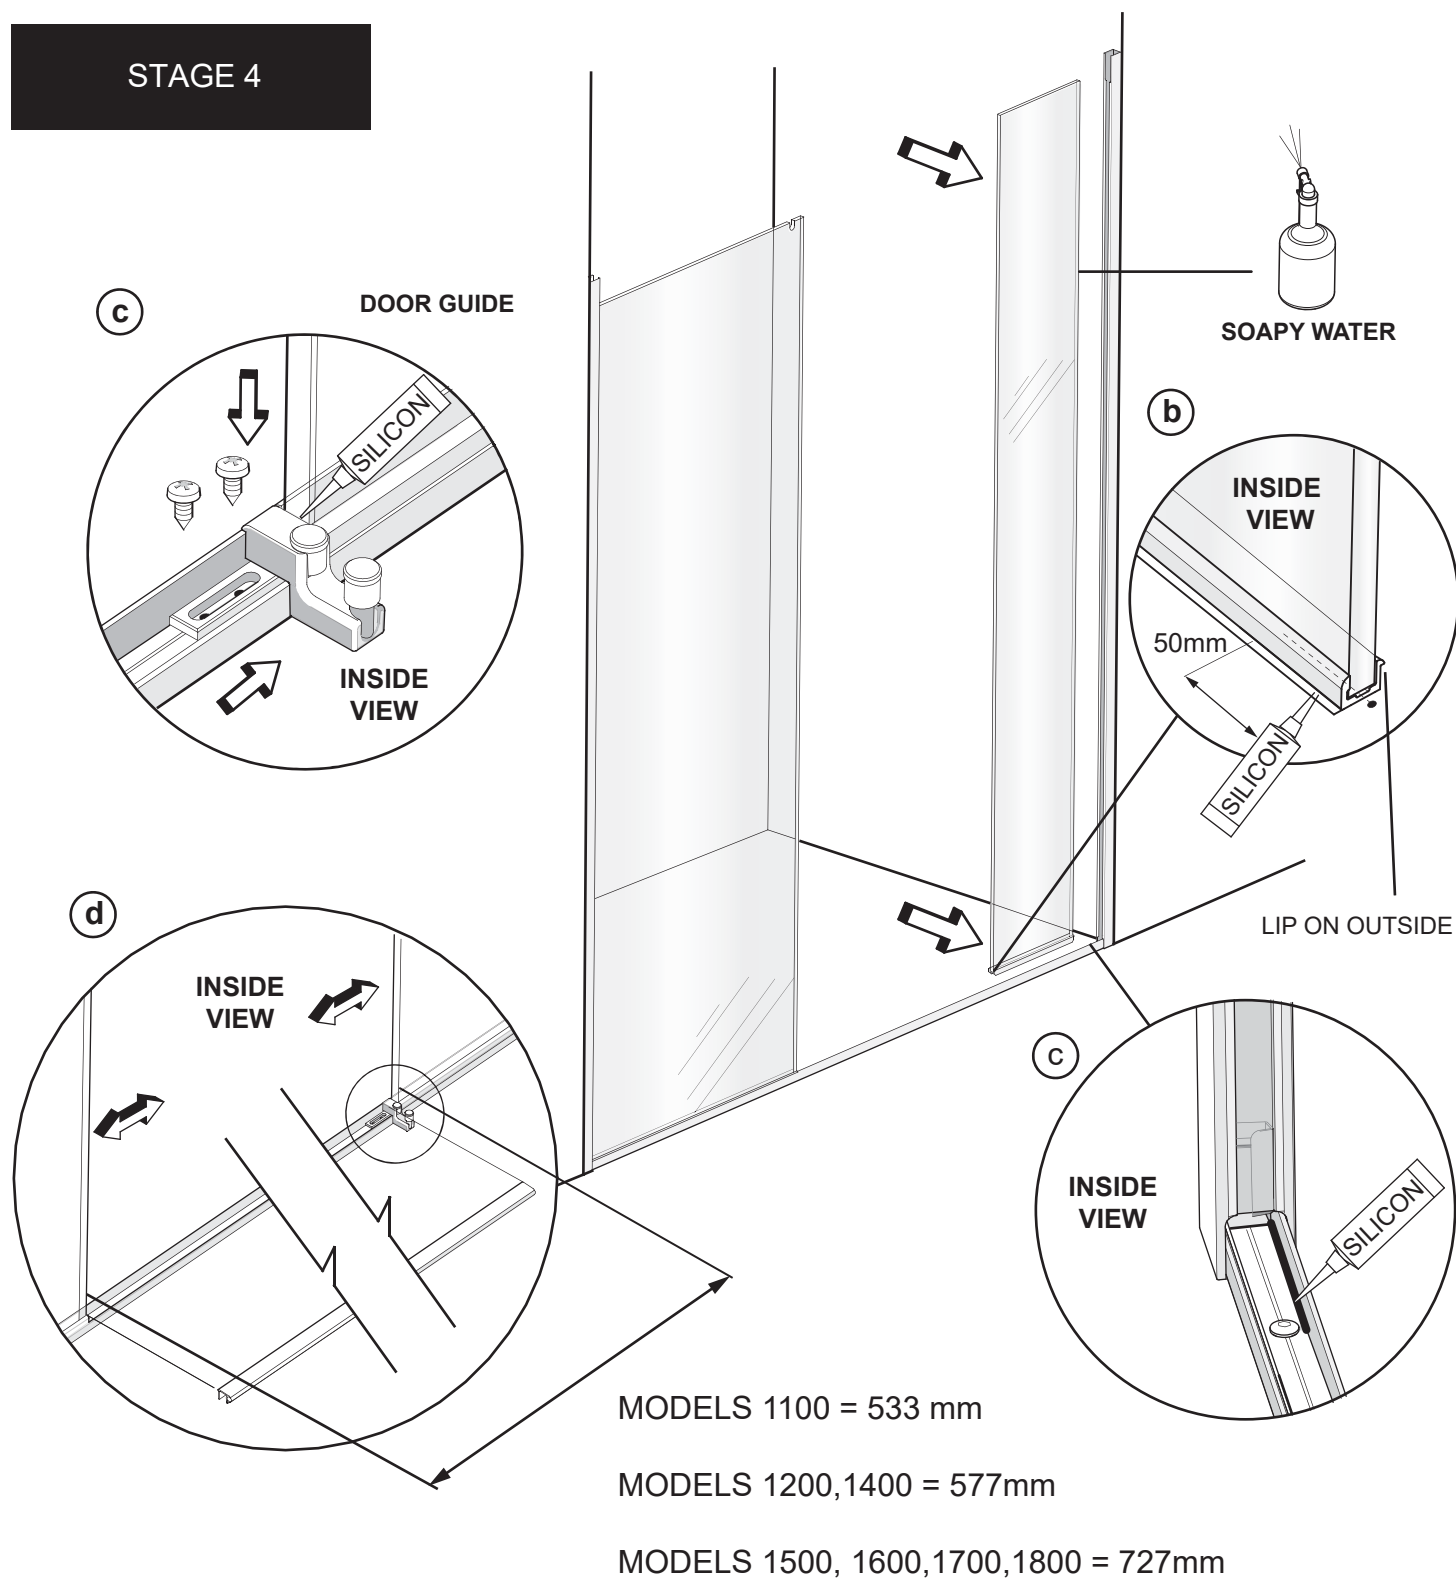

This stage is describing the fitting of the Closure panel.

a. Apply a bead of Silicon along the front inside edge of the Threshold up to the adjuster screw.


b. IMPORTANT - Before fitting the closure glass panel, apply a 50mm long bead of silicon sealant central to the underside of the extrusion. For models 1100 and 1500 apply a bead of silicon along the full length of the extrusion.

Lightly wet the edge of the closure panel with soapy water and gently lower the panel into the wall mount and threshold extrusion. Push the top of the panel into the Wall mount first, followed by the bottom.

c. Fit the door guide to the threshold extrusion fitting one leg of the door guide underneath the fixed glass panel. Set the distance between the fixed glass panel and closure glass panel for the model dimensions shown above. Before securing the door guide apply a small bead of silicon to the end face of the fixed glass panel where it meets the door guide. Secure the door guide with the No.8 x 9.5 Pan head screws.

d. As a guide place the threshold cover extrusion between the door guide and closure glass panel to check the dimension.

STAGE 5

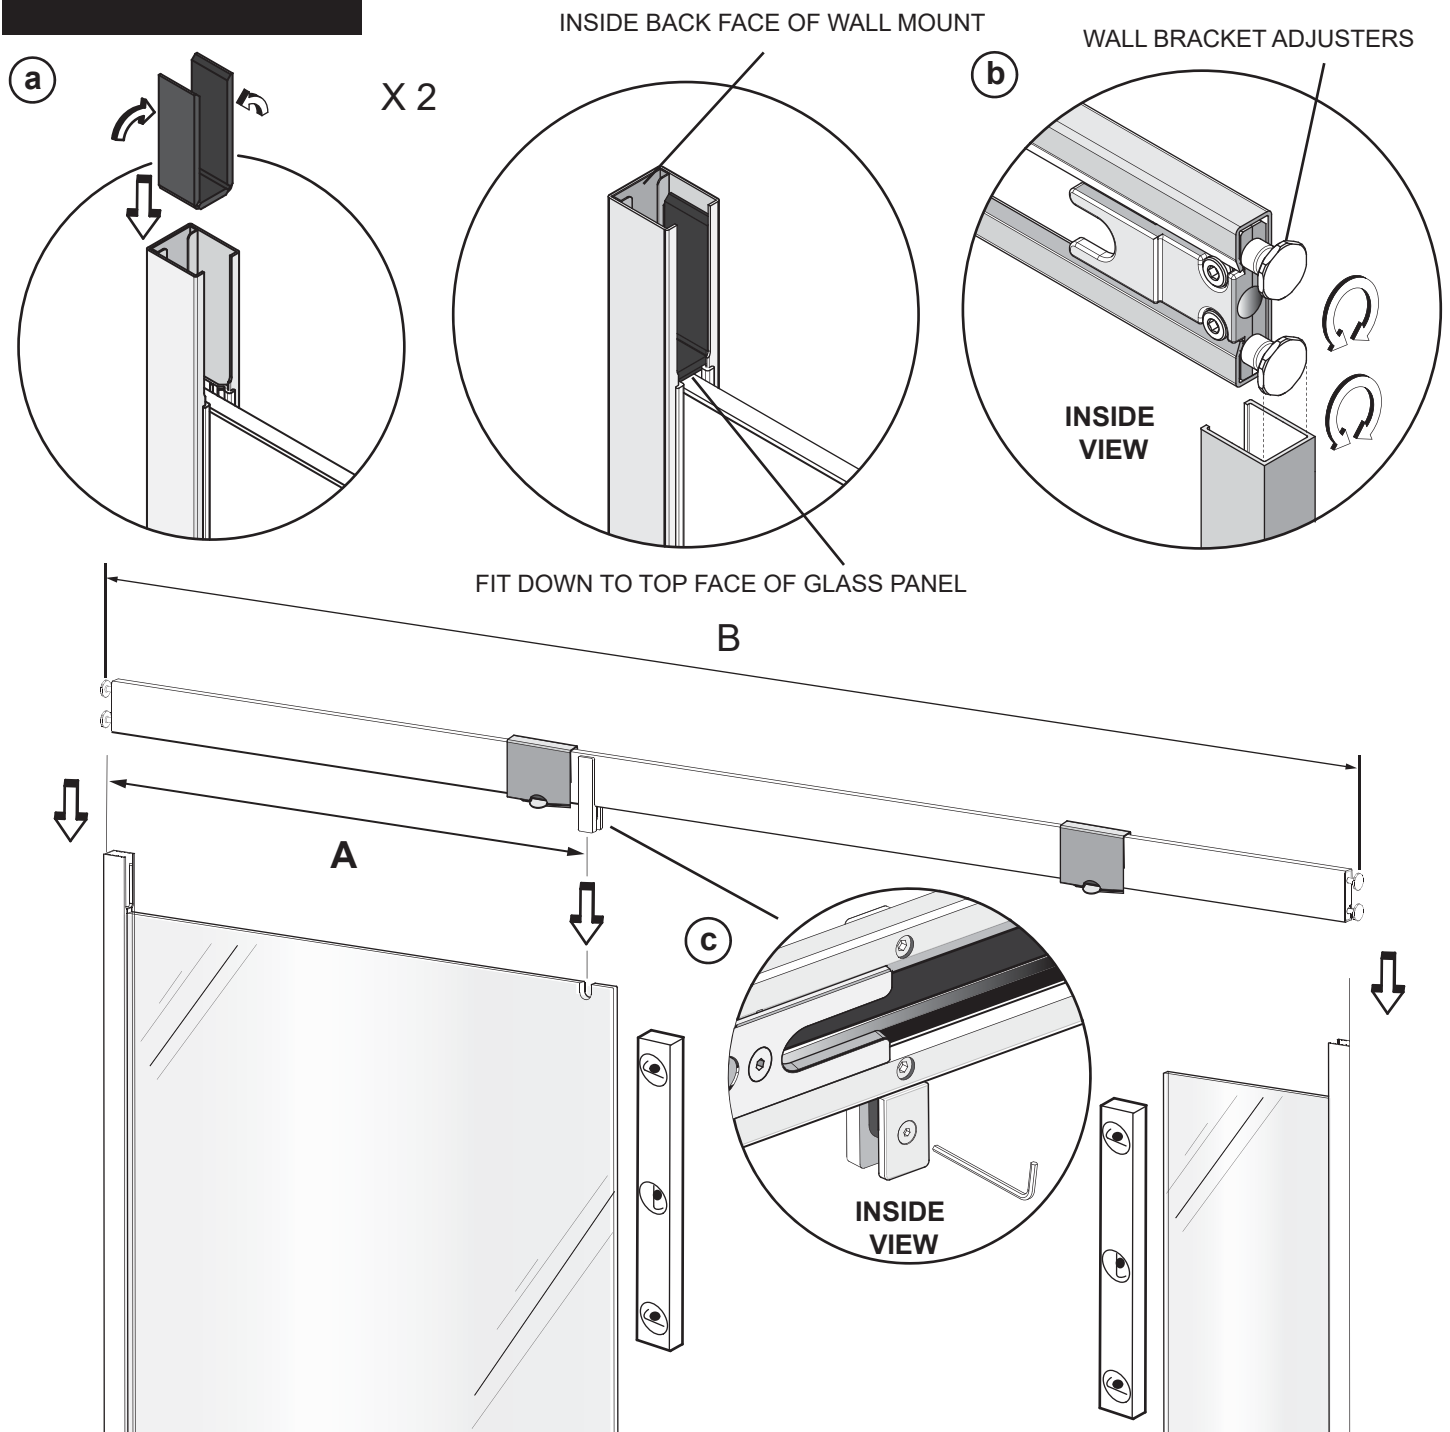

This stage is describing the fitting of the Top Track.

Before fitting the top track plumb the glass panels for vertical and ensure the entrance dimension is correct (See stage 4).

a. Fit the black wall mount infills into the top of the wall mounts.


Measure dimension **A** between the inside back face of the wall mount and centre of the cut out in the fixed glass panel.

b. Adjust the wall bracket adjusters so that the distance between the centre of the top track glass clamp and back face of the wall bracket adjusters is equal to dimension **A**. Measure the total width between the inside back faces of the wall mounts dimension **B**. Adjust the opposite wall bracket adjusters so that the total width between the outside faces of the adjusters is equal to dimension **B**. **IMPORTANT - Both wall bracket adjusters need to be adjusted in/out to the same depth relative to each other, align the flat edges of the adjusters vertically to slot into the wall mounts.**

c. Loosen the fixing screw on the inside of the top track glass clamp before fitting the top track.

Carefully fit the top track into the top of the wall mounts with the wall bracket adjusters slotting down the back faces of the wall mount and the top track glass clamp into the cut out into the fixed glass panel. Tighten the top track glass clamp.

STAGE 6

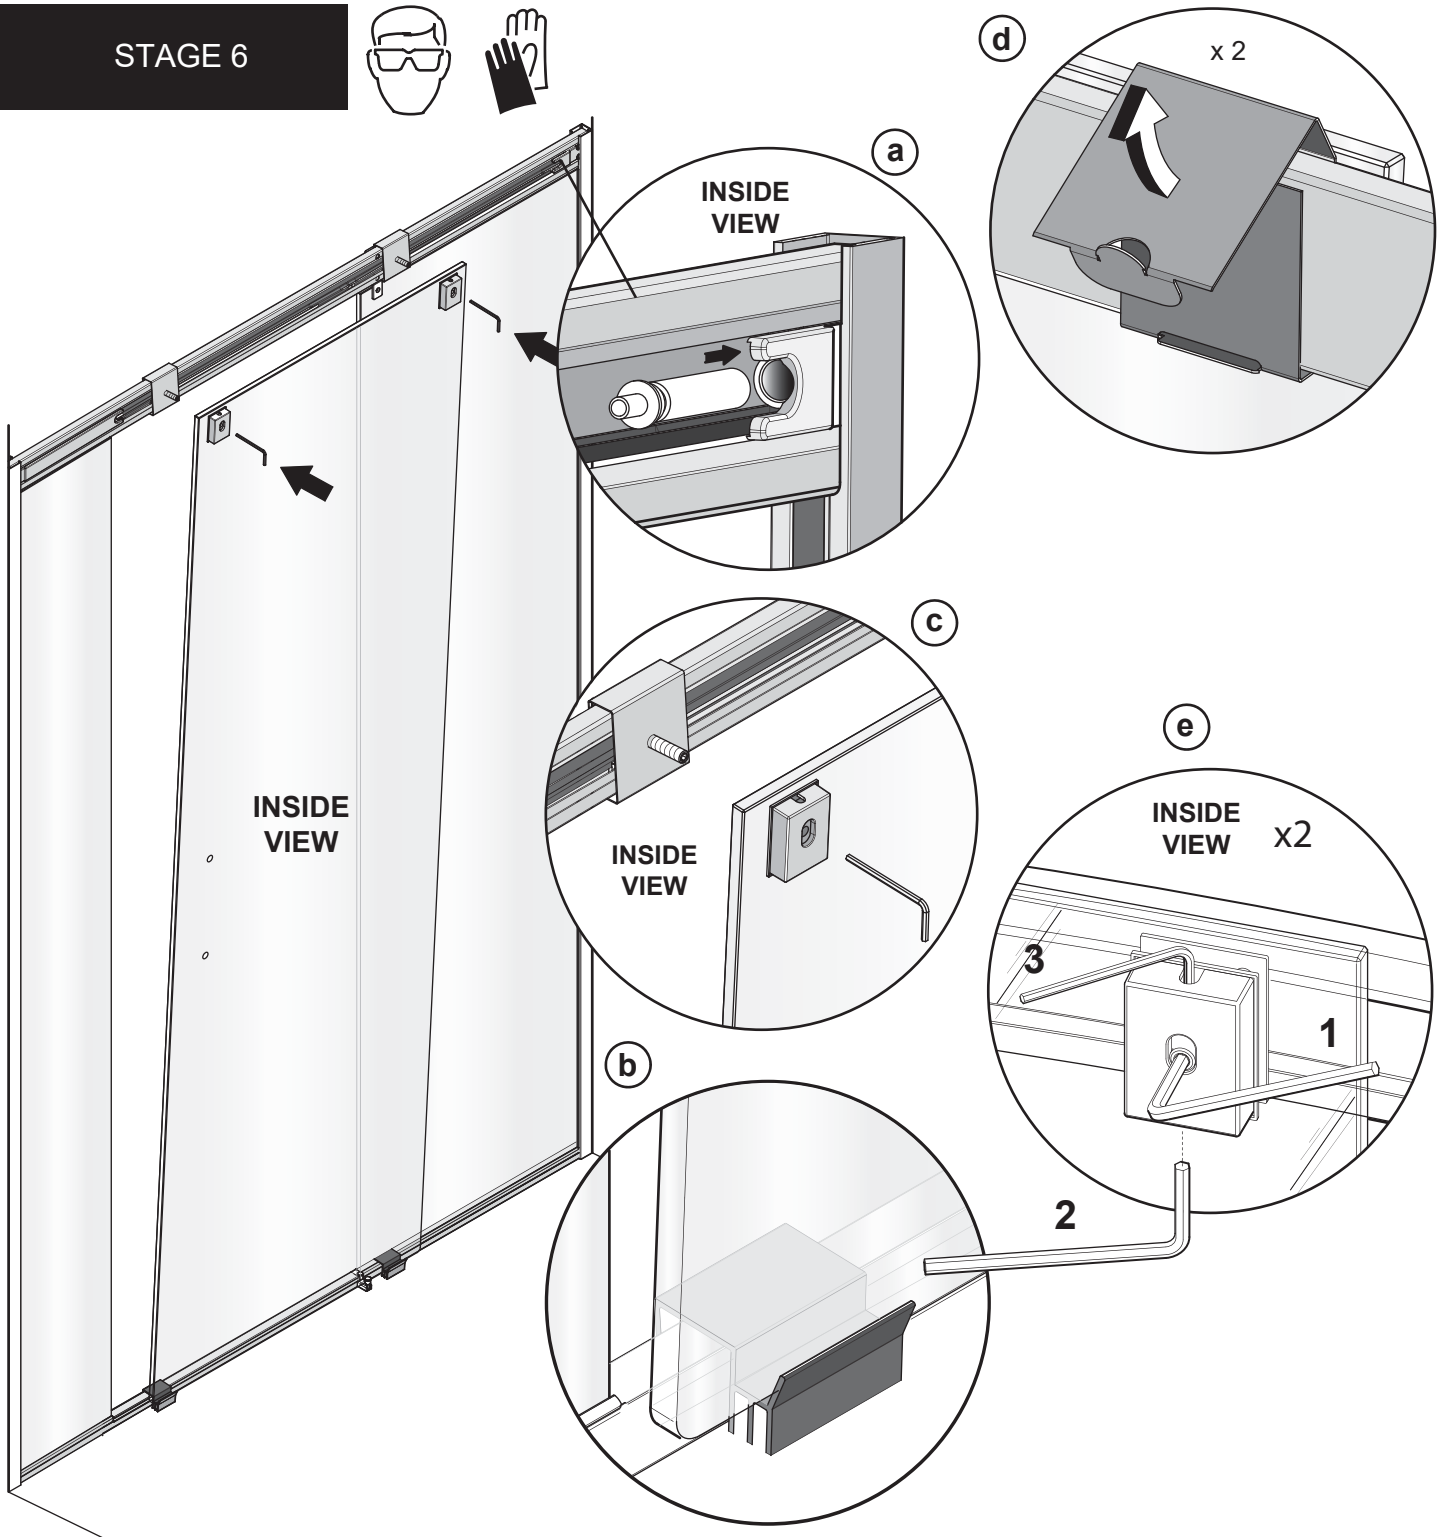


This stage is describing fitting of the Door Panel.


- a.** Fit the top track door dampers into the wall mount brackets at each end of the top track.
- b. Important** - Fit the plastic threshold protectors to the Threshold track at either side of the Door opening.
- c.** Load the door glass firstly onto the threshold protectors and door guide and then carefully guide the door up to the door roller threads and wind them through the door roller blocks fixed to the glass.
- d.** Remove both the cardboard top track door roller guides by pulling the tabs and unfolding them away from the top track.
- e.** Adjust the door panel if required so that it runs parallel to the door opening by adjusting the roller blocks on the inside of the door. To adjust the door away from the top track rotate the central set screw **C1** clockwise using a 4mm allen key. To adjust the door to the top track, rotate the central set screw **C1** anti-clockwise. **c.** The door glass can also be raised or lowered by the adjustment screw **C2** in the underside of the roller block using a 4mm allen key. Rotate clockwise to lower the door, rotate anti-clockwise to raise the door. **c.** Lock the adjustment with the set screw **C3** in the top of the roller block using a 2.5mm allen key.

STAGE 7

LINEAR BAR HANDLE

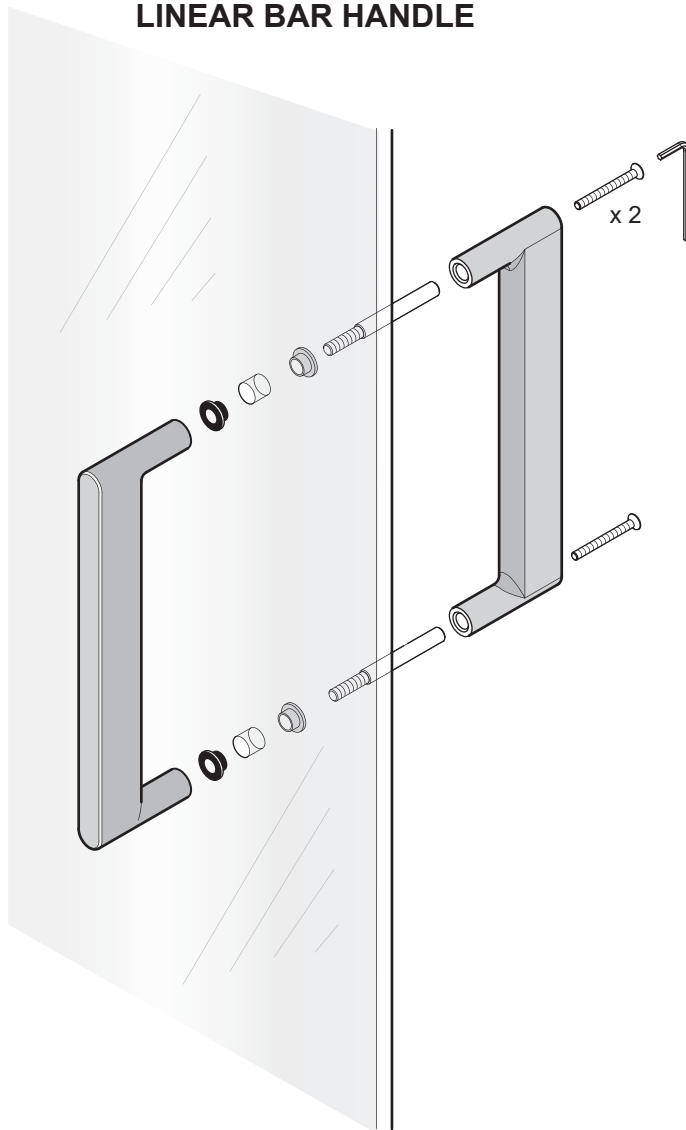

SINGLE STRAIGHT HANDLE

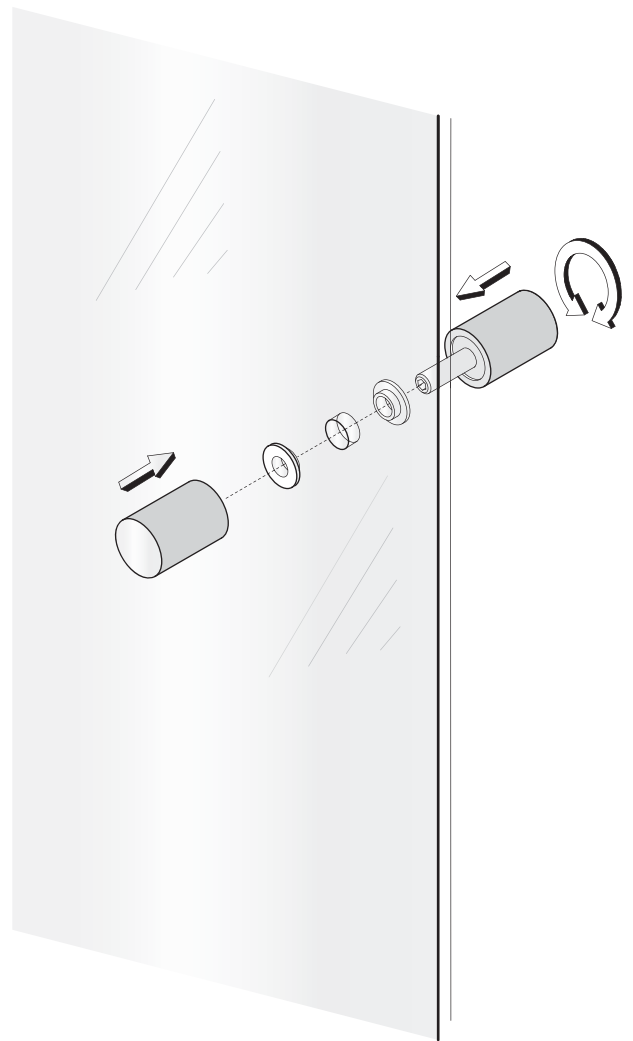

This stage is describing the fitting of the Door Handle

Linear Bar handle

Disassemble the handle by unscrewing the 2 x M4 x 40 Csk socket screws and removing the back handle. Place the 4 x black glass washers either side of the 2 holes in the Door glass. Carefully fit the front Handle and Handle connectors through the 2 holes in the Door glass. Fit the back Handle onto the Handle connectors and fix into position by fitting the 2 x M4 x 40 Csk socket screws.

Single Straight handle

Fit the Door handles to the glass ensuring that the white handle washers are placed in the hole in the glass between the handles and the door glass, screw together until tight.

STAGE 8



Fixed
Panel



Door

All models
except 1100-1175

INSIDE VIEW



Models
1100-1175 only

INSIDE VIEW




Small
Fixed
Panel

This stage is describing fitting the Caps and Seals

a. Fit the wall mount top caps.

b. Fit the door vertical seal to the edge of the door glass behind the fixed glass panel. The seal should fit down to the inside top face of the fixed panel frame when the door is in the closed position. Additional vertical seals are supplied that can also be fitted to the fixed panel glass and closure panel glass should they be required, subject to position of shower head and use.


STAGE 9

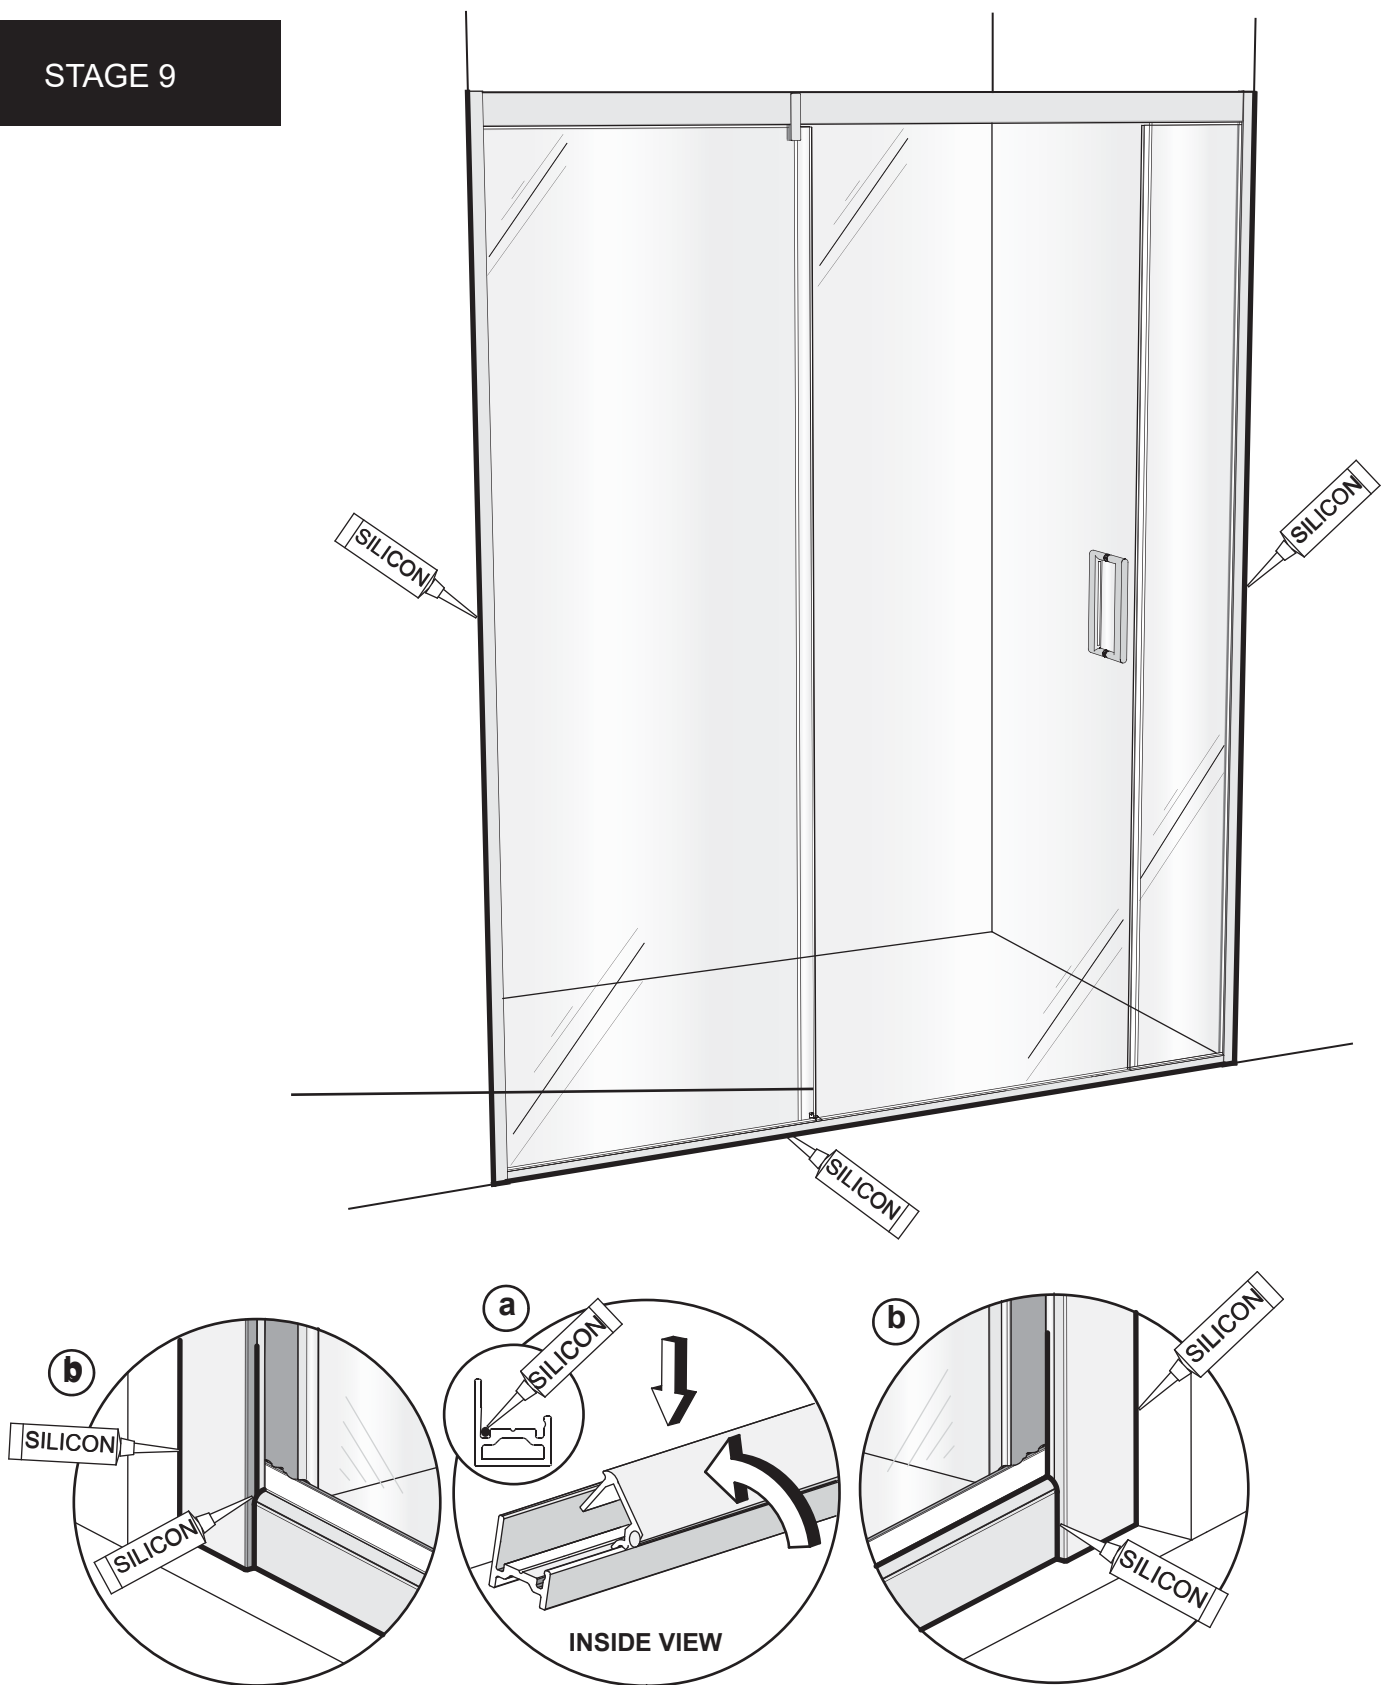

a. Apply a bead of silicon along the inside length of the threshold in the recess at the front of the track. Clip the threshold cover into the threshold extrusion by hooking the inside leg down first then pushing the front until the cover snaps into position. The threshold cover should fit tightly between the closure panel glass and the door guide.

b. Apply a thin bead of silicon along the bottom edge of both the wall mounts and all the way up the outside of both the wall mount extrusions between the wall mounts and the tiles. Apply a thin bead all the way along the threshold between the extrusion and the finished floor surface/tray. Continue around the joint where the threshold joins the wall mounts and also 50mm up the joint between the Wall mount and clip in seal. Masking tape can be used to achieve a tidy edge to the sealant. Remove the masking tape immediately and allow the silicon to cure for 24 hours before using the shower.

PARTS LIST

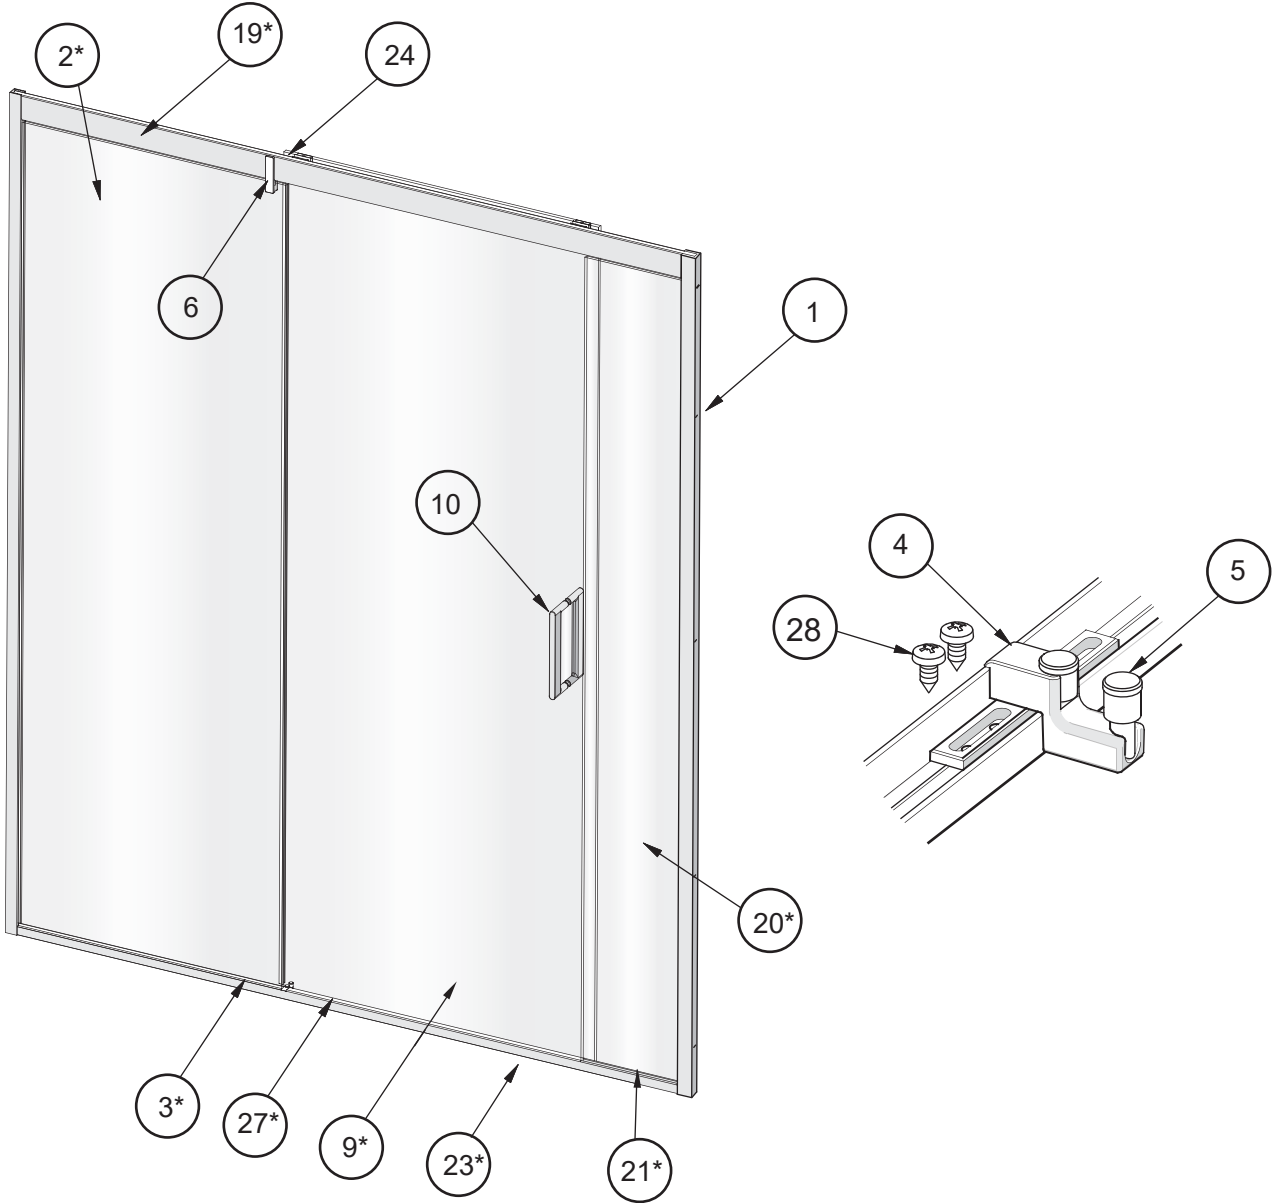

EPSR PARTS KIT		6105 AF	
No.8 X 32 PAN HEAD SELF TAP SCREW	1471 A SILVER	10	
WALL PLUG	1818 AF	10	
WALL MOUNT TOP CAP	6662 A SILVER	2	
DAMPER	1340 AF	2	
WALL MOUNT INFIL	6659 BLACK	2	

PARTS LIST

* ITEM VARIES DEPENDING ON MODEL

PARTS LIST				
ITEM	DESCRIPTION	PART NUMBER	QTY	LENGTH
1	WALL MOUNT	5714 ASSEMBLY	2	2050mm
2 *	FIXED GLASS PANEL MODEL 1100 TO 1175 MODEL 1200 TO 1475 MODEL 1500 TO 1800	10369 MGG CLEAR 7982M CLEAR/PLAIN 7982M CLEAR/PLAIN 7983M CLEAR/PLAIN	1 1 1 1	477mm 523mm 523mm 673mm
3 *	FIXED PANEL HORIZONTAL MODEL 1100 TO 1175 MODEL 1200 TO 1475 MODEL 1500 TO 1800	10393 A SILVER 5715 A SILVER 5716 A SILVER	1 1 1	523mm 523mm 673mm
4	GUIDE BLOCK	5768 A SILVER	1	
5	PTFE GUIDE	6989 AF	2	
6	FIXED PANEL GLASS CLAMP FRONT	5761 A SILVER	1	
7	FIXED PANEL GLASS BUSH	5763 BLACK	1	
8	FIXED PANEL GLASS CLAMP BACK	5762 A SILVER	1	
9 *	DOOR PANEL			
	MODEL 1100 TO 1175 MODEL 1200 TO 1475 MODEL 1500 TO 1800	10381 MGG CLEAR 7980 M CLEAR/PLAIN 7981M CLEAR/PLAIN	1 1 1	550mm 620mm 770mm
10	LINEAR BAR HANDLE	6185 AF	1	
11	WALL MOUNT BRACKET	5670 A SILVER	2	
12	WALL BRACKET FIXING	5903 AF	6	
13	WALL MOUNT ADJUSTER	8758 AF	4	
14*	BOTTOM TRACK GUIDE + INFILL 1100-1175 MODEL BOTTOM TRACK GUIDE + INFILL 1500-1800 MODEL BOTTOM TRACK GUIDE + INFILL 1200-1475 MODEL	10395 A SILVER + 10397 AF 8661 A SILVER + 6669 WHITE 8660 A SILVER + 6668 WHITE	2 2 2	
16*	TOP TRACK INFIL MODEL 1100 TOP TRACK INFIL MODEL 1200 TOP TRACK INFIL MODEL 1500	BLACK 4603 BLACK 4601 BLACK	2 2 2	
18	TOP TRACK INFIL STOP	5772 BLACK	4	
19*	TOP TRACK MODEL 1100/1125/1150/1175 MODEL 1200 MODEL 1400 MODEL 1500 MODEL 1600 MODEL 1700 MODEL 1800	10385/10386/10387/10388 A SILVER 5708 A SILVER 5709 A SILVER 5710 A SILVER 5711 A SILVER 5712 A SILVER 5713 A SILVER	1 1 1 1 1 1 1	1125/1150/1175/1200mm 1150mm 1350mm 1450mm 1550mm 1650mm 1750mm
20*	CLOSURE FIXED PANEL CLOSURE FIXED PANEL 1200/1500 1225/1525 1250/1550 1275/1575 CLOSURE FIXED PANEL 1300/1600 1325/1625 1350/1650 1375/1675 CLOSURE FIXED PANEL 1400/1700 1425/1725 1450/1750 1475/1775 CLOSURE FIXED PANEL 1800	7984 / 7889 / 7890 / 7891 M CLEAR/PLAIN 7985 / 7892 / 7893 / 7894 M CLEAR/PLAIN 7986 / 7895 / 7896 / 7897 M CLEAR/PLAIN 7987M CLEAR/PLAIN	1 1 1 1	50 / 75 / 100 / 125mm 150 / 175 / 200 / 225mm 250 / 275 / 300 / 325mm 350mm
21*	RECESS CLOSURE PANEL HORIZONTAL MODEL 1200/1500 1225/1525 1250/1550 1275/1575 MODEL 1300/1600 1325/1625 1350/1650 1375/1675 MODEL 1400/1700 1425/1725 1450/1750 1475/1775 MODEL 1800	5751 / 6350 / 6351 / 6352 A SILVER 5752 / 6353 / 6354 / 6355 A SILVER 5753 / 6356 / 6357 / 6358 A SILVER 5754 A SILVER	1 1 1 1	50 / 75 / 100 / 125mm 150 / 175 / 200 / 225mm 250 / 275 / 300 / 325mm 350mm
22 *	CORNER WALL MOUNT BRACKET	5775 A SILVER	1	
23 *	RECESS HORIZONTAL MODEL 1200 1225 1250 1275 MODEL 1300 1325 1350 1375 MODEL 1400 1425 1450 1475 MODEL 1500 1525 1550 1575 MODEL 1600 1625 1650 1675 MODEL 1700 1725 1750 1775 MODEL 1800	5733 / 6330 / 6331 / 6332 A SILVER 6333 / 6334 / 6335 / 6336 A SILVER 5734 / 6337 / 6338 / 6339 A SILVER 5735 / 6340 / 6341 / 6342 A SILVER 5736 / 6343 / 6344 / 6345 A SILVER 5737 / 6346 / 6347 / 6348 A SILVER 5738 A SILVER	1 1 1 1 1 1 1	1150 / 1175 / 1200 / 1225mm 1250 / 1275 / 1300 / 1325mm 1350 / 1375 / 1400 / 1425mm 1450 / 1475 / 1500 / 1525mm 1550 / 1575 / 1600 / 1625mm 1650 / 1675 / 1700 / 1725mm 1750mm
24 *	FIXED PANEL VERTICAL GASKET	2308 CLEAR	3	1963mm
25 *	INSIDE TOP TRACK COVER PLATE MODEL 1250/1550 1275/1575 INSIDE TOP TRACK COVER PLATE MODEL 1300/1600 1325/1625 INSIDE TOP TRACK COVER PLATE MODEL 1350/1650 1375/1675 INSIDE TOP TRACK COVER PLATE MODEL 1400/1700 1425/1725 INSIDE TOP TRACK COVER PLATE MODEL 1450/1750 1475/1775 INSIDE TOP TRACK COVER PLATE MODEL 1800	6289 / 6290 A SILVER 5777 / 6291 A SILVER 6292 / 6293 A SILVER 5774 / 6294 A SILVER 6295 / 6296 A SILVER 5778 A SILVER	1 1 1 1 1 1	32 / 57mm 82 / 107mm 132 / 157mm 182 / 207mm 232 / 257mm 282mm
26 *	THRESHOLD COVER MODEL 1200 TO 1475 THRESHOLD COVER MODEL 1500 TO 1800	5749 A SILVER 5750 A SILVER	1 1	565mm 715mm
28	NO.8 x 9.5 PAN SELF TAP SCREW	1420 A SILVER	2	
29	WALL MOUNT EXTRUSION STOP	6049 A SILVER	2	
30	M4 x 6 SOCKET BUTTON HEAD SCREW	1518 A SILVER	2	
31	CENTRE TRACK FRONT PLATE	6598 A SILVER	1	
32	CENTRE TRACK BACK PLATE	6597 A SILVER	1	
33	M5 x 12 CSK SKT SCREW	1518 A SILVER	2	
34	WALL MOUNT EXTRUSION STOP NUT	6085 A SILVER	2	
35	SS WALL MOUNT SEAL	2388 CLEAR	2	
36	EAUZ MODIFIED SOCK SET + ST.ST BEARING	8580 AF	2	

