


matki

EAUZONE

EHCL - HINGED DOOR FROM PANEL,
WITH RADIUS 20 PANEL FOR CORNER

BRITISH PATENT NO:2470778

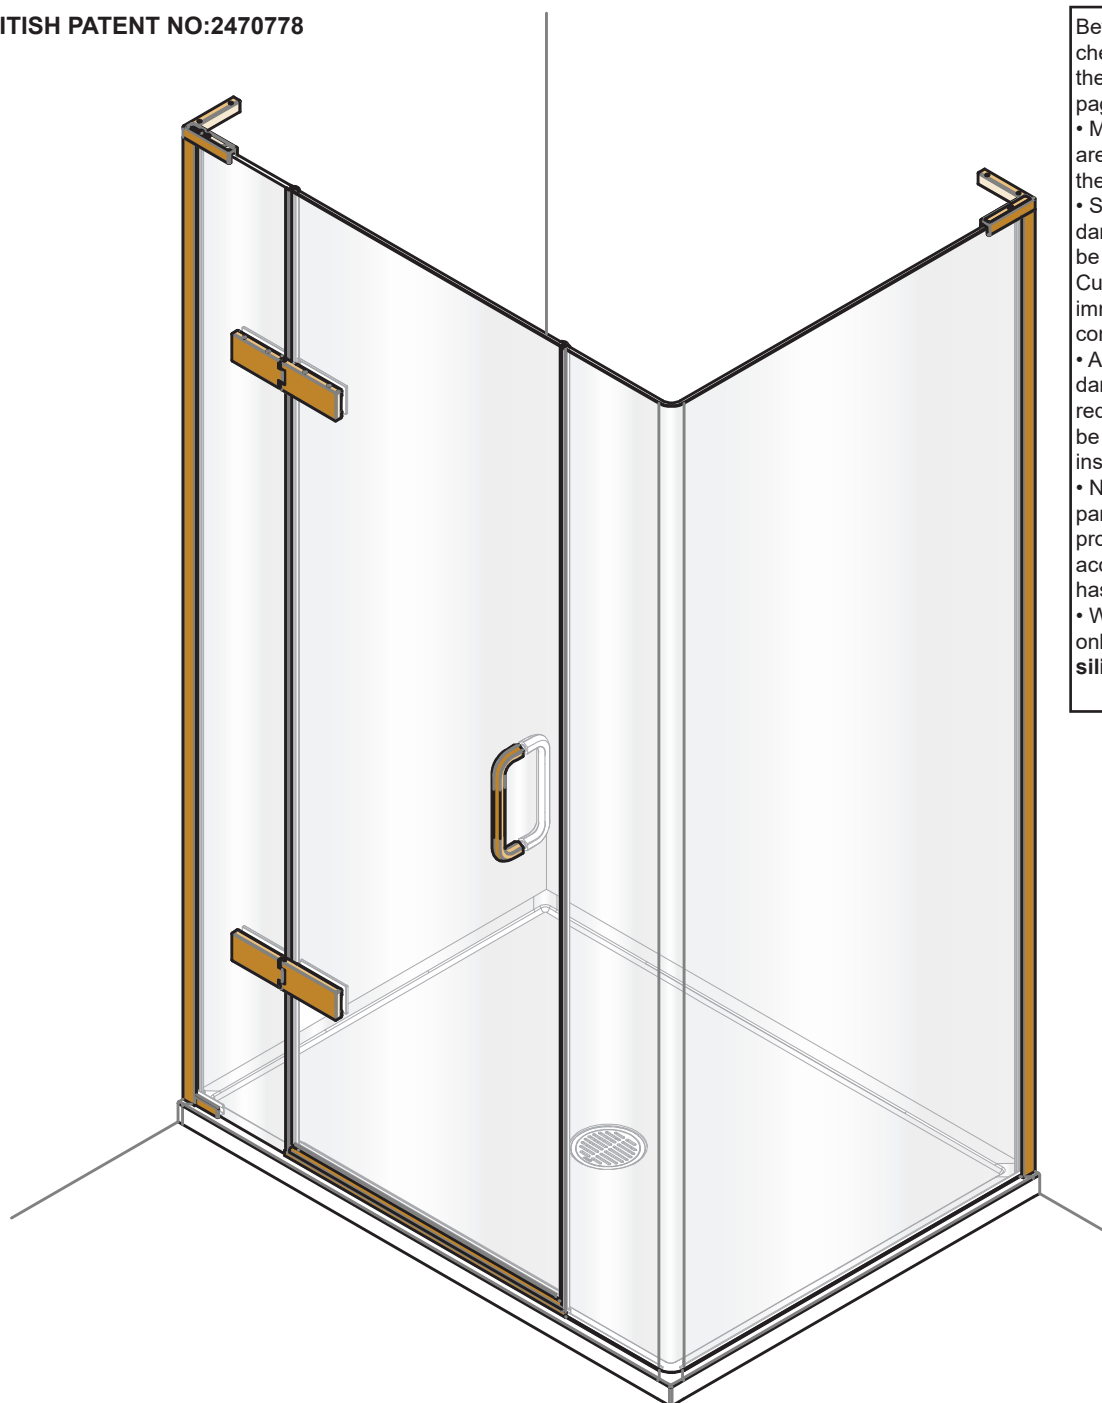

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018


MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE:01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

10694 AF 03/25

Matki recommend that this product is fitted by professional installers



EHCL LH

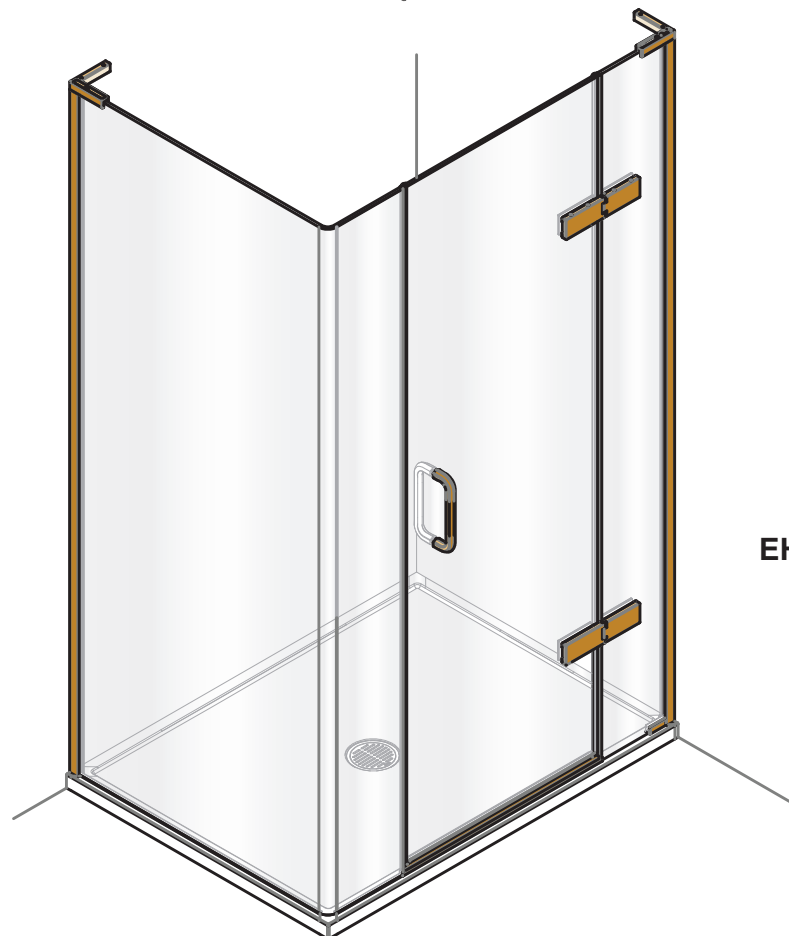

EHCL RH

THE STAGES IN THIS INSTALLATION BOOKLET SHOW LH HINGED DOOR INSTALLATION, REVERSE FOR RH.

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door and Side panel, Stage 7 - 8. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.


DIMENSIONS

HINGE PANEL + DOOR + CLOSURE PANEL

MODEL	A	B	C	Adjustment Range
EHCL1200	250	700	250	1167 – 1182mm
EHCL1300	350	700	250	1267 – 1282mm
EHCL1400	450	700	250	1367 – 1382mm
EHCL1500	550	700	250	1467 – 1482mm
EHCL1600	550	800	250	1567 – 1582mm



SIDE PANEL D

MODEL	Adjustment Range
EWL800SP	770 – 785mm
EWL900SP	870 – 885mm
EWL1000SP	970 – 985mm

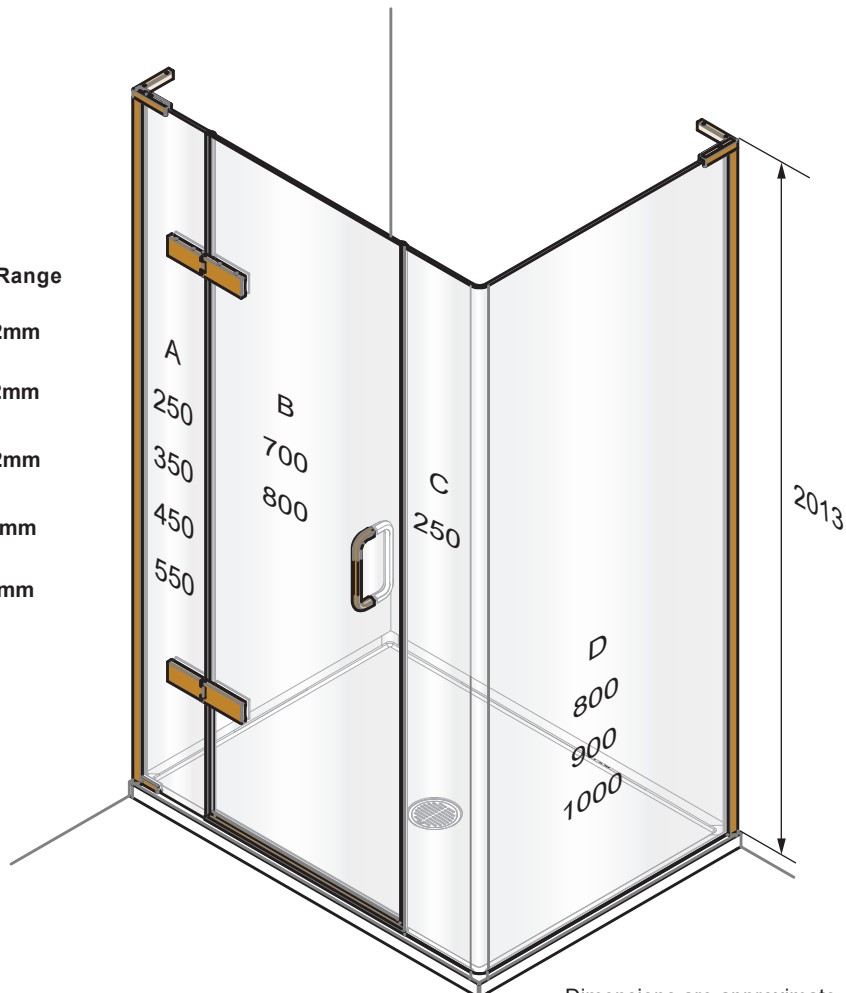

Dimensions are approximate

SETTING OUT

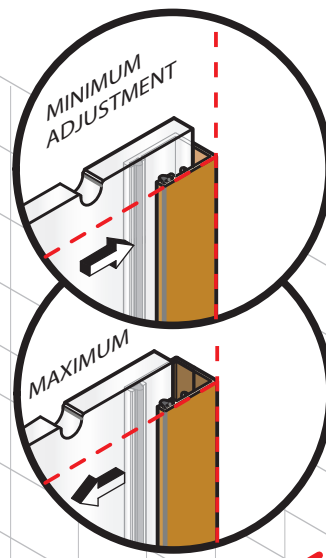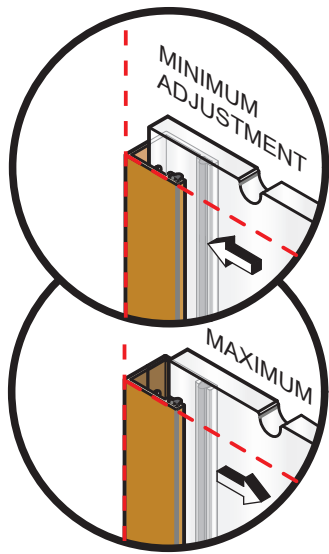


A+B+C

EHCL1200	1167 – 1182mm
EHCL1300	1267 – 1282mm
EHCL1400	1367 – 1382mm
EHCL1500	1467 – 1482mm
EHCL1600	1567 – 1582mm






D - SIDE PANEL

EWL800SP	770 – 785mm
EWL900SP	870 – 885mm
EWL1000SP	970 – 985mm

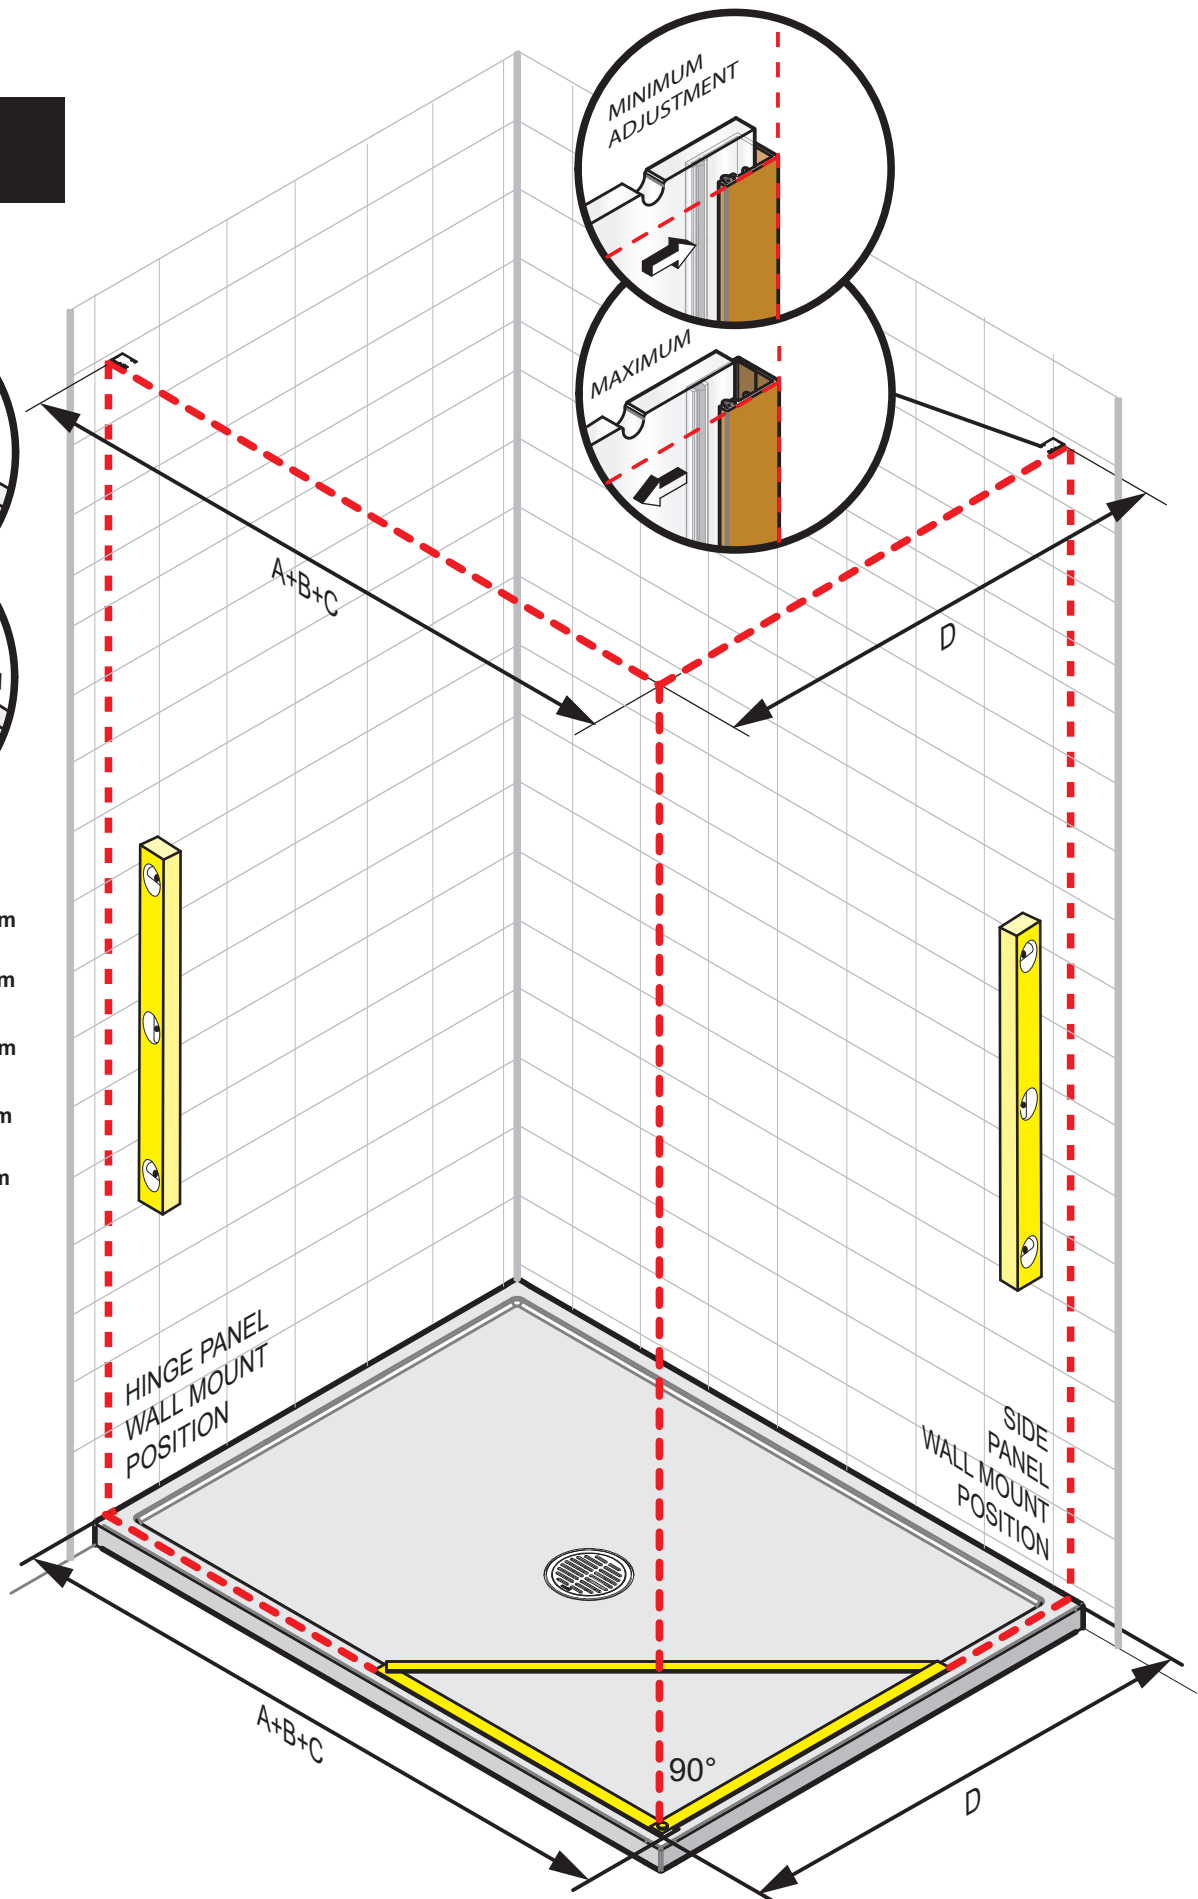



Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1

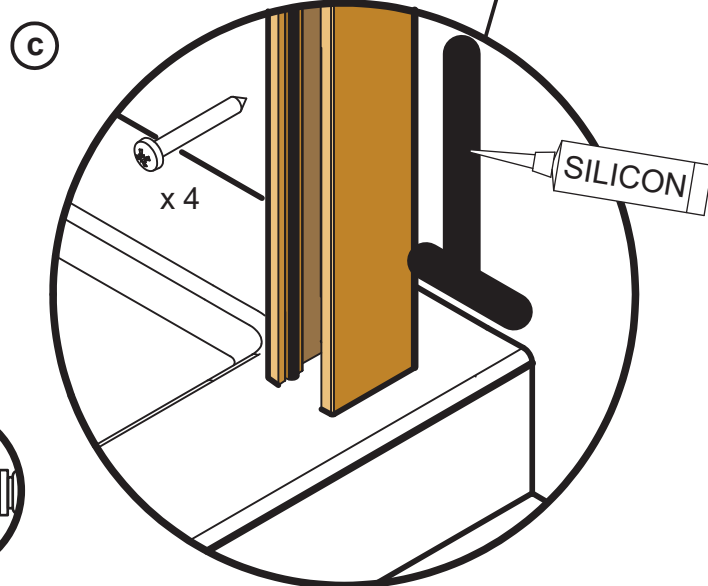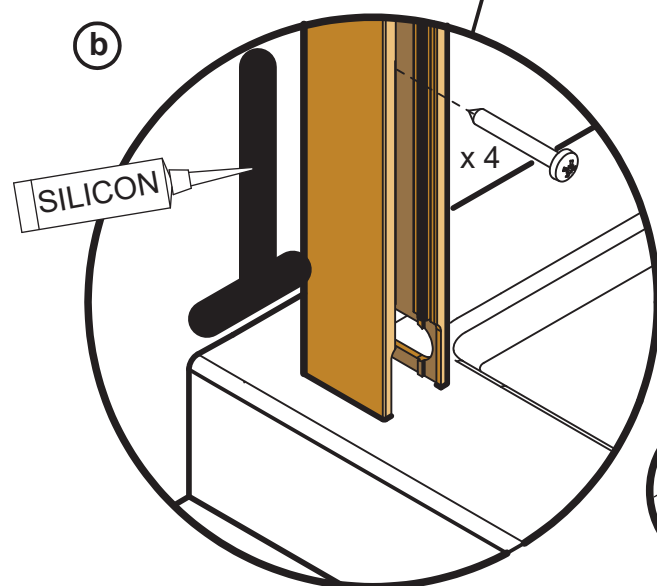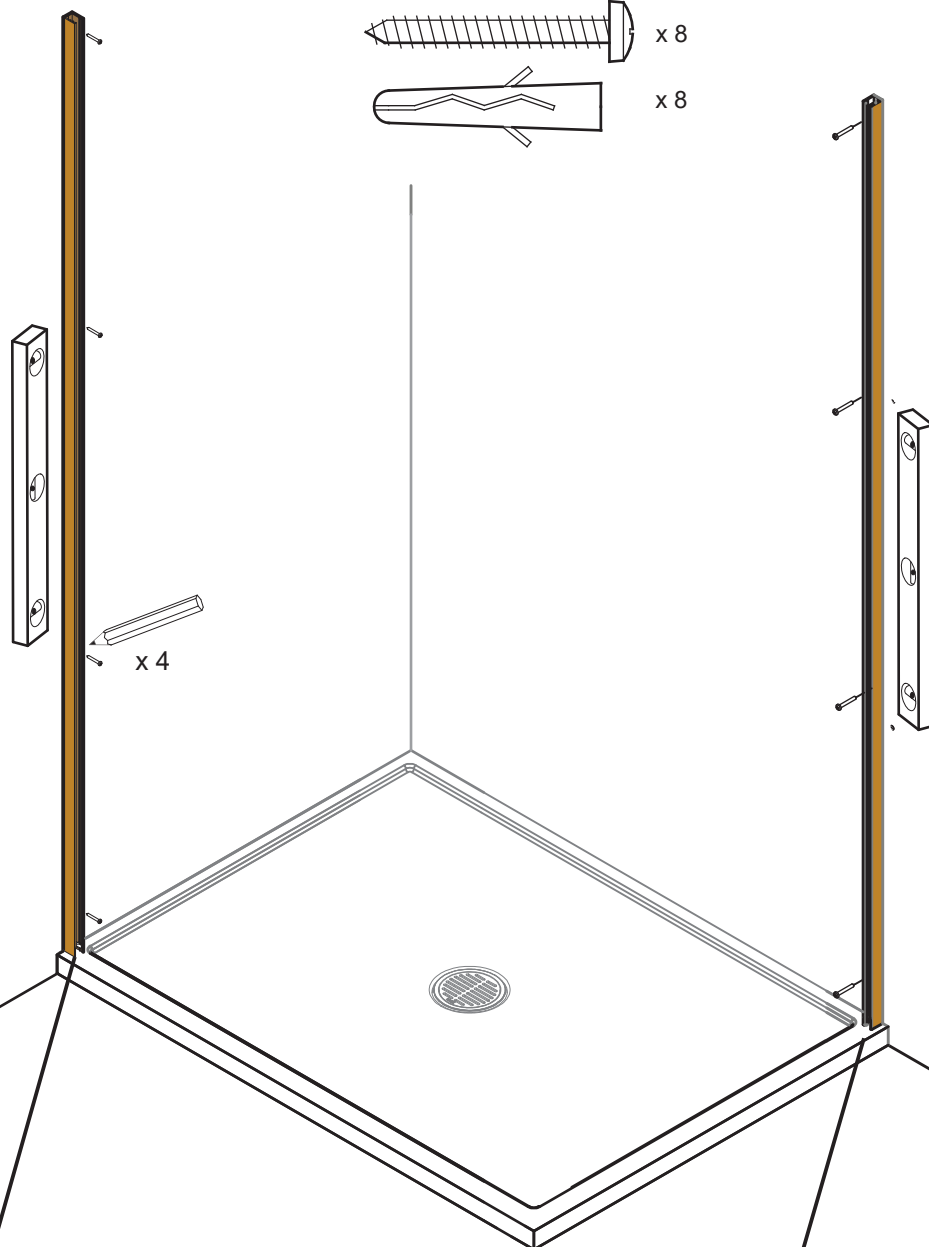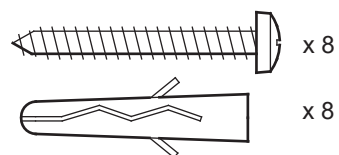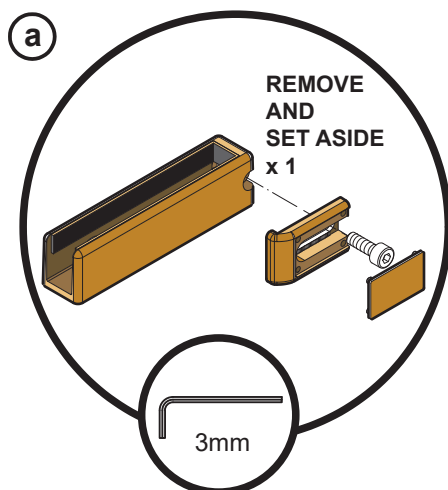


IMAGES SHOW LH PANEL HINGED DOOR INSTALLATION REVERSE FOR RH.

STAGE 2





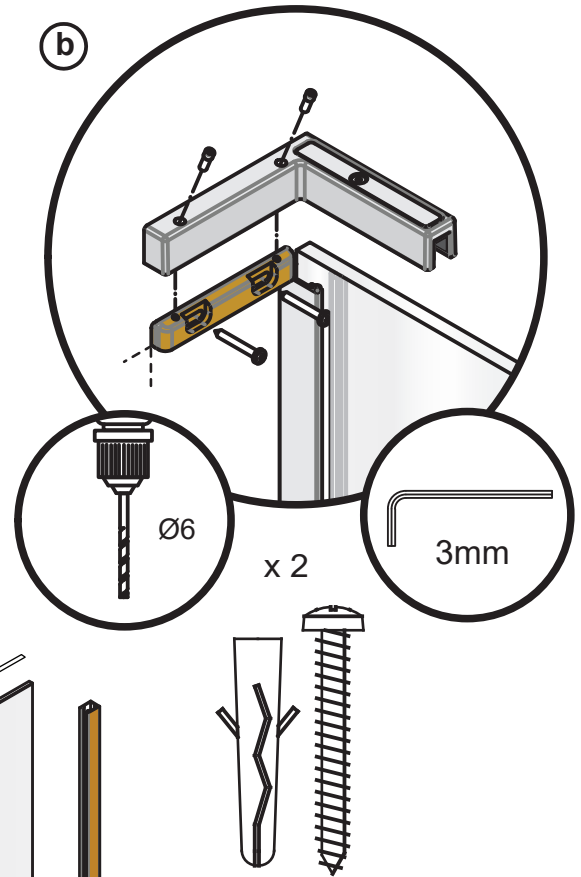
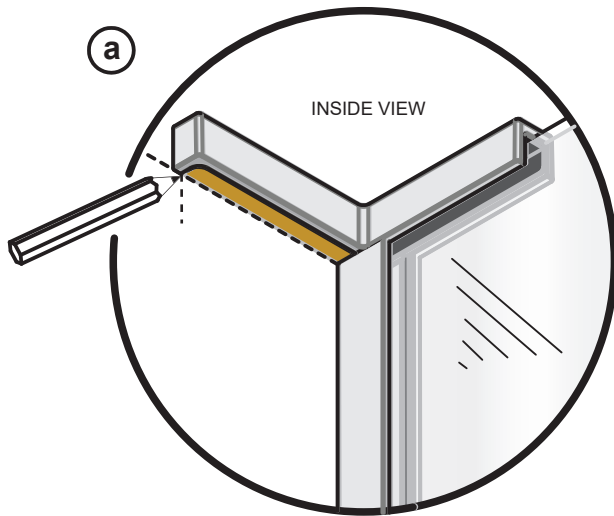


Remove Redundant
Top Edge Protectors (x2)





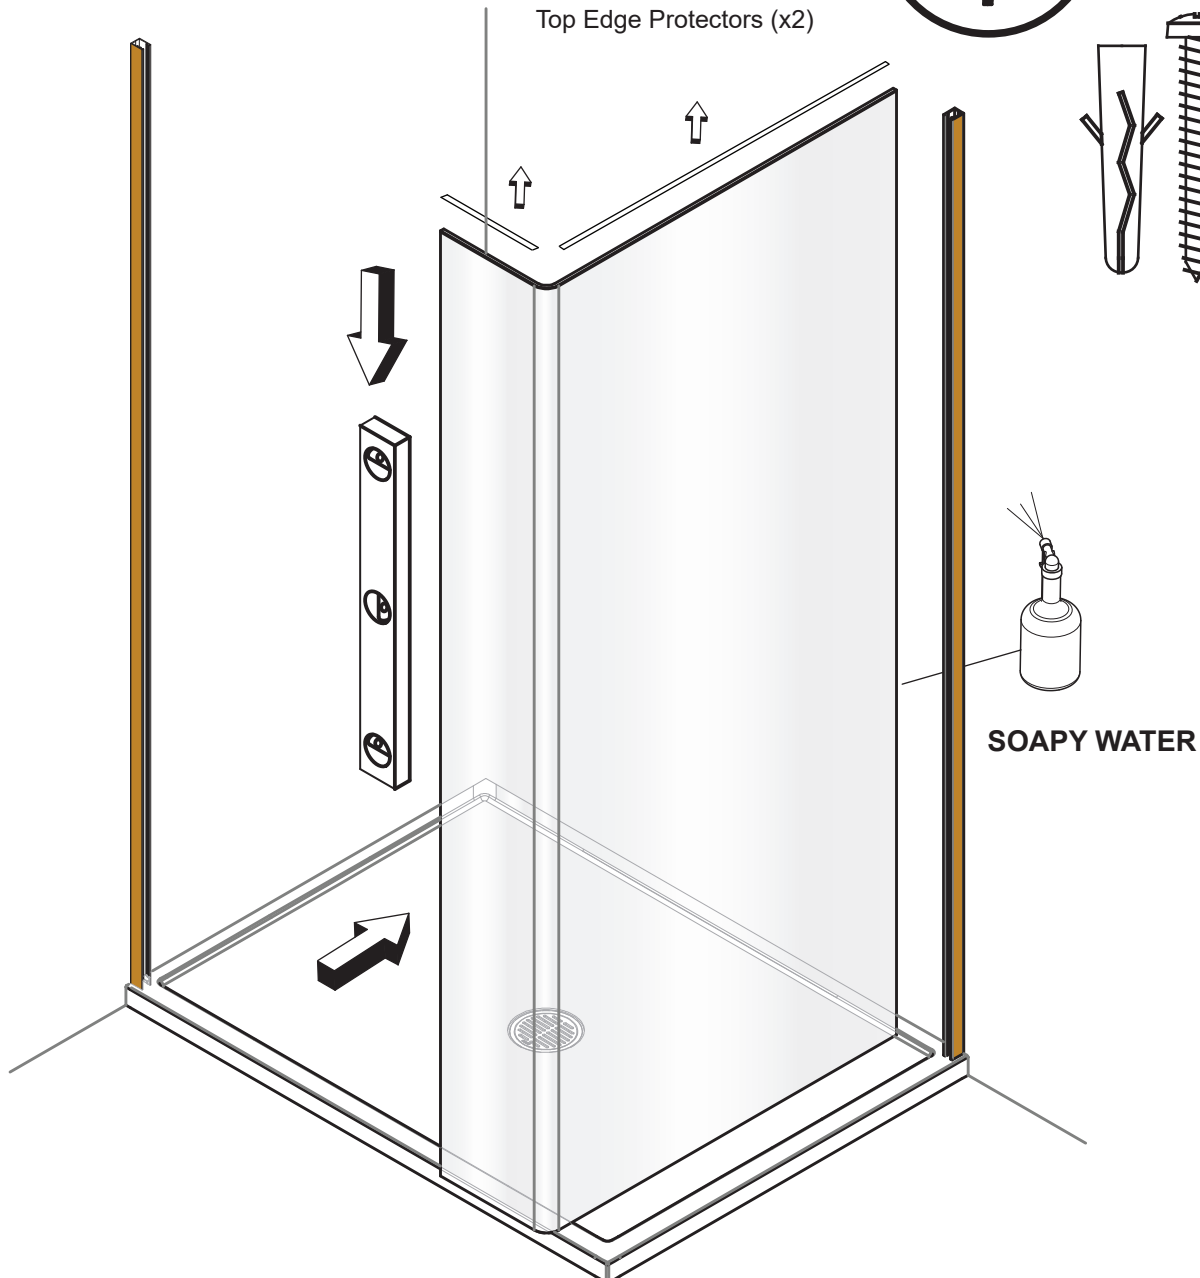


STAGE 3


SOAPY WATER

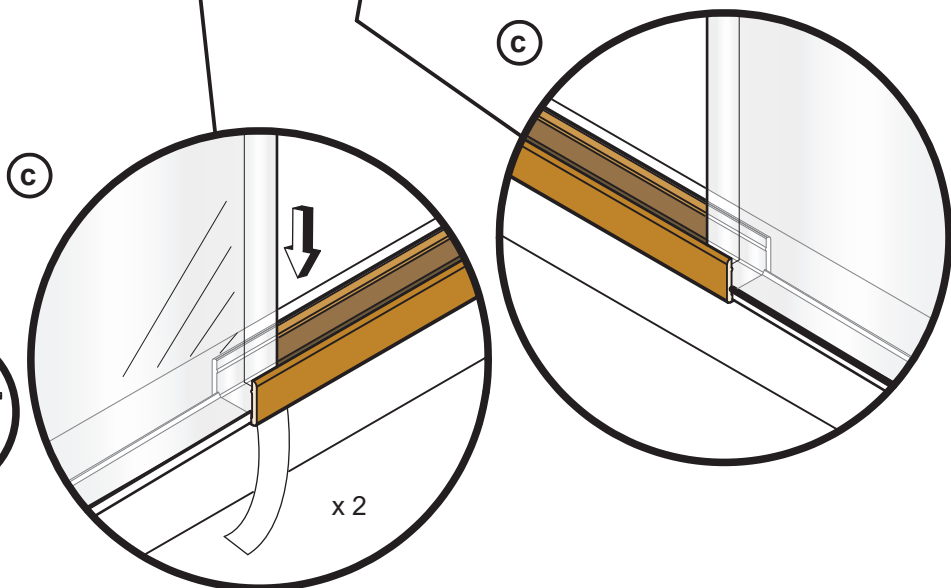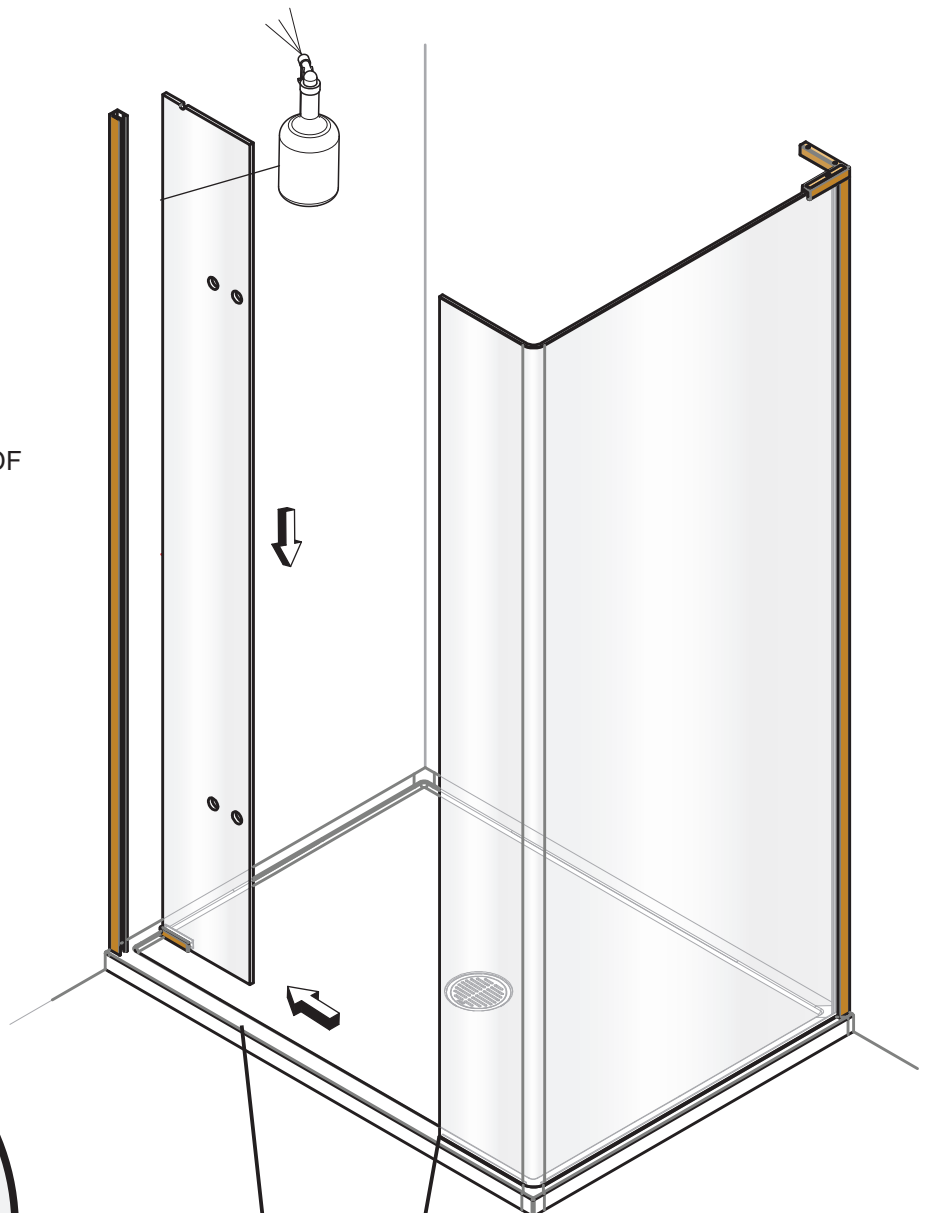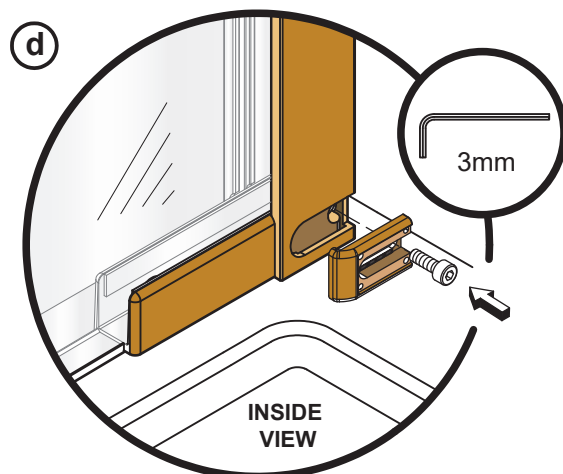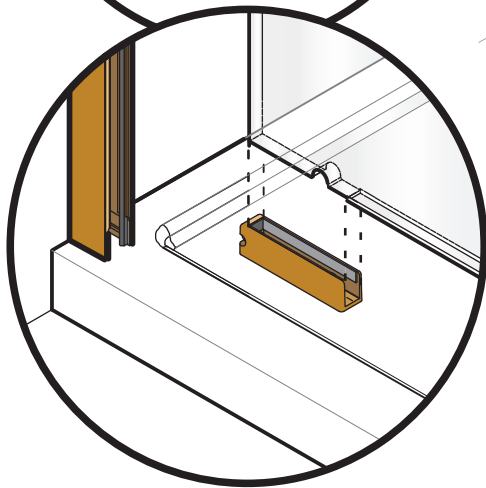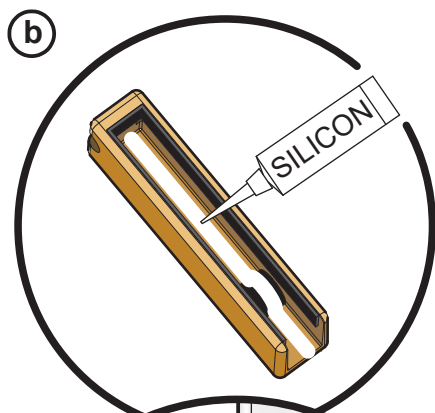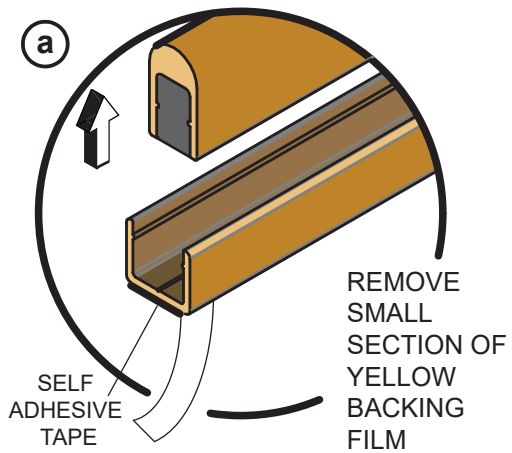

STAGE 4

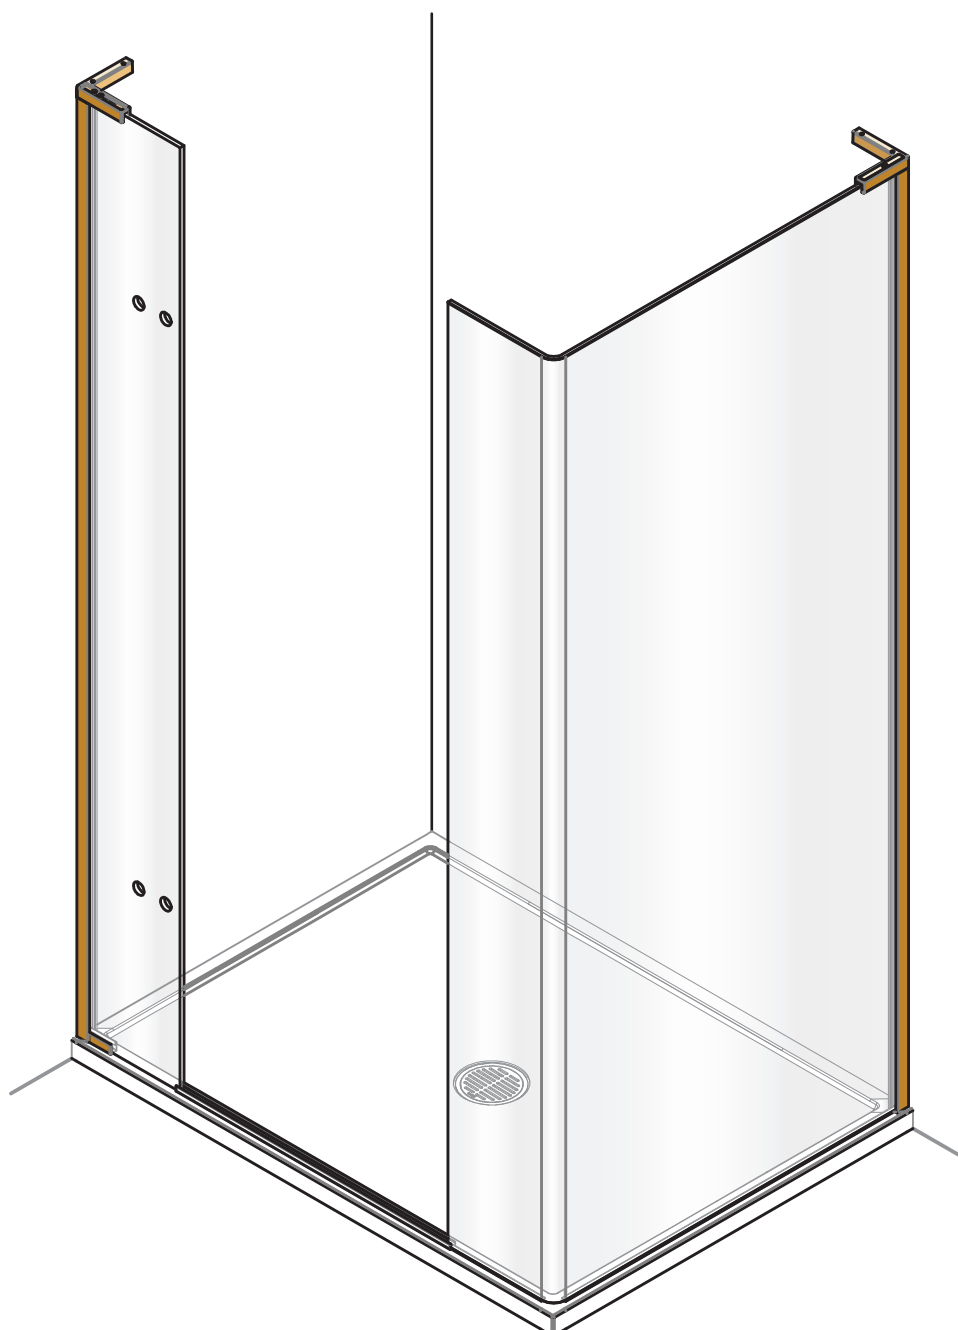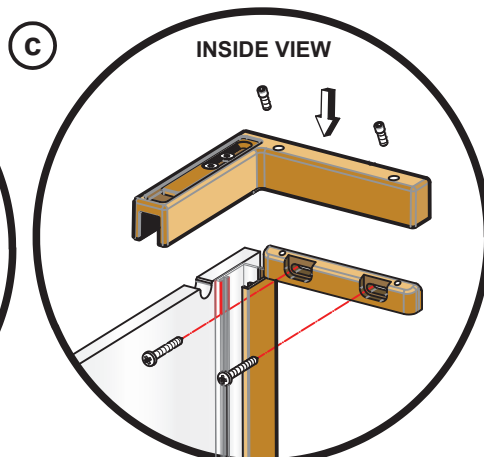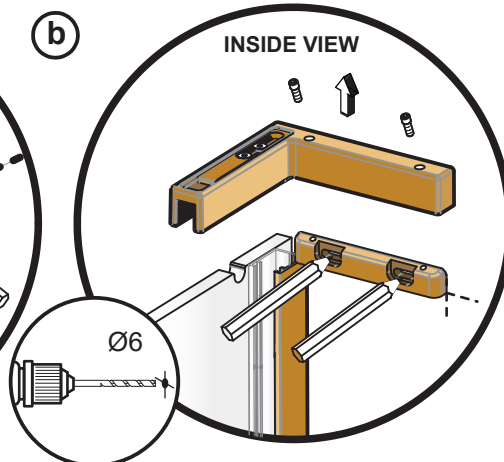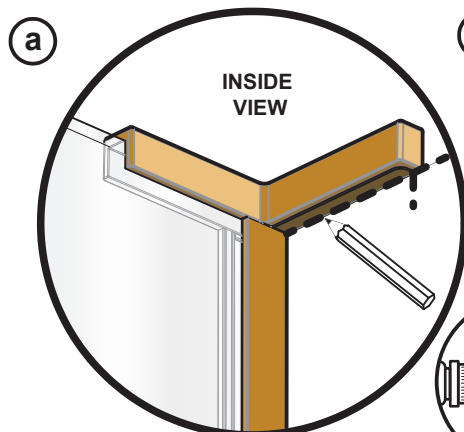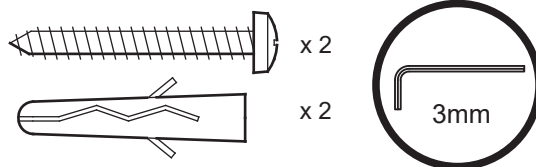


STAGE 5

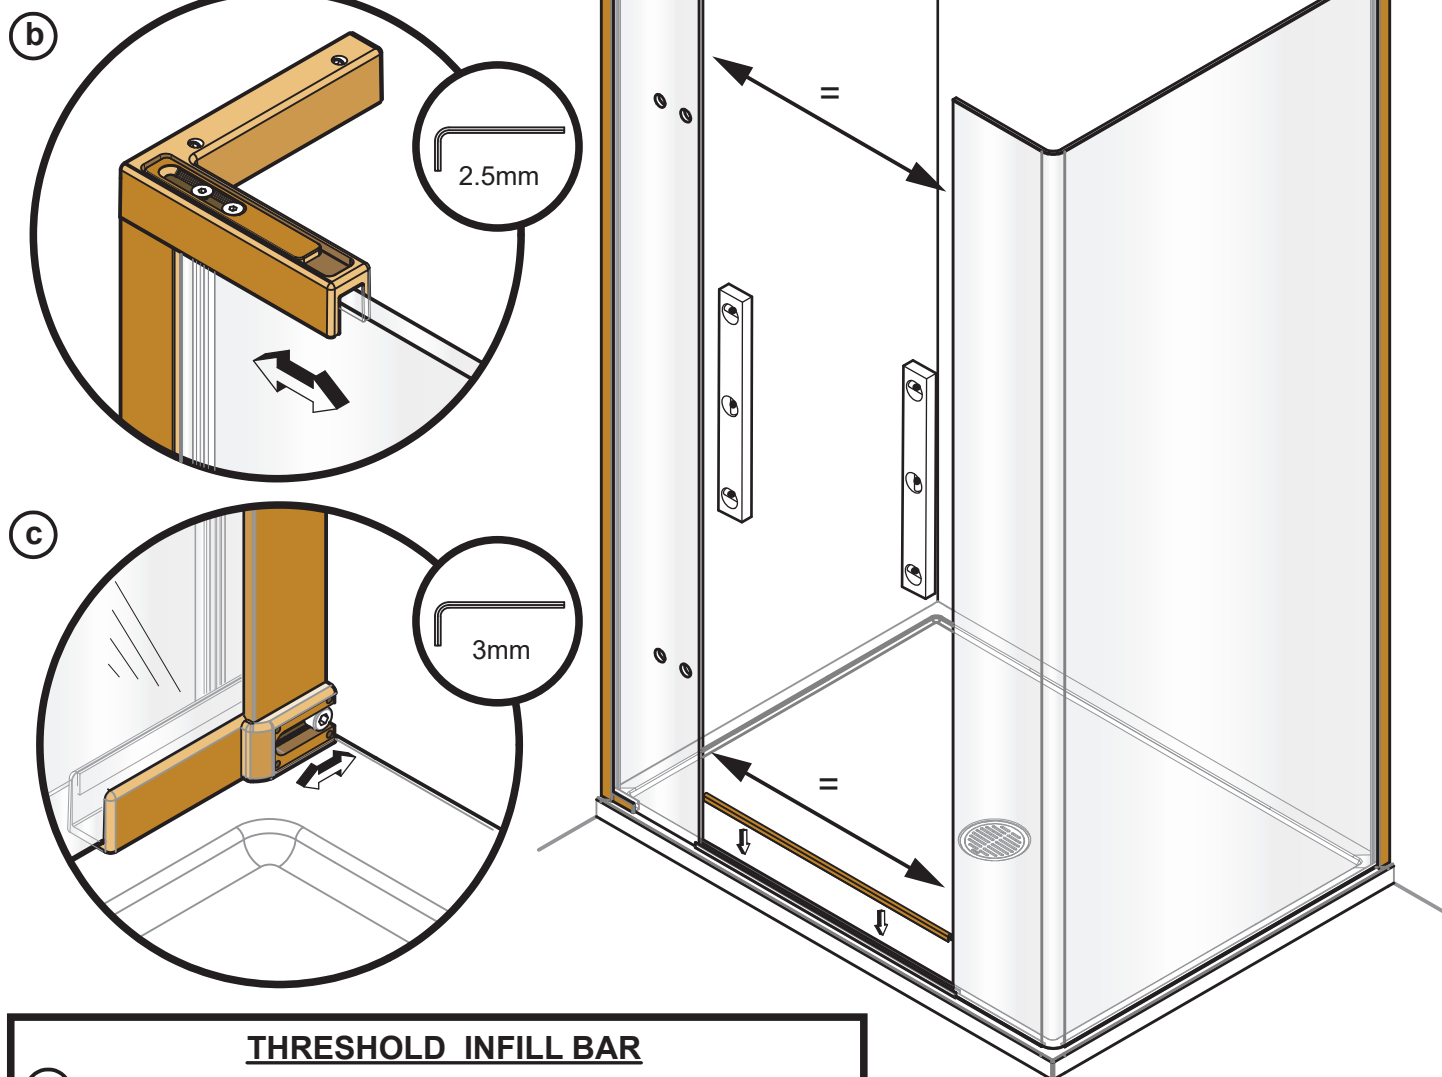


THRESHOLD INFILL BAR


STANDARD

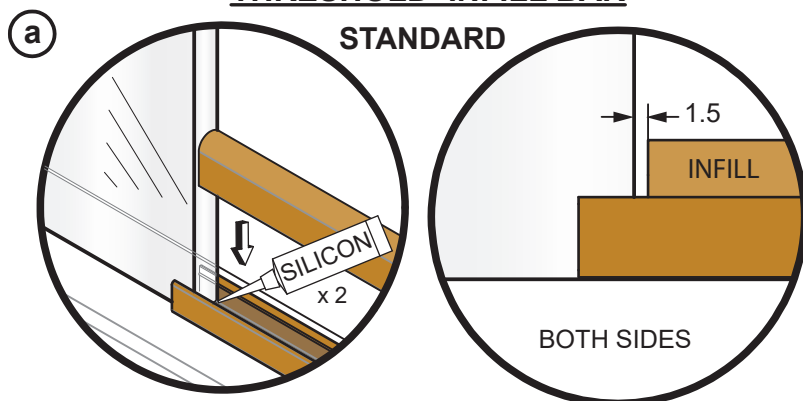

ACCENT FRAMES

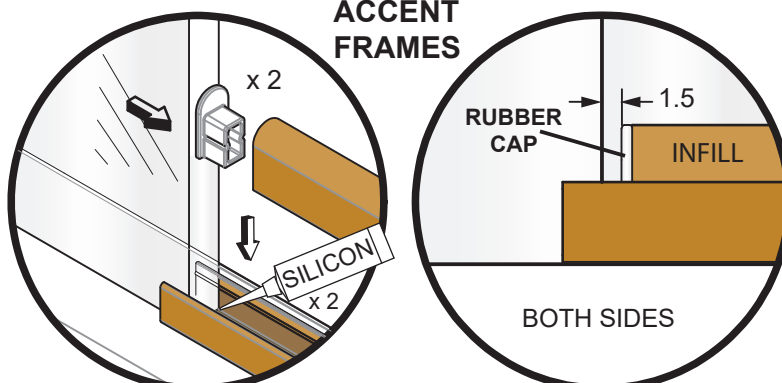

THRESHOLD
INFILL BAR
ADJUST HEIGHT
IF REQUIRED x 2

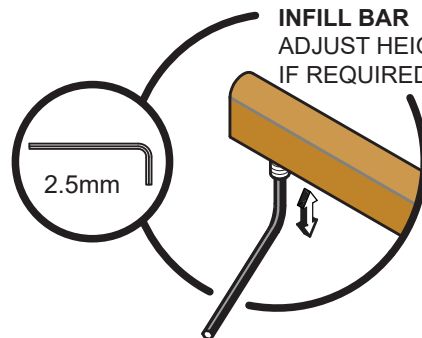


STAGE 6

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR PANEL HAND


LH HINGE PANEL ADJUSTMENT BLOCK POSITION

RH HINGE PANEL ADJUSTMENT BLOCK POSITION

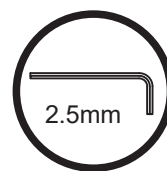

UPPER HINGE

REMOVE BACKING
FILM

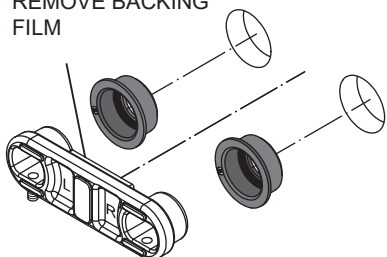


ROTATE
OUT BY
2mm



UPPER HINGE

REMOVE BACKING
FILM

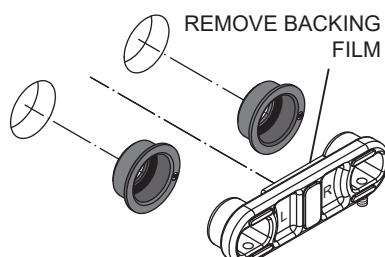


ROTATE
OUT BY
2mm



LOWER HINGE

REMOVE BACKING
FILM

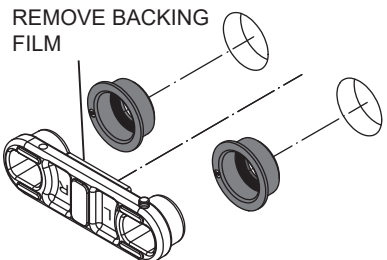


ROTATE
OUT BY
2mm




LOWER HINGE

REMOVE BACKING
FILM

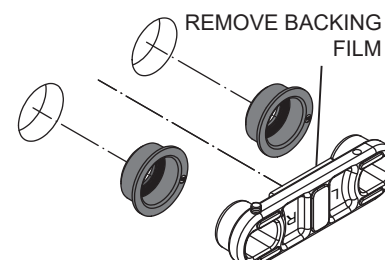

ROTATE
OUT BY
2mm






STAGE 7





IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH DOOR ADJUSTMENT BLOCK POSITION

RH DOOR ADJUSTMENT BLOCK POSITION

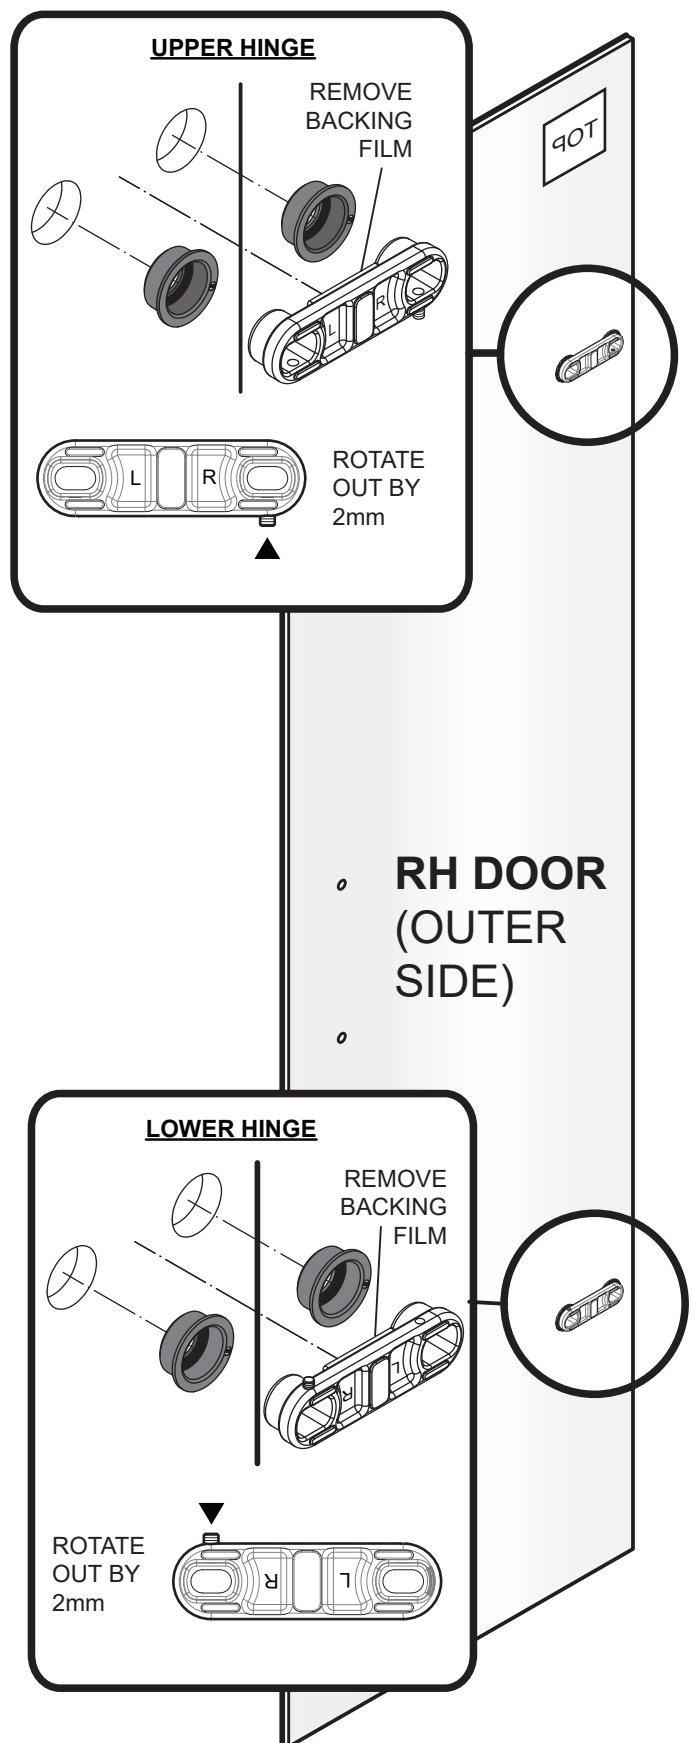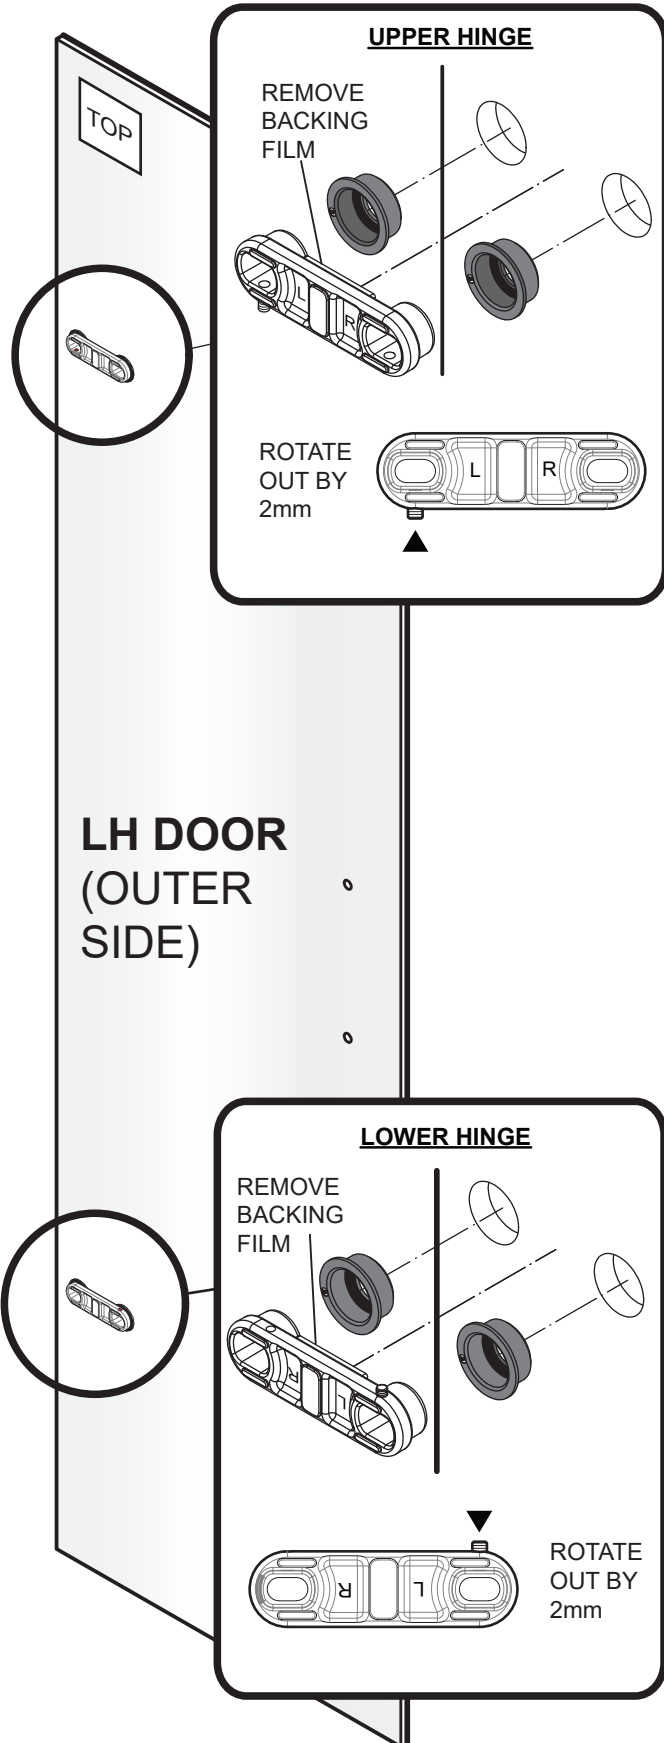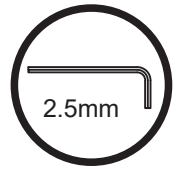


STAGE 8

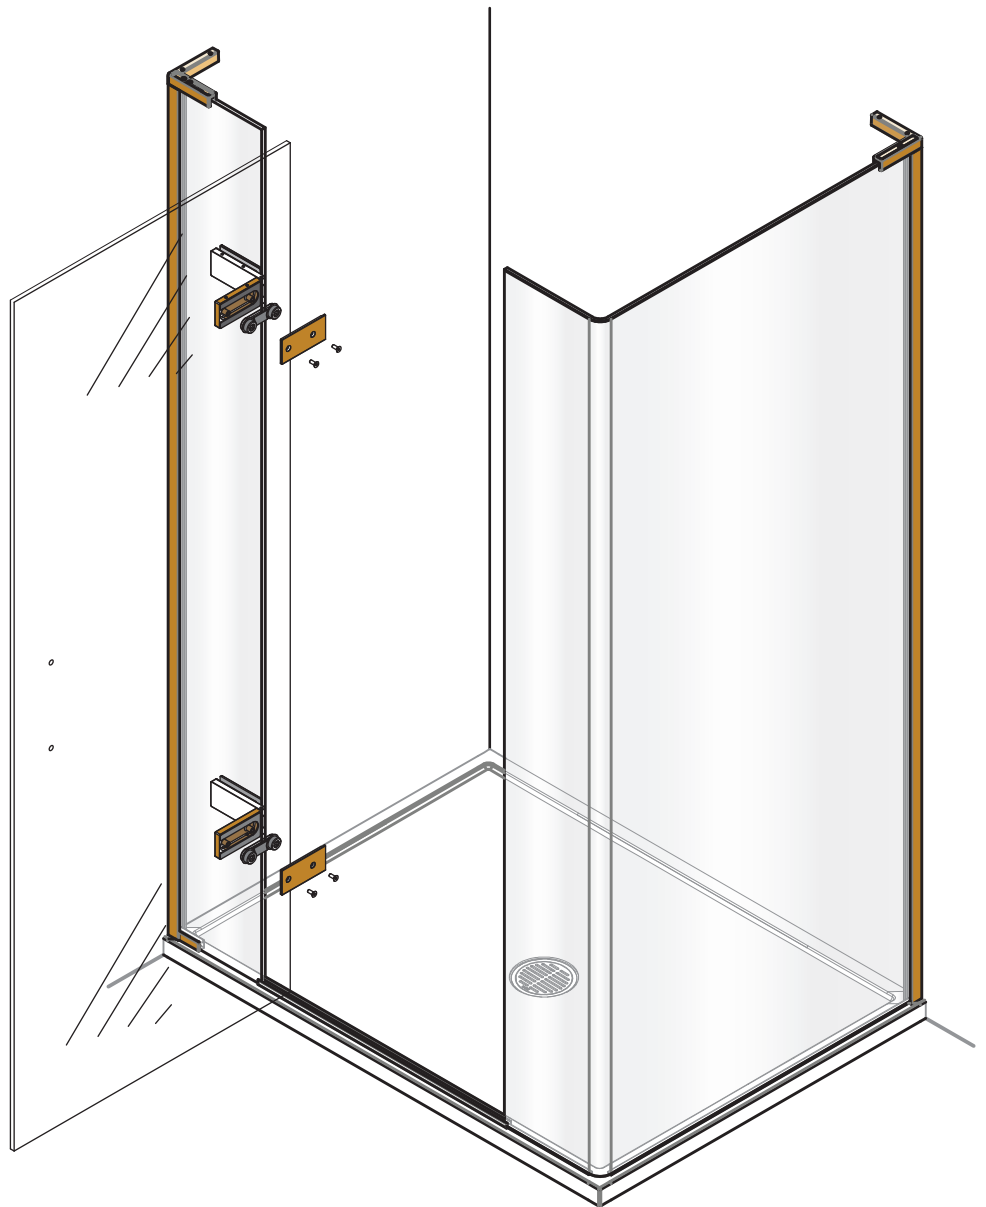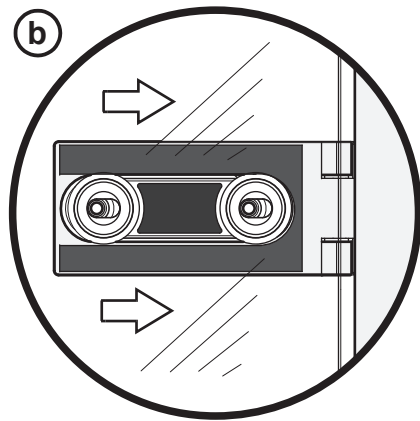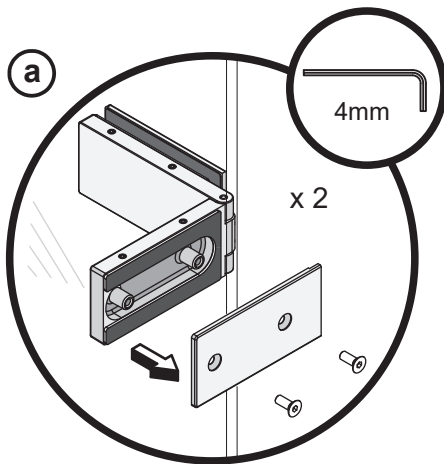


c

HINGE VERTICAL SEAL


CLOSURE VERTICAL SEAL

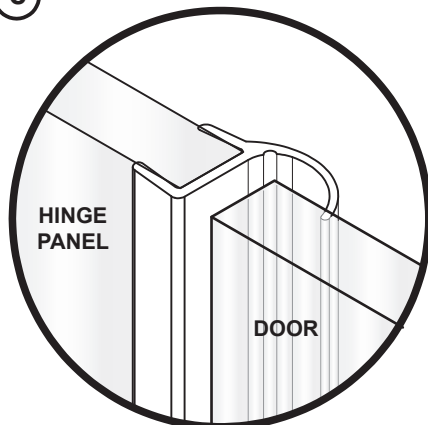

STANDARD

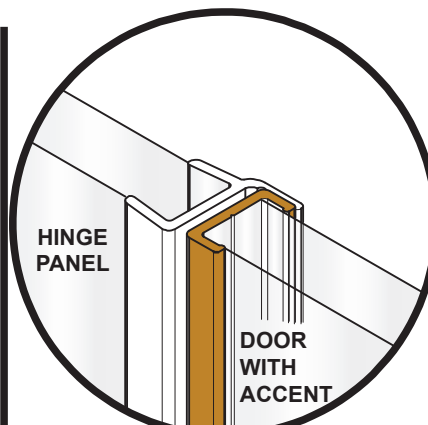


ACCENT FRAMES

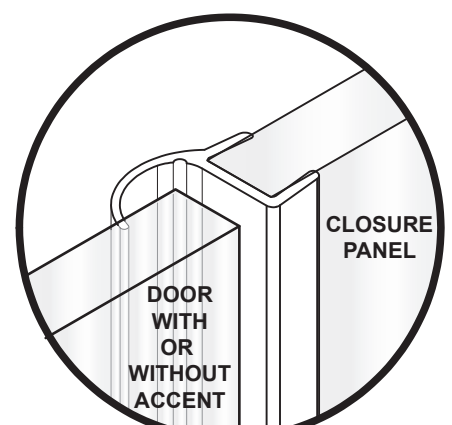


STAGE 9


HANDLE VARIANTS

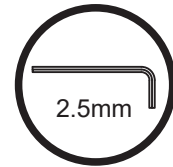


**ILLUSTRIOUS
9808***

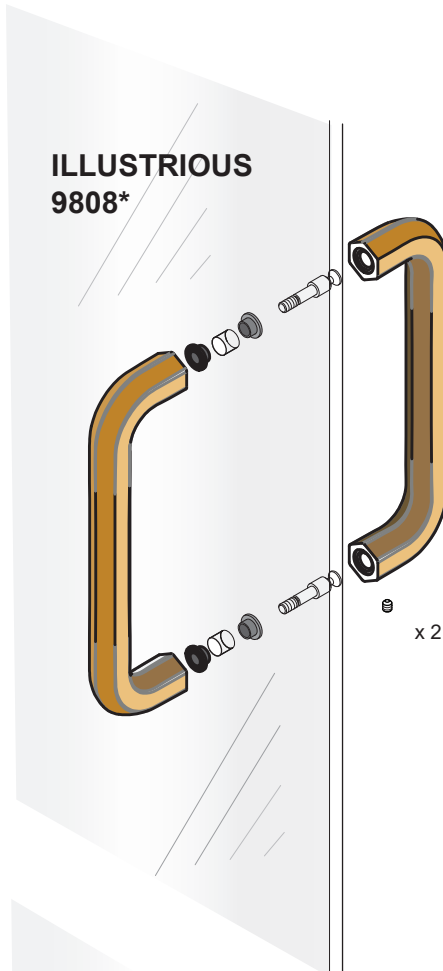


**LINEAR
6185***

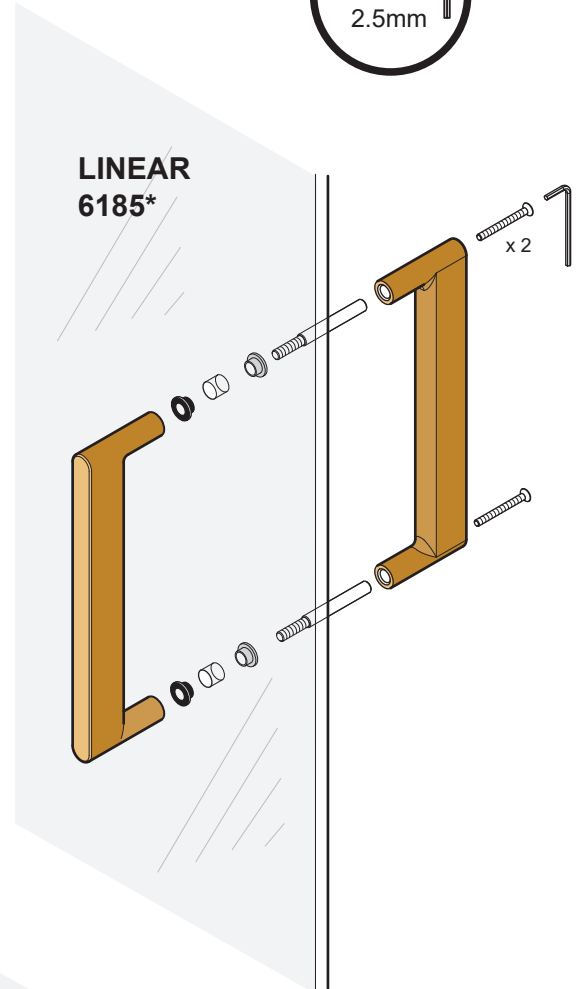

**TRADITIONAL
8632***

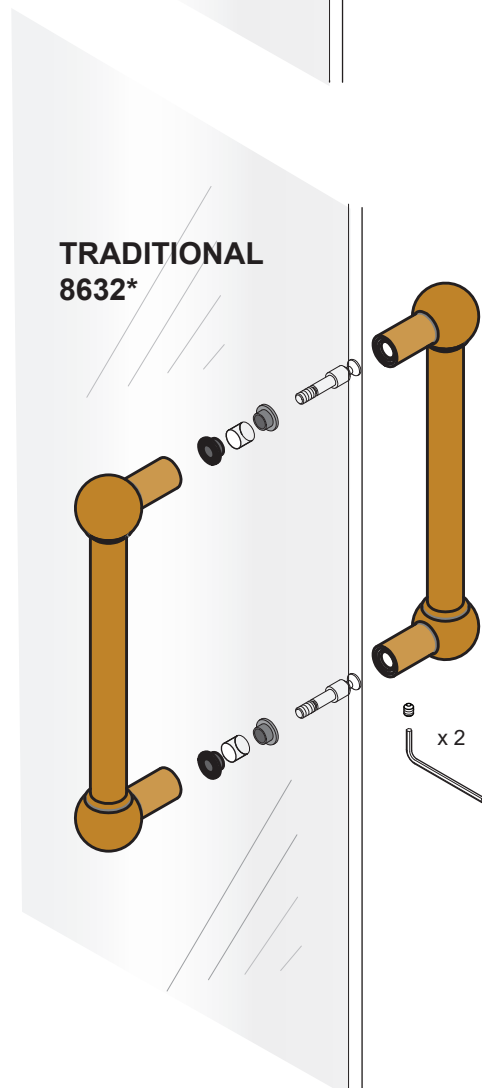


**ENGINEER
9809ASSY***



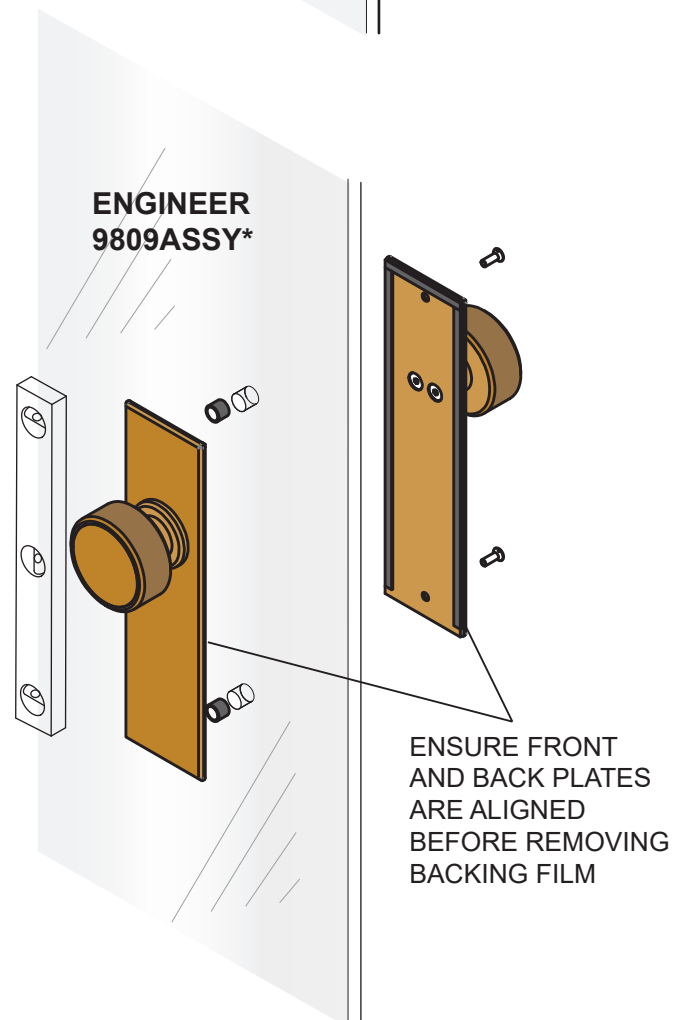


STAGE 10


b

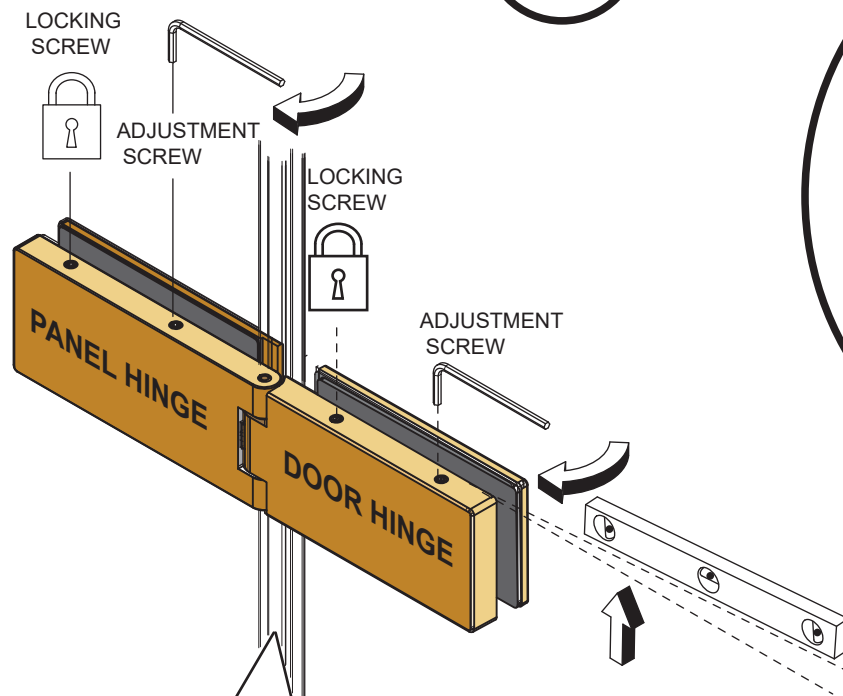








a

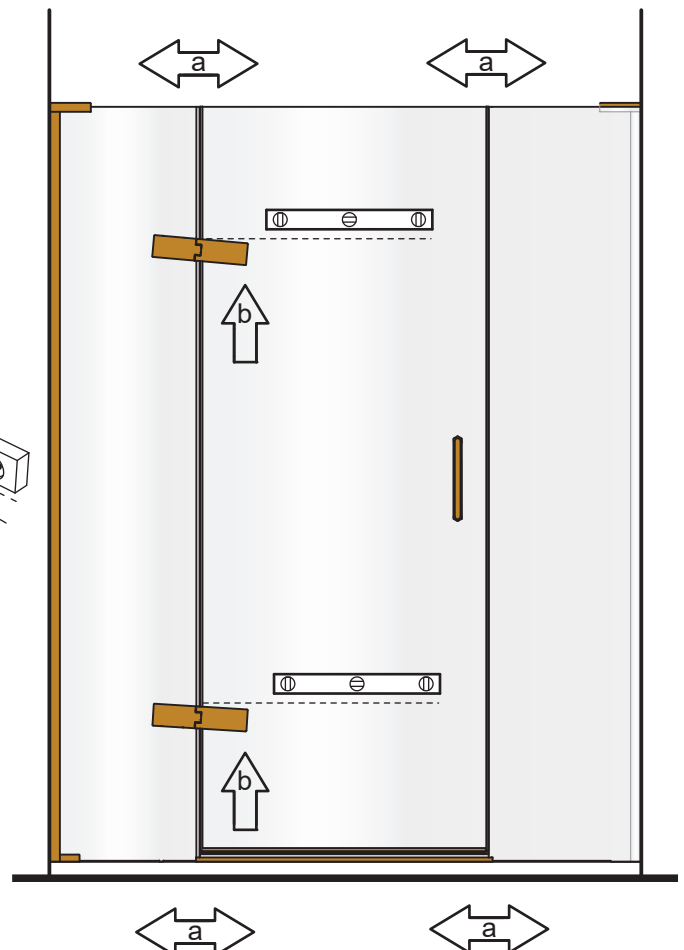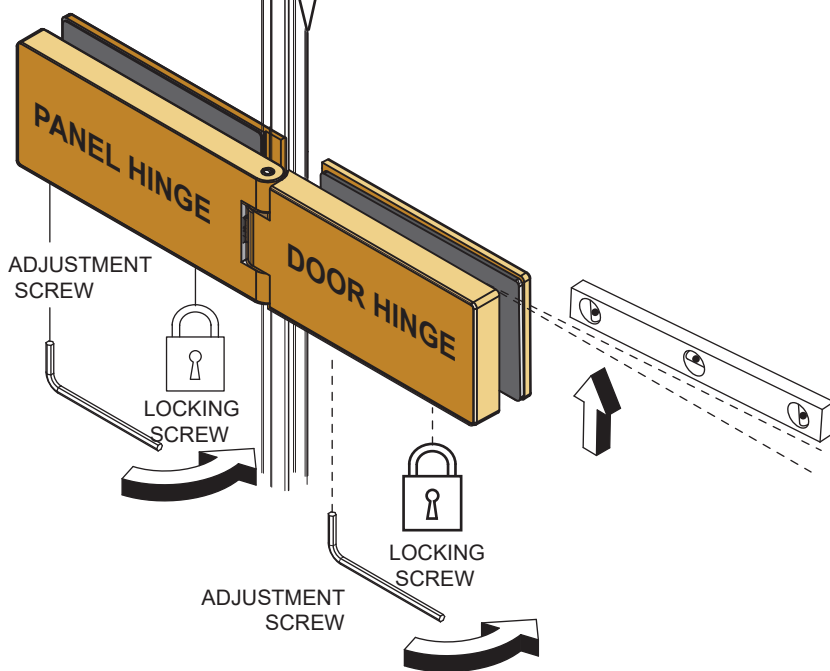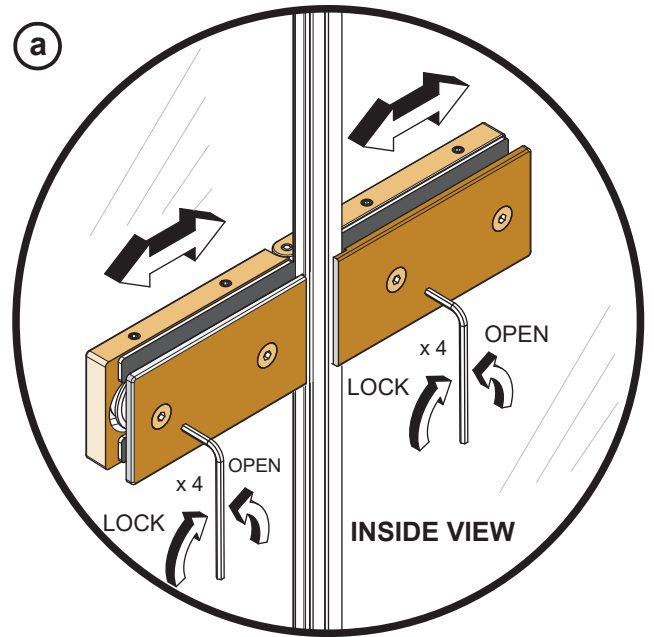

STAGE 11

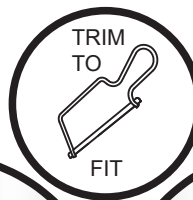


CUT HORIZONTAL SEAL TO
LENGTH BETWEEN FINS OF
BOTH VERTICAL SEALS

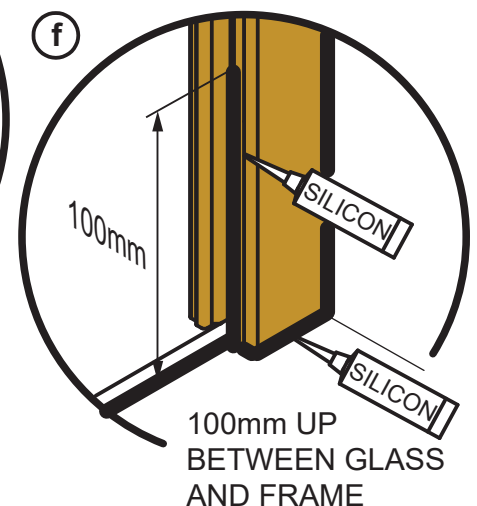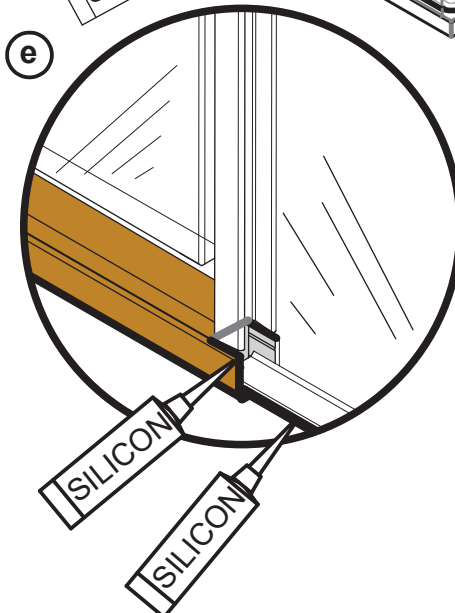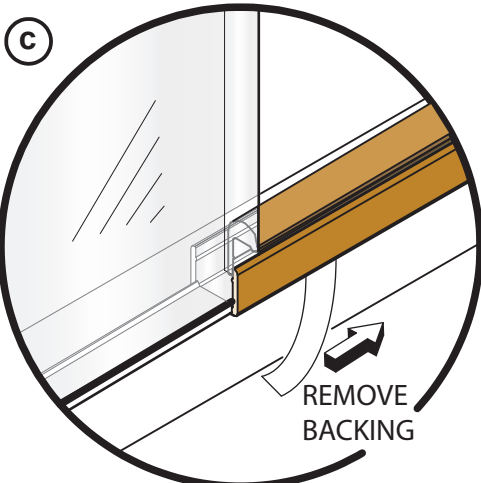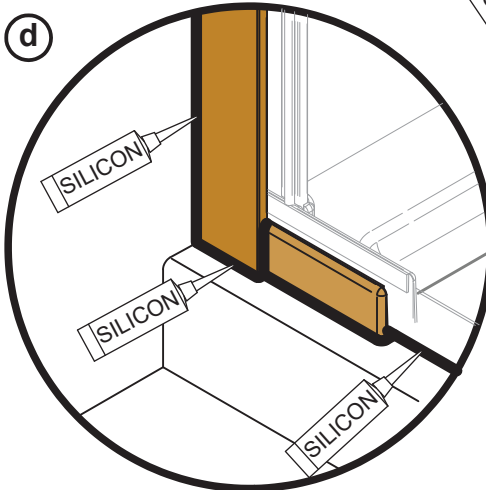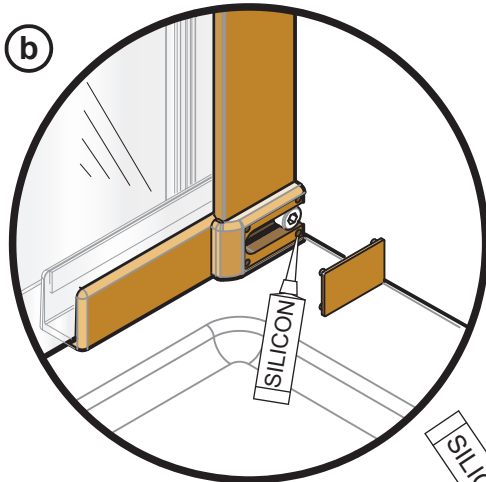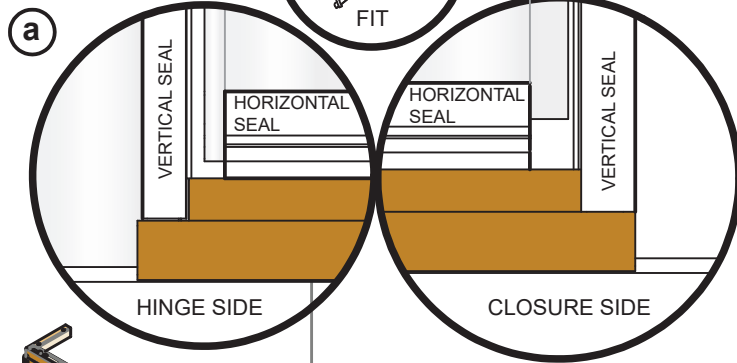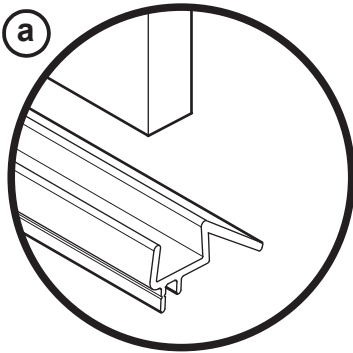

PARTS LIST

9864 AF
WALL FRAME
KIT OF PARTS (x 2)

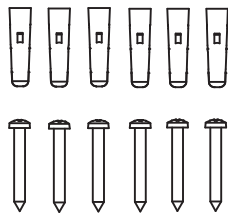


STANDARD

ACCENT
FRAMES
ONLY


9825
CLEAR

9287
CLEAR

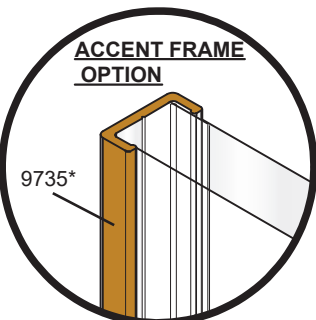

ACCENT FRAME
OPTION


9735*

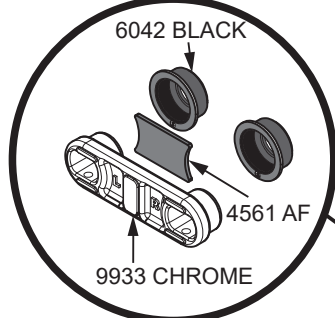

6042 BLACK

4561 AF


9933 CHROME

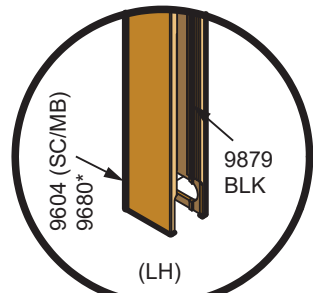

9604 (SC/MB)
9680*

9879
BLK


(LH)

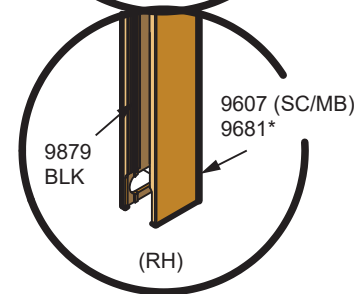

9607 (SC/MB)
9681*

9879
BLK

(RH)

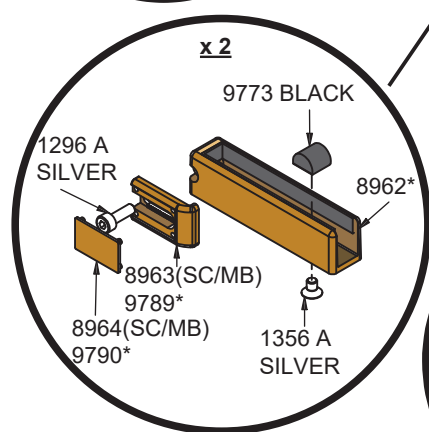

x 2

9773 BLACK

8962*

1296 A
SILVER


8963 (SC/MB)

9789*

8964 (SC/MB)

9790*


1356 A
SILVER

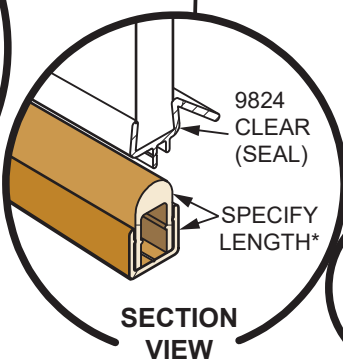

SPECIFY
LENGTH*

SECTION
VIEW

9783 CLEAR
(ACCENT OPTION
ONLY)

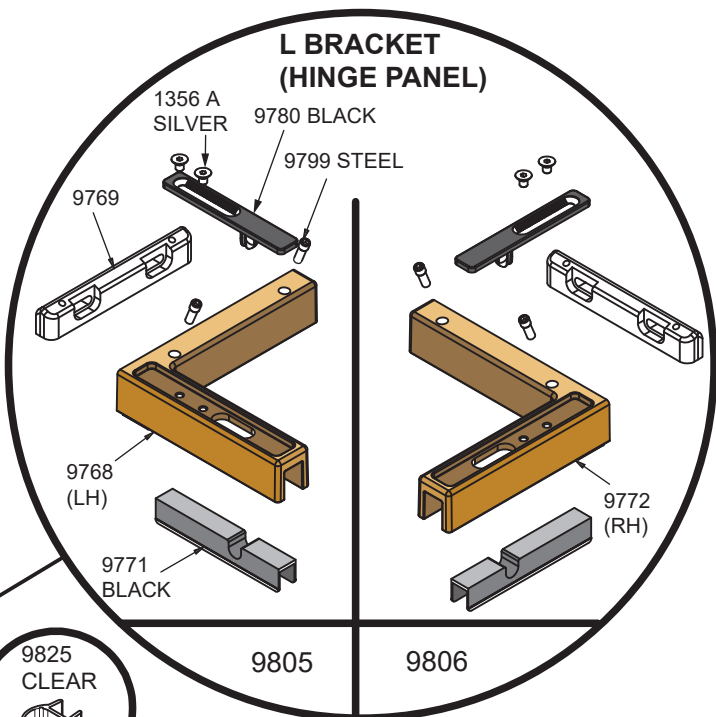

L BRACKET
(HINGE PANEL)

1356 A
SILVER

9780 BLACK

9799 STEEL

9769


9768
(LH)

9771
BLACK

9772
(RH)

9805

9806

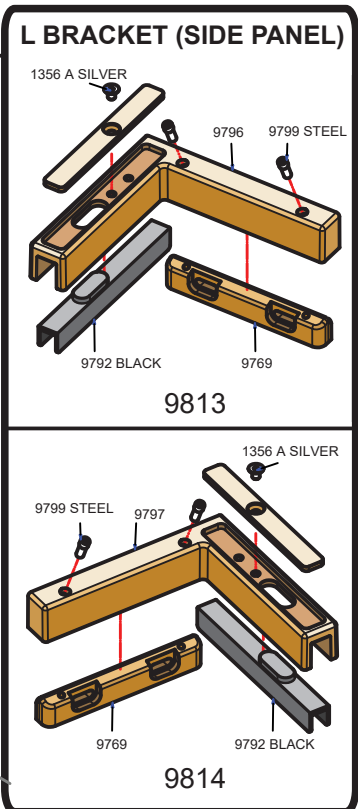

L BRACKET (SIDE PANEL)

1356 A SILVER

9796

9799 STEEL

9792 BLACK

9769

9813


9797

9799 STEEL

9769

9792 BLACK

9814

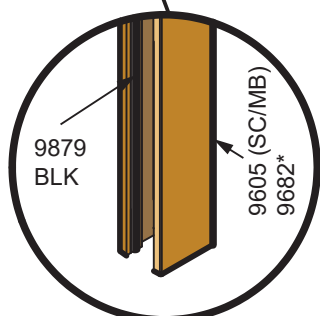

9879
BLK

9605 (SC/MB)
9682*

* ALL FINISHES APART
FROM SC/MB