

matki

EAUZONE

EWCL - HINGED DOOR FROM WALL,
WITH RADIUS 20 PANEL FOR CORNER

BRITISH PATENT NO:2470778



INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

Before Installation, please check all parts against the parts list on the back page of this booklet.

- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Matki for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.
- Where silicone is required, only use **neutral cure silicone**.

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

10693 AF 05/26

Matki recommend that this product is fitted by professional installers

EWCL LH



EWCL RH



IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced. In case of query contact your Stockist with details of model number and details of serial number.

GENERAL INSTALLATION TIPS

- Handle parts carefully and consider wearing gloves for living and brushed finishes.
- Only use water or soapy water to clean visible parts.
- Where silicone is required, only use neutral cure silicone.
- Chemicals should be kept away from this product. Splashes and sometimes vapours from household cleaning fluids, marble sealers and grout haze removers can cause damage.


PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting the Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Side panel and Door, Stage 6+9. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS

Dimensions are approximate.
Images show LH Hinge Door
installation. Reverse for RH.

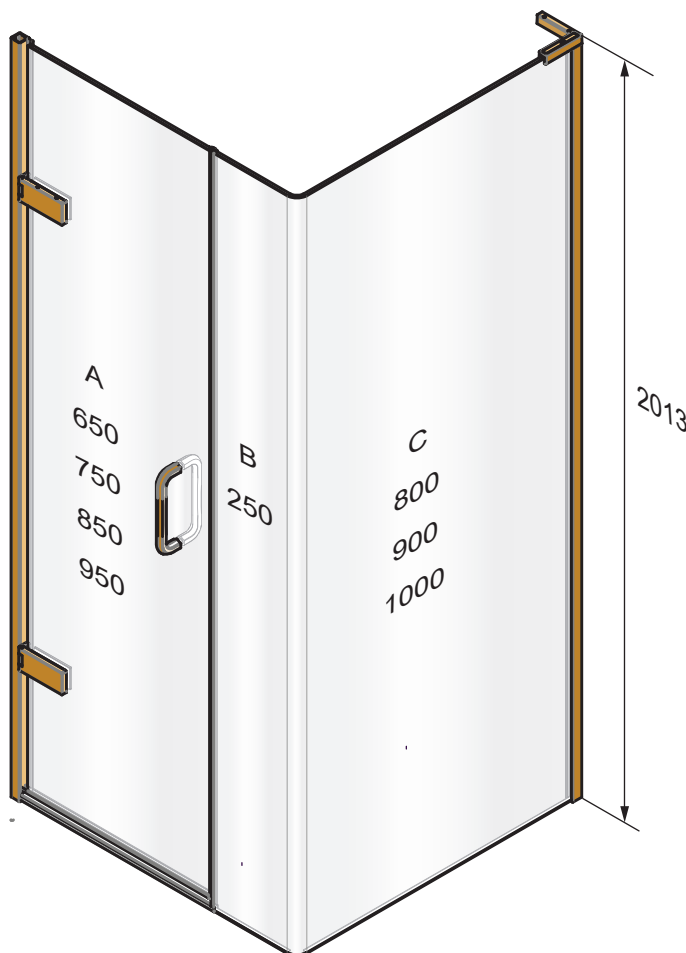



DOOR + CLOSURE PANEL

MODEL	A	B	Adjustment range
EWCL900	650	250	873 – 888 mm
EWCL1000	750	250	973 – 988 mm
EWCL1100	850	250	1073 – 1088 mm
EWCL1200	950	250	1173 – 1188 mm


SIDE PANEL

MODEL	C	Adjustment range
EWL800SP	800	770 – 785 mm
EWL900SP	900	870 – 885 mm
EWL1000SP	1000	970 – 985 mm

SETTING OUT

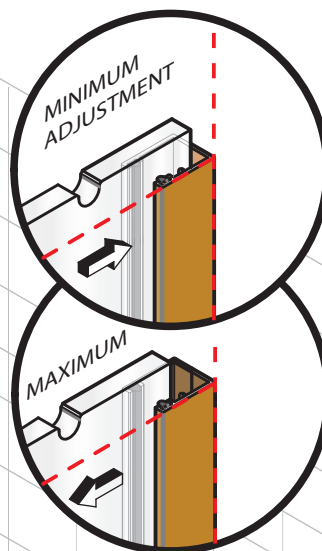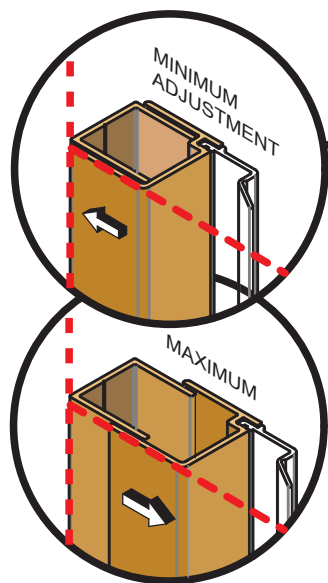


A + B	
EWCL900	873 – 888
EWCL1000	973 – 988
EWCL1100	1073 – 1088
EWCL1200	1173 – 1188
C	
EWL800SP	770 – 785
EWL900SP	870 – 885
EWL1000SP	970 – 985

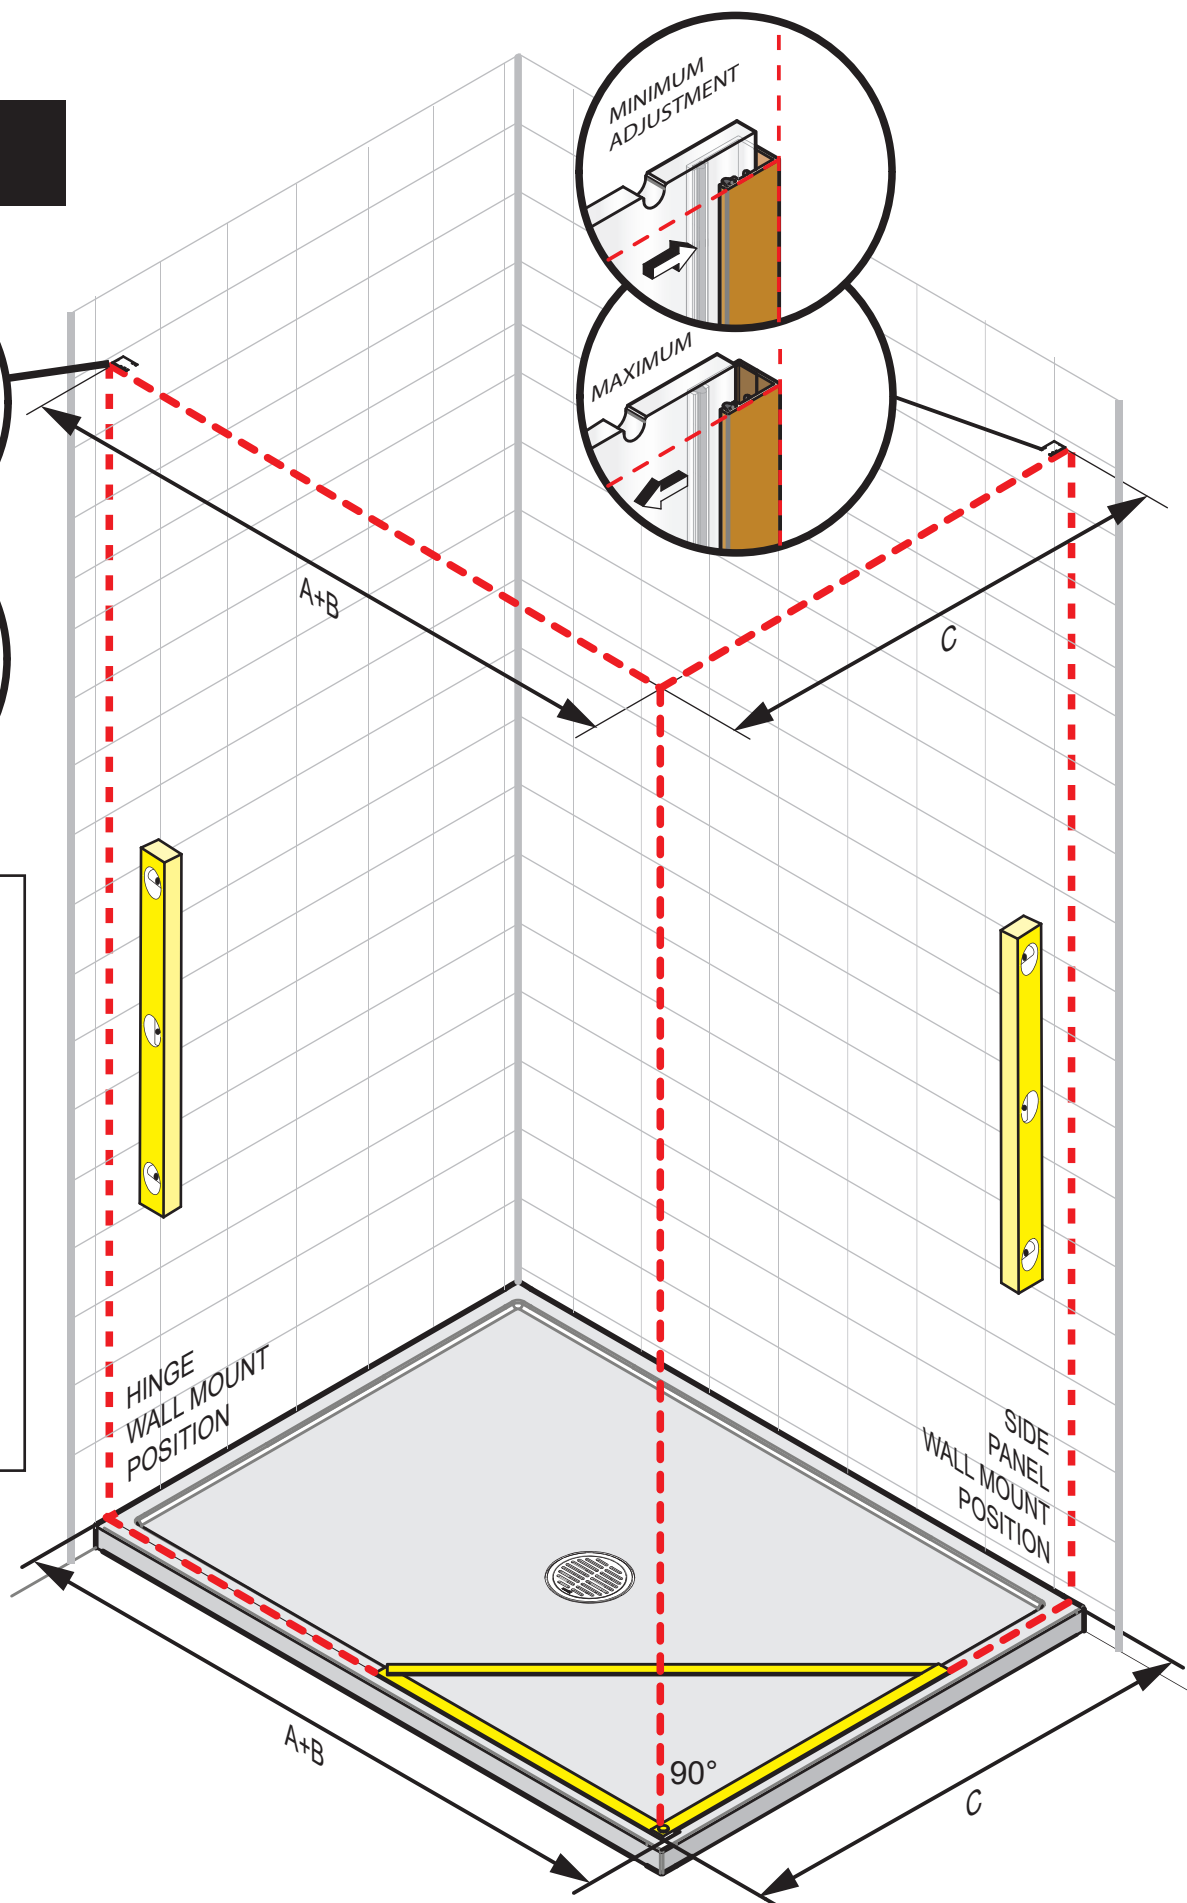




Attention! Both lower and upper dimensions must fall within the adjustment range stated on the table for the relevant product size. **The tray must be level.** To calculate the upper dimensions, use a level to determine how many millimeters the wall is out of plumb. The position of the unit must then be adjusted to ensure it will fit. If the walls are falling away at the top, set the product nearer the minimum adjustment range at the tray to allow for this. If the walls are falling inward at the top, set the product nearer the maximum adjustment range at the tray to allow for this.

STAGE 1

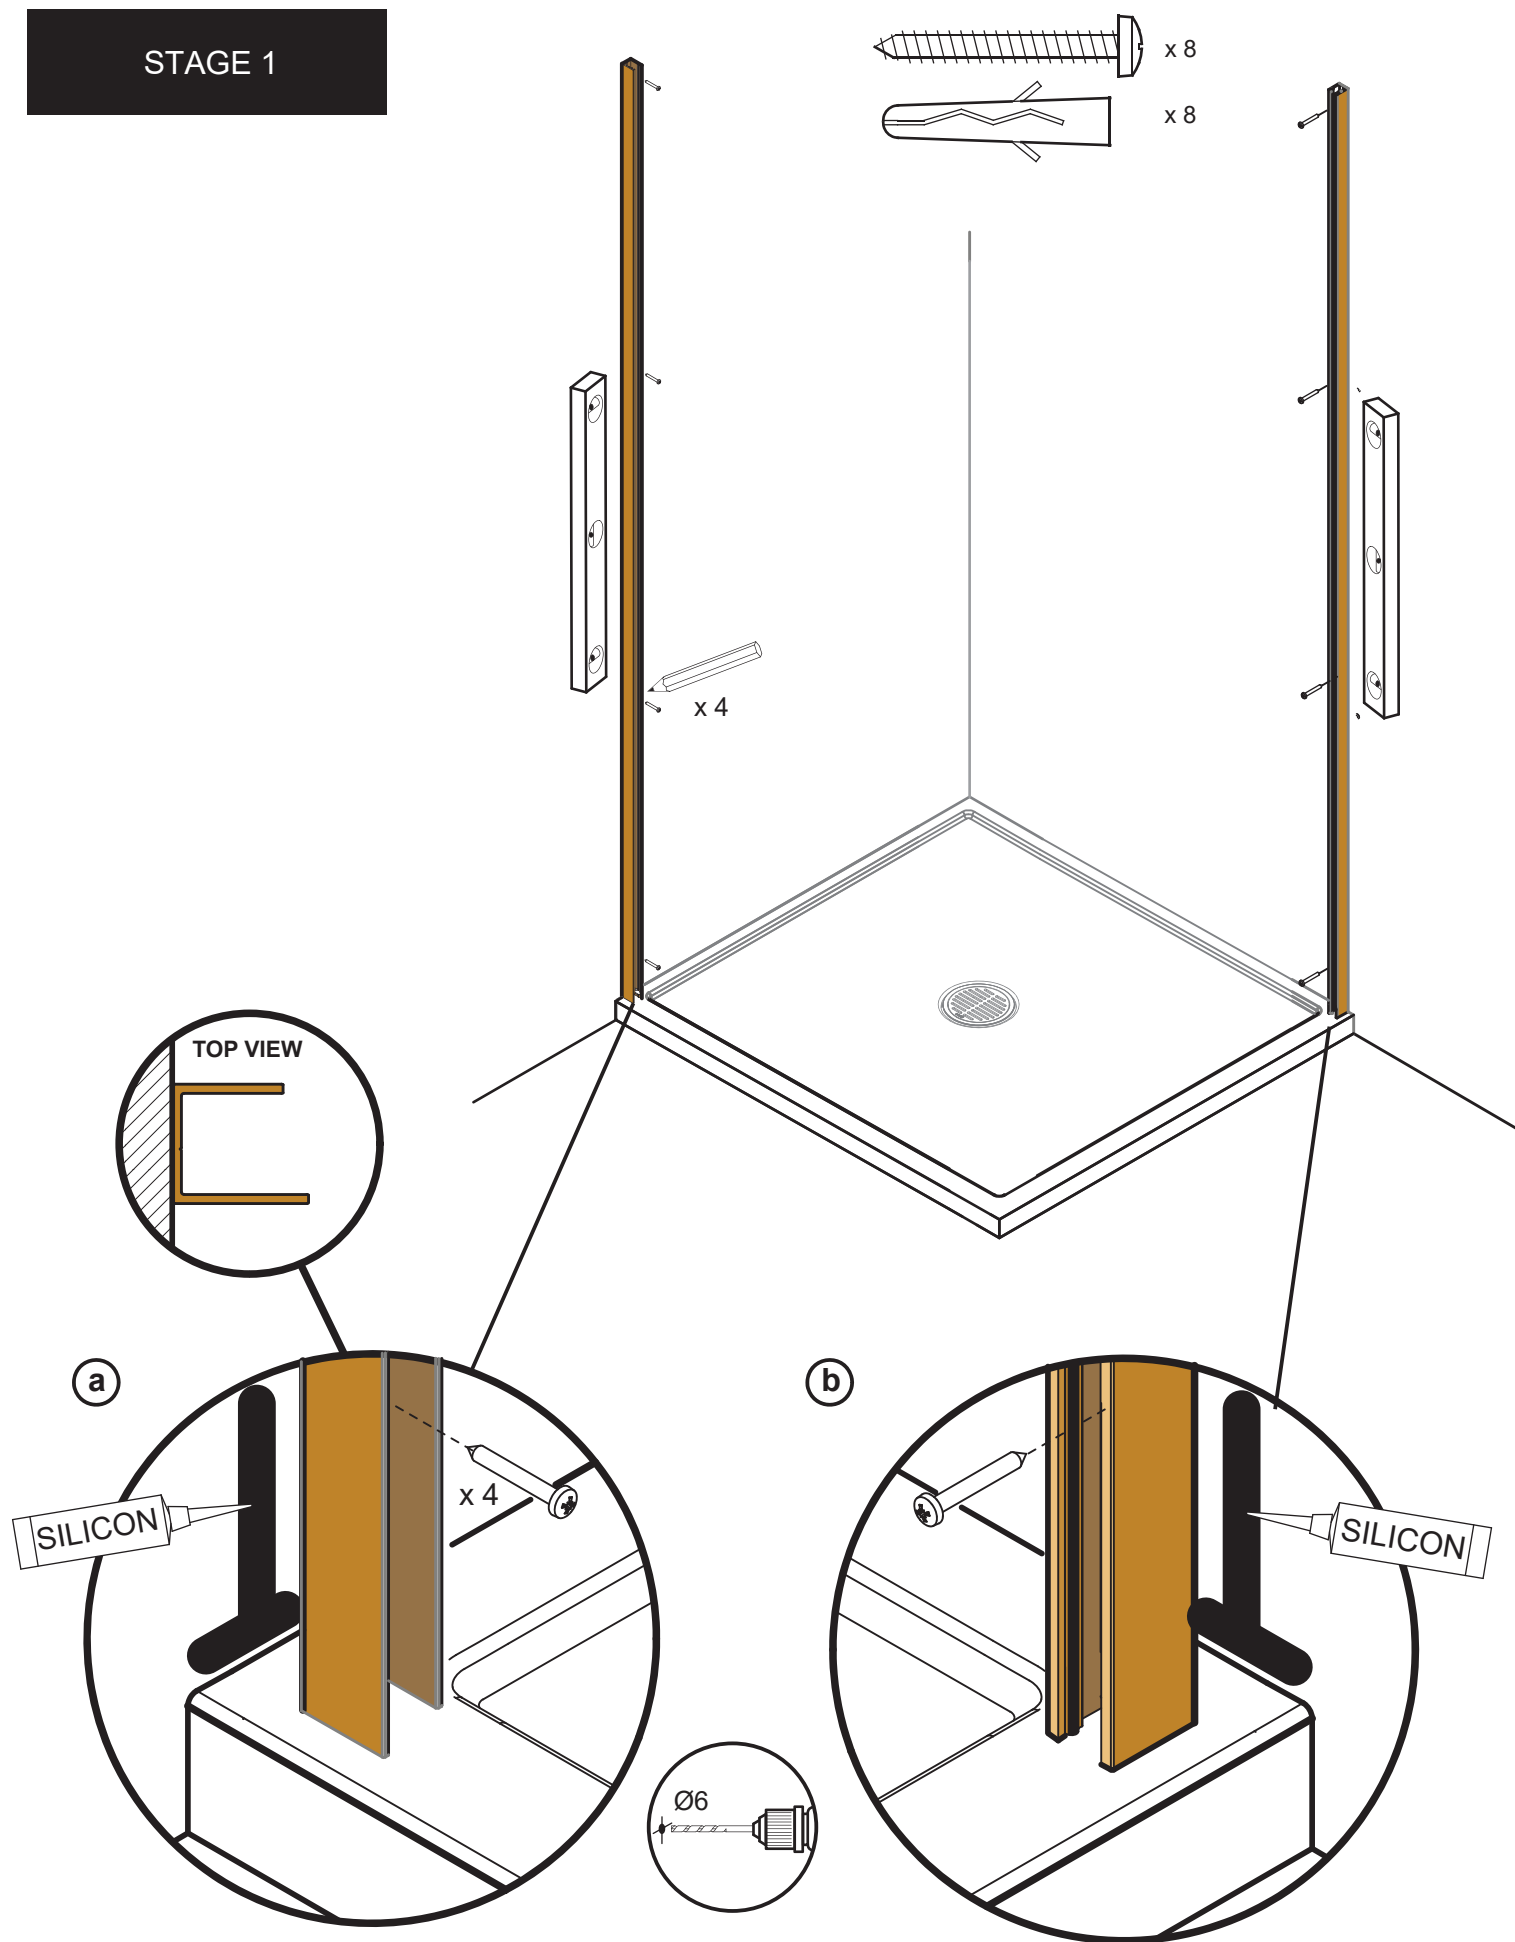






IMAGES SHOW LH PANEL HINGED DOOR INSTALLATION REVERSE FOR RH.

STAGE 2

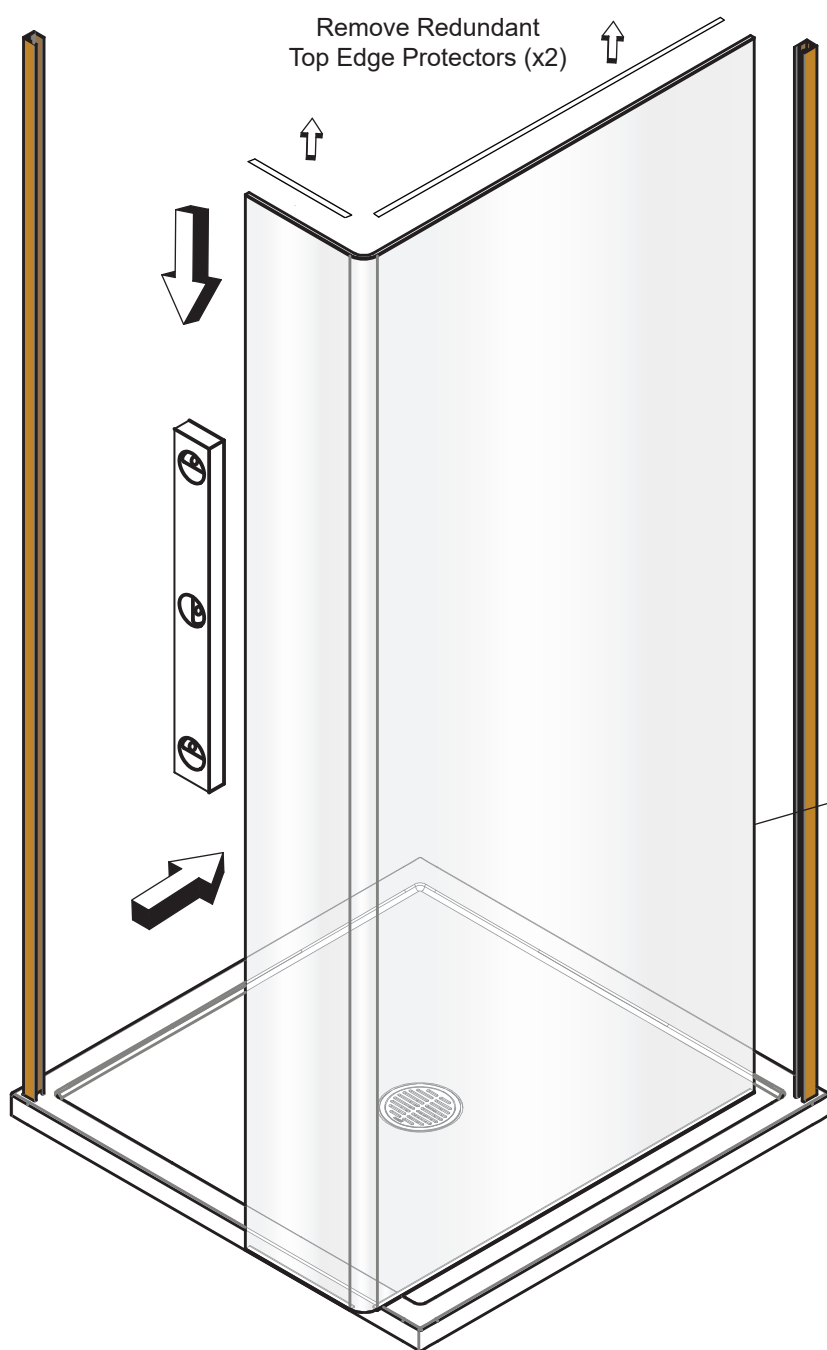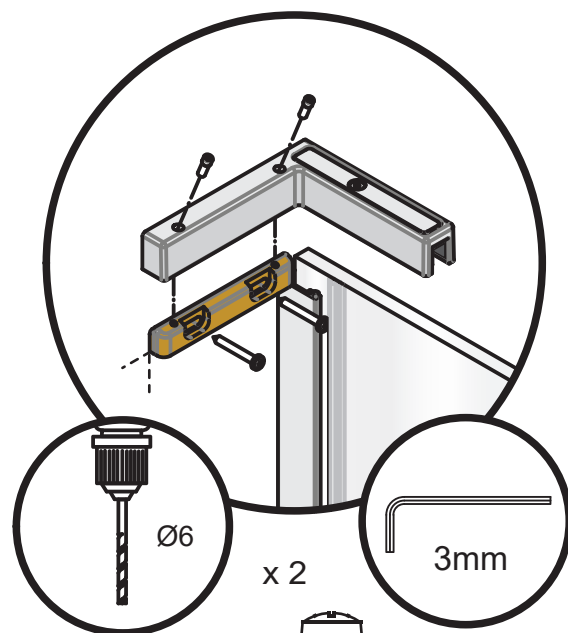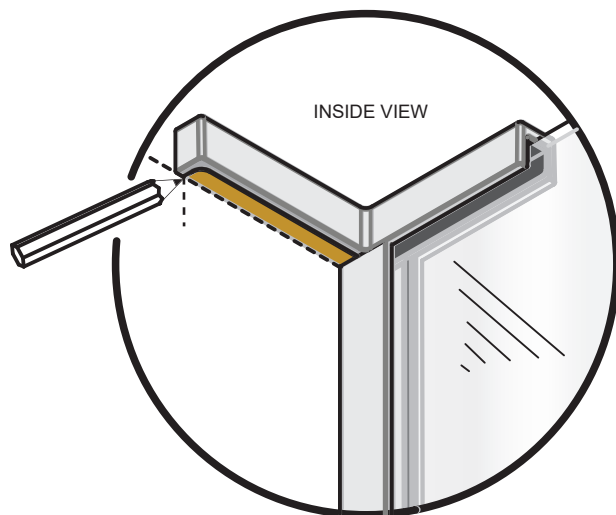


SOAPY WATER




STAGE 3

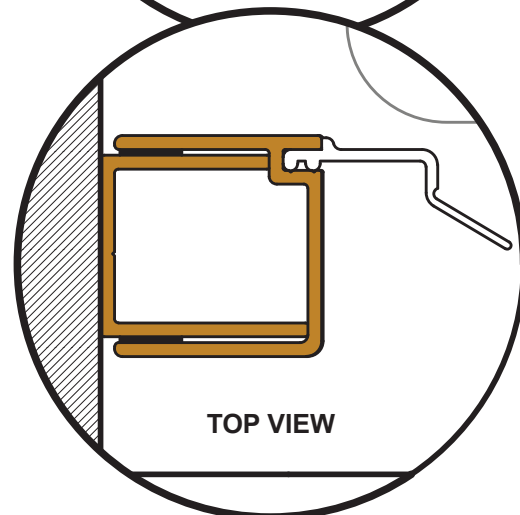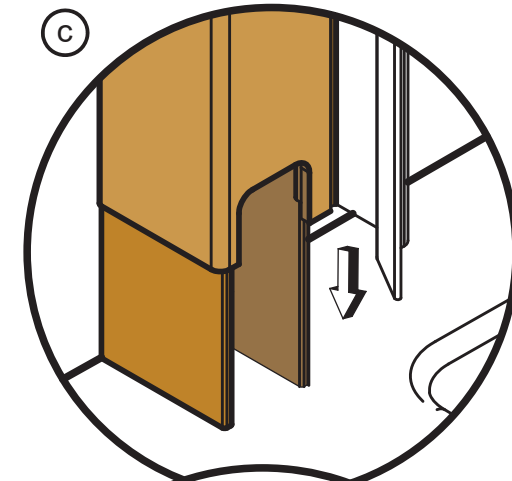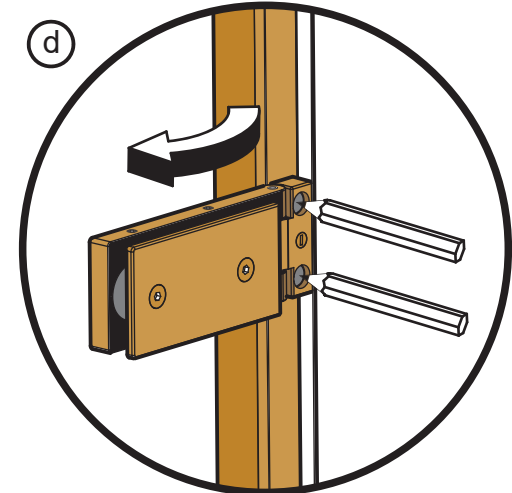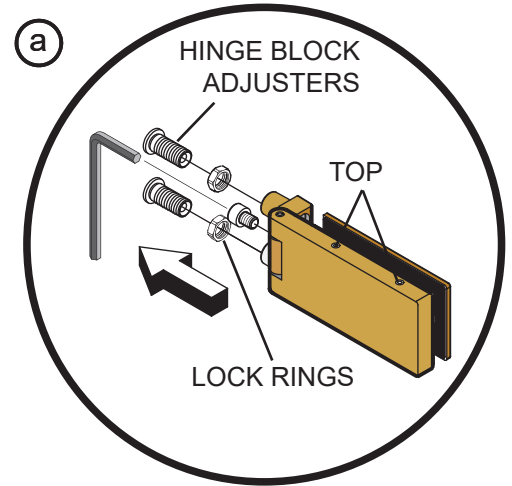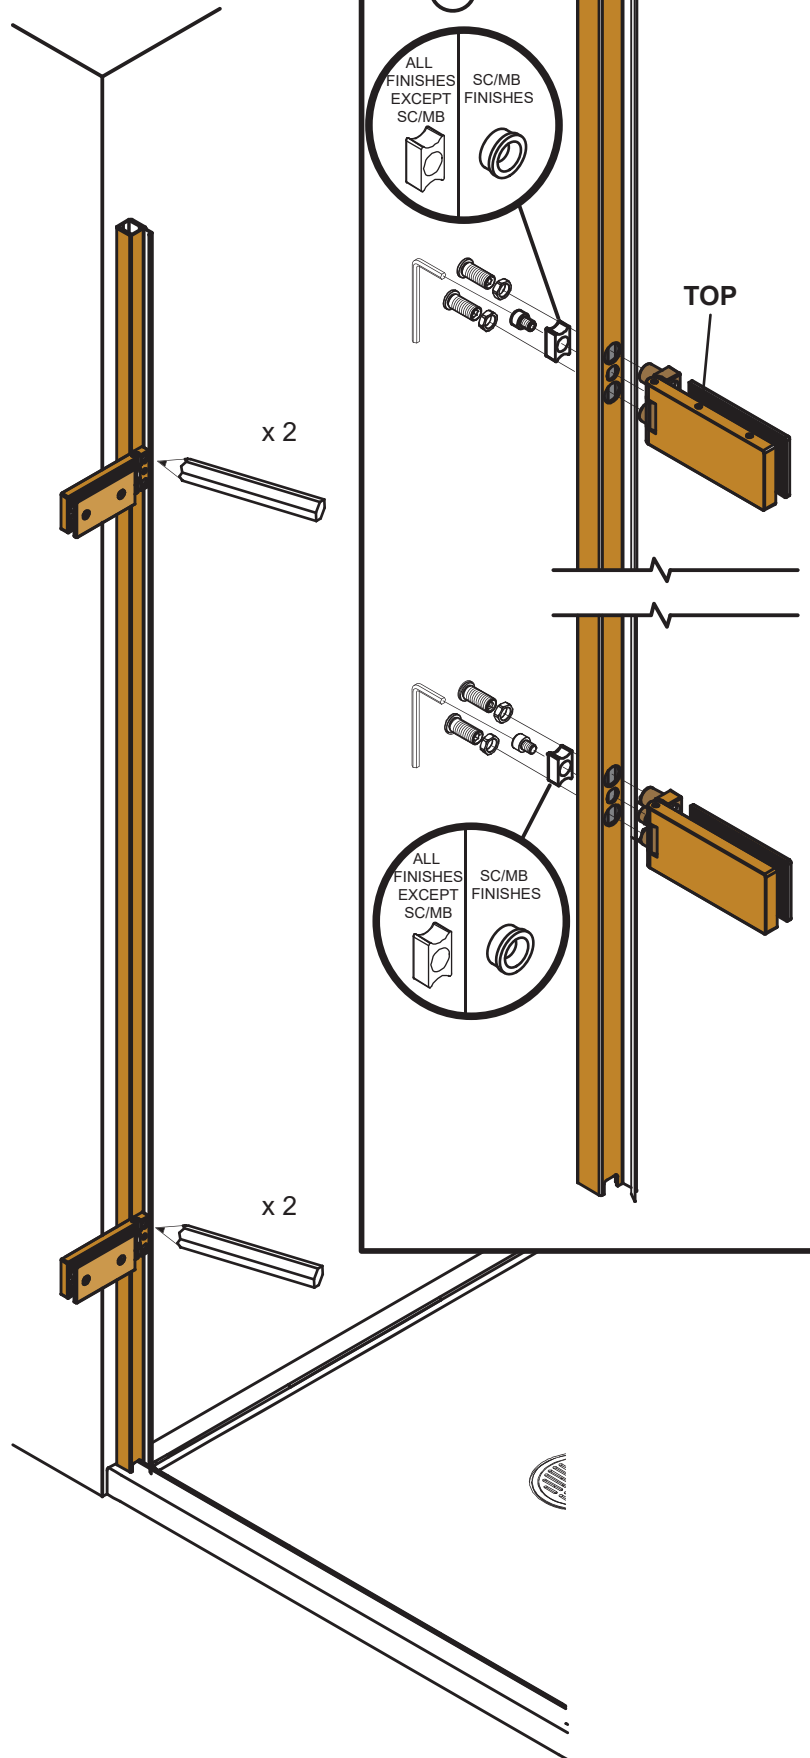




STAGE 4

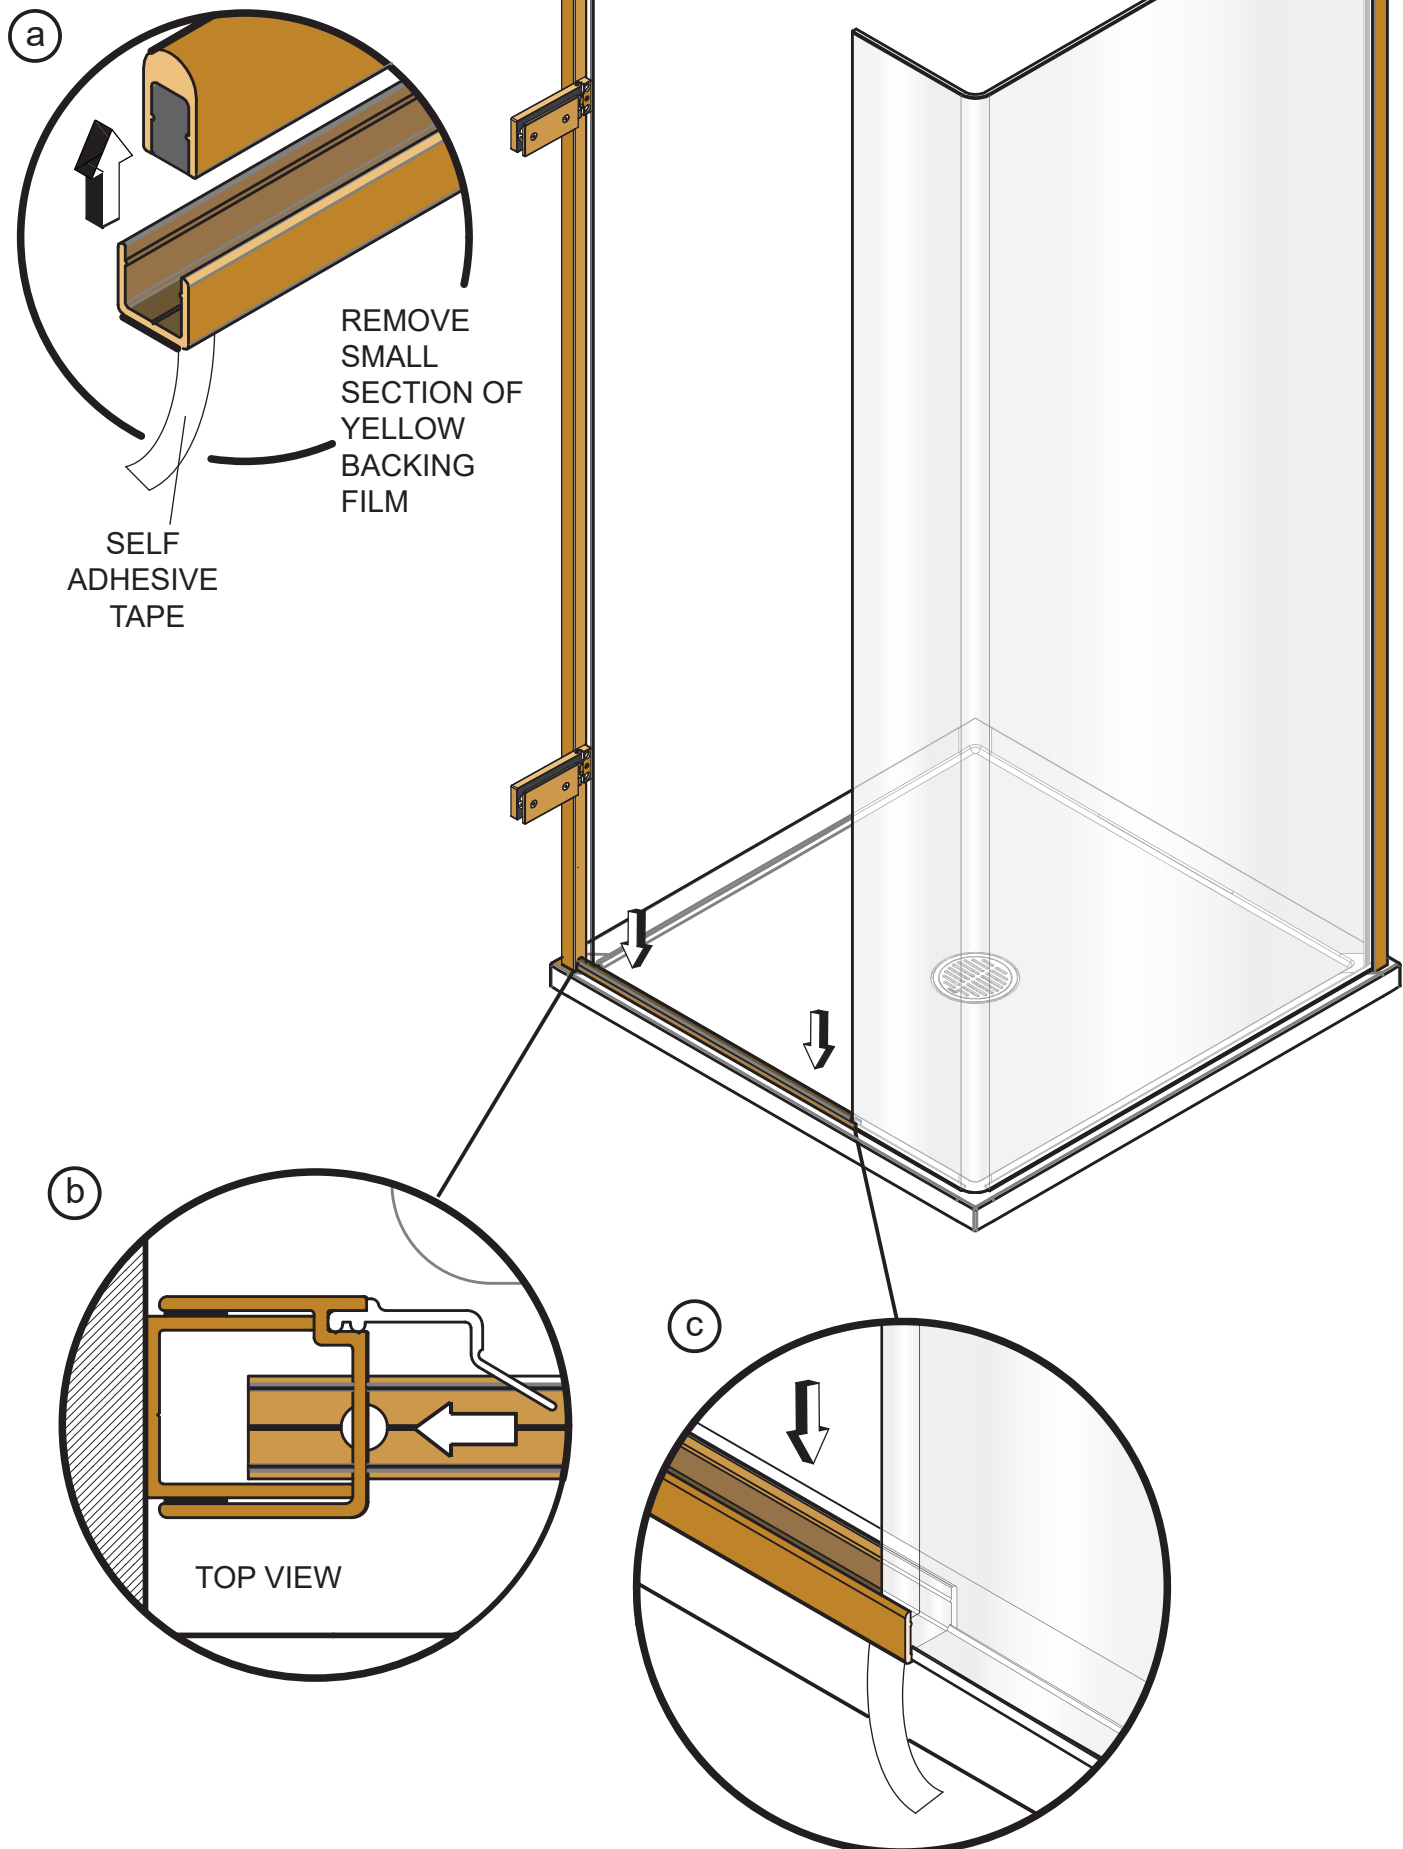

STAGE 5

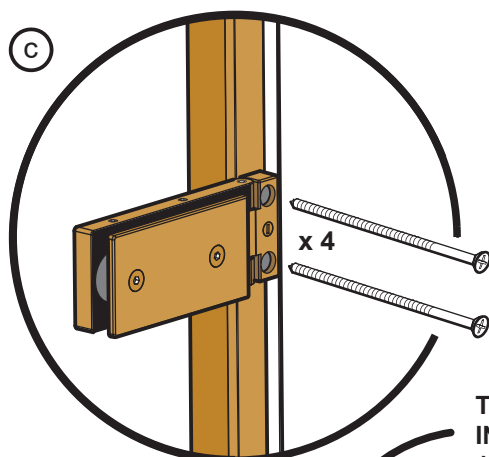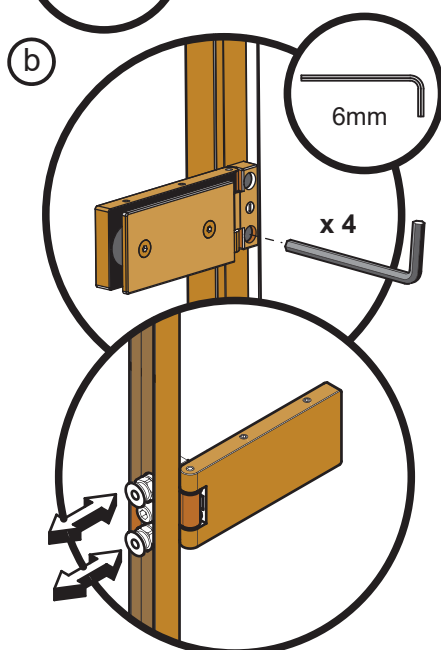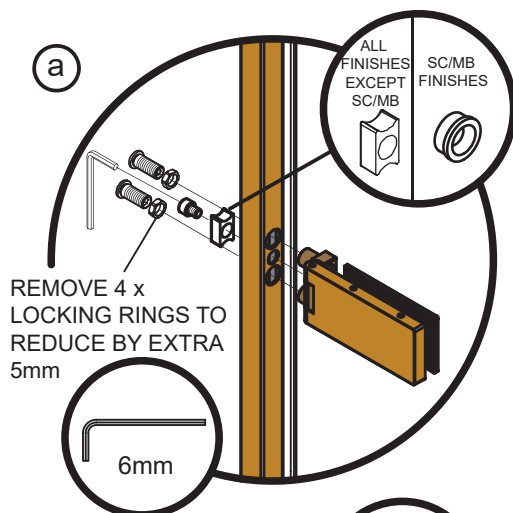

THRESHOLD INFILL BAR
ADJUST HEIGHT IF REQUIRED x 2

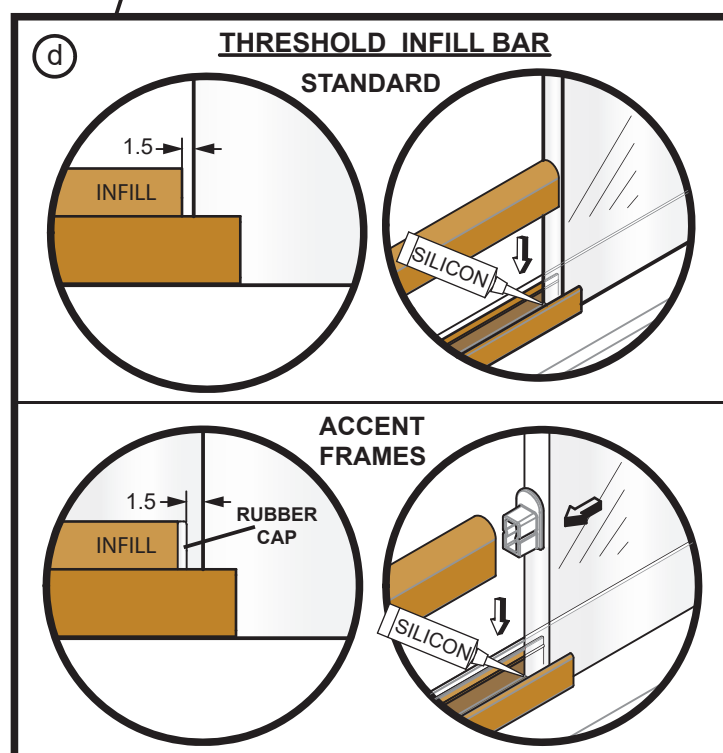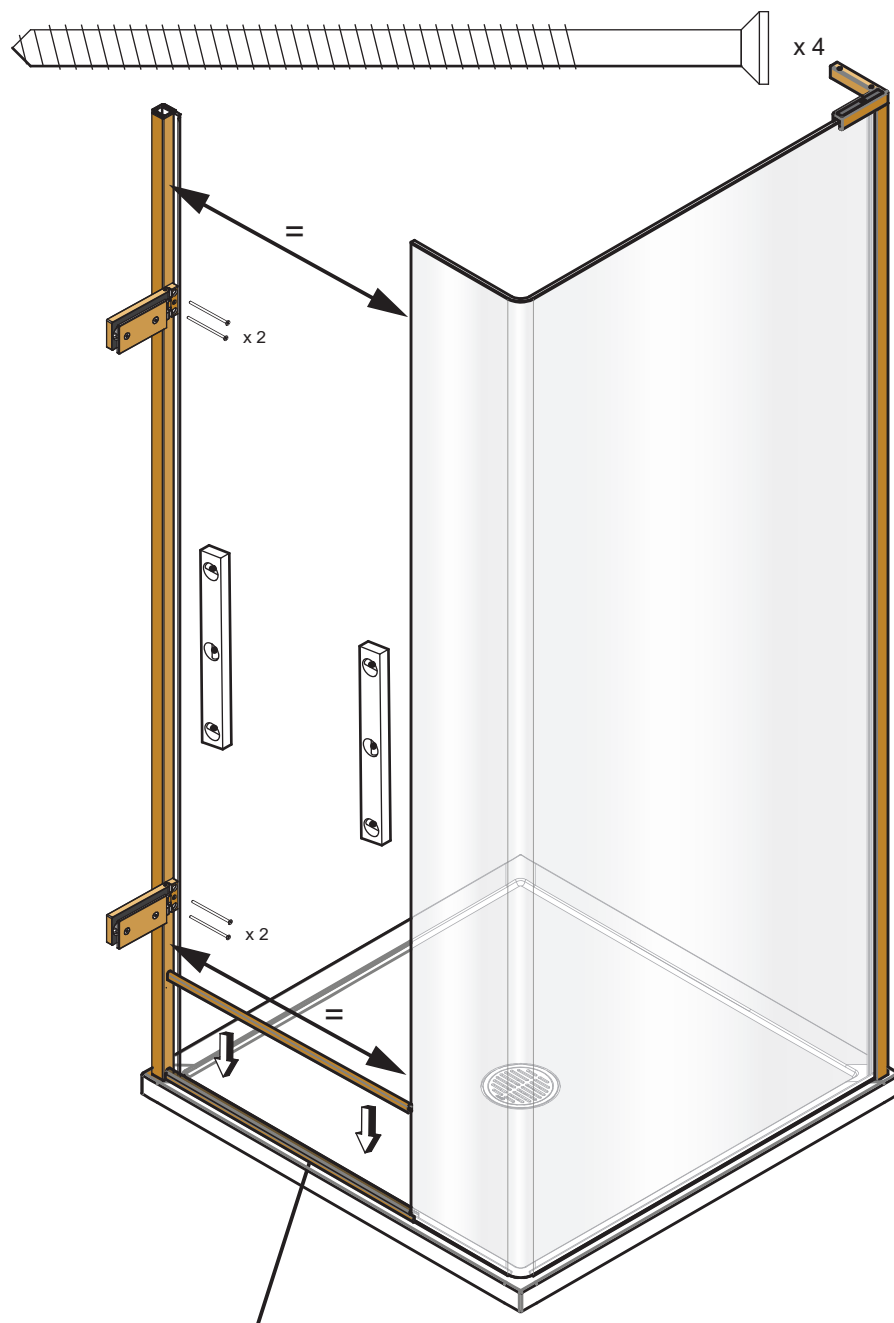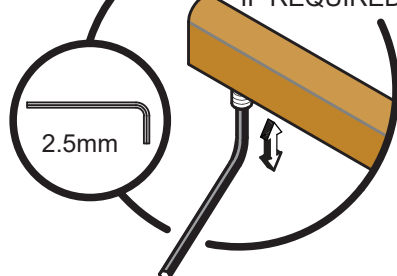



STAGE 6

IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND


LH DOOR ADJUSTMENT BLOCK POSITION

RH DOOR ADJUSTMENT BLOCK POSITION









2.5mm

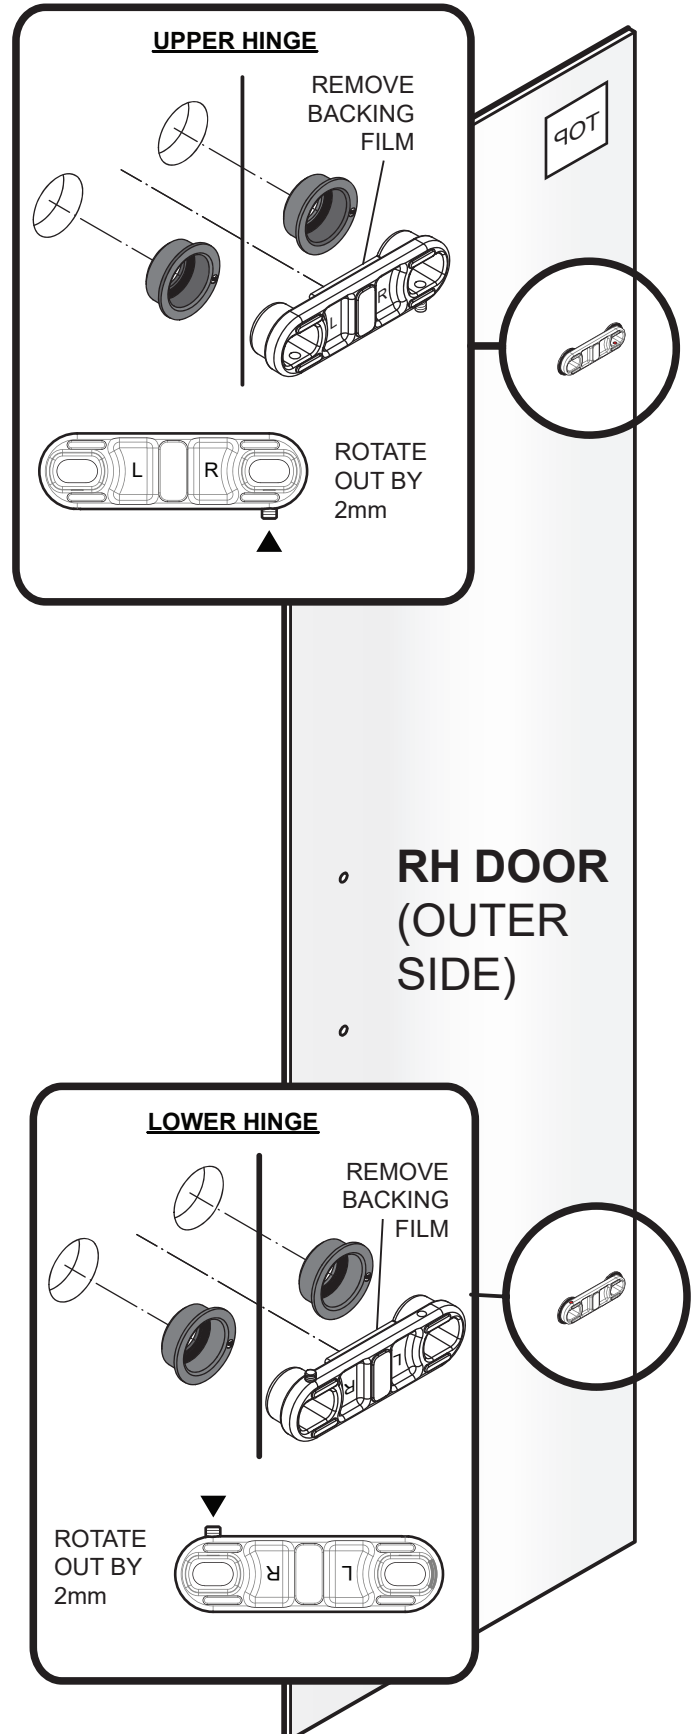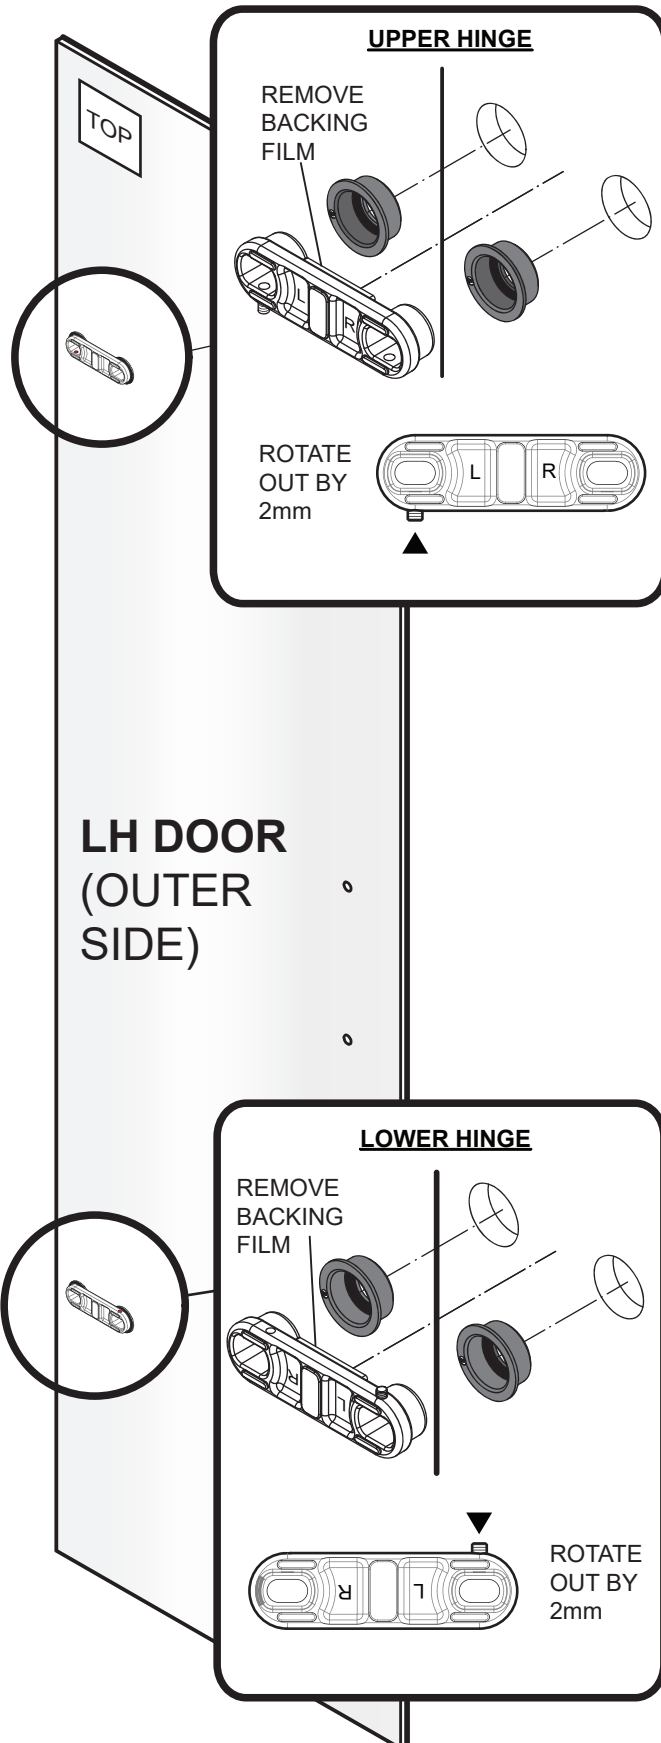

STAGE 7




CLOSURE VERTICAL SEAL

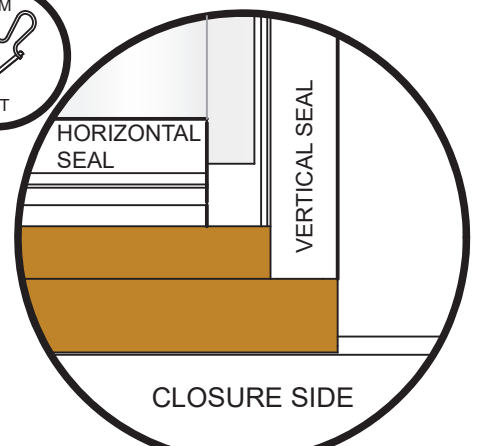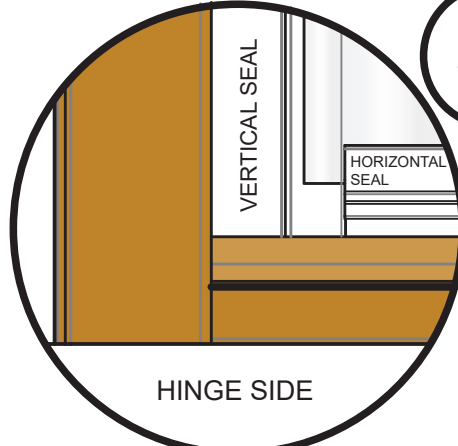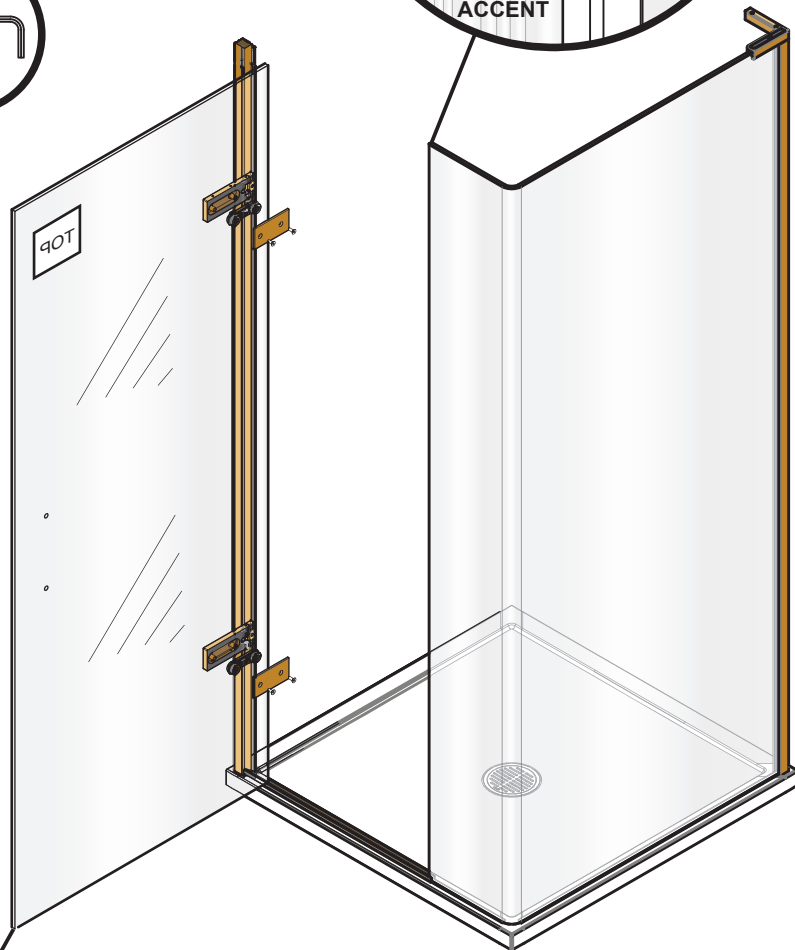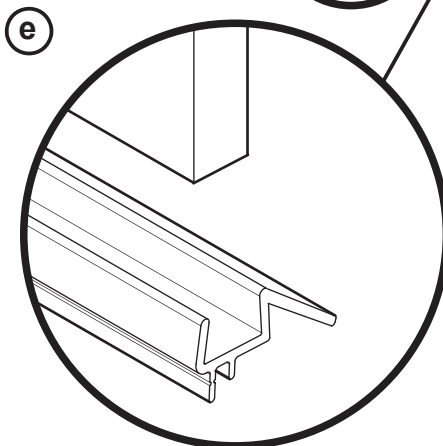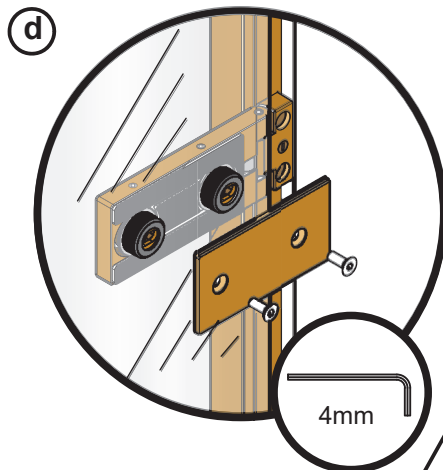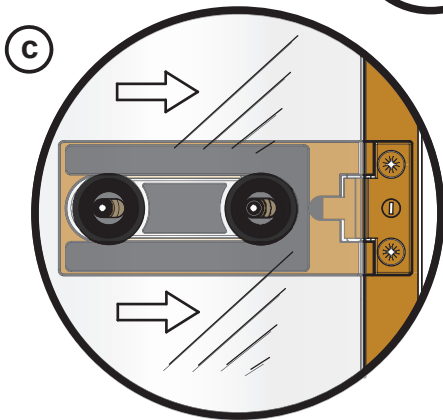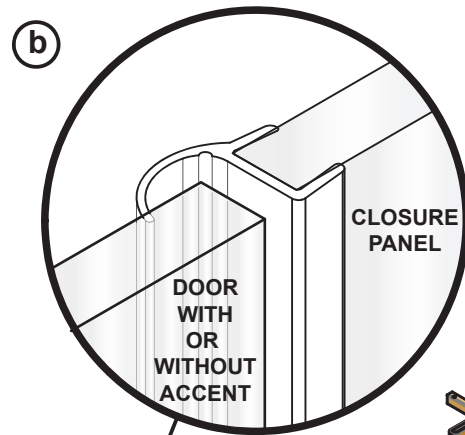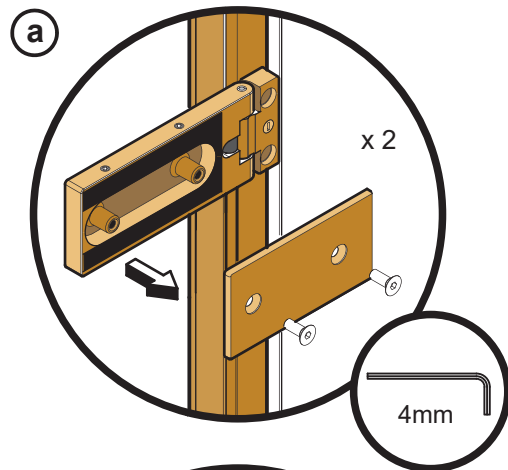



CUT HORIZONTAL SEAL TO LENGTH BETWEEN FINS OF BOTH VERTICAL SEALS

STAGE 8

(b)

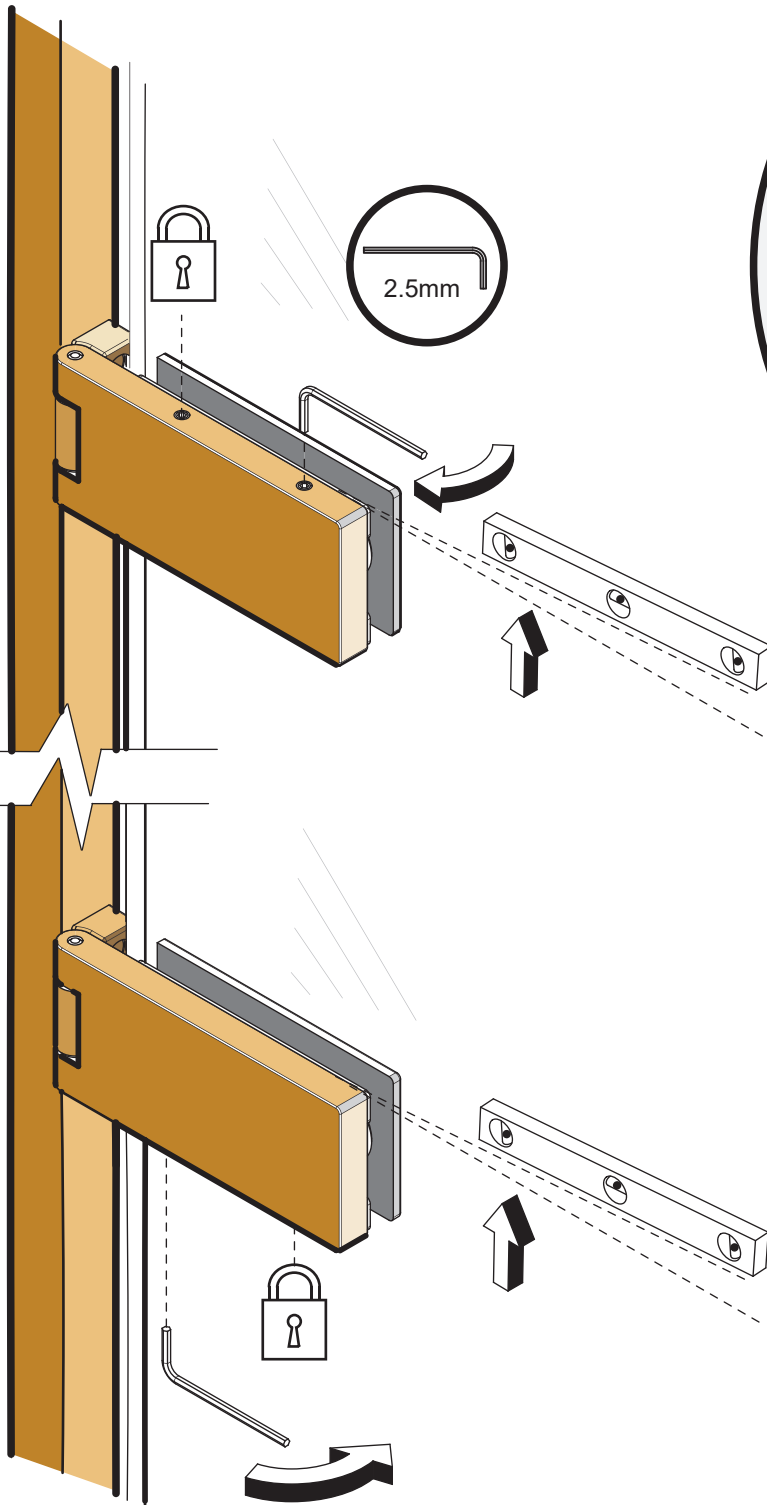


(a)

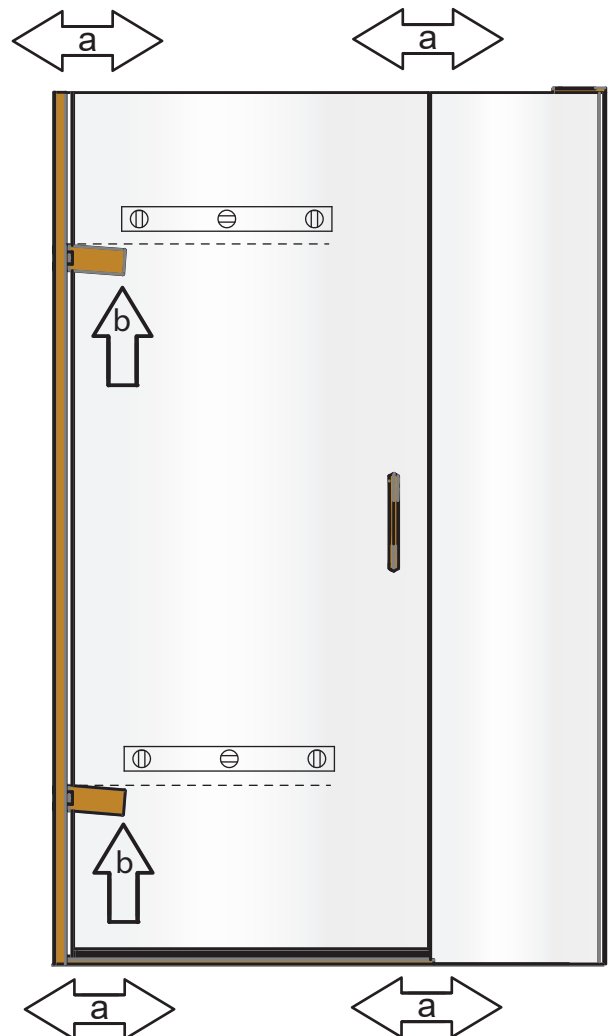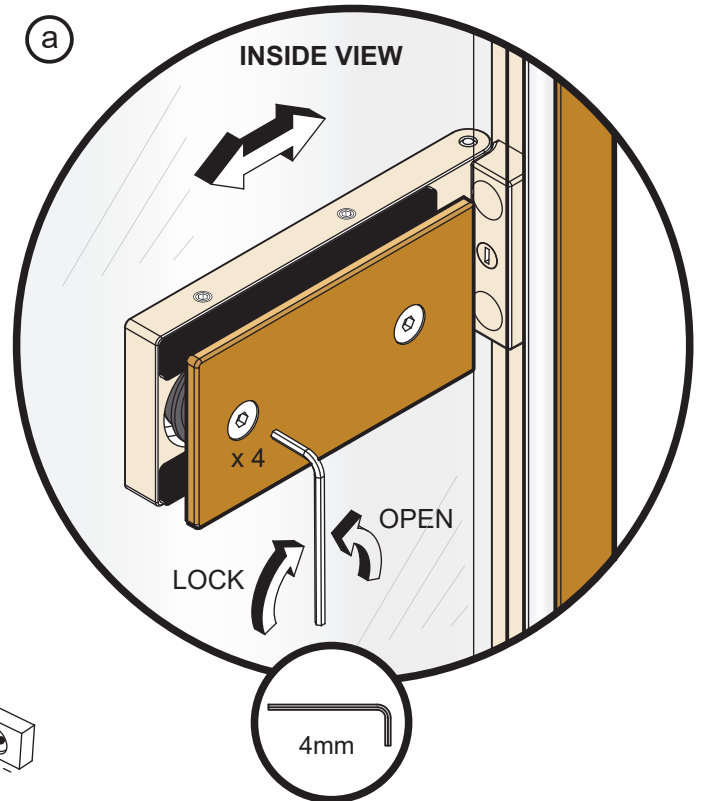


STAGE 9

HANDLE VARIANTS


**ILLUSTRIOUS
9808***

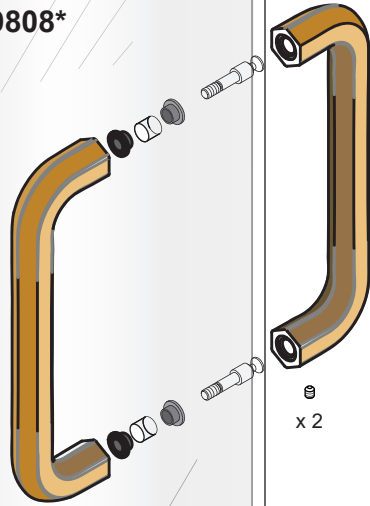


**LINEAR
6185***

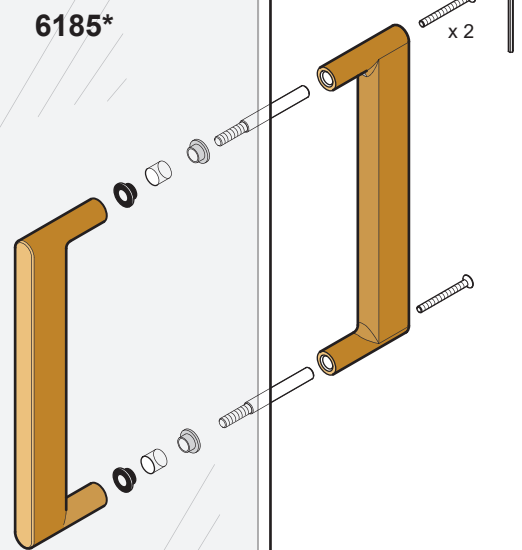


**TRADITIONAL
8632***

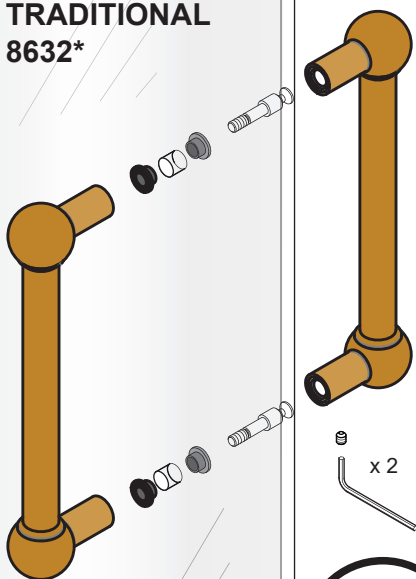






**ENGINEER
9809ASSY***

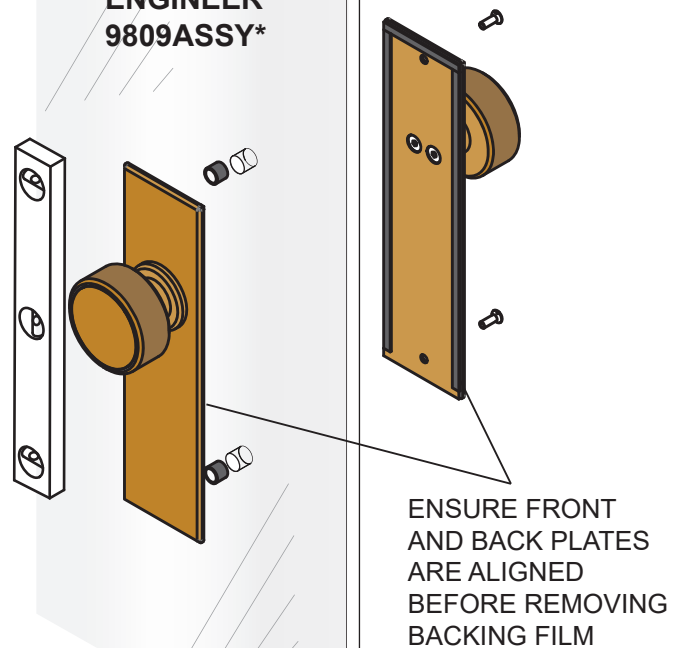

STAGE 10

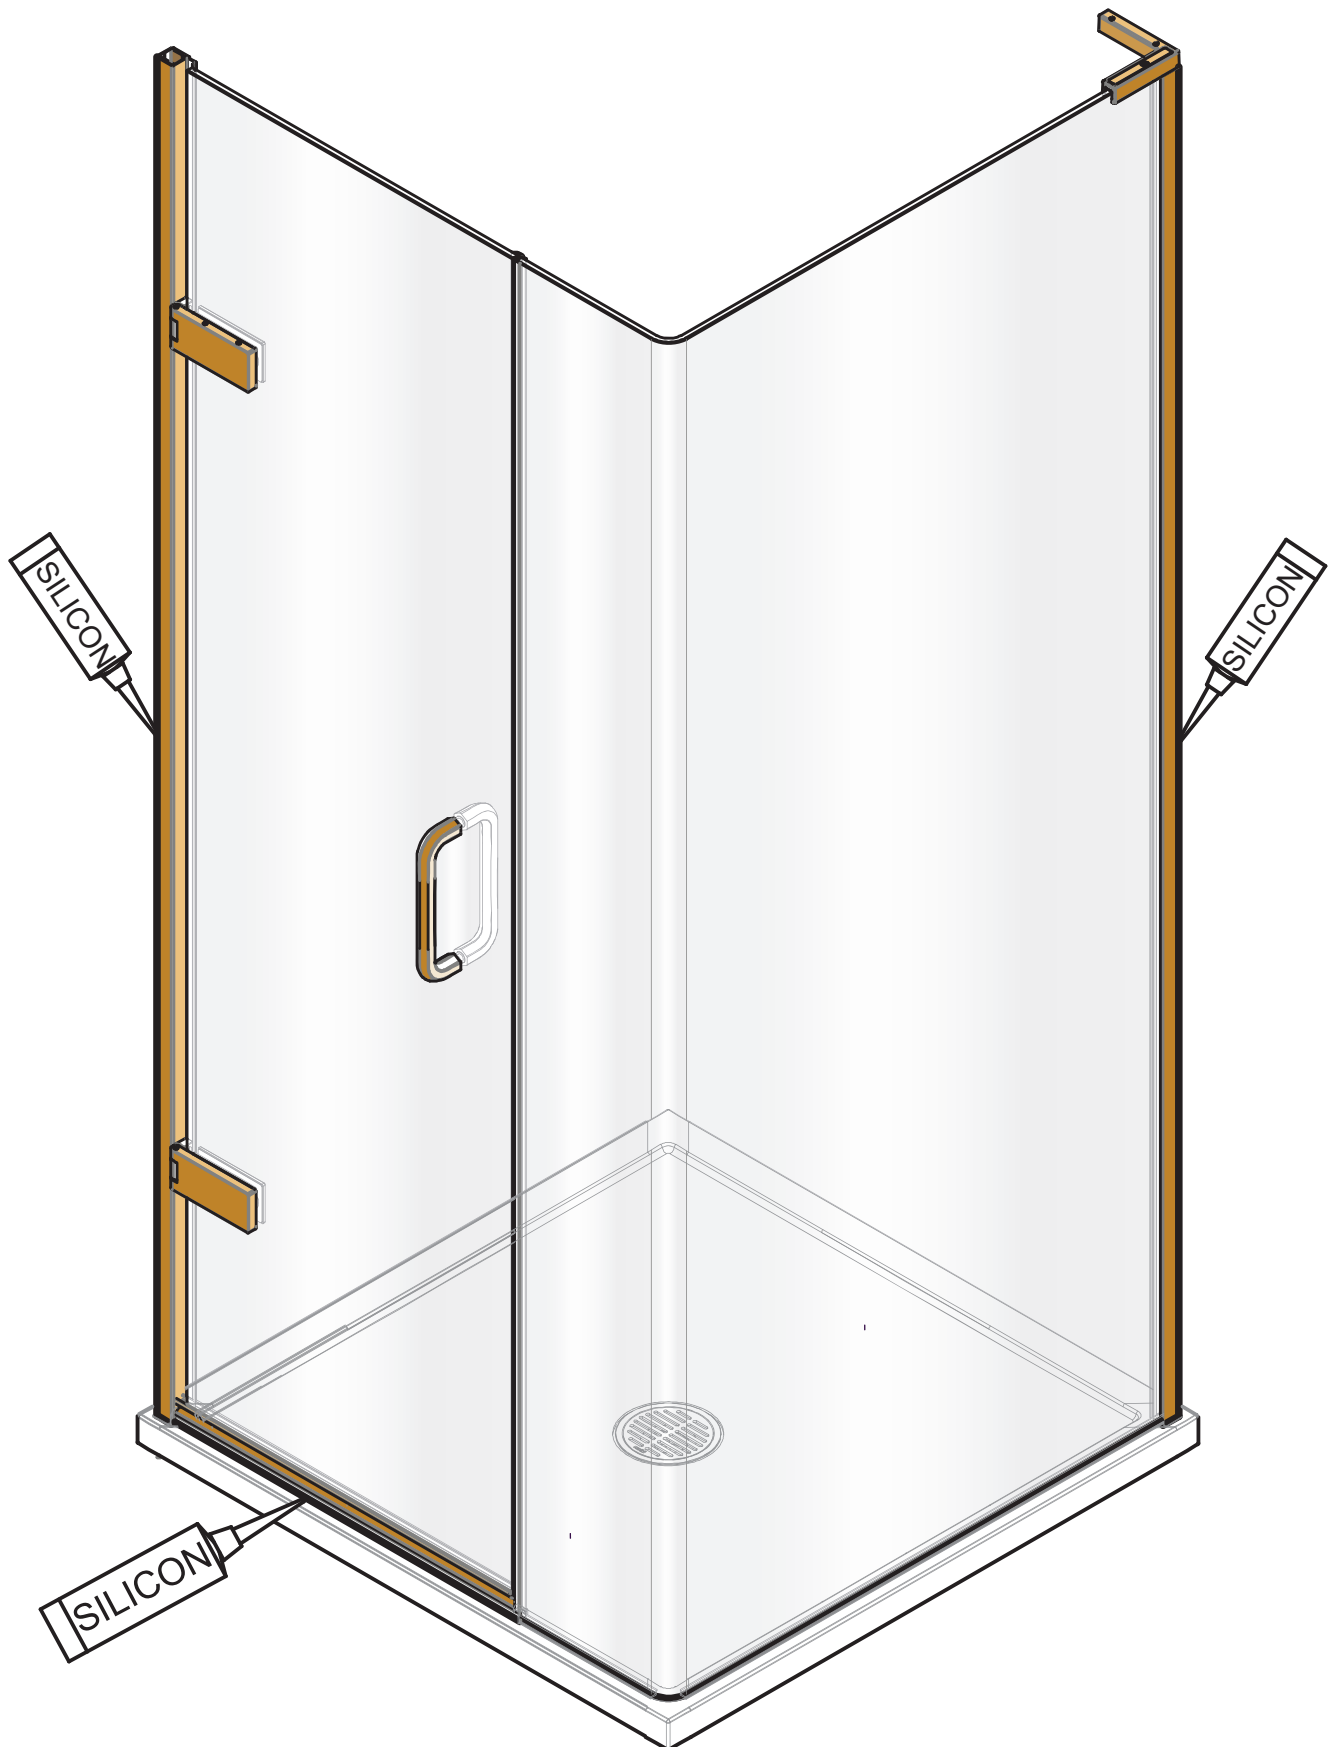


STAGE 10 - CONT

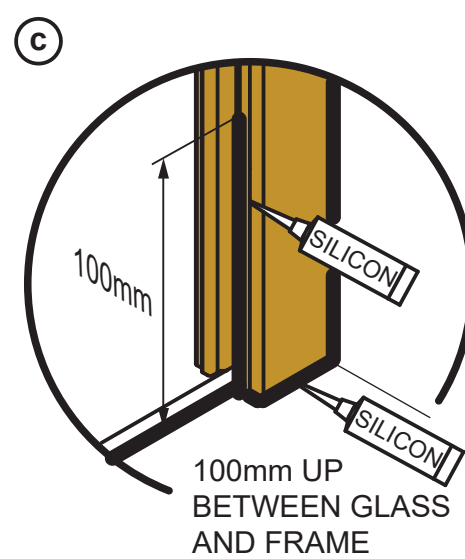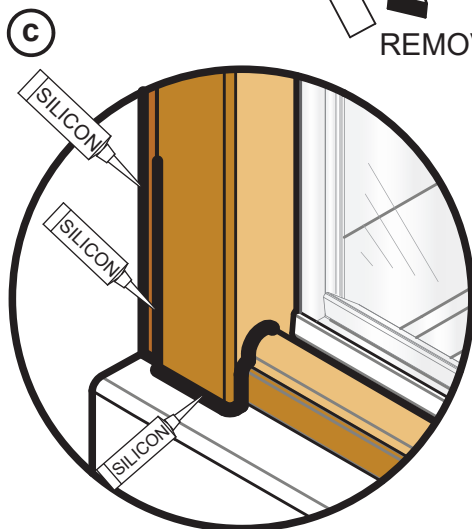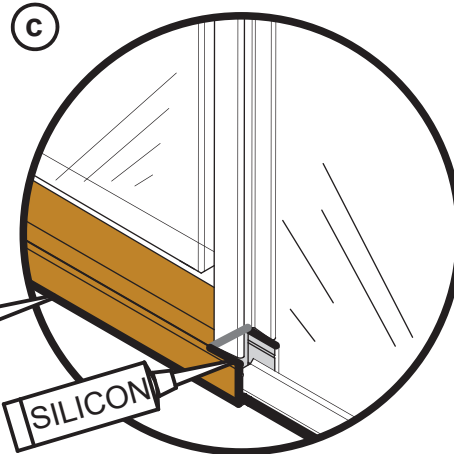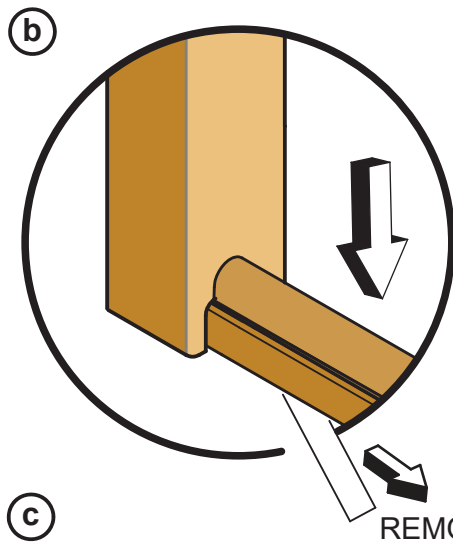
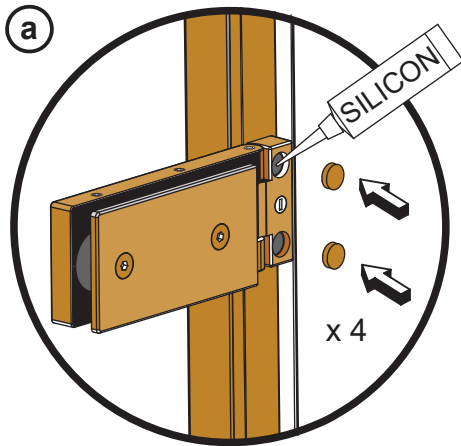


PARTS LIST



9927 AF HINGE FRAME KIT OF PARTS

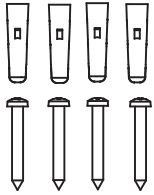



LH - 9611 (SC/MB) 9687*
RH - 9612 (SC/MB) 9688*
9616 (SC/MB) 9692*

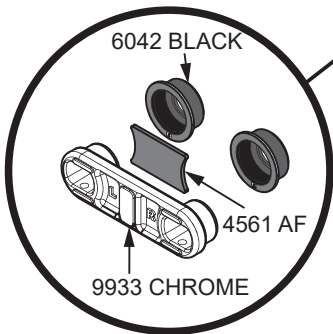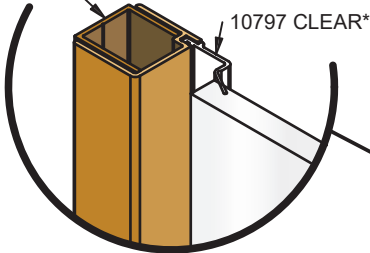


10621
ASSEMBLY
(SC/MB)
10620
ASSEMBLY*

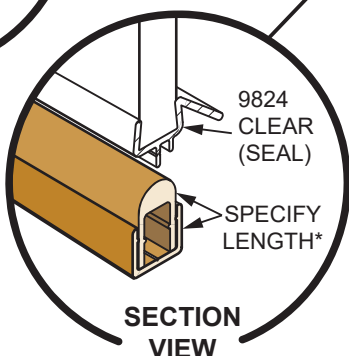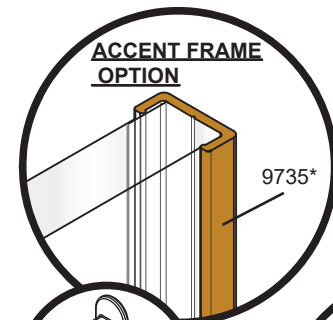


L BRACKET

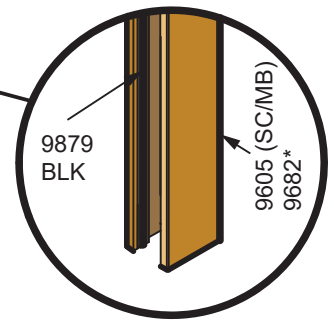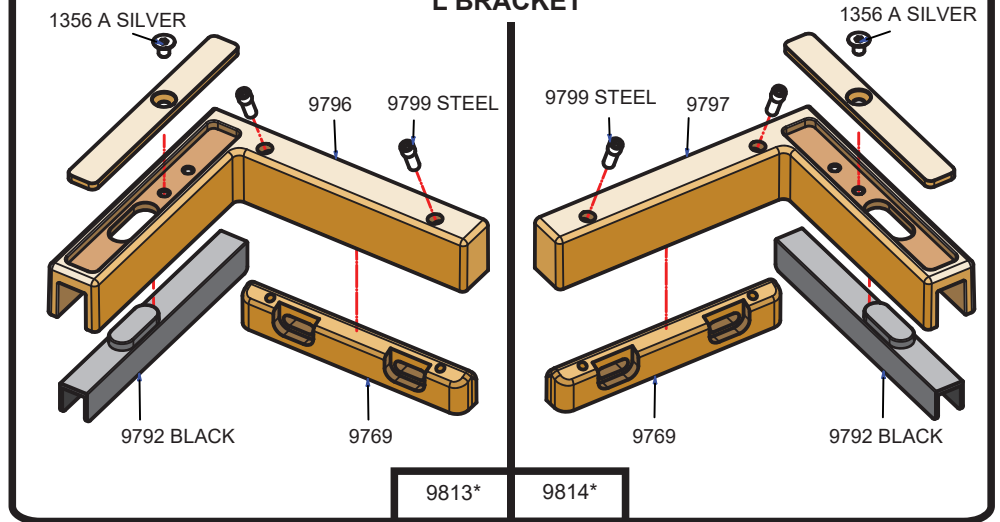

9926 AF WALL HINGE KIT OF PARTS

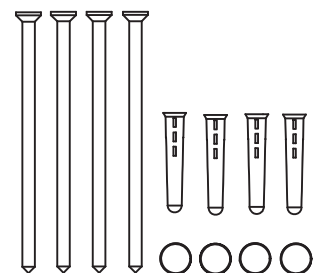

9864 AF WALL FRAME KIT OF PARTS

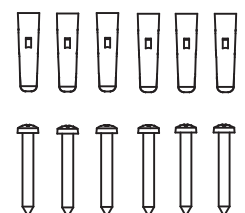

* ALL FINISHES APART
FROM SC/MB