

matki

EAUZONE PLUS EPSCREVERSE- CORNER SLIDER REVERSE

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER



MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA


matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

0938 AF 06/26

Matki recommend that this product is fitted by professional installers

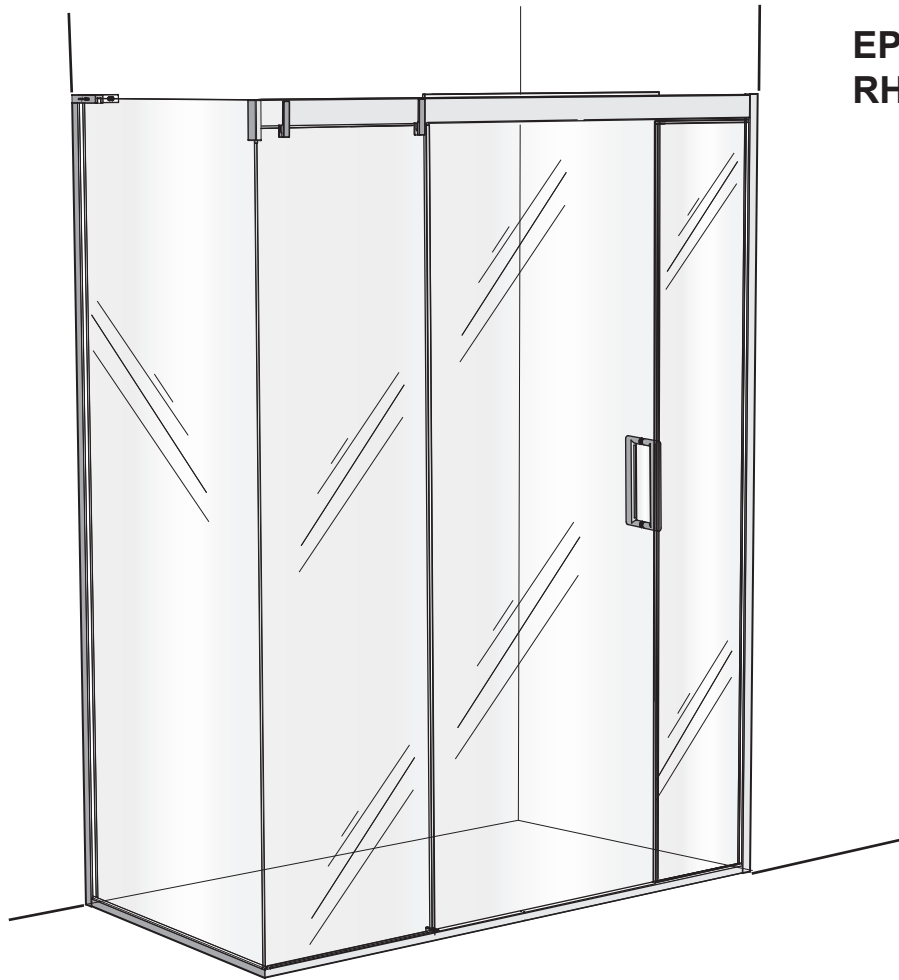

**EPSC REVERSE
RH**



**EPSC REVERSE
LH**

THE STAGES IN THIS INSTALLATION BOOKLET SHOW AN EPSC REVERSE LH INSTALLATION REVERSE FOR RH

IMPORTANT AND DIMENSIONS

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.

PREPARATION IMPORTANT

1. Please read complete installation instructions before fitting for enclosure and tray (if fitting).
2. We recommend that two people are available for fitting of the door Stage 8. The **Eauzone Plus** range is **10mm glass** construction. Large glass panels are very heavy. We recommend the use of safety glasses and non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the wall frames and panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the tray and wall coverings are in place. Trays with tiling lips should be let into the wall with the tiling lip flush with the wall to allow the tiling to overlap the tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from area/joint between the tray and the tiles where the wall mount is to be fitted. This will ensure the wall mount fits correctly to the wall and tray/or tiled floor.


CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT. DO NOT CUT TOP TRACK IN ANY CIRCUMSTANCES.

EAUZONE PLUS SLIDER CORNER REVERSE

MODEL	TOTAL WIDTH A	DOOR OPENING B	CLOSURE PANEL C	FIXED PANEL D
EPSCREV1100	1078-1093	430	56-71	511
EPSCREV1125	1100-1118	430	81-96	511
EPSCREV1150	1128-1143	430	106-121	511
EPSCREV1175	1153-1168	430	131-146	511
EPSCREV1200	1178-1193	465	56-71	557
EPSCREV1225	1200-1218	465	81-96	557
EPSCREV1250	1228-1243	465	106-121	557
EPSCREV1275	1253-1268	465	131-146	557
EPSCREV1300	1278-1293	465	156-171	557
EPSCREV1325	1300-1318	465	181-196	557
EPSCREV1350	1328-1343	465	206-221	557
EPSCREV1375	1353-1368	465	231-246	557
EPSCREV1400	1378-1393	465	256-271	557
EPSCREV1425	1400-1418	465	281-296	557
EPSCREV1450	1428-1443	465	306-321	557
EPSCREV1475	1453-1468	465	331-346	557
EPSCREV1500	1478-1493	610	56-71	707
EPSCREV1525	1500-1518	610	81-96	707
EPSCREV1550	1528-1543	610	106-121	707
EPSCREV1575	1553-1568	610	131-146	707
EPSCREV1600	1578-1593	610	156-171	707
EPSCREV1625	1600-1618	610	181-196	707
EPSCREV1650	1628-1643	610	206-221	707
EPSCREV1675	1653-1668	610	231-246	707
EPSCREV1700	1678-1693	610	256-271	707
EPSCREV1725	1700-1718	610	281-296	707
EPSCREV1750	1728-1743	610	306-321	707
EPSCREV1775	1753-1768	610	331-346	707
EPSCREV1800	1778-1793	610	356-371	707

SIDE PANEL

MODEL	TOTAL WIDTH E
EPSC700SP	671 - 686
EPSC760SP	731 - 746
EPSC800SP	771 - 786
EPSC900SP	871 - 886
EPSC1000SP	971 - 986
BESPOKE	MAX 1200

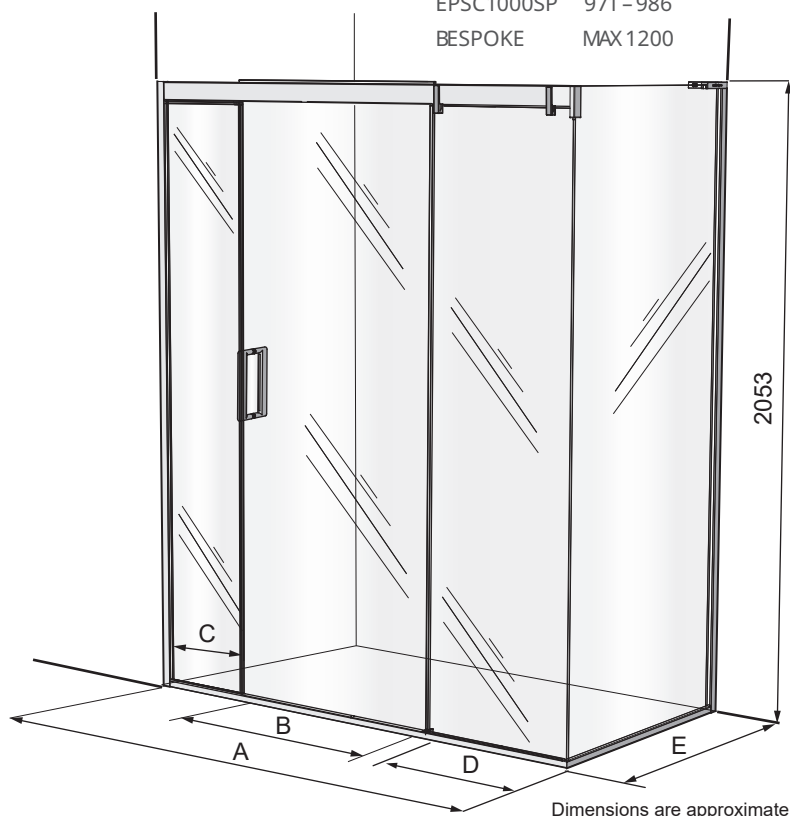

STAGE 1

MODEL TOTAL WIDTH (A)



EPSCREV1100	1078-1093
EPSCREV1125	1100-1118
EPSCREV1150	1128-1143
EPSCREV1175	1153-1168
EPSCREV1200	1178-1193
EPSCREV1225	1200-1218
EPSCREV1250	1228-1243
EPSCREV1275	1253-1268
EPSCREV1300	1278-1293
EPSCREV1325	1300-1318
EPSCREV1350	1328-1343
EPSCREV1375	1353-1368
EPSCREV1400	1378-1393
EPSCREV1425	1400-1418
EPSCREV1450	1428-1443
EPSCREV1475	1453-1468
EPSCREV1500	1478-1493
EPSCREV1525	1500-1518
EPSCREV1550	1528-1543
EPSCREV1575	1553-1568
EPSCREV1600	1578-1593
EPSCREV1625	1600-1618
EPSCREV1650	1628-1643
EPSCREV1675	1653-1668
EPSCREV1700	1678-1693
EPSCREV1725	1700-1718
EPSCREV1750	1728-1743
EPSCREV1775	1753-1768
EPSCREV1800	1778-1793

SIDE PANEL TOTAL WIDTH (B)

EPSC700SP	671 - 686
EPSC760SP	731 - 746
EPSC800SP	771 - 786
EPSC900SP	871 - 886
EPSC1000SP	971 - 986
BESPOKE	MAX 1200

a

INSIDE VIEW

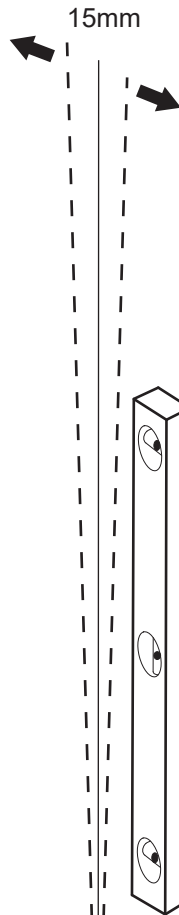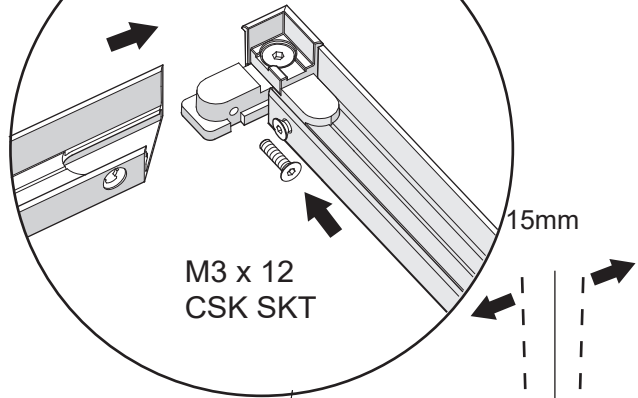

FIXED PANEL WALL MOUNT



SIDE PANEL WALL MOUNT

B - 3mm

A - 3mm

b

The Side Panel Threshold Track is packed in the Side Panel Carton

This stage is describing the placement of the Threshold track.

Important: Check the walls for upright before positioning the threshold track. If the wall is leaning **outward** at the top adjust the threshold dimension inwards to maximise the adjustment range. If the wall is leaning **inwards** at the top adjust the threshold track outwards to maximise the adjustment range.

a. Fit the threshold mitred ends together using the M3 x 12 Csk socket screw, pre-assembled to the threshold corner fixing bracket. The threshold should be at an angle of 90°. **The side panel threshold track is packed in the side panel carton.**





b. Place the threshold assembly onto the tray/floor surface. Measure and mark the distance from the wall to the outside face of the threshold. The table of dimensions show the overall product width to outside of wall mounts, for the distance to the outside of the threshold track subtract the 3mm from the dimensions above. **Check walls are plumb.**

The EPSC Corner Slider has adjustable wall mounts to compensate for out of plumb walls. There is 15mm of adjustment in both the fixed panel wall mount and side panel wall mount. If walls are out of plumb ensure placement of threshold allows for the out of plumb walls.

STAGE 2

IMAGES SHOW LH CORNER INSTALLATION REVERSE FOR RH.

FIXED PANEL
WALL MOUNT

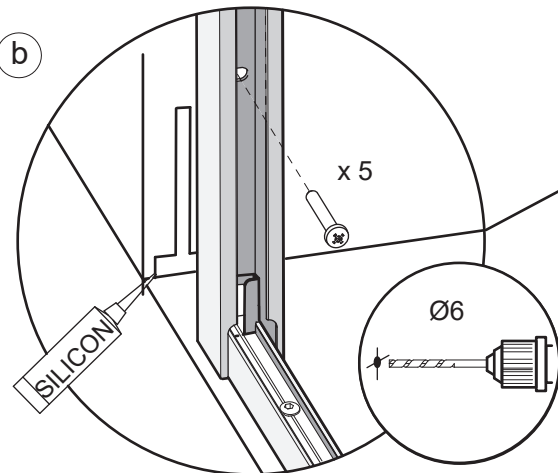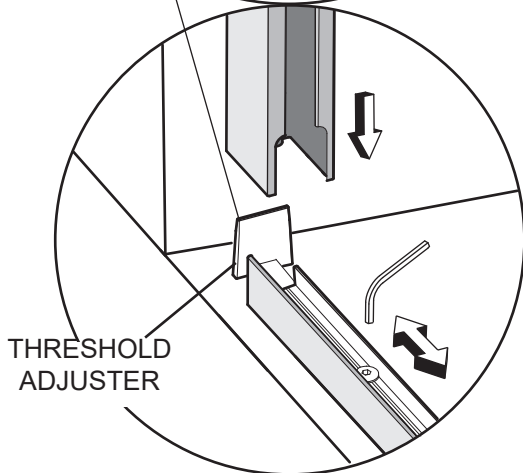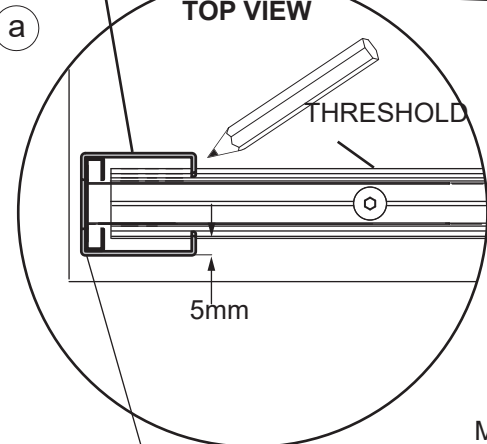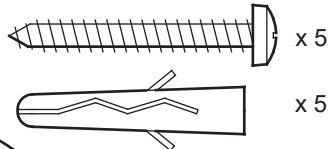

Please note: Use 5 fixing screws when wall surfaces are uneven. Use a minimum of 3 fixing screws, top, middle and bottom on flat wall surfaces

THRESHOLD


This stage is describing the fitting of the Fixed panel wall mount

a. Place the horizontal threshold into position on tray. (If fitting close to the front edge of the tray take into account that the front face of the fixed panel wall mount sits 3mm in front of the threshold). Position the fixed panel wall mount on to the wall over threshold. Note: Wall mount has a top and bottom, threshold cut-out should be at bottom). Ensure the threshold adjuster fits up into the back of the wall mount extrusion in the recess as shown. Adjust position of threshold adjuster as required, to adjust loosen screw only 1/2 a turn, re-tighten after adjustment, do not over tighten.

Plumb the wall mount for upright and mark the fixing holes in the centre of the slots.

b. Drill 5 x fixing holes in the wall and insert wall plugs. Clean area and apply silicon sealant to the area behind the wall mount between the tray and tiles and 100mm up the wall, central to the width of the wall mount. Fit the wall mount using the No.8 x 32mm Pan Head Screws.

STAGE 3



FIXED PANEL
WALL MOUNT

TOP VIEW

THRESHOLD

5mm

Please note: Use 5 fixing screws when wall surfaces are uneven. Use a minimum of 3 fixing screws, top, middle and bottom on flat wall surfaces

x 5

C

TOP VIEW

THRESHOLD
ADJUSTER

b

x 5

SILICON

Ø6


This stage is describing the fitting of the Side panel wall mount.

a. Position the side panel wall mount over the threshold in the position marked on the previous stage. Ensure the threshold adjuster fits up into the back of the wall mount extrusion in the recess as shown. Adjust position of threshold adjuster as required, to adjust loosen screw only 1/2 a turn, re-tighten after adjustment, do not over tighten. Plumb the wall mount for upright and mark the fixing holes in the centre of the slots.

b. Drill 5 x fixing holes in the wall and insert wall plugs. Clean the area and apply silicon sealant to the area behind the wall mount between the tray and tiles and 100mm up the wall, central to the width of the wall mount. Fit the wall mount using the No.8 x 32mm Pan Head Screws.

c. Fit the wall mount seals into both the wall mounts by pinching the sides together and fitting them into the wall mounts until they snap into position, the bottom of the seal should sit on top of the horizontal extrusion.

STAGE 4

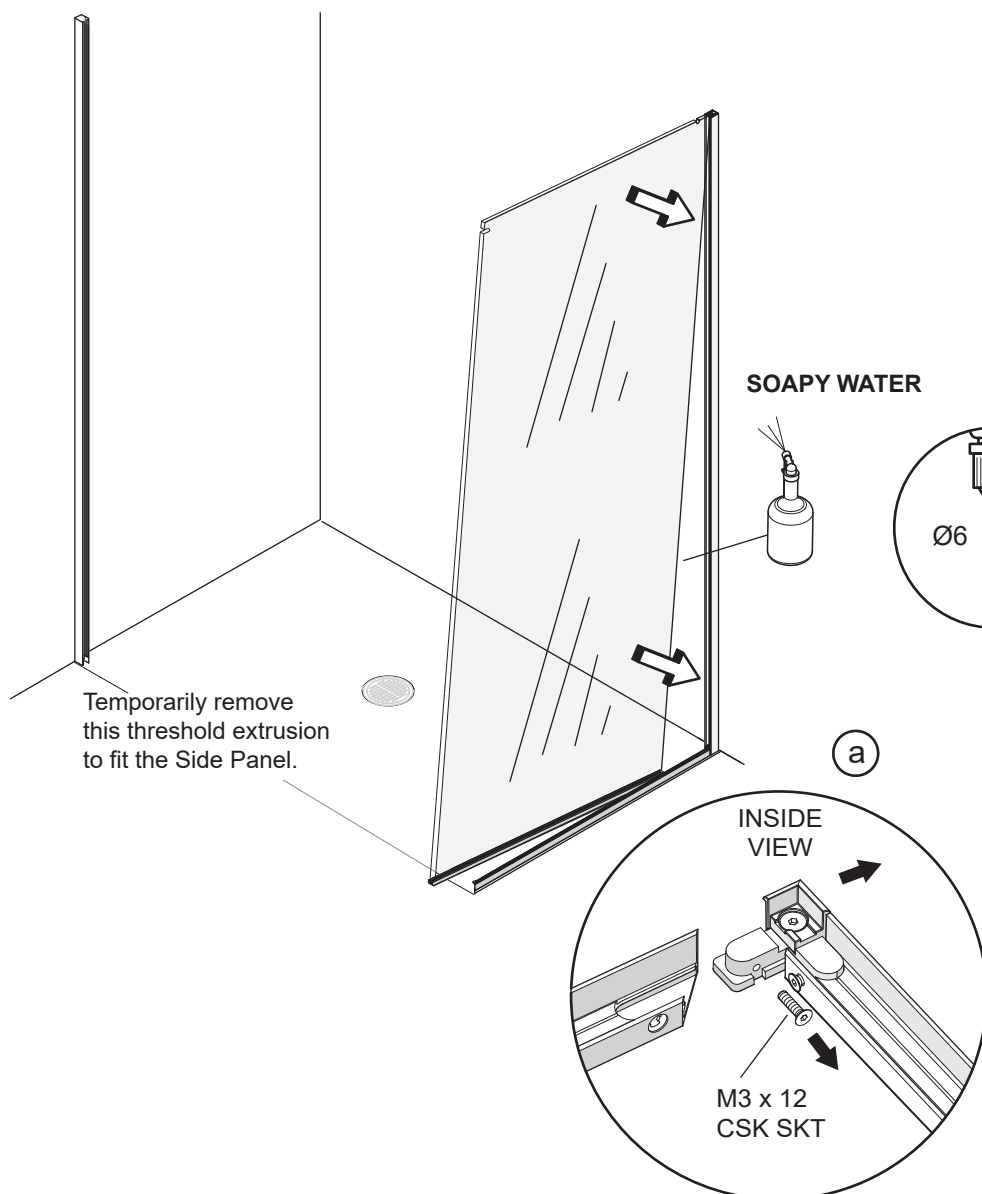

This stage is describing the fitting of the Side panel. We recommend 2 people are available for this stage, and the use of Safety glasses and Non slip gloves when handling glass panels.

a. Before fitting the side panel temporarily remove the threshold extrusion at the corner and from the fixed panel wall mount. Remove the M3 x 12 csk screw from the corner bracket store safely to be re- assembled once the side panel is fitted in Stage 5.

b. Remove the M4 x 8 Csk Skt screw from the threshold adjuster at the fixed panel wall mount store safely to be re- assembled once the side panel is fitted in Stage 5.

c. Apply a bead of Silicon along the front inside edge of the Threshold up to the adjuster screw.

IMPORTANT Remove the packing blocks from the bottom of the side panel before fitting. Lift the side panel onto the threshold extrusion as close as possible to the wall mount **keep the panel upright**. Carefully push the panel into the side panel wall mount taking care not to damage the panel extrusion.


d. Fitting of Side panel top bracket: Fit the rubber ' U ' shaped gasket onto the top edge of the glass with the grooved face of the gasket facing outwards. Fit the wall bracket over the glass and onto the top of the wall mount.

e. Mark the centre of the slotted holes in the wall bracket onto the wall. Remove the wall bracket and drill and fix the wall plugs.

d. Refit the wall bracket. Clamp the bracket onto the glass by tightening the clamping screws on the inside of the bracket. Fit the clamping screw cover caps into the two unused holes on the inside of the wall bracket. Apply a small spot of silicon in the holes before fitting the caps.

e. Fix the bracket to the wall using the No.8 x 50 Pan head screws and fit the bracket screw cover caps

STAGE 5

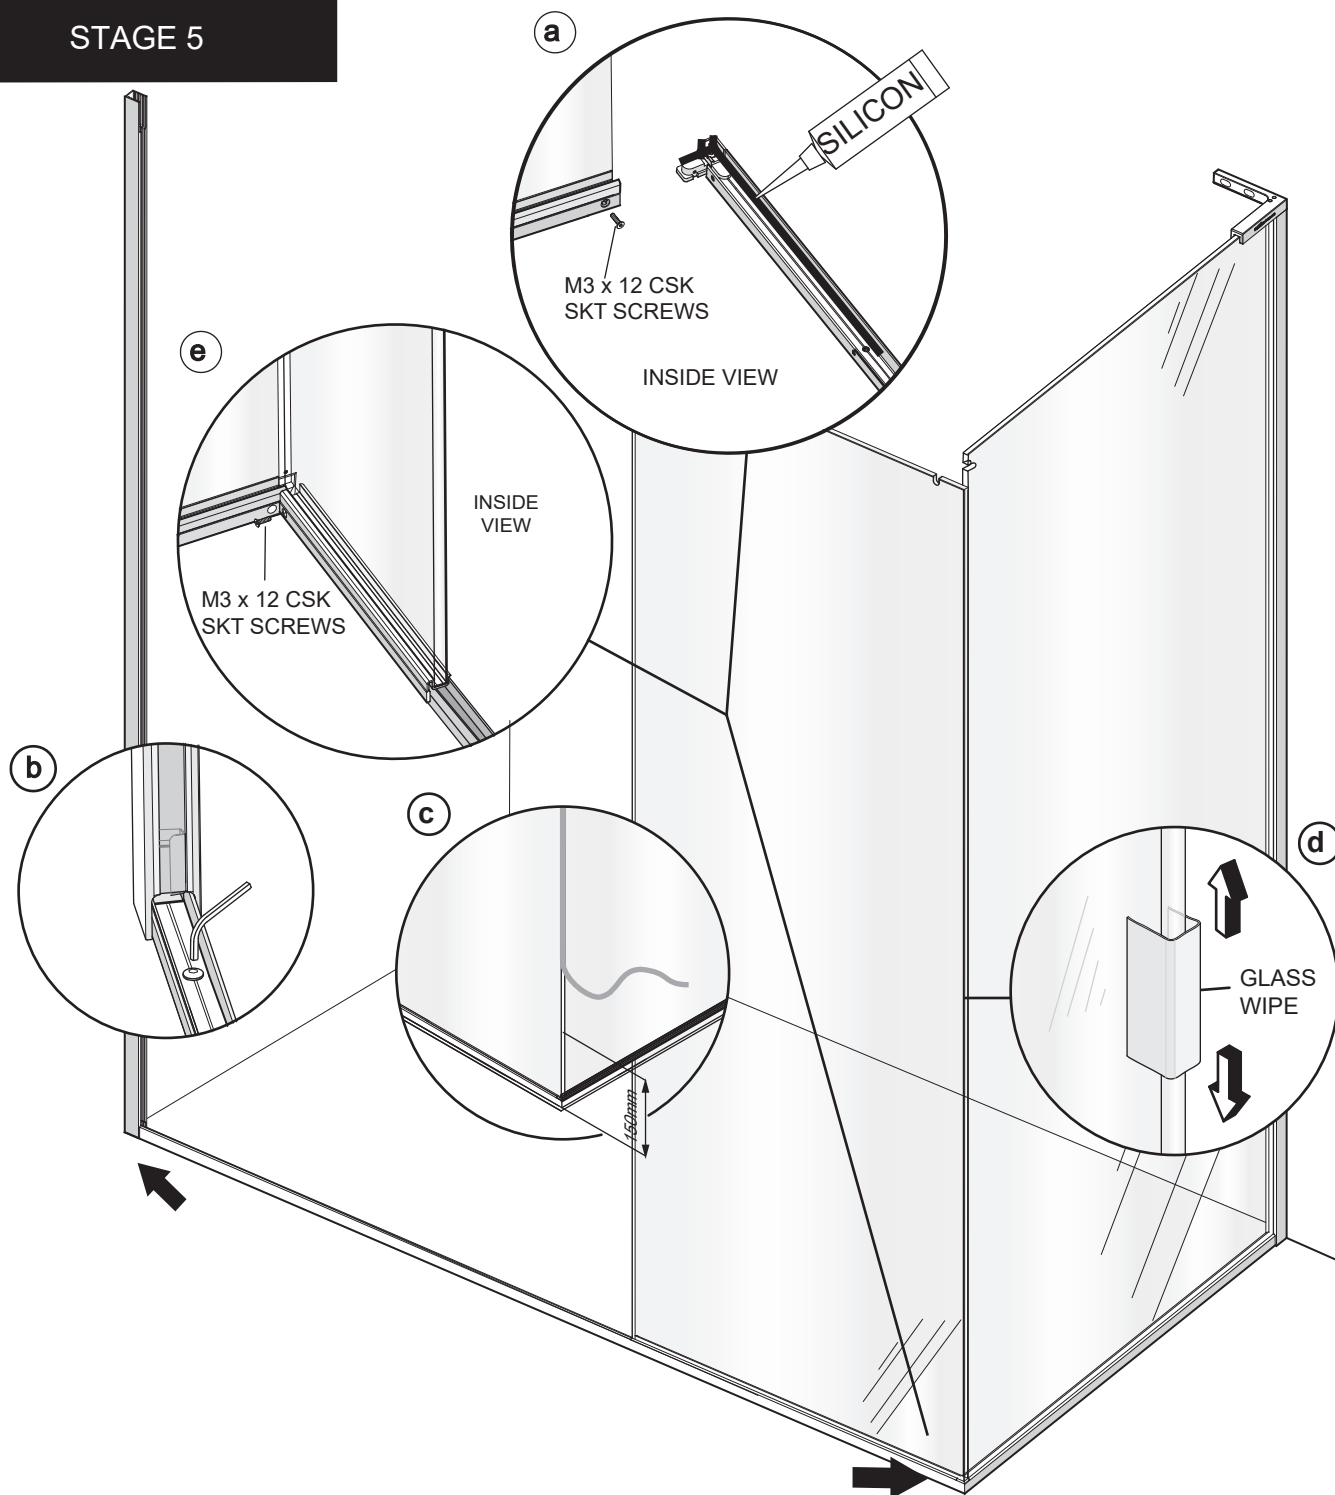

This stage is describing the final fitting of the threshold and closure panel to the side panel

a. Before re-fitting the threshold into the fixed panel wall mount and at the side panel corner apply a bead of silicon sealant to the inside corners of the threshold corner cap and down the face where the return closure panel fits to the threshold. Remove the pre-assembled M3 x 12 Csk skt screws and No.6 x 13 Csk self tap screw. Secure the threshold to the corner extrusion using the M3 x 12 Csk screw using an allen key.

b. Secure the threshold adjuster to the threshold with the M4 x 8 Csk skt screw. Do not over tighten.


c. Before fitting the closure panel, peel back approximately 150mm of the yellow backing film from the bonding tape that is on the edge of the side panel. Peel the backing film from the bottom upwards to aid removal of the film once front panel is in position.

d. Before fitting the closure panel to the side panel, clean the face of the front panel glass that will be bonded to the side panel using the cleaning wipe supplied. Carefully re-fit the fixed glass panel into position ensuring it is fully pushed into the corner cap of the threshold.

Final bonding of corner joint between panels: Carefully move the closure panel away from the Side panel at the top, maximum gap 15mm, to create a 'V' shaped gap between the closure panel and side panel. Slowly remove the backing film from the removed edge working upwards aligning the glass face and edge. Press the glass together as the backing film is removed, when 300mm from the top remove all the backing film and press firmly together. Allow 12 hours for the bond to cure fully before showering.

e. Secure the end of the closure panel frame to the threshold with the No.6 x 13 Csk self tap screw. (Spare screws are supplied in parts kit) Secure the second fixing in the corner with the M3 x 12 Csk screw using an allen key.

STAGE 6

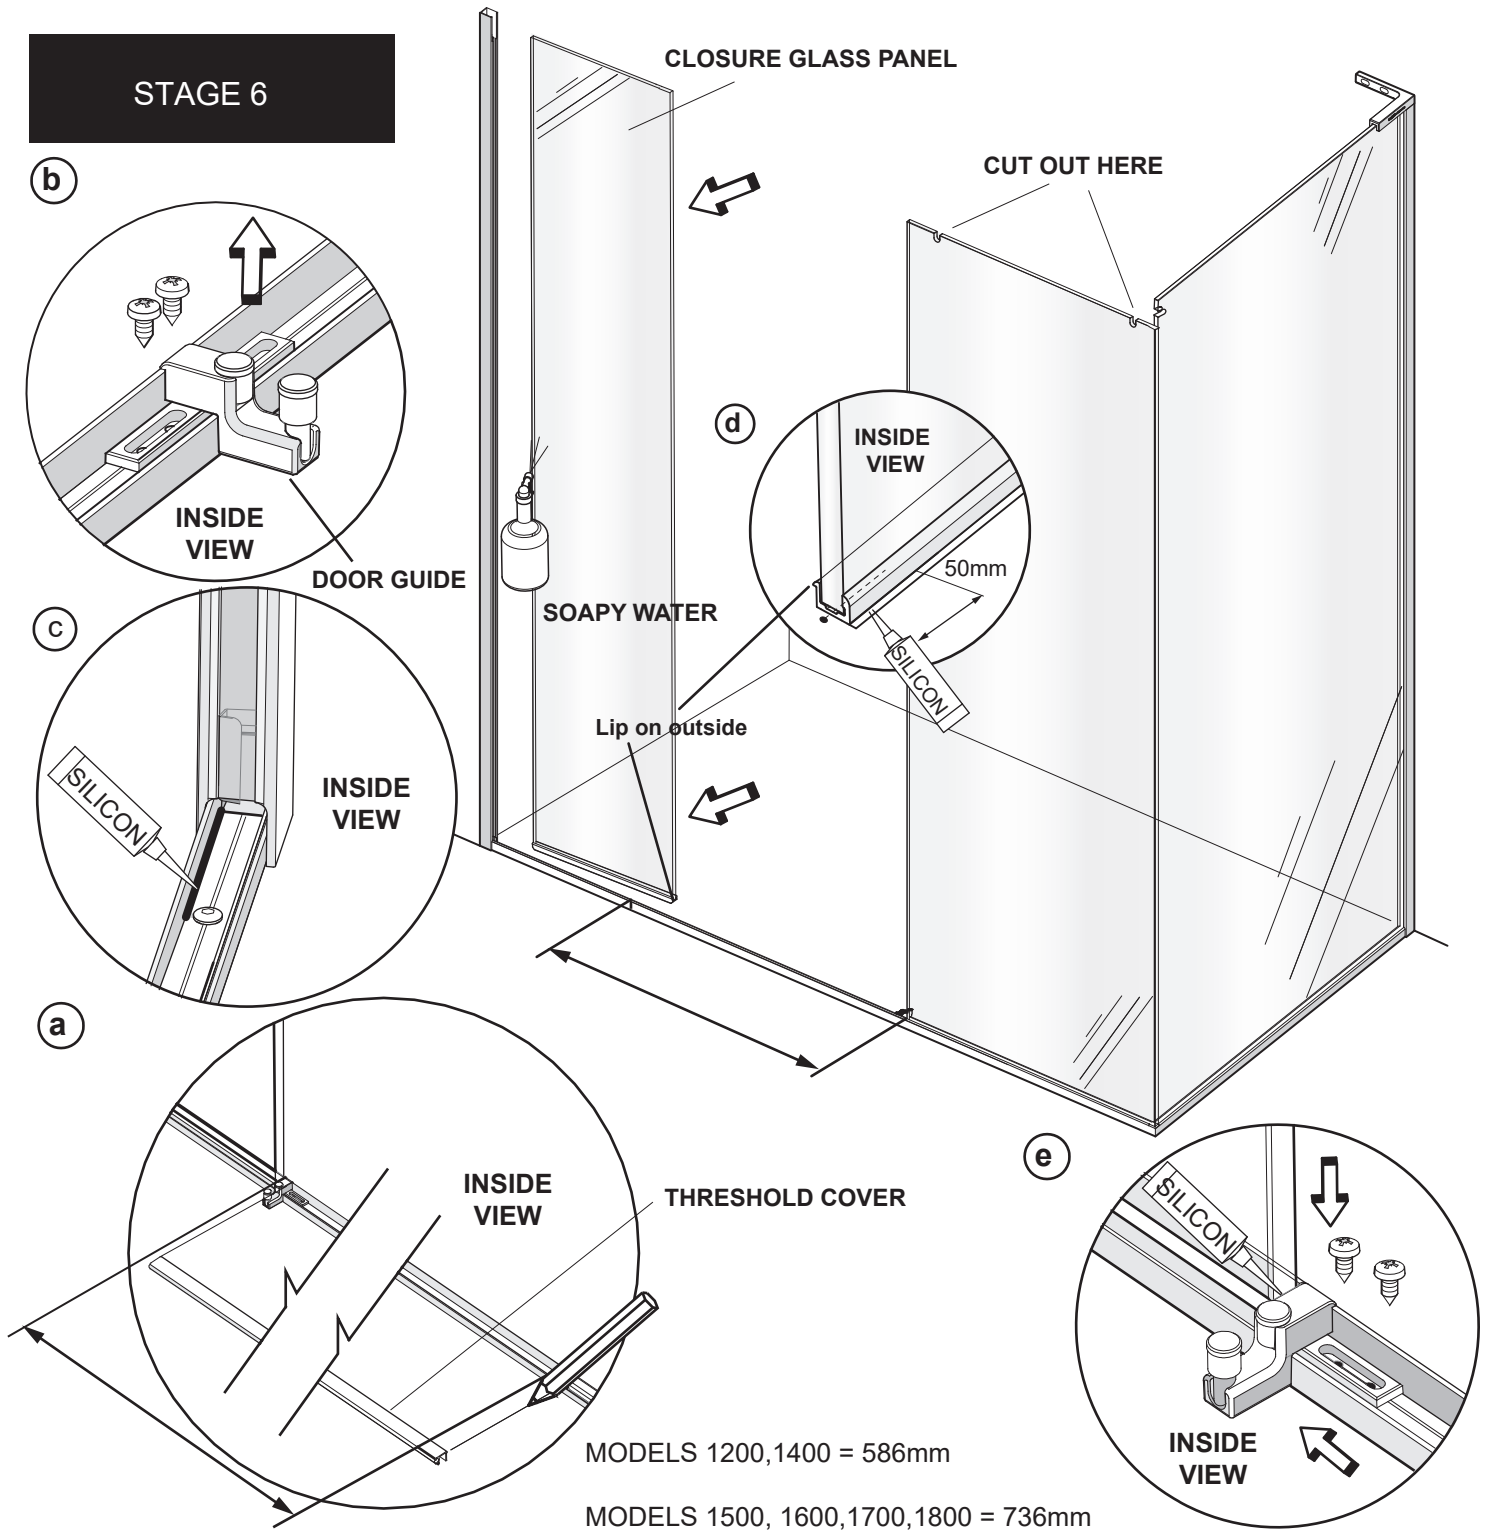

This stage is describing the fitting of the Fixed panel.

a. As a guide place the threshold cover extrusion between the door guide and closure glass panel. Mark on the threshold extrusion using a strip of masking tape or non permanent marker the distance to the outside edge of the door guide. This will be the finished position of the fixed panel. See dimension for model.

b. Remove the door guide from the threshold extrusion before fitting the fixed glass panel.

c. Apply a bead of Silicon along the front inside edge of the Threshold up to the adjuster screw.

d. IMPORTANT - Before fitting the fixed panel, apply a 50mm long bead of Silicon sealant central to the underside of the fixed panel extrusion. Fit the fixed panel with the cut out in the top of the glass panel outwards. Lightly wet the edge of the fixed panel with soapy water and gently lower the panel into the wall mount and threshold extrusion. Push the top of the panel into the wall mount first, followed by the bottom. Align the edge of the fixed panel to the mark on the threshold.


e. Refit the door guide to the threshold extrusion fitting one leg of the door guide underneath the fixed glass panel.

Set the distance between the fixed glass panel and closure glass panel for the model dimensions shown above.

Before securing the door guide apply a small bead of silicon to the end face of the fixed glass panel where it meets the door guide.

Secure the door guide with the No.8 x 9.5 Pan head screws.

STAGE 7

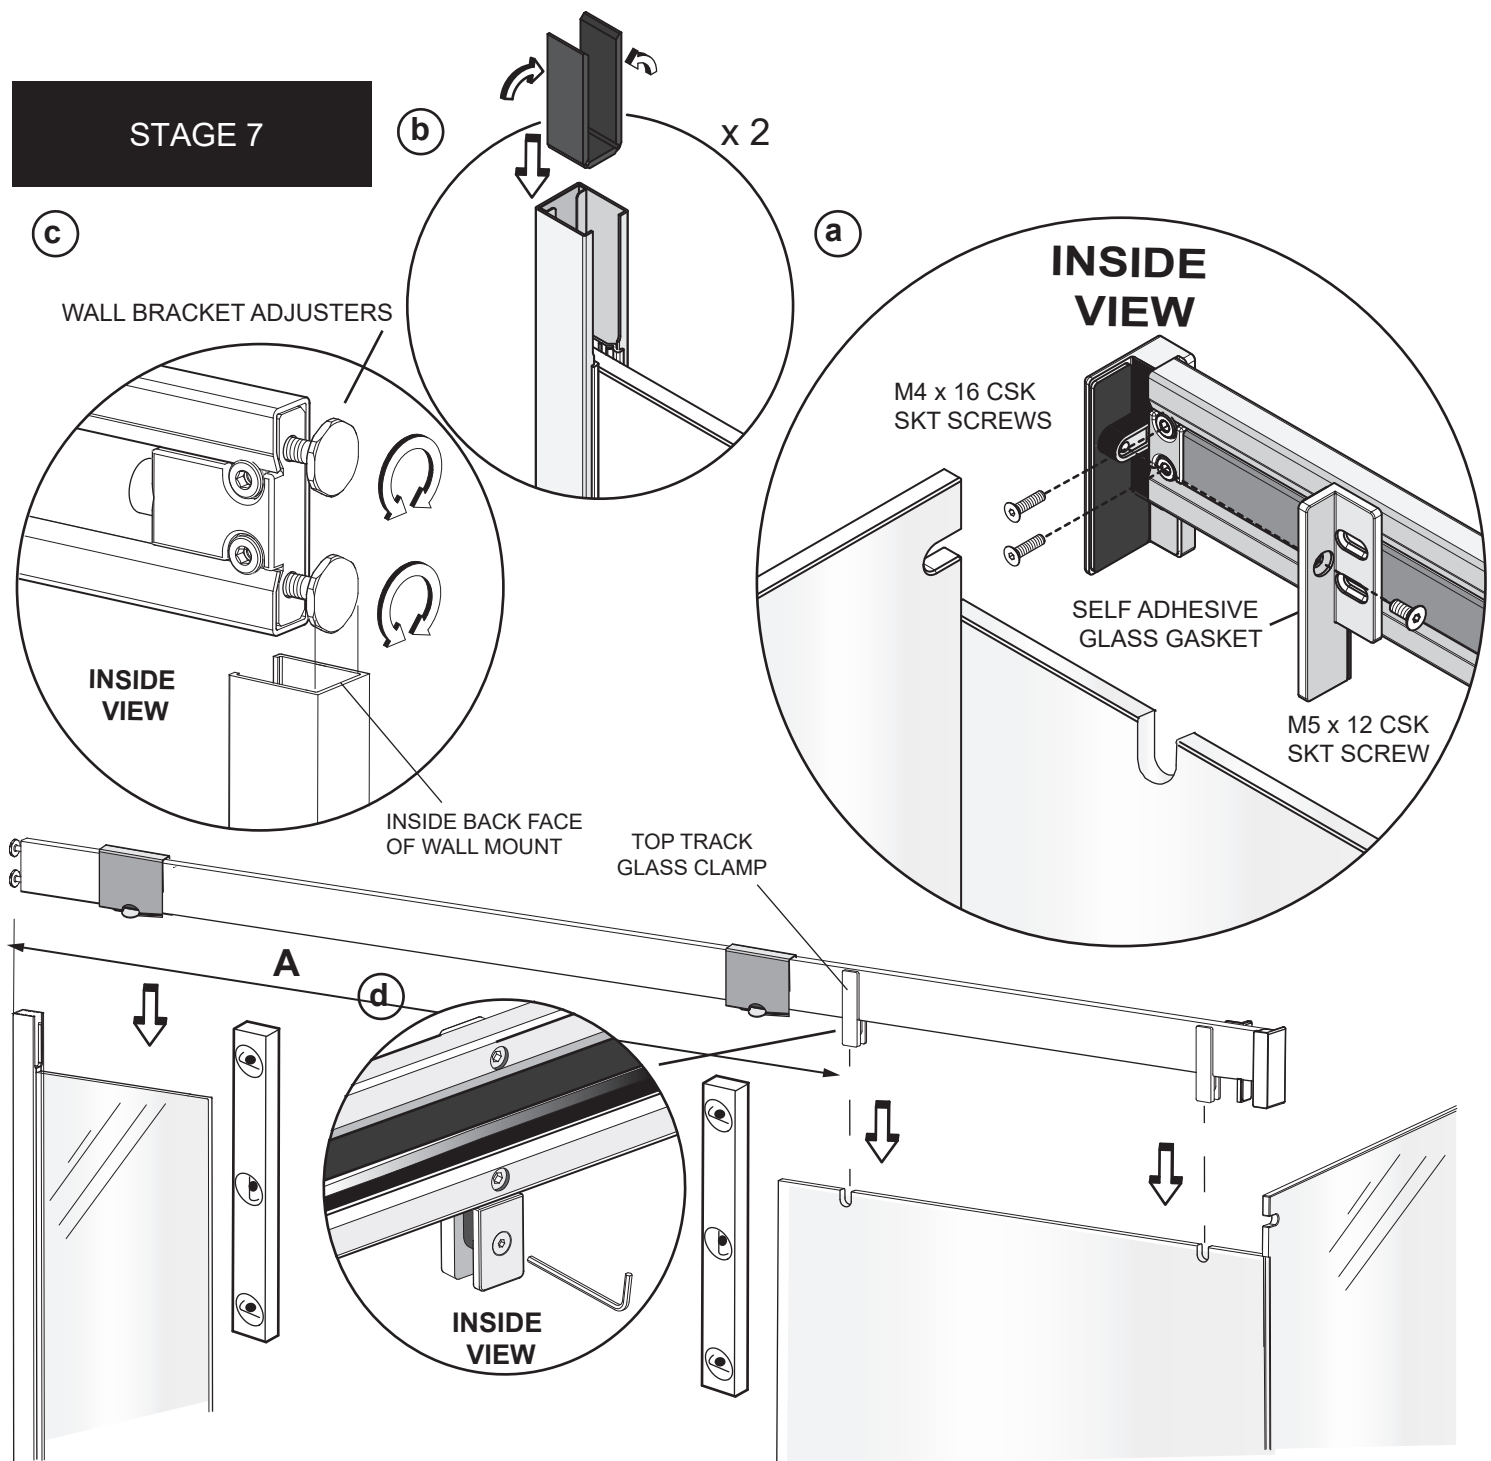

This stage is describing the fitting of the Top Track.

a. Remove the corner bracket back plate from the pre-assembled corner bracket at the end of the top track by removing the M4 x16 CSK SKT screws and the M5 x 12 CSK SKT screw using an allen key. Retain components for re-assembly to top track when in position.

b. Fit the black wall mount infills into the top of the fixed panel wall mount so that it fits down to the top edge of the glass panel.


c. Measure dimension **A** between the inside back face of the wall mount and centre of the cut out in the fixed glass panel. Adjust the wall bracket adjusters so that the distance between the centre of the top track glass clamp and back face of the wall bracket adjusters is equal to dimension **A**. **IMPORTANT - Both wall bracket adjusters need to be adjusted in/out to the same depth relative to each other, align the flat edges of the adjusters vertically to slot into the wall mount.**

d. Loosen the fixing screw on the inside of the top track glass clamp before fitting the top track. Carefully fit the top track into the top of the wall mount with the wall bracket adjusters slotting down the back face of the wall mount and the top track glass clamp into the glass cut out. Check that the end of the top track is flush with the inside face of the side panel glass.

a. Before re-fitting the corner bracket back plate remove the film liner from the self adhesive gaskets on the inside of the bracket plate. Re-fit the back plate using the M4 x16 CSK SKT screws and the M5 x 12 CSK SKT screw, apply pressure to the from the outside of the corner bracket towards the side panel, whilst gradually tightening all the screws.

d. Tighten the top track glass clamp.

STAGE 8

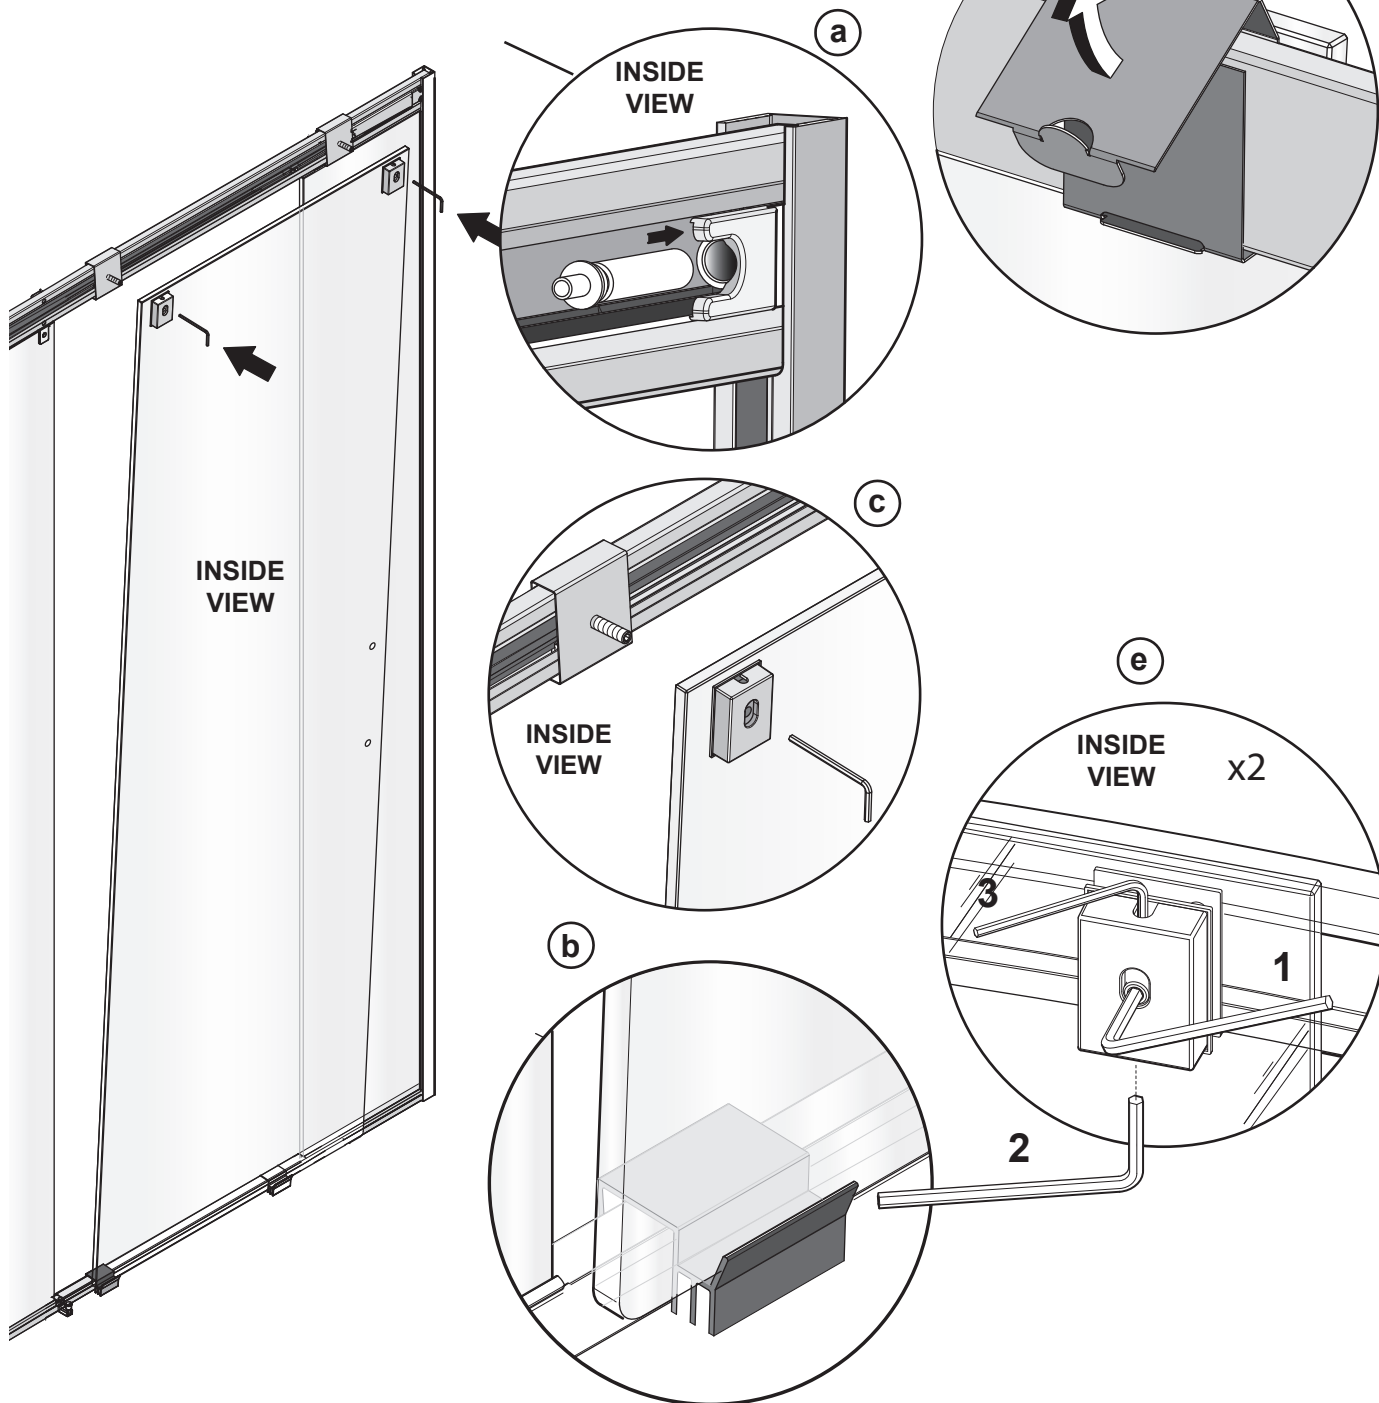

This stage is describing fitting of the Door Panel.

a. Fit the top track door dampers into the wall mount brackets at each end of the top track.

b. Important - Fit the plastic threshold protectors to the Threshold track at either side of the Door opening.


c. Load the door glass firstly onto the threshold protectors and door guide and then carefully guide the door up to the door roller threads and wind them through the door roller blocks fixed to the glass.

d. Remove both the cardboard top track door roller guides by pulling the tabs and unfolding them away from the top track.


e. Adjust the door panel if required so that it runs parallel to the door opening by adjusting the Roller blocks on the inside of the door. To adjust the door away from the top track rotate the central set screw **C1** clockwise using a 4mm allen Key. To adjust the door to the top track, rotate the central set screw **C1** anti-clockwise. **c.** The door glass can also be raised or lowered by the adjustment screw **C2** in the underside of the roller block using a 4mm allen key. Rotate clockwise to lower the door, rotate anti-clockwise to raise the door. **c.** Lock the adjustment with the set screw **C3** in the top of the roller block using a 2.5mm allen key.

STAGE 9

LINEAR BAR HANDLE

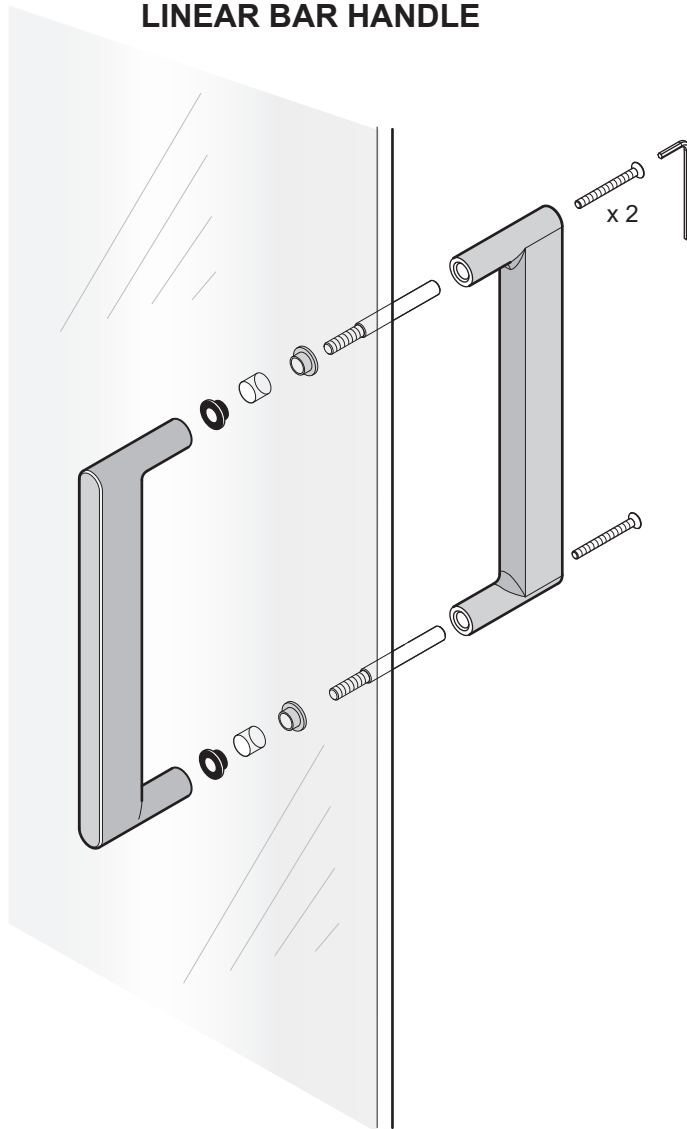

SINGLE STRAIGHT HANDLE

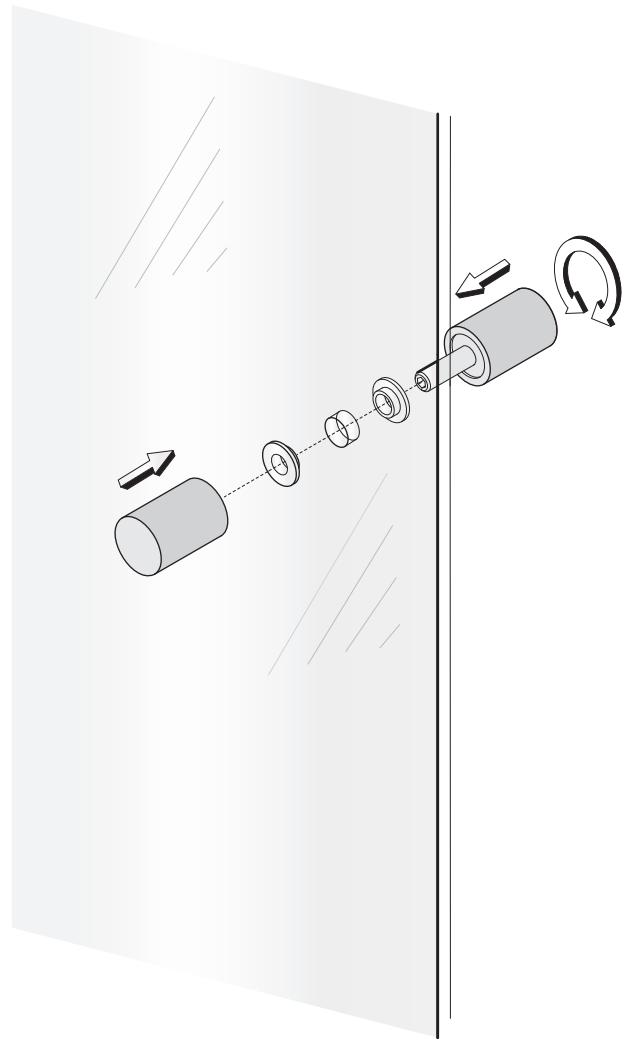

This stage is describing the fitting of the Door Handle


Linear Bar handle

Disassemble the handle by unscrewing the 2 x M4 x 40 Csk socket screws and removing the back handle. Place the 4 x black glass washers either side of the 2 holes in the Door glass. Carefully fit the front Handle and Handle connectors through the 2 holes in the Door glass. Fit the back Handle onto the Handle connectors and fix into position by fitting the 2 x M4 x 40 Csk socket screws.

Single Straight handle

Fit the Door handles to the glass ensuring that the white handle washers are placed in the hole in the glass between the handles and the door glass, screw together until tight.


STAGE 10

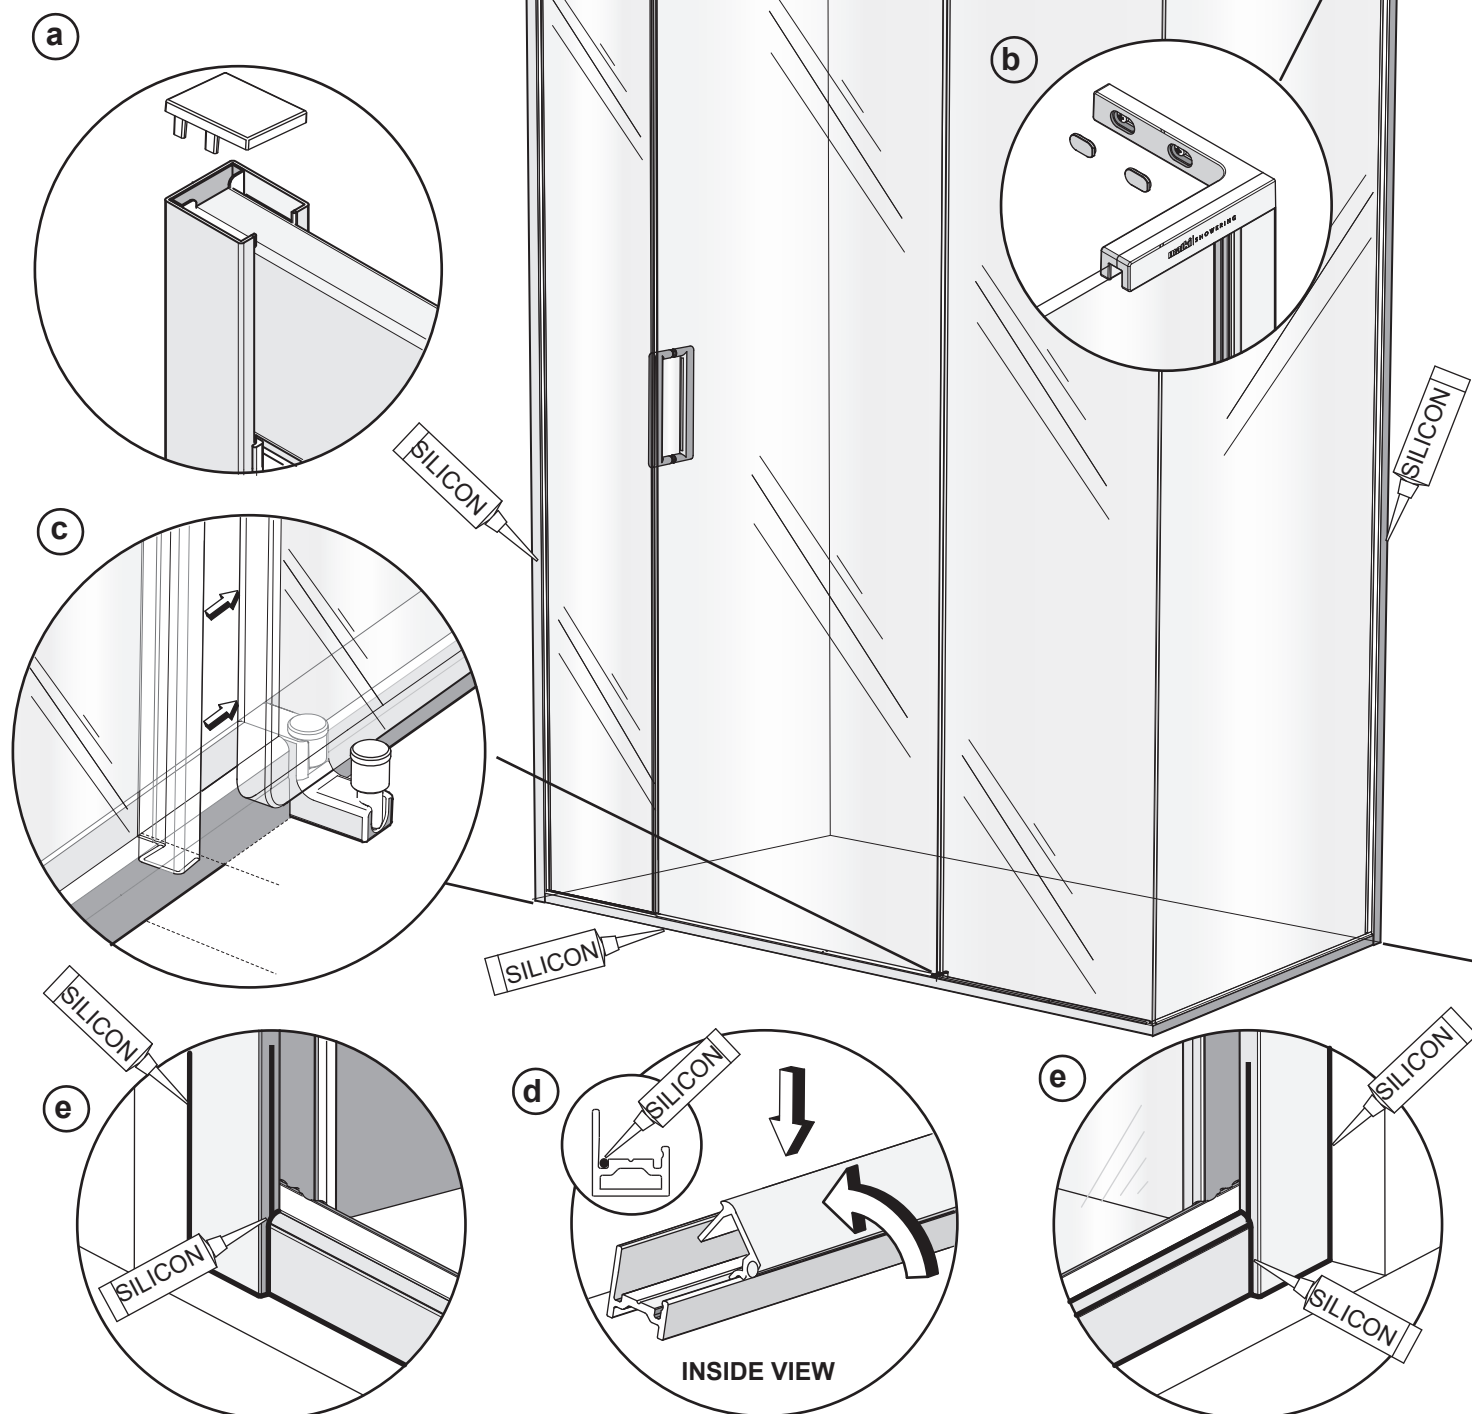

This stage is describing fitting the Caps and Seals

- Fit the wall mount top cap.
- Fit the 2 x wall bracket screw covers into the adjustment slots in the side panel wall bracket.
- Fit the door vertical seal to the edge of the door glass behind the fixed glass panel. The seal should fit down to the inside top face of the fixed panel frame when the door is in the closed position. Additional vertical seals are supplied that can also be fitted to the fixed panel glass and closure panel glass should they be required, subject to position of shower head and use.
- Apply a bead of silicon along the inside length of the threshold in the recess at the front of the track. Clip the threshold cover into the threshold extrusion by hooking the inside leg down first then pushing the front until the cover snaps into position. The threshold cover should fit tightly between the closure panel glass and the door guide.
- Apply a very thin bead of silicon along the full length of the inside joint where the side panel and front panel meet. Apply a thin bead of silicon along the bottom edge of both the wall mounts and all the way up the outside of both the wall mount extrusions between the wall mounts and the tiles. Apply a thin bead all the way along the threshold between the extrusion and the finished floor surface/tray also 50mm up the joint between the Wall mount and clip in seal. Continue around the joint where the threshold joins the wall mounts. Masking tape can be used to achieve a tidy edge to the sealant. Remove the masking tape immediately and allow the silicon to cure for 24 hours before using the shower.

PARTS LIST

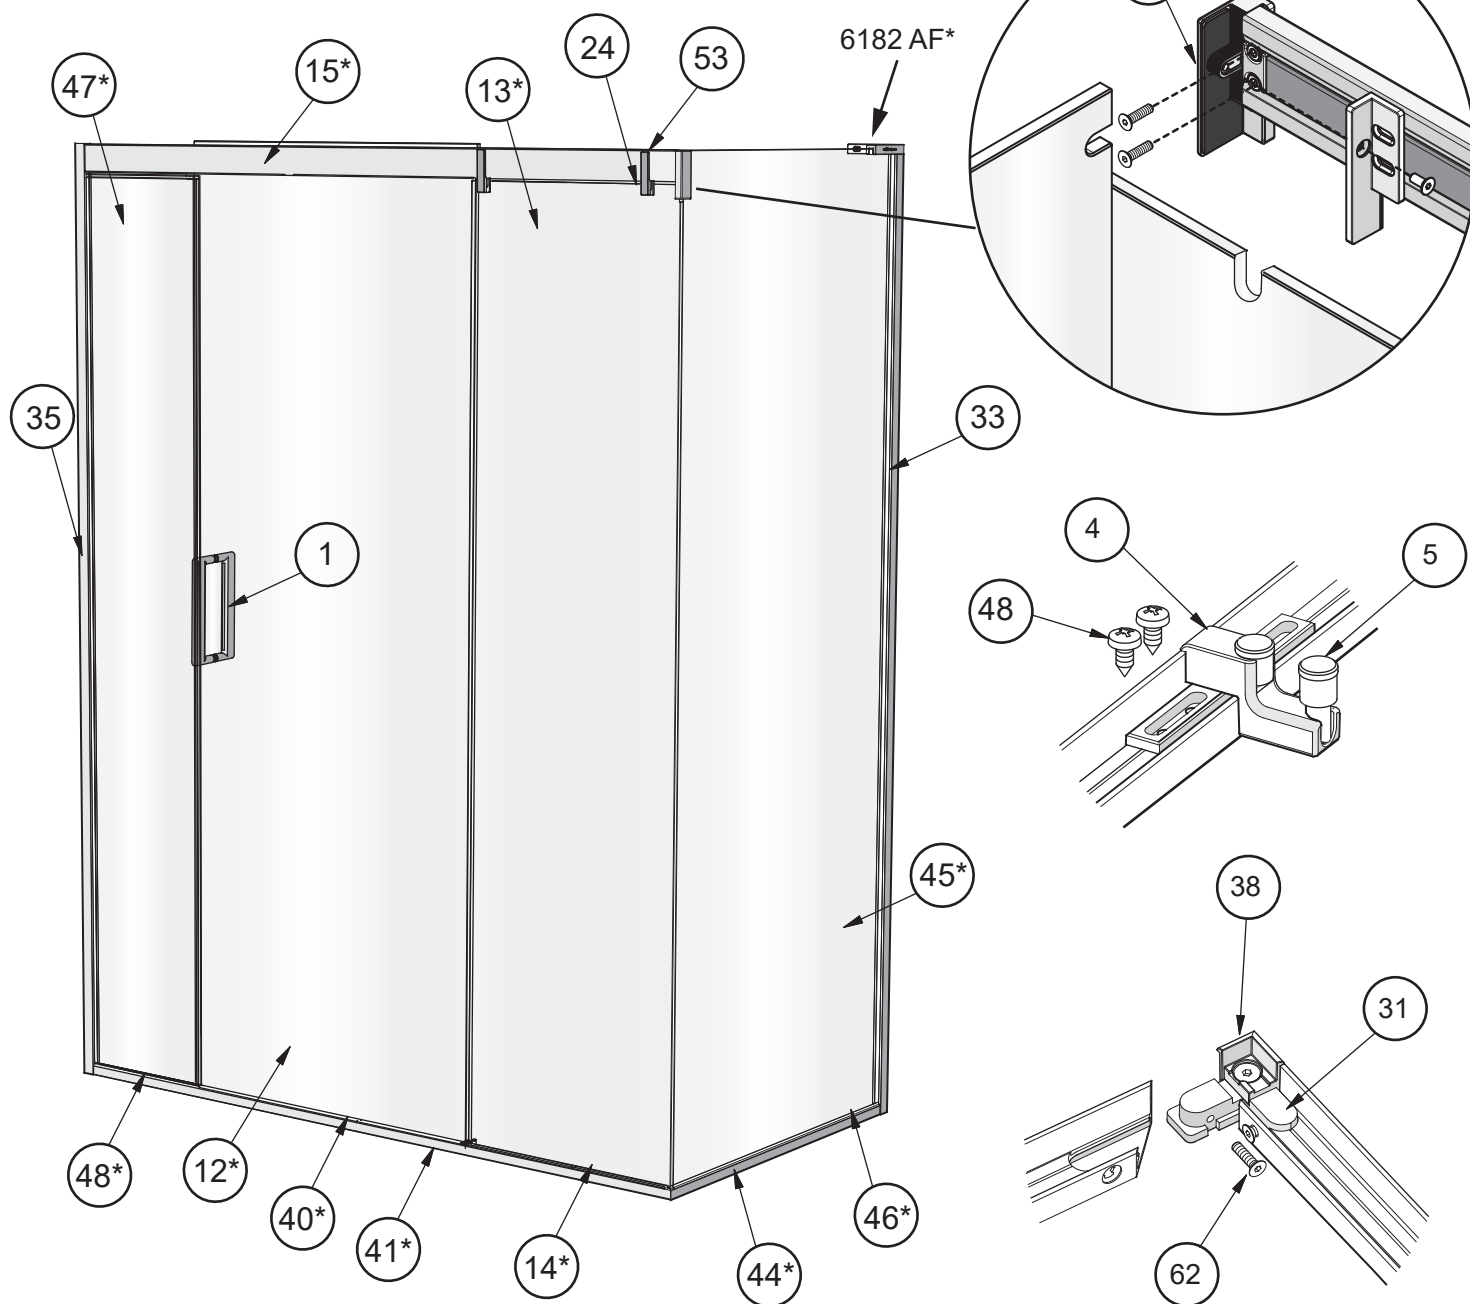

WALL MOUNT & TOP BRACKET PARTS KIT		6178 AF	
No.8 X 32 PAN HEAD SELF TAP SCREW	1471 A SILVER	5	
WALL PLUG	1818 AF	7	
WALL BRACKET SCREW CAPS	5579 A SILVER	2	
No.8 X 50 PAN HEAD SELF TAP SCREW	1492 A SILVER	2	

EPSC PARTS KIT		6106 AF	
No.8 X 32 PAN HEAD SELF TAP SCREW	1471 A SILVER	5	
WALL PLUG	1818 AF	5	
WALL MOUNT TOP CAP	6662 A SILVER	1	
DAMPER	1340 AF	2	
WALL MOUNT INFIL	6659 BLACK	1	
M3 x 12 CSK SOCKET HEAD CAP SCREW	1353 A SILVER	2	
No. 6 X 13 CSK HEAD SELF TAP SCREW	1431 A SILVER	1	

PARTS LIST

* ITEM VARIES DEPENDING ON MODEL

Parts List			
ITEM	DESCRIPTION	PART No.	QTY
1	SLIM BAR HANDLE	6185 AF	1
2	ROLLER BLOCK BACK PLATE	5152 A SILVER	2
3	ROLLER BLOCK FRONT PLATE	5150 A SILVER	2
4	ROLLER BLOCK(10mm)	6666 AF	2
5	CSK SKT SCREW	1404 A SILVER	6
6	M5 x 10 SKT SET	1467 A SILVER	2
7	SKT CAP SCREW	1372 A SILVER	2
8	ROLLER BLOCK GASKET	5545 BLACK	2
9	EAUZ MODIFIED SOCK SET + ST.ST BEARING	8580 AF	2
10	475 ROLLER BLOCK GASKET(10mm)	5543 BLACK	2
11	WASHER OD11.43 ID6.10 X 0.38	1307 AF	2
12*	DOOR PANEL 1100 -1175	10370 MGG PLAIN	1
12*	DOOR PANEL 1200 -1475	7980 M CLEAR/PLAIN	1
12*	DOOR PANEL 1500 - 1800	7981 M CLEAR/PLAIN	1
13*	THREE SIDED FIXED PANEL 1100 - 1175	10801 MGG PLAIN	1
13*	THREE SIDED FIXED PANEL 1200 - 1475	7898 MGG CLEAR	1
13*	THREE SIDED FIXED PANEL 1500 - 1800	7899 MGG CLEAR	1
14*	EPST FIXED PANEL HORIZONTAL 1100 - 1175	10808 A SILVER	1
14*	EPST FIXED PANEL HORIZONTAL 1200 - 1475	6323 A SILVER	1
14*	EPST FIXED PANEL HORIZONTAL 1500 - 1800	6324 A SILVER	1
15*	EPST TOP TRACK 1100/1125/1150/1175	10807/10806/10805/10804 A SILVER	1
15*	EPST TOP TRACK 1200/1225/1250/1275	6298/6299/6300/6301 A SILVER	1
15*	EPST TOP TRACK 1300/1325/1350/1375	6302/6303/6304/6305 A SILVER	1
15*	EPST TOP TRACK 1400/1425/1450/1475	6306/6307/6308/6309 A SILVER	1
15*	EPST TOP TRACK 1500/1525/1550/1575	6310/6311/6312/6313 A SILVER	1
15*	EPST TOP TRACK 1600/1625/1650/1675	6314/6315/6316/6317 A SILVER	1
15*	EPST TOP TRACK 1700/1725/1750/1775/1800	6318/6319/6320/6321/6322 A SILVER	1
16*	BOTTOM TRACK GUIDE + INFILL 1100-1175 MODEL	10395 A SILVER + 10397 AF	2
16*	BOTTOM TRACK GUIDE + INFILL 1200-1475 MODEL	8660 A SILVER + 6668 WHITE	2
16*	BOTTOM TRACK GUIDE + INFILL 1500-1800 MODEL	8661 A SILVER + 6669 WHITE	1
17*	TOP TRACK INFIL MODEL 1100 - 1175	9112 AF	2
17*	TOP TRACK INFIL MODEL 1200 - 1475	4603 BLACK	2
17*	TOP TRACK INFIL MODEL 1500 - 1800	4601 BLACK	1
18	BEARING GUIDE INSERT	5902 AF	4
19	TOP TRACK INFIL STOP	5772 BLACK	4
20**	TOP TRACK CORNER BRKT ASSY LH CORNER (1100-1175)	10435 AF	1
20**	TOP TRACK CORNER BRKT ASSY LH CORNER (1200+)	7330 AF	1
20**	TOP TRACK CORNER BRKT ASSY RH CORNER (1100-1175)	10434 AF	1
20**	TOP TRACK CORNER BRKT ASSY RH CORNER (1200+)	7331 AF	1
21	PTS 6 X 6 STAINLESS SPACER	1896 AF	4
22	M5 x 45 SKT CAP SCREW	DIN 912 - M5 x 45	4
23	M5 x 40 SKT CAP SCREW	1250 A SILVER	2
24	FIXED PANEL GLASS CLAMP FRONT	5761 A SILVER	2
25	FIXED PANEL GLASS CLAMP BACK	5762 A SILVER	2
26	FIXED PANEL GLASS BUSH	5763 BLACK	2
27	FIXED PANEL BACK PLATE GASKET	4584 AF	4
28	FIXED PANEL FRONT CLAMP GASKET	4585 AF	2
29	M4 x 12 CSK SKT	1517 A SILVER	2
30	M4x10SKT CAP SCREW	1258 A SILVER	4
31	LOWER HORIZONTAL CORNER BRACKET	5767 A SILVER	2
32	WALL MOUNT EXTRUSION STOP	6049 A SILVER	2
33	SLIDER SIDE PANEL WALL MOUNT	5726 ASSEMBLY	2
34	GUIDE BLOCK ASSEMBLY	7363 AF	1
35	WALL MOUNT	5714 ASSEMBLY	1
36	LH TOP WALL BRACKET	6183 AF	1
37	RH TOP WALL BRACKET	6182 AF	1
38	RH INLINE CORNER CAP	6068 A SILVER	1
39	LH INLINE CORNER CAP	6044 A SILVER	1
40*	THRESHOLD COVER 1100 - 1175	SPECIFY MODEL SIZE	1
40*	THRESHOLD COVER 1200 - 1475	SPECIFY MODEL SIZE	1
40*	THRESHOLD COVER 1500 - 1800	SPECIFY MODEL SIZE	1
41**	LH FRONT LOWER HORIZONTAL	SPECIFY MODEL SIZE	1
42**	RH FRONT LOWER HORIZONTAL	SPECIFY MODEL SIZE	1
43*	LH SIDE PANEL LOWER HORIZONTAL MODEL 700/800/900	5717/5718/5719 A SILVER	1
44*	RH SIDE PANEL LOWER HORIZONTAL MODEL 700/800/900	5739/5740/5741 A SILVER	1
45*	SIDE PANEL 700/800/900	7988/7989/7990 M CLEAR/PLAIN	1
46*	SIDE PANEL HORIZONTAL 700/800/900	5742/5743/5744 A SILVER	1
47*	CLOSURE FIXED PANEL 1100,1200,1500 /1125, 1225,1525	7984 / 7889 M CLEAR/PLAIN	1
47*	CLOSURE FIXED PANEL 1150,1250,1550 / 1175,1275,1575	7890 / 7891 M CLEAR/PLAIN	1
47*	CLOSURE FIXED PANEL 1300,1600 / 1325,1625	7985 / 7892 M CLEAR/PLAIN	1
47*	CLOSURE FIXED PANEL 1350,1650 / 1375,1675	7893 / 7894 M CLEAR/PLAIN	1
47*	CLOSURE FIXED PANEL 1400,1700 / 1425,1725	7986 / 7895 M CLEAR/PLAIN	1
47*	CLOSURE FIXED PANEL 1450,1750 / 1475,1775 / 1800	7896 / 7897 / 7987 M CLEAR/PLAIN	1
48*	CORNER CLOSURE PANEL HORIZONTAL 1100,1200,1500 / 1125,1225,1525	5745 / 5922 A SILVER	4
48*	CORNER CLOSURE PANEL HORIZONTAL 1150,1250,1550 / 1175,1275,1575	5923 / 5924 A SILVER	1
48*	CORNER CLOSURE PANEL HORIZONTAL 1300,1600 / 1325,1625	5746 / 5925 A SILVER	1
48*	CORNER CLOSURE PANEL HORIZONTAL 1350,1650 / 1375,1675	5926 / 5927 A SILVER	1
48*	CORNER CLOSURE PANEL HORIZONTAL 1400,1700 / 1425,1725	5747 / 5928 A SILVER	1
48*	CORNER CLOSURE PANEL HORIZONTAL 1450,1750 / 1475,1775 / 1800	5929 / 5930 / 5748 A SILVER	1
49	M6 x 13 CSK SKT SCREW	1431 A SILVER	1
50	M3 x 12 CSK SKT	1353 A SILVER	4
51	No.8 x 9.5 PANHEAD SCREW	1420 A SILVER	2
52	M4 x 8 SKT CSK SCREW	1499 A SILVER	4
53	FIXED PANEL VERTICAL GASKET	2308 CLEAR	3
54	WALL MOUNT AND HINGE PARTS KIT	6177 AF	1
55	WALL MOUNT & TOP BRACKET PARTS KIT	6178 AF	2
56	M5 x 12 CSK SKT SCREW	1518 A SILVER	2
57	WALL MOUNT EXTRUSION STOP NUT	6085 A SILVER	2
58	SS WALL MOUNT SEAL	2388 CLEAR	2

